

Hygienic Design Cylinder



A water resistant cylinder configured for easy cleaning



ISO standard type Series HYC



Basic type Series HYQ



Series **HY**

A water resistant cylinder c



Washing in water/Temperature: 30°C, Flow rate: 160 cc/min

Grease for food (NSF-H1 certified) is available.

External seal material: Choice of NBR or FKM

Mounting section: Conforms to ISO/VDMA standard. (Series HYQ, HYC)

Not applicable for use in a "food zone". For details, refer to Specific Product Precautions (Back page 5).

Standard cylinder



onfigured for easy cleaning



 Optional parts and mounting brackets must be ordered

separately. Refer to page 32 to 36.



Hygienic Design Cylinder **Round Type** Series HYB ø20, ø25, ø32, ø40, ø50, ø63, ø80, ø100



< Option parts > Plug bolt

Please place an order for above mentioned parts separately, please refer to page 32 to 36 for details.

Applicable Auto Switches/Refer to page 37 for detailed auto switch specifications.

	Special Electrical	Indiantor	Miring	Load v	oad voltage Auto switcl		ch model	Lead wire length (m)*		Dro wirod	Appliachla	
Туре	function entry lig		light	light (Output)		С	ø20 to ø63	ø80, ø100	3 (L)	5 (Z)	connector	load
Solid state switch	Water resistance improvement product (2-color display)	Grommet	Yes	2-wire	24 V	12 V	H7BA	G5BA	•	0	0	Relay, PLC
Lead wire length symbols 3 m L (Example) H7BAL * Auto switches marked with a "O" symbol are produced upon receipt of orders.												

Lead wire length symbols m..... 5 m.....Z (Example) H7BAZ

• Refer to "SMC Best Pneumatics" catalog vol. 10, page 10-20-66 for detailed specifications about the auto switch with pre-wired connector.



Specifications

Bore size (mm)	20	25	32	40	50	63	80	100	
Action			Doub	le actin	g, Sing	le rod			
Fluid				A	ir				
Minimum operating pressure	0.2 MPa 0.15 MPa 0.07 MPa								
Maximum operating pressure	1.0 MPa								
Proof pressure	1.5 MPa								
Ambient and operating fluid	Without auto switch 0 to 70°C								
temperature	With auto switch 0 to 60°C								
Lubrication				Not re	quired				
Piston speed	50	to 500	mm/s (With pr	essure	at 1.0 M	/IPa) ^{No}	ote)	
Cushion			F	Rubber	bumpe	r			
Stroke length tolerance	+1.4 mm								
Piston rod material	Stainless steel 304 / Hard chrome plated								

Note) Use a cylinder below the allowable kinetic energy. Refer to page 3 for the allowable kinetic energy.

Standard Stroke

Bore size (mm)	Standard stroke (mm)
20	25, 50, 75, 100, 125, 150, 200
25 to 100	25, 50, 75, 100, 125, 150, 200, 250, 300

* Intermediate strokes of 1 mm each can be produced. (The spacer is not used.)

Weight

Without auto switch

Without aut	t <mark>o swit</mark>	ch								Unit: kg
Bore size					Stroke	e (mm)				
(mm)	25	50	75	100	125	150	175	200	250	300
20	0.15	0.17	0.18	0.20	0.22	0.24	0.26	0.27	_	—
25	0.20	0.22	0.24	0.27	0.29	0.31	0.34	0.36	0.40	0.45
32	0.26	0.29	0.32	0.35	0.38	0.41	0.44	0.47	0.53	0.59
40	0.50	0.55	0.59	0.64	0.68	0.73	0.78	0.82	0.91	1.01
50	0.88	0.95	1.02	1.09	1.15	1.22	1.29	1.35	1.49	1.62
63	1.21	1.29	1.38	1.47	1.55	1.64	1.72	1.81	1.98	2.15
80	2.01	2.13	2.24	2.35	2.47	2.58	2.69	2.81	3.03	3.26
100	3.52	3.68	3.84	3.99	4.15	4.31	4.47	4.63	4.95	5.27
With auto s	witch	(Built-i	n maa	net)						Unit: ka

With auto switch (Built-in magnet)

		<u>(</u>								Office Rg
Bore size					Stroke	e (mm)				
(mm)	25	50	75	100	125	150	175	200	250	300
20	0.15	0.17	0.19	0.21	0.22	0.24	0.26	0.28	_	—
25	0.20	0.22	0.25	0.27	0.29	0.32	0.34	0.36	0.41	0.46
32	0.28	0.31	0.33	0.36	0.39	0.42	0.45	0.48	0.54	0.60
40	0.51	0.56	0.61	0.65	0.70	0.74	0.79	0.83	0.93	1.02
50	0.90	0.97	1.03	1.10	1.17	1.23	1.30	1.37	1.50	1.64
63	1.23	1.32	1.40	1.49	1.58	1.66	1.75	1.83	2.00	2.17
80	2.04	2.16	2.27	2.38	2.50	2.61	2.72	2.84	3.06	3.29
100	3.55	3.71	3.87	4.03	4.19	4.35	4.51	4.67	4.98	5.30

Theoretical Output

				Unit: N
Bore size	Operating	Operatin	ig pressu	re (MPa)
(mm)	direction	0.3	0.5	0.7
	OUT	94.2	157	220
20	IN	79.2	132	185
	OUT	147	246	344
25	IN	124	206	288
	OUT	241	402	563
32	IN	207	346	484
	OUT	378	630	882
40	IN	318	530	742
	OUT	588	980	1370
50	IN	495	825	1160
	OUT	936	1560	2180
63	IN	840	1400	1960
	OUT	1510	2520	3520
80	IN	1360	2270	3180
	OUT	2360	3930	5500
100	IN	2150	3580	5010

Series HYB

Allowable Load at Rod End







• A case where the center of gravity of the load rests 50 mm from the rod end.



Allowable Kinetic Energy



SMC

7/////

///

Dimensions

HY□B20 to 100





ø20, 25

(mm) Bore size GA С Α в D E1 E2 F1 F2 GB н L J Port: M5, Rc, NPT (mm) Port: G M4 x 0.7 depth 8 18.5 M4 x 0.7 depth 7 M5 x 0.8 depth 10 16.5 18.5 M5 x 0.8 depth 7.5 M6 x 1.0 depth 12 M5 x 0.8 depth 8 M8 x 1.25 depth 13 26 M6 x 1.0 depth 12 M8 x 1.25 depth 16 M10 x 1.5 depth 15 M10 x 1.5 depth 15 M10 x 1.5 depth 16 M16 x 2.0 depth 21 50 M10 x 1.5 depth 22 M20 x 2.5 depth 27 60 110 M12 x 1.75 depth 22

Bore size (mm)	к	KA	NA	NB	Ρ	R	S	zz
20	5	6	30	24	M5	33	69	81
25	5	8	30	29	M5	33	69	81
32	6	10	35.5	35.5	1/8	—	71	83
40	6.5	13	44	44	1/8	—	78	95
50	8	16	55	55	1/4	—	90	107
63	8	16	69	69	1/4	—	90	107
80	9.5	22	80	80	3/8	—	108	131
100	11.5	27	100	100	1/2	—	108	131

Hygienic Design Cylinder Basic Type Series HYQ ø20, ø25, ø32, ø40, ø50, ø63



Applicable Auto Switches/Refer to page 37 for detailed auto switch specifications.

		tor		Load \	d voltage		Lead	wire lengtl	n (m)*			
Туре	entry	Indica light	Wiring (Output)	D	C	Auto switch model		3 (L)	5 (Z)	connector	Applicable load	
			3-wire (NPN)		5 V	F6N	•	•	0	0	10 sinsuit	
Solid state	Grommet	Yes	3-wire (PNP)	24 V	12 V	F6P	•	•	0	0	IC circuit	Relay, PLC
Switch			2-wire		12 V	F6B	•	•	0	0	_	
* Lead wi	Lead wire length symbols 0.5 mNil (Example) F6N * Auto switches marked with a "O" symbol are produced upon receipt of orders. 3 mL (Example) F6NL											

5 m.....Z (Example) F6NZ

• Refer to "SMC Best Pneumatics" catalog vol. 10, page 10-20-66 for detailed specifications about the auto switch with pre-wired connector.



Specifications

Bore size (mm)	20	25	32	40	50	63				
Action	Double acting, Single rod									
Fluid	Air									
Minimum operating pressure	0.2 MPa 0.15 MPa									
Maximum operating pressure	1.0 MPa									
Proof pressure	1.5 MPa									
Ambient and operating fluid	Without auto switch 0 to 70°C									
temperature		Wi	th auto sw	itch 0 to 6	0°C					
Lubrication			Not re	quired						
Piston speed	50	to 500 mm	ı∕s (With p	ressure at	1.0 MPa)	Note)				
Cushion			Rubber	bumper						
Stroke length tolerance	+1.4 mm									
Piston rod material		Stainless	steel 304	Hard chro	ome plated	ł				

Note) Use a cylinder below the allowable kinetic energy. Refer to page 7 for the allowable kinetic energy.

Standard Stroke

Bore size (mm)	Standard stroke (mm)
20	5, 10, 15, 20, 25, 30, 35, 40, 45, 50
25	5, 10, 15, 20, 25, 30, 35, 40, 45, 50
32	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 75, 100
40	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 75, 100
50	10, 15, 20, 25, 30, 35, 40, 45, 50, 75, 100
63	10, 15, 20, 25, 30, 35, 40, 45, 50, 75, 100

* Intermediate strokes of 1 mm each can be produced. (The spacer is not used.)

Weight

Without aut	Nithout auto switch / Female thread type Ur												
Bore size		Stroke (mm)											
(mm)	5	10	15	20	25	30	35	40	45	50	75	100	
20	0.16	0.17	0.18	0.19	0.20	0.22	0.23	0.24	0.25	0.26	_	—	
25	0.24	0.26	0.27	0.29	0.30	0.32	0.34	0.35	0.37	0.39	_	—	
32	0.43	0.45	0.48	0.50	0.52	0.55	0.57	0.60	0.62	0.65	0.77	0.89	
40	0.63	0.66	0.69	0.72	0.76	0.79	0.82	0.85	0.89	0.92	1.08	1.25	
50		1.11	1.20	1.30	1.39	1.48	1.57	1.67	1.76	1.85	2.32	2.78	
63	—	1.59	1.70	1.82	1.94	2.06	2.18	2.30	2.41	2.53	3.12	3.72	

Without auto switch / Male thread type

ithout auto switch / Male thread type Un												
Stroke (mm)												
25	30	35	40	45	50	75	100					
0.21	0.22	0.23	0.24	0.25	0.27		_					
0.32	0.33	0.35	0.36	0.38	0.40	—	—					
0.55	0.57	0.60	0.62	0.65	0.67	0.79	0.91					
0.79	0.83	0.86	0.89	0.92	0.96	1.12	1.28					
1.55	1.65	1.74	1.83	1.93	2.02	2.48	2.95					
2.04	2.15	2.27	2.39	2.51	2.63	3.22	3.81					
	25 0.21 0.32 0.55 0.79 1.55 2.04	Stroke 25 30 0.21 0.22 0.32 0.33 0.55 0.57 0.79 0.83 1.55 1.65 2.04 2.15	Stroke (mm) 25 30 35 0.21 0.22 0.23 0.32 0.33 0.35 0.55 0.57 0.60 0.79 0.83 0.86 1.55 1.65 1.74 2.04 2.15 2.27	Stroke (mm) 25 30 35 40 0.21 0.22 0.23 0.24 0.32 0.33 0.35 0.36 0.55 0.57 0.60 0.62 0.79 0.83 0.86 0.89 1.55 1.65 1.74 1.83 2.04 2.15 2.27 2.39	Stroke (mm) 25 30 35 40 45 0.21 0.22 0.23 0.24 0.25 0.32 0.33 0.35 0.36 0.38 0.55 0.57 0.60 0.62 0.65 0.79 0.83 0.86 0.89 0.92 1.55 1.65 1.74 1.83 1.93 2.04 2.15 2.27 2.39 2.51	Stroke (mm) 25 30 35 40 45 50 0.21 0.22 0.23 0.24 0.25 0.27 0.32 0.33 0.35 0.36 0.38 0.40 0.55 0.57 0.60 0.62 0.65 0.67 0.79 0.83 0.86 0.89 0.92 0.96 1.55 1.65 1.74 1.83 1.93 2.02 2.04 2.15 2.27 2.39 2.51 2.63	Stroke (mm) 25 30 35 40 45 50 75 0.21 0.22 0.23 0.24 0.25 0.27 — 0.32 0.33 0.35 0.36 0.38 0.40 — 0.55 0.57 0.60 0.62 0.65 0.67 0.79 0.79 0.83 0.86 0.89 0.92 0.96 1.12 1.55 1.65 1.74 1.83 1.93 2.02 2.48 2.04 2.15 2.27 2.39 2.51 2.63 3.22					

With auto switch (Built-in magnet and switch rail) / Female thread type Unit: kg

Bore size					-	Stroke	(mm)					
(mm)	5	10	15	20	25	30	35	40	45	50	75	100
20	0.21	0.22	0.23	0.24	0.26	0.27	0.28	0.29	0.31	0.32		—
25	0.30	0.32	0.33	0.35	0.37	0.39	0.40	0.42	0.44	0.46	—	—
32	0.54	0.56	0.89	0.61	0.64	0.66	0.69	0.72	0.74	0.77	0.90	1.02
40	0.77	0.81	0.84	0.87	0.90	0.94	0.97	1.00	1.03	1.07	1.23	1.39
50		1.30	1.40	1.49	1.59	1.68	1.78	1.87	1.97	2.06	2.53	3.01
63	_	1.86	1.98	2.10	2.22	2.34	2.46	2.58	2.70	2.82	3.42	4.02

With auto switch (Built-in magnet and switch rail) / Male thread type Unit: kg

Bore size		Stroke (mm)										
(mm)	5	10	15	20	25	30	35	40	45	50	75	100
20	0.21	0.22	0.24	0.25	0.26	0.27	0.29	0.30	0.31	0.32	—	_
25	0.31	0.33	0.35	0.36	0.38	0.40	0.42	0.43	0.45	0.47		_
32	0.56	0.59	0.61	0.64	0.66	0.69	0.71	0.74	0.77	0.79	0.92	1.05
40	0.81	0.84	0.88	0.91	0.94	0.97	1.01	1.04	1.07	1.10	1.27	1.43
50	_	1.47	1.57	1.66	1.76	1.85	1.94	2.04	2.13	2.23	2.70	3.17
63	_	1.96	2.08	2.20	2.31	2.43	2.55	2.67	2.79	2.91	3.51	4.11

Theoretical Output

				Unit: N
Bore size	Operating	Operatin	g pressu	re (MPa)
(mm)	direction	0.3	0.5	0.7
	IN	79.2	132	185
20	OUT	94.2	157	220
05	IN	124	206	288
25	OUT	147	246	344
	IN	207	346	484
32	OUT	241	402	563
40	IN	318	530	742
40	OUT	378	630	882
50	IN	495	825	1160
50	OUT	588	980	1370
60	IN	840	1400	1960
03	OUT	936	1560	2180



Series HYQ

Allowable Load at Rod End



• A case where the center of gravity of the load rests 50 mm from the rod end.



Allowable Kinetic Energy





Construction: Ø20, Ø25

Basic type





Rod end male thread







Component Parts

No.	Description	Material	Qty.	Note
1	Rod cover	Aluminum alloy	1	Anodic oxide film
2	Head cover	Aluminum alloy	1	Anodic oxide film
3	Cylinder tube	Aluminum alloy	1	Anodic oxide film
4	Piston	Aluminum alloy	1	Chromated
5	Piston rod	Stainless steel	1	Hard chromium plated
6	Bushing	Resin	1	
7	Bushing retainer	Aluminum alloy	1	Chromated
8	Hexagon socket head cap screw	Stainless steel	4	
9	Rod seal	NBR	1	(FKM can be selected.)
10	Piston seal	NBR	1	
11	Rod scraper	NBR	1	(FKM can be selected.)
12	Bumper A	Resin	1	
13	Bumper B	Resin	1	
14	Tube gasket	NBR	2	(FKM can be selected.)
15	Wearing	Resin	1	
16	Rod end nut	Stainless steel	1	(Only rod end male thread)

No.	Description	Material	Qty.	Note		
17	Magnet	Resin	1	(Only built-in magnet)		
18	Magnet holder	Aluminum alloy	1	(Only built-in magnet) Chromated		
19	Switch rail base	Stainless steel	2	(Only built-in magnet)		
20	Hexagon bolt	Stainless steel	2	(Only built-in magnet)		
21	Switch rail	Stainless steel	1	(Only built-in magnet)		

Replacement Parts: Seal Kit

Bore size	Part no.	Set contents
20	HYQB20□-PS	9 Rod seal (1 pc.)
25	HYQB25□-PS	⁽¹⁾ Tube gaskets (2 pcs.)

Place the seal material symbol in \Box .

Symbol	Material
D	NDD

NBF External FKM* Н

* External seal: Rod seal and the tube gasket are made from FKM.

Grease package (Food compatible grease): GR-H-010 (10 g) (Standard grease) : GR-S-010 (10 g)



Series HYQ

Construction: Ø32 to Ø63



Component Parts

No.	Description	Material	Qty.	Note
1	Rod cover	Aluminum alloy	1	Anodic oxide film
2	Head cover	Aluminum alloy	1	Anodic oxide film
3	Cylinder tube	Aluminum alloy	1	Anodic oxide film
4	Piston	Aluminum alloy	1	Chromated
5	Piston rod	Stainless steel	1	Hard chromium plated
6	Bushing	Resin	1	
7	Bushing retainer	Aluminum alloy	1	Chromated
8	Hexagon socket head cap screw	Stainless steel	8	
9	Rod seal	NBR	1	(FKM can be selected.)
10	Piston seal	NBR	1	
11	Rod scraper	NBR	1	(FKM can be selected.)
12	Bumper A	Resin	1	
13	Bumper B	Resin	1	(Only ø63 is common to the bumper A.)
14	Tube gasket	NBR	2	(FKM can be selected.)
15	Wearing	Resin	1	
16	Rod end nut	Stainless steel	1	(Only rod end male thread)
17	Magnet	Resin	2	(Only built-in magnet)

No.	Description	Material	Qty.	Note		
18	Magnet holder	Aluminum alloy	1	(Only built-in magnet) Chromated		
19	Switch rail base	Stainless steel	2	(Only built-in magnet)		
20	Hexagon bolt	Stainless steel	2	(Only built-in magnet)		
21	Switch rail	Stainless steel	1	(Only built-in magnet)		

Replacement Parts: Seal Kit

Bore size	Part no.	Set contents
32	HYQB32□-PS	Ped appl (1 pp)
40	HYQB40□-PS	Rod Seal (1 pc.)
50	HYQB50□-PS	Tube geokete (2 peo)
63	HYQB63□-PS	(1) Tube gaskets (2 pcs.)

Place the seal material symbol in \Box .

Symbol	Material
R	NBR

H External FKM*

* External seal: Rod seal and the tube gasket are made from FKM.

Grease package (Food compatible grease) : GR-H-010 (10 g) (Standard grease) : GR-S-010 (10 g)



Dimensions

Without auto switch: HYQB20, 25



Rod end male thread



Rod End Male Thread

Rod End Male Thread									(mm)
Bore size	Α	B 1	C 1	MM	H 1	Κ	KA	L1	X
20	72	10	10	M6 x 1.0	3.6	5	6	22	12
25	75	13	12	M8 x 1.25	5	5	8	24	14

																	(mm)
Bore size	Stroke range	Α	В	С	D	Ε	F	Н	I	Κ	KA	L	Μ	Ν	OA	Q	R
20	50 or less	60	50	8	8	33	6	M4 x 0.7	42	5	6	10	22	4.4	M5 x 0.8	14	10
25	50 or less	61	51	10	10	40	6	M5 x 0.8	50	5	8	10	26	5.4	M6 x 1.0	14	10

Note 1) Refer to page 32 for details about the rod end nut, mounting bracket and accessory bracket. Note 2) When the unit is installed, ensure that dirt does not collect in the rod end (threaded portion).

Series HYQ

Dimensions

With auto switch: HYDQB20, 25



Rod end male thread



Rod End M	lale	Thre	ead					Rod End Male Thread (n													
Bore size	Α	B 1	C 1	MM	H1	Κ	KA	L1	X												
20	82	10	10	M6 x 1.0	3.6	5	6	22	12												
25	85	13	12	M8 x 1.25	5	5	8	24	14												

																			(mm)
Bore size	Stroke range	Α	В	С	D	Е	F	Н	I	Κ	KA	L	Μ	Ν	OA	Q	R	SA	SB
20	50 or less	70	60	8	8	33	6	M4 x 0.7	42	5	6	10	22	4.4	M5 x 0.8	14	10	6.5	10.5
25	50 or less	71	61	10	10	40	6	M5 x 0.8	50	5	8	10	26	5.4	M6 x 1.0	14	10	6.5	11

Note 1) The [] value denotes dimensions with the auto switch D-F6 mounted, which is dedicated to the Hygienic Design Cylinder.

Note 2) Refer to page 32 for details about the rod end nut, mounting bracket and accessory bracket. Note 3) When the unit is installed, ensure that dirt does not collect in the rod end (threaded portion).

Dimensions

Without auto switch: HYQB32 to 63



Rod end male thread



Rod End M	lale T	hrea	d						(mm)
Bore size	Α	B 1	C 1	MM	H 1	K	KA	L1	X
32	94	17	20	M10 x 1.25	6	6	10	33	22
40	101.5	19	22	M12 x 1.25	7	6.5	13	36	24
50	122.5	24	29.5	M16 x 1.5	10	8	16	46	32
63	123	24	29.5	M16 x 1.5	10	8	16	46	32

																			(mm)
Bore size	Stroke range	Α	В	С	D	Е	F	Н	Ι	Κ	KA	L	Μ	Ν	OA	Ρ	Q	R	W
32	100 or less	72	61	12	12	49.5	8.5	M6 x 1.0	62	6	10	11	32.5	5.4	M6 x 1.0	1/8	13.5	16	4
40	100 or less	77.5	65.5	13	16	57.5	8.5	M8 x 1.25	71	6.5	13	12	38	5.4	M6 x 1.0	1/8	16	16	2
50	100 or less	90.5	76.5	15	20	69	10.5	M10 x 1.5	88	8	16	14	46.5	6.8	M8 x 1.25	1/4	20	16	4
63	100 or less	91	77	18	20	84	10.5	M12 x 1.75	102	8	16	14	56.5	6.8	M8 x 1.25	1/4	21	16	4

Note 1) Refer to page 32 for details about the rod end nut, mounting bracket and accessory bracket. Note 2) When the unit is installed, ensure that dirt does not collect in the rod end (threaded portion).

Dimensions

With auto switch: HYDQB32 to 63



Rod end male thread



Rod End M	lale T	hrea	d						(mm)
Bore size	Α	B 1	C 1	MM	H 1	Κ	KA	L1	Х
32	109	17	20	M10 x 1.25	6	6	10	33	22
40	116.5	19	22	M12 x 1.25	7	6.5	13	36	24
50	137.5	24	29.5	M16 x 1.5	10	8	16	46	32
63	138	24	29.5	M16 x 1.5	10	8	16	46	32

(mm) Bore size Stroke range Α В С D Ε F Н 1 Κ KA L Μ Ν OA Ρ Q R SA SB W 32 100 or less 76 12 12 49.5 8.5 M6 x 1.0 62 10 11 32.5 5.4 M6 x 1.0 1/8 13.5 16 8.5 16 4 87 6 2 40 100 or less 92.5 80.5 13 16 57.5 8.5 M8 x 1.25 71 6.5 13 12 38 5.4 M6 x 1.0 1/8 16 16 10.5 16 50 105.5 91.5 14 46.5 6.8 M8 x 1.25 16 10.5 17 4 100 or less 15 20 69 10.5 M10 x 1.5 88 8 16 1/4 20 16 14 56.5 6.8 M8 x 1.25 1/4 21 16 9 18 4 63 100 or less 106 92 18 20 84 10.5 M12 x 1.75 102 8

Note 1) The [] value denotes dimensions with the auto switch D-F6 mounted, which is dedicated to the Hygienic Design Cylinder.

Note 2) Refer to page 32 for details about the rod end nut, mounting bracket and accessory bracket.

Note 3) When the unit is installed, ensure that dirt does not collect in the rod end (threaded portion).

SMC

Hygienic Design Cylinder ISO Standard Type Series HYC Ø32, Ø40, Ø50, Ø63



Please place an order for above mentioned parts separately, please refer to page 32 to 36 for details.

Applicable Auto Switches/Refer to page 37 for detailed auto switch specifications.

ſ		Fleetrical	tor		Load v	voltage		Lead	wire lengtl	י (m)*			
	Туре	entry	Indica	Wiring (Output)	D	с	Auto switch model	0.5 (Nil)	3 (L)	5 (Z)	connector	Applica	ble load
	Quitat			3-wire (NPN)		5 V	F6N	•	•	0	0		
	state	Grommet	Yes	3-wire (PNP)	24 V	12 V	F6P	•	•	0	0		Relay, PLC
	ownorr			2-wire		12 V	F6B	•	•	0	0	_	
,	Lead wi	re length sym	bols	0.5 mN	il (Exam	ole) F6N	* Auto switch	hes marke	d with a "C	o" symbol	are produced	upon receip	ot of orders.

3 m.....L (Example) F6NL 5 m.....Z (Example) F6NZ

• Refer to "SMC Best Pneumatics" catalog vol. 10, page 10-20-66 for detailed specifications about the auto switch with pre-wired connector.

Series HYC



Specifications

Dara aiza (mm) 22 40 50 62									
Bore size (mm)	32	40	50	63					
Action		Double actin	ig, Single rod						
Fluid		A	vir						
Minimum operating pressure		0.15	MPa						
Maxmum operating pressure		1.0	MPa						
Proof pressure 1.5 MPa									
Ambient and operating fluid	Without auto switch 0°C to 70°C								
temperature		With auto swit	ch 0°C to 60°C	>					
Lubrication		Not re	quired						
Piston speed	50 to 50	0 mm/s (With pr	ressure at 1.0 N	/IPa) ^{Note)}					
Cushion	Air cushion								
Stroke length tolerance	250 mm	250 mm $^{+1.0}_{0}$ mm or less, 251 to 600 mm $^{+1.4}_{0}$ mm							
Piston rod material	Stainl	ess steel 304 /	Hard chrome	plated					

Note) Use a cylinder below the allowable kinetic energy. Refer to page 16 for the allowable kinetic energy.

Standard Stroke

Bore size (mm)	Standard stroke (mm)
32	25, 50, 75, 100, 125, 150, 200, 250, 300, 400, 500
40	25, 50, 75, 100, 125, 150, 200, 250, 300, 400, 500
50	25, 50, 75, 100, 125, 150, 200, 250, 300, 400, 500, 600
63	25, 50, 75, 100, 125, 150, 200, 250, 300, 400, 500, 600

* Intermediate strokes of 1 mm each can be produced. (The spacer is not used.)

Weight

Without au	to swi	itch									ι	Jnit: kg
Bore size						Stroke	e (mm)					
(mm)	25	50	75	100	125	150	200	250	300	400	500	600
32	0.89	1.02	1.14	1.26	1.38	1.50	1.75	1.99	2.23	2.72	3.21	_
40	1.30	1.46	1.62	1.79	1.95	2.11	2.44	2.77	3.09	3.75	4.40	_
50	2.03	2.26	2.50	2.73	2.96	3.20	3.66	4.13	4.59	5.52	6.45	7.38
63	2.95	3.25	3.54	3.84	4.13	4.43	5.02	5.61	6.21	7.39	8.57	9.76
With such a		(D					la					

With auto s	switch (Built-in magnet and switch rail)	Unit: kg
	Observe (march)	

Bore size		_	_	_	_	Stroke	e (mm)			_	_	
(mm)	25	50	75	100	125	150	200	250	300	400	500	600
32	0.93	1.06	1.19	1.32	1.44	1.57	1.83	2.09	2.34	2.86	3.37	_
40	1.34	1.51	1.68	1.85	2.02	2.19	2.53	2.87	3.21	3.89	4.57	_
50	2.07	2.31	2.55	2.79	3.03	3.27	3.75	4.23	4.71	5.66	6.62	7.58
63	3.00	3.30	3.60	3.91	4.21	4.51	5.12	5.72	6.33	7.54	8.75	9.96

Theoretical Output

				Unit: N		
Bore size	Operating	Operatir	re (MPa)			
(mm)	direction	0.3	0.5	0.7		
22	IN	207	346	484		
52	OUT	241	402	563		
40	IN	318	530	742		
40	OUT	378	630	882		
50	IN	495	825	1160		
50	OUT	588	980	1370		
62	IN	840	1400	1960		
03	OUT	936	1560	2180		

Allowable Load at Rod End



[•] A case where the center of gravity of the load rests 50 mm from the rod end.



Allowable Kinetic Energy





Series HYC

Construction



Built-in magnet





Component Parts

No.	Description	Material	Qty.	Note
1	Rod cover	Aluminum alloy	1	Anodic oxide film
2	Head cover	Aluminum alloy	1	Anodic oxide film
3	Cylinder tube	Aluminum alloy	1	Anodic oxide film
4	Piston rod	Stainless steel	1	Hard chromium plated
5	Piston	Aiuminum alloy	1	Chromated
6	Bushing	Resin	1	
7	Bushing retainer	Aluminum alloy	1	Chromated
8	Magnet holder	Aluminum alloy	1	Chromated
9	Rod end nut	Stainless steel	1	
10	Cushion ring	Steel	2	Zinc chromated
11	Piston nut	Stainless steel	1	
12	Spring washer	Steel	1	
13	Rod scraper	NBR	1	(FKM can be selected.)
14	Wearing	Resin	1	
15	Cushion seal	Resin	2	
16	Rod seal	NBR	1	(FKM can be selected.)
17	Piston seal	NBR	1	
18	Cylinder tube gasket	NBR	2	(FKM can be selected.)
19	Piston gasket	NBR	1	
20	Tie-rod bolt	Stainless steel	8	
21	Needle scraper	NBR	2	(FKM can be selected.)

No.	Description	Material	Qty.	Note				
22	Magnet	Resin	2	(Only built-in magnet)				
23	Switch rail base	Stainless steel	2	(Only built-in magnet)				
24	Hexagon bolt	Stainless steel	2	(Only built-in magnet)				
25	Switch rail	Stainless steel	1	(Only built-in magnet)				

Replacement Parts: Seal Kit

Bore Size	Part no.	Set contents
32	HYCB32□-PS	15 Cushion seal (2 pcs.)
40	HYCB40□-PS	(6) Rod seal (1 pc.)
50	HYCB50□-PS	18 Tube gaskets (2 pcs.)
63	HYCB63□-PS	 Needle scraper (2 pcs.)

Place the seal material symbol in \Box .

Symbol	Material
R	NBR

H External FKM*

* External seal: Rod seal, tube gasket and needle scraper are made from FKM.

Grease package (Food compatible grease) : GR-H-010 (10 g) (Standard grease) : GR-S-010 (10 g)



Construction

Without auto switch: HYCB32 to 63







																													(mm)
Bore size	Stroke range	A	AL	в	B1	С	D	Ee11	F	FA	FB	G	н	H1	МА	мв	J	к	KA	мм	Ν	Ρ	s	т	U	v	w	НА	zz
32	500 or less	22	18	50	17	32.5	12	30	16	5	4	14	48	6	16	3.2	M6 x 1.0	6	10	M10 x 1.25	28	1/8	94	62	21	6	6.5	30	146
40	500 or less	24	20	58	19	38	16	35	18.5	4.5	4	15	54	7	16	3.2	M6 x 1.0	6.5	13	M12 x 1.25	28	1/4	105	71	21	6	8.5	34	163
50	600 or less	32	27	70	24	46.5	20	40	23	5	4	17	69	10	16	4.2	M8 x 1.25	8	16	M16 x 1.5	32	1/4	106	88	25	8	11	40	179
63	600 or less	32	27	84	24	56.5	20	45	23	5	4	17	69	10	16	4.2	M8 x 1.25	8	16	M16 x 1.5	32	3/8	121	102	25	10	9	47	194

Note 1) Refer to page 32 for details about the rod end nut, mounting bracket and accessory bracket. Note 2) When the unit is installed, ensure that dirt does not collect in the rod end (threaded portion).

Series HYC

Construction

With auto switch: HYDCB32 to 63







																												(mm)
Bore size	Stroke range	A	AL	в	B1	С	D	Ee11	F	FA	FB	G	н	H1	ΜА	мв	J	к	KA	ММ	Ν	Ρ	S	т	U	v	w	SA
32	500 or less	22	18	50	17	32.5	12	30	16	5	4	14	48	6	16	3.2	M6 x 1.0	6	10	M10 x 1.25	28	1/8	94	62	21	6	6.5	7.5
40	500 or less	24	20	58	19	38	16	35	18.5	4.5	4	15	54	7	16	3.2	M6 x 1.0	6.5	13	M12 x 1.25	28	1/4	105	71	21	6	8.5	12
50	600 or less	32	27	70	24	46.5	20	40	23	5	4	17	69	10	16	4.2	M8 x 1.25	8	16	M16 x 1.5	32	1/4	106	88	25	8	11	9
63	600 or less	32	27	84	24	56.5	20	45	23	5	4	17	69	10	16	4.2	M8 x 1.25	8	16	M16 x 1.5	32	3/8	121	102	25	10	9	19

Bore size	SB	HS	HA	zz
32	16.5	50	30	146
40	23	54	34	163
50	19	60	40	179
63	24	67	47	194

Note 1) The [] value denotes dimensions with the auto switch D-F6 mounted, which is dedicated to the Hygienic Design Cylinder.

Note 2) Refer to page 32 for details about the rod end nut, mounting bracket and accessory bracket.

Note 3) When the unit is installed, ensure that dirt does not collect in the rod end (threaded portion).



Hygienic Design Cylinder Series HYG ø20, ø25, ø32, ø40, ø50, ø63



Applicable Auto Switches/Refer to page 37 for detailed auto switch specifications.

		tor		Load voltage			Lead	wire length	ר (m)*	Due wine d			
Туре	entry	Indica	Wiring (Output)	D	C	Auto switch model	0.5 (Nil)	3 (L)	5 (Z)	connector	Applicable load		
0.51			3-wire (NPN)		5 V	F6N	•	•	0	0			
Solid state	Grommet	Yes	3-wire (PNP)	24 V	12 V	F6P	•	•	0	0		Relay, PLC	
Switch			2-wire		12 V	F6B	•	•	0	0	_		
* Lead wi	Lead wire length symbols 0.5 mNil (Example) F6N * Auto switches marked with a "O" symbol are produced upon receipt of orders.												

5 m.....Z (Example) F6NZ

• Refer to "SMC Best Pneumatics" catalog vol. 10, page 10-20-66 for detailed specifications about the auto switch with pre-wired connector.

Series HYG



Specifications

Bore size (mm)	20	25	32	40	50	63						
Action	Double acting											
Fluid	Air											
Minimum operating pressure	0.2	MPa		0.15	MPa							
Maxmum operating pressure			1.0	MPa								
Proof pressure	1.5 MPa											
Ambient and operating fluid temperature			0°C to	o 60°C								
Lubrication	Not required											
Piston speed	50 to 500 mm/s (With pressure at 1.0 MPa) Note)											
Cushion	Rubber bumper											
Stroke length tolerance			+1.5	mm								

Note) Use a cylinder below the allowable kinetic energy. Refer to page 24 for the allowable kinetic energy.

Standard Stroke

Bore size (mm)	Standard stroke (mm)
20	20, 30, 50, 100, 150, 200
25	20, 30, 50, 100, 150, 200
32	25, 50, 100, 150, 200
40	25, 50, 100, 150, 200
50	25, 50, 100, 150, 200
63	25, 50, 100, 150, 200

Manufacture of Intermediate Stroke
 Intermediate strokes of 1 mm each can be produced by using spacers with standard stroke cylinders. However, intermediate strokes of 5 mm each can be produced about ø40 to 63.
 Example) HYG32R-57 mounts a 43mm spacer in standard stroke cylinder HYG32R-100.

Weight

Vithout aut	to switch						Unit: kg							
Bore size		Stroke (mm)												
(mm)	20	25	30	50	100	150	200							
20	0.77	_	0.86	1.10	1.68	2.24	2.42							
25	1.17	_	1.29	1.61	2.40	3.15	3.43							
32	_	2.04	_	2.56	3.61	4.59	5.43							
40	_	2.31	—	2.90	4.12	5.23	6.17							
50	_	3.79	_	4.64	6.43	8.04	9.41							
63	_	4.71	_	5.74	7.95	9.92	11.56							
With auto s	witch (Bu	ilt-in mag	net and s	witch rai	l)		Unit: kg							
Bore size		:	Stroke (mm)										
(mm)	20	25	30	50	100	150	200							
20	0.80		0.89	1 12	1 71	2 26	2 45							

			•	·			
(mm)	20	25	30	50	100	150	200
20	0.80	_	0.89	1.12	1.71	2.26	2.45
25	1.19	—	1.32	1.63	2.43	3.18	3.47
32		2.07		2.60	3.66	4.66	5.51
40	-	2.35	_	2.94	4.96	5.30	6.25
50		3.83	-	4.68	6.48	8.11	9.49
63		4.75	_	5.79	8.01	9.99	11.65

Theoretical Output

				Unit: N		
Bore size	Operating	Operatir	ig pressu	re (MPa)		
(mm)	direction	0.3	0.5	0.7		
20	IN	71	118	165		
20	OUT	94	157	220		
25	IN	113	189	265		
25	OUT	147	246	344		
30	IN	181	302	422		
52	OUT	241	402	563		
40	IN	317	528	739		
40	OUT	377	629	880		
50	IN	495	825	1154		
50	OUT	589	982	1374		
63	IN	841	1402	1962		
05	OUT	935	1559	2182		



Plate Allowable Rotational Torque

Strictly observe the values in the following table regarding rotational torque (T) pressurized to the plate (rod end).

When operated outside of the acceptable range, it can decrease the machine's service life.



						ι	Jnit: N∙m								
Bore size		Stroke (mm)													
(mm)	20	25	30	50	100	150	200								
20	0.72	—	0.60	0.57	0.51	0.45	0.37								
25	1.29	_	1.18	1.04	0.97	0.83	0.68								
32	_	3.23	_	3.07	2.87	2.59	2.24								
40	—	3.56	_	3.39	3.16	2.86	2.47								
50	—	7.83	—	6.80	5.88	5.25	4.61								
63	_	8.83	_	7.67	6.63	5.92	5.20								

Plate Non-rotating Accuracy



Bore size (mm)	Non-rotating accuracy θ
20	±0.10
25	±0.09
32	±0.08
40	±0.08
50	±0.07
63	±0.06

* When the cylinder retracts (initial value), for non-rotating accuracy in load-free states and/or except the guide rod deflection, use a value that does not exceed those listed above.

Plate Allowable Moment

Strictly observe the values in the following table regarding allowed moment when eccentric distance is generated from the plate. When operated outside of the acceptable range, it can decrease the machine's service life.



Allowable moment	ø 20	ø 25	ø 32 , ø 40	ø 50, ø 63
(N∙m)	3.57	5.07	21.5	35.3

Series HYG

Plate Allowable Lateral Load

Strictly observe the values in the following graph regarding lateral loads hanging upon the plate end point. When operated outside of the acceptable range, it can decrease the machine's service life.



HYG20











20st





HYG25

Allowable Kinetic Energy





Operating Range When Used as Stopper



* When selecting a model with a longer *ℓ* dimension, be sure to choose a sufficiently large bore size.

≜Caution

Caution on handling

Note) When using as a stopper

Bore size ø20 and ø25: Select a model with ø30 strokes or less. Bore size ø32 to ø63: Select a model with ø50 strokes or less.

Bore size ø20 and ø25







Series HYG

Construction



Component Parts

COI				
No.	Description	Material	Qty.	Note
1	Body	Aluminum alloy	1	Anodic oxide film
2	Plate	Aluminum alloy	1	Anodic oxide film
3	Piston rod	Stainless steel	1	Hard chromium plated
4	Guide rod	Stainless steel	2	Special coated
5	Rod cover	Aluminum alloy	1	Anodic oxide film
6	Head cover	Aluminum alloy	1	Chromated
7	Piston	Aluminum alloy	1	Chromated
8	Bushing	Stainless steel	4	Special coated
9	Magnet holder	Aluminum alloy	1	Chromated
10	Bumper A	Resin	1	
11	Bumper B	Resin	1	
12	Scraper (Piston rod)	Stainless steel+NBR	1	(FKM can be selected.)
13	Scraper (Guide rod)	Stainless steel+NBR	2	(FKM can be selected.)
14	Hexagon bolt	Stainless steel	3	(Over ø32: 2 plugs and 1 hexagon bolt)
15	Rod seal	NBR	1	(FKM can be selected.)
16	Piston seal	NBR	1	
17	O-ring (Rod end)	NBR	1	(FKM can be selected.)
18	O-ring (Head end)	NBR	1	
19	Seal washer	Stainless steel+NBR	3	(FKM can be selected.)
20	Magnet	Resin	1	(Only built-in magnet) (Over ø32: 2 magnets)
21	Switch rail base	Stainless steel	2	(Only built-in magnet)
22	Switch rail	Stainless steel	1	(Only built-in magnet)
23	Hexagon bolt	Stainless steel	2	(Only built-in magnet)
	-			

Replacement Parts: Seal Kit

Part no.	Set contents							
HYG20□-PS	(15) Rod seal (1 pc.)(16) Piston seal (1 pc.)							
HYG25□-PS	⑦ O-ring (Rod end) (1 pc.)⑨ Seal washer (3 pcs.)							
HYG32□-PS	(15) Rod seal (1 pc.)							
HYG40□-PS	(16) Piston seal (1 pc.)							
HYG50□-PS	(9) Seal washer (Breathing port for guide) (1 pc.)							
HYG63□-PS	19 Seal washer (cylinder port) (2 pcs.)							
	Part no. HYG20D-PS HYG25D-PS HYG32D-PS HYG40D-PS HYG50D-PS HYG63D-PS							

Place the seal material symbol in \Box .

Symbol	Material
R	NBR
Н	External FKM*

* External seal: Rod seal, O-ring (Rod side) and seal washer are made from FKM.

Grease package (Food compatible grease): GR-H-010 (10 g) (Standard grease): GR-S-010 (10 g)

≜Caution

Please contact SMC to repair or replace seals of cylinder bore size 40 mm and above.

Please contact SMC when the cylinder has to be diassembled for the purpose of replacing seals, etc.



Dimensions: Ø20, Ø25

Without auto switch: HYG20, 25



(mm

Bore	Standard stroko			Α		В					п	E	E	G	ц		ĸ		МА	MB	N	Р	DA
size	Stanuaru Stroke	30 st or less	31 to 50 st	51 to 100 st	Over 101 st	30 st or less	31 to 50 st	51 to 100 st	Over 101 st	C	U	5	Г	G	п	J	r	-	IVIA			F	FA
20	20, 30, 50, 100,	78.5	88.5	108.5	128.5	52	62	82	102	36	83	14	30	81	18	54	12	10	4	27	12.5	M5 x 0.8	16
25	150, 200	86	96	116	136	56.5	66.5	86.5	106.5	42	93	16	38	91	21	64	16	12	4.5	32	13.5	M5 x 0.8	18
																				·			·

Bo siz	re ze	PB	РС	PD	QA	QB	RA	RB	RC	RD	RE	RF	ТА	тв	тс	TD	UA	UB	UC	UD
2	0	32.5	14	28.5	7	68.5	39	9.5	32	5.4	M6 x 1	12	24	72	M5 x 0.8	13	18	70	M5 x 0.8	10
2	5	34.5	15	34	8.5	78.5	41.5	9.5	38	5.4	M6 x 1	12	29	80	M6 x 1	14.5	26	78	M6 x 1	12

Note 1) Refer to page 35 for details about the optional parts (plug bolt). Note 2) For piping, refer to Specific Product Precautions.

Series HYG

Dimensions: Ø20, Ø25

With auto switch: HYDG20, 25



																													· ·
Bore	Standard stroke				A						В				С	р	F	F	G	н	Л	к	1	мΔ	мв	N	Р	ΡΔ	
size			01.0110	30 s	t or less 🗄	31 to 50	st 51 to	o 100 st	Over	r 101 st 30 s	st or less	31 to	50 st 51	I to 100 st	Over 101 st	•	-	-	•	-		•		-				•	
20	20, 3	0, 50	0, 100,	7	8.5	88.5	10	08.5	12	28.5 5	52	62	2	82	102	36	83	14	30	81	18	54	12	10	4	27	12.5	M5 x 0.8	16
25	150,	200		8	6	96	1	16	13	36 5	6.5	66	6.5	86.5	106.5	42	93	16	38	91	21	64	16	12	4.5	32	13.5	M5 x 0.8	18
Bore	5	2		~							DE	~			SB				T A .	тр	-		+	Ĺ.		-			
size	РВ	PC	PD	QA	QВ	RA	кв	кс	ĸIJ	RE	RF	5A	30 st or le	ess 31 to 5	0 st 51 to 10	0 st 0	Over 10)1 st		в	1	C	1	ין ט		ЛВ	UC	UU	
20	32.5	14	28.5	7	68.5	39	9.5	32	5.4	M6 x 1	12	16	22.5	32.	5 52.5	5	72.	5	24	72	M5	x 0.8	13	3	18	70	M5 x 0	.8 10	

(mm)

X U.8 18 70 25 34.5 15 34 8.5 78.5 41.5 9.5 38 5.4 M6 x 1 12 17 25.5 35.5 55.5 75.5 29 80 M6 x 1 14.5 26 78 M6 x 1 12 Note 1) The [] value denotes dimensions with the auto switch D-F6 mounted, which is dedicated to the Hygienic Design Cylinder.

Note 2) Refer to page 35 for details about the optional parts (plug bolt).

Note 3) For piping, refer to Specific Product Precautions.

SMC

Dimensions: Ø32 to Ø63

Without auto switch: HYG32 to 63



																					(mm)
Bore	Stroko			A			E	3		~	п	E	E	G	ш		ĸ		МА	MB	
size	STOKE	30 st or less	31 to 50 st	51 to 100 st	Over 101 st	30 st or less	31 to 50 st	51 to 100 st	Over 101 st	C		E	F	G		J	L L	-	IVIA		
32		106.5	116.5	131.5	146.5	73	83	98	113	48	112	18	44	110	24	78	20	16	5	41	15.5
40	25, 50,	106.5	116.5	131.5	146.5	73	83	98	113	54	120	18	44	118	27	86	20	16	5	48	15.5
50	100, 150,	121.5	131.5	146.5	161.5	80	90	105	120	64	148	23	60	146	32	110	25	20	6	59	18.5
63	200	121.5	131.5	146.5	161.5	80	90	105	120	78	162	23	70	158	39	124	25	20	6	74	18.5

Bore		Ρ		В٨	DD		пп	DE	DE	~		П٨	DD		РΠ	DE	DE	тл	тр	то	тп				
size	Nil	TF	ΤN	FA	FD	FC	FD	FE	FF	QA	QD	nA	nD	пС	שח	nc	nr		ТВ	10	טין	UA	UD		
32	Rc1/8	G1/8	NPT1/8	20	42.5	16	37.8	4.7	13	11	95	51	11.5	46	6.6	M8 x 1.25	16	32	96	M8 x 1.25	20	30	96	M8 x 1.25	13.5
40	Rc1/8	G1/8	NPT1/8	20.5	40.5	17	42.5	4.7	13	11	103	31	30	50	6.6	M8 x 1.25	16	38	104	M8 x 1.25	20	30	104	M8 x 1.25	13.5
50	Rc1/4	G1/4	NPT1/4	22	41.5	22	52	6.2	16	12.5	129	31	32	63	8.6	M10 x 1.5	20	43	127	M10 x 1.5	22	40	130	M10 x 1.5	17
63	Rc1/4	G1/4	NPT1/4	24	45	23	61	6.2	16	12	143	35	34	76	8.6	M10 x 1.5	20	57	141	M10 x 1.5	22	50	130	M10 x 1.5	17

Note 1) Refer to page 35 for details about the optional parts (plug bolt). Note 2) For piping, refer to Specific Product Precautions.

Series HYG

Dimensions: Ø32 to Ø63

With auto switch: HYDG32 to 63



_																S	В									
Bore	PB	PC	PD	PE	PF	QA	QB	RA	RB	RC	RD	RE	RF	SA	30 st	31 to	51 to	Over	ТΑ	ΤВ	тс	TD	UA	UB	UC	UD
3120															or less	50 st	100 st	101 st								
32	42.5	16	37.8	4.7	13	11	95	51	11.5	46	6.6	M8 x 1.25	16	22.5	36.5	46.5	61.5	76.5	32	96	M8 x 1.25	20	30	96	M8 x 1.25	13.5
40	40.5	17	42.5	4.7	13	11	103	31	30	50	6.6	M8 x 1.25	16	21	38	48	63	78	38	104	M8 x 1.25	20	30	104	M8 x 1.25	13.5
50	41.5	22	52	6.2	16	12.5	129	31	32	63	8.6	M10 x 1.5	20	21	45	55	70	85	43	127	M10 x 1.5	22	40	130	M10 x 1.5	17
63	45	23	61	6.2	16	12	143	35	34	76	8.6	M10 x 1.5	20	23.5	42.5	52.5	67.5	82.5	57	141	M10 x 1.5	22	50	130	M10 x 1.5	17

78 162 23 70 158 39 124 25 20

74 18.5 Rc1/4

6

G1/4 NPT1/4 24

120

Note 1) The [] value denotes dimensions with the auto switch D-F6 mounted, which is dedicated to the Hygienic Design Cylinder.

Note 2) Refer to page 35 for details about the optional parts (plug bolt).

131.5

146.5

161.5

80

90

105

Note 3) For piping, refer to Specific Product Precautions. 29

121.5

200

63

Auto Switch Proper Mounting Position (Detection at stroke end) and Its Mounting Height



(----)

D-G5BA



ø80, ø100

						(mm)
Dava alaa		D-H7BA			D-G5BA	
Bore size	Α	В	Hs	Α	В	Hs
20	29	19.5	24.5	_	_	_
25	29	19.5	27	_	_	—
32	30	20.5	30.5	_	_	_
40	34.5	22.5	35	—	—	—
50	42	27.5	40.5	_	_	_
63	42	27.5	47.5	_	_	—
80	_	_	_	48	32	59
100	_	_	_	48	32	69.5

Note) The above values are a guide in the stroke end detection of the mounting position of the auto switch. Please adjust in an actual setting after confirming the operating state of the auto switch.

Operating Range

Auto owitch model	Bore size											
Auto Switch model	20	25	32	40	50	63	80	100				
D-H7BA	4	4	4.5	5	6	6.5	_	_				
D-G5BA		—	_	—	—	_	6.5	7				

* Since this is a guideline including hysteresis, it is not meant to be guaranteed. There may be substantial variation depending on the surrounding environment (assuming approximately ±30% dispersion).

Auto Switch Mounting Bracket/Part No.

Auto owitch model				Bore siz	ze (mm)			
Auto Switch model	20	25	32	40	50	63	80	100
D-H7BA	BMA2-020	BMA2-025	BMA2-032	BMA2-040	BMA2-050	BMA2-063		—
D-G5BA	—	—	—	—	—	—	BA-08	BA-10

* An iron screw is attached when the above mounting bracket is ordered on its own. Please use the provided stainless steel screws, attached below the switch, for final assembly.

Mounting screws set made of stainless steel

BBA3: for D-G5BA BBA4: for G-H7BA

• D-G5BA and D-H7BA switches are set on the cylinder with the stainless steel screws above when shipped. When the switches are shipped as individual parts, the BBA3 or BBA4 is included.

• Refer to "SMC Best Pneumatics" catalog vol. 10 for auto switch mounting.

Minimum Stroke of Auto Switch Mounting

Auto switch model	1 pc.	2 pcs.
D-H7BA	10	15
D-G5BA	10	15

Series **HY**

Auto Switch Proper Mounting Position (Detection at stroke end) and Its Mounting Height









		(mm)
Bore size	Α	В
20	6.5	10.5
25	6.5	11
32	8.5	16
40	10.5	16
50	10.5	17
63	9	18

Note) The above values are a guide in the stroke end detection of the mounting position of the auto switch. Please adjust in an actual setting after confirming the operating state of the auto switch.

			(mm)
Bore size	Α	В	Hs
32	7.5	16.5	50
40	12	23	54
50	9	19	60
63	19	24	67

Note) The above values are a guide in the stroke end detection of the mounting position of the auto switch. Please adjust in an actual setting after confirming the operating state of the auto switch.

					(mm)
Poro oizo	•			В	
Bore size	A	30 st or less	31 to 50 st	51 to 100 st	Over 101 st
20	16	22.5	32.5	52.5	72.5
25	17	25.5	35.5	55.5	75.5
32	22.5	36.5	46.5	61.5	76.5
40	21	38	48	63	78
50	21	45	55	70	85
63	23.5	42.5	52.5	67.5	82.5

Note) The above values are a guide in the stroke end detection of the mounting position of the auto switch. Please adjust in an actual setting after confirming the operating state of the auto switch.

Auto Switch Mounting (HYQ, HYC, HYG common)

Proper tightening torque

When the mounting screw is tightened, use a special tool or torque wrench. The tightening torque of the M3 mounting screw should be 0.8 to 1.4 N·m.



Tighten the screw within the following torque range when the auto switch mounting rail is installed during maintenance.

Screw size	Tightening torque (N•m)
M4	1.1 to 1.9

Tighten the screw within the following torque range when the auto switch is installed on the mounting rail.

Tightening torque (N•m)
0.8 to 1.4

⁄/smc

HYG **D-F6**

HYQ D-F6



≈ 25

Operating Range

					Unit: C	perating r	ange [mm					
Auto switch	0	Bore size										
model	Series	20	25	32	40	50	63					
	HYQ	7	6	7.5	7.5	7.5	7.5					
D-F6	HYC	—	—	7.5	7.5	7.5	7.5					
	HYG	7	7	8	7.5	7.5	7.5					

Note) Since this is a guideline including hysteresis, it is not meant to be guaranteed. There may be substantial variation depending on the surrounding environment (assuming approximately ±50% dispersion).

Minimum Stroke of Auto Switch Mounting

Auto switch model	Series	1 pc.	2 pcs.
D 50	HYQ, HYC	5	10
D-F0	HYG	10	15

Mounting Brackets

Foot Bracket

HYB



										Foot bra	cket m	aterial:	Stainless steel
Bore size	Bracket part no.	Weight (g)	x	Y	LD	LH	LC	LT	LX	LY	LZ	М	Mounting bolt
32	CG-L032SUS	0.06	16	6	7.2	25	45	3	44	44	60	3.5	M5 x 0.8
40	CG-L040SUS	0.08	16.5	6.5	7.2	30	51	3	54	53.5	75	4	M6 x 1.0
50	CG-L050SUS	0.17	21.5	11.5	10	40	55	4	66	69	90	5.5	M8 x 1.25
63	CG-L063SUS	0.23	21.5	11.5	12	45	55	4	82	81	110	7	M10 x 1.5
80	CG-L080SUS	0.36	28	17	12	55	60	4	100	99.5	130	7	M10 x 1.5
100	CG-L100SUS	0.69	30	15	14	70	60	6	120	125	160	8	M12 x 1.75

Note 1) One mounting bracket is attached with one foot bracket and two mounting bolts. Note 2) Order two foot brackets per cylinder. Note 3) Contact SMC for HYB ø20, ø25.

HYC



HYQ





Foot bracket material: Stainless steel (mm)

Bore size	Bracket	Weight	х	Y	LD	LH	LC	LQ	LT	LX	LY	LZ	нүс	H۱ Without a	/Q uto switch	HY With aut	DQ o switch	Mounting bolt
	pan no.	(g)											ZA	ZB	ZC	ZB	ZC	-
32	HY-L032SUS	100	24	11	7	32	142	109	4	32	57	49.5	177	107	129	122	144	M6 x 1 x 18L
40	HY-L040SUS	120	28	10	9	36	161	121.5	4	36	65	57.5	198	115.5	139.5	130.5	154.5	M6 x 1 x 18L
50	HY-L050SUS	210	32	11	9	45	170	140.5	5	45	80	69	218	133.5	165.5	148.5	180.5	M8 x 1.25 x 20L
63	HY-L063SUS	260	32	11	9	50	185	141	5	50	92	84	233	134	166	149	181	M8 x 1.25 x 20L

Note 1) One mounting bracket is attached with one foot bracket and two mounting bolts. Note 2) Two foot brackets per cylinder should be ordered.

Note 3) Contact SMC for HYQ ø20, ø25.



Flange Bracket

HYB (Rod end)

Rod end flange bracket (Material: Stainless steel)





Bore size	Bracket part no.	Weight (g)	FT	FX	FZ	FD	
32	CG-F032SUS	0.10	6	38	50	6.6	
40	CG-F040SUS	0.15	6	46	60	6.6	
50	CG-F050SUS	0.26	9	58	75	9	
63	CG-F063SUS	0.52	9	70	90	11	
80	CG-F080SUS	0.66	9	82	100	11	
100	CG-F100SUS	1.16	10	100	125	14	

Note 1) One mounting bracket is attached with one flange bracket and four mounting bolts. Note 2) Contact SMC for HYB ø20, ø25.

רן ז נו

HYC (Rod end and head end are common.)

רוי לוי עני

FT





HYQ



Flange	bracket	material:	Stainless	steel
			(mm)

																(1111)
Bore size	Bracket	Weight	в	FD	FE	FT	FX FY FZ		FZ Fd		IYC HYQ Without auto switch		HYDQ With auto switch		Mounting bolt	
	part no.	(y)									ZA	ZB	ZC	ZB	ZC	
32	HY-F032SUS	260	49.5	7	6	10	64	32	80	29	152	82	104	97	119	M6 x 1 x 18L
40	HY-F040SUS	320	57.5	9	8.5	10	72	36	90	34	169	87.5	111.5	102.5	126.5	M6 x 1 x 18L
50	HY-F050SUS	580	69	9	11	12	90	45	110	39	187	102.5	134.5	117.5	149.5	M8 x 1.25 x 20L
63	HY-F063SUS	770	82	9	11	12	100	50	120	44	202	103	135	118	150	M8 x 1.25 x 20L

Note 1) One mounting bracket is attached with 4 mounting bolts. Note 2) Contact SMC for HYQ ø20, ø25.

ZA + Stroke



øFd

FE.

(mm)

Single Clevis Bracket



HYQ



Bore	Bracket	Weigh	t I	DD		СПНа	CY-0.2	H	
size	part no.	(g)			U	CD	CA-0.6	ZA	ZB
32	HY-C032SUS	200	22	10	12	10	26	164	174
40	HY-C040SUS	310	25	12	15	12	28	184	196
50	HY-C050SUS	440	27	12	17	12	32	202	214
63	HY-C063SUS	760	32	16	20	16	40	222	238
Bore	Bracket	HYQ	/ witho	ut auto	switch				
size	part no.	ZC	ZD	ZE	ZF				
32	HY-C032SUS	94	104	116	126				
40	HY-C040SUS	102.5	114.5	126.5	138.	5			

155

171

Bore	Bracket	HYE	DQ / wit	witch	Maunting halt		
size	part no.	ZC	ZD	ZE	ZF	wounting bolt	
32	HY-C032SUS	109	119	131	141	M6 x 1 x 18L	
40	HY-C040SUS	117.5	129.5	141.5	153.5	M6 x 1 x 18L	
50	HY-C050SUS	132.5	144.5	164.5	176.5	M8 x 1.25 x 20L	
63	HY-C063SUS	138	154	170	186	M8 x 1.25 x 20L	

139

Note 1) One mounting bracket is attached with 4 mounting bolts. Note 2) Contact SMC for HYQ ø20, ø25.

63 HY-C063SUS 123

_

Double Clevis Bracket



HYQ



Double clevis bracket material: Stainless ste												
Bore size	Bracket part no.	Weight (g)	L	RR	U	CD ^{H9}	CX H14	CZ ^{h14}				
32	HY-D032SUS	220	22	10	12	10	26	45				
40	HY-D040SUS	350	25	12	15	12	28	52				
50	HY-D050SUS	490	27	12	17	12	32	60				
63	HY-D063SUS	810	32	16	20	16	40	70				

Bore	Bracket	HYC		HYQ / without auto switch						
size	part no.	ZA	ZB	ZC	ZD	ZE	ZF			
32	HY-D032SUS	164	174	94	104	116	126			
40	HY-D040SUS	184	196	102.5	114.5	126.5	138.5			
50	HY-D050SUS	202	214	117.5	129.5	149.5	161.5			
63	HY-D063SUS	222	238	123	139	155	171			

1								
	Bore	Bracket	HYE	DQ / wit	Mounting holt			
	size	part no.	ZC	ZD	ZE	ZF	wounting boit	
	32	HY-D032SUS	109	119	131	141	M6 x 1 x 18L	
	40	HY-D040SUS	117.5	129.5	141.5	153.5	M6 x 1 x 18L	
	50	HY-D050SUS	132.5	144.5	164.5	176.5	M8 x 1.25 x 20L	
	63	HY-D063SUS	138	154	170	186	M8 x 1.25 x 20L	

Note 1) One mounting bracket is attached with 4 mounting bolts and clevis pin (HY-E0⊟SUS) and snap rings.

Note 2) Contact SMC for HYQ ø20, ø25.

Clevis Pin



									(mm)
Bore size	Bracket part no.	Weight (g)	D ^{f8}	L	d	I	m	t	Applied snap ring
32	HY-E03SUS	40	10	53	9.6	46	2.3	1.2	C type for shaft 10
40	HY-E04SUS	60	12	60	11.5	53	2.3	1.2	C type for shaft 12
50	HY-E05SUS	70	12	68	11.5	61	2.3	1.2	C type for shaft 12
63	HY-E06SUS	130	16	78	15.2	71	2.3	1.2	C type for shaft 16

Note 1) One clevis pin is attached with two snap rings. Note 2) Contact SMC for HYQ ø20, ø25.

Material: Stainless steel

Options

Rod End Nut

HYQ, HYC

Part no.

NTH-02SUS

NT-02SUS

NT-03SUS

NTH-04SUS

NTH-05SUS 50, 63



d

M6 x 1.0

M8 x 1.25

M10 x 1.25

M12 x 1.25

M16 x 1.5 10

Applicable bore size

20

25

32

40

Material: Stainless steel

Н В С

3.6

5

6

7

(mm)

10 11.5

13 15

17 19.6

19 21.9

24 27.7

Plug Bolt

Part no.

HYC



Applicable bore size **B2**

HYC-H03SUS 32, 40 10 M6 x 1.0 22

HYC-H05SUS 50, 63 12 M8 x 1.25 24 8

Note) The above part number is attached with 4 bolts.

HYB, HYG

ВΜ

Material: Stainless steel

BM

(mm)

6

BZ M



BM

НҮВ			Material: Sta	ainless	steel (mm)
Part no.	Applicable bore size	B ₂	BM	ΒZ	М
HYB-H020SUS	20	7	M4 x 0.7	9	3
	25	8	M5 x 0.8	9.5	3.5
HTD-H025505	32	8	M5 x 0.8	9.5	3.5
HYB-H040SUS	40	10	M6 x 1.0	12	4
HYB-H050SUS	50	13	M8 x 1.25	15.5	5.5
	63	17	M10 x 1.5	19	7
HTD-1003505	80	17	M10 x 1.5	19	7
HYB-H100SUS	100	19	M12 x 1.75	24	8
Note) The above	part num	ber is	attached wit	h 4 bo	lts.

HYG (mm) Part no. BM М B2 ΒZ HYG-H020SUS 3.5 8 M5 x 0 8 95 HYG-H025SUS 10 M6 x 1.0 12 4 HYG-H032SUS M8 x 1.25 15.5 13 5.5 HYG-H050SUS 17 M10 x 1.5 19 7

Note) The above part number is attached with 4 bolts.

External Cover

HYQ: ø20, ø2	25			ç	
Rod end	-			t=1 Ma	aterial: Stainless steel (mm)
Part no.	A	В	С	D	Installation bolt
HYQ-HA020SUS	32.2	22	5.5	18.5	M5 x 0.8 x 10L
HYQ-HA025SUS	39.2	26	6.6	20.5	M6 x 1.0 x 10L

Note) One mounting bracket is attached with two mounting bolts.

HYQ: Ø32 to Ø63



				t=1 Ma	aterial: Stainless steel (mm)
Part no.	Α	В	С	D	Installation bolt
HYQ-HA032SUS	48.8	32.5	6.6	22.5	M6 x 1.0 x 10L
HYQ-HA040SUS	56.8	38	6.6	26.5	M6 x 1.0 x 10L
HYQ-HA050SUS	68.2	46.5	8.8	32.5	M8 x 1.25 x 10L
HYQ-HA063SUS	83.2	56.5	8.8	32.5	M8 x 1.25 x 10L

Note) One mounting bracket is attached with four mounting bolts.

Head end			1 ^{Ma}	aterial: Stainless steel (mm)
Part no.	Α	В	С	Installation bolt
HYQ-HB020SUS	32.2	22	5.5	M5 x 0.8 x 10L
HYQ-HB025SUS	39.2	26	6.6	M6 x 1.0 x 10L

Note) One mounting bracket is attached with two mounting bolts.



Note) One mounting bracket is attached with four mounting bolts.



Mounting Bolt

Mounting method	: Mounting bolt for through-hole type
	HYQB is available.
How to Order	: Add "HY-" to the head of the bolt.

Example) Prepare the mounting bolt of cylinder model "HYQB20-5". The part no. is "HY-M4 x 65L" 2 pcs.



HYQ/Without built-in magnet

Model	С	D	Mounting bolt
HYQB20-5		65	HY-M4 x 65L
-10		70	x 70L
-15		75	x 75L
-20		80	x 80L
-25	10	85	x 85L
-30	10	90	x 90L
-35		95	x 95L
-40		100	x 100L
-45		105	x 105L
-50		110	x 110L
HYQB25-5		65	HY-M5 x 65L
-10		70	x 70L
-15		75	x 75L
-20		80	x 80L
-25		85	x 85L
-30	5	90	x 90L
-35		95	x 95L
-40		100	x 100L
-45		105	x 105L
-50		110	x 110L

						Mate	rial: Stainless steel
Model	С	D	Mounting bolt	Model	С	D	Mounting bolt
HYQB32-5		75	HY-M5 x 75L	HYQB50-10		100	HY-M6 x 100L
-10		80	x 80L	-15		105	x 105L
-15		85	x 85L	-20		110	x 110L
-20		90	x 90L	-25		115	x 115L
-25		95	95 x 95L	-30		120	x 120L
-30	0	100	x 100L	-35	13.5	125	x 125L
-35	9	105	x 105L -40		130	x 130L	
-40		110	x 110L	-45		135	x 135L
-45		115	x 115L	-50		140	x 140L
-50		120	x 120L	-75		165	x 165L
-75		145	x 145L	-100		190	x 190L
-100		170	x 170L	HYQB63-10		100	HY-M6 x 100L
HYQB40-5		80	HY-M5 x 80L	-15		105	x 105L
-10		85	x 85L	-20		110	x 110L
-15		90	x 90L	-25		115	x 115L
-20		95	x 95L	-30		120	x 120L
-25		100	x 100L	-35	13	125	x 125L
-30	95	105	x 105L	-40		130	x 130L
-35	3.5	110	x 110L	-45		135	x 135L
-40		115	x 105L	-50		140	x 140L
-45		120	x 120L	-75		165	x 165L
-50		125	x 125L	-100		190	x 190L
-75		150	x 150L				
-100		175	x 175L				

HYDQ/With built-in magnet

Model	С	D	Mounting bolt	Model	С	D	Mounting bolt	Model	С	D	Mounting bolt
HYDQB20-5		75	HY-M4 x 75L	HYDQB32-5		90	HY-M5 x 90L	HYDQB50-10		115	HY-M6 x 115L
-10		80	x 80L	-10		95	x 95L	-15		120	x 120L
-15		85	x 85L	-15		100	x 100L	-20		125	x 125L
-20		90	x 90L	-20		105	x 105L	-25		130	x 130L
-25	10	95	x 95L	-25		110	x 110L	-30		135	x 135L
-30	10	100	x 100L	-30	0	115	x 115L	-35	13.5	140	x 140L
-35		105	x 105L	-35	9	120	x 120L	-40		145	x 145L
-40		110	x 110L	-40		125	x 125L	-45		150	x 150L
-45		115	x 115L	-45		130	x 130L	-50		155	x 155L
-50		120	x 120L	-50		155	x 155L	-75		180	x 180L
HYDQB25-5		75	HY-M5 x 75L	-75		180	x 180L	-100		205	x 205L
-10		80	x 80L	-100		185	x 185L	HYDQB63-10		115	HY-M6 x 115L
-15		85	x 85L	HYDQB40-5		95	HY-M5 x 95L	-15		120	x 120L
-20		90	x 90L	-10		100	x 100L	-20		125	x 125L
-25	0	95	x 95L	-15		105	x 105L	-25		130	x 130L
-30	9	100	x 100L	-20		110	x 110L	-30		135	x 135L
-35		105	x 105L	-25		115	x 115L	-35	13	140	x 140L
-40		110	x 110L	-30	0.5	120	x 120L	-40		145	x 145L
-45		115	x 115L	-35	9.5	125	x 125L	-45		150	x 150L
-50		120	x 120L	-40		130	x 130L	-50		155	x 155L
				-45		135	x 135L	-75		180	x 180L
				-50		140	x 140L	-100		205	x 205L
				-75		165	x 165L				



190

x 190L

-100

Series HY

Specifications

Туре	Solid state switch					
Leakage current	3-wire: 100 µA or less	2-wire: 0.8 mA or less				
Operating time	1 ms (or less				
Impact resistance 1000 m/s ²						
Insulation resistance	50 M Ω or more at 500 VDC Mega (between lead wire and case)					
Withstand voltage	1000 VAC for 1 minute (be	tween lead wire and case)				
Ambient temperature	-10 to	0 60°C				
Enclosure	IEC529 standard IP67, JIS C	0920 waterproof construction				

Hysteresis

Hysteresis is the distance between the position at which piston movement operates an auto switch and the position at which reverse movement turns the switch off. This hysteresis is included in a part of the operating range (one side).



Lead Wire Length

(Example)	D-F6P	Ļ		
		Lead	wire length	
		Nil	0.5 m	
		L	3 m	
		Z	5 m	

Note 1) Applicable auto switch with 5 m lead wire "Z" Solid state switch: All types are manufactured upon receipt of order (as standard).

Note 2) The standard lead wire length of solid state switch with water resistant 2-color indication is 3 meters. (0.5 m is not available.)

Series HY **Connections and Examples**

Solid state 3-wire, PNP

Basic Wiring

Solid state 3-wire, NPN





(The switch power supply and the load power supply are another cases.)









2-wire (Solid state)



Brown

Example of Connection to PLC



Source input specifications 3-wire, PNP

Brown



Connect according to the applicable PLC input specifications, since the connection method will vary depending on the PLC input specifications.

Example of AND (Series) and OR (Parallel) Connection



AND connection for NPN output (using relays)



2-wire with 2 switches AND connection



Power supply _____ Internal voltage drop x 2 pcs. Load voltage at ON= 04 V 4 V x 2 pcs.

Example : Power supply voltage is 24 V DC Internal voltage drop in switch is 4 V.

AND connection for NPN output (performed with switches only)

COM

PLC internal circuit



OR connection for NPN output



The indicator lights will illuminate when both switches are turned ON.

2-wire with 2 switches OR connection



When two switches are connected in parallel, malfunction may occur because the load voltage will increase when in

Leakage Load Load Load impedance = 1 mA x 2 pcs. x 3 kΩ

Example : Load impedance is 3 k Ω Leakage current from switch is 1 mA.



Water Resistance 2-color Indication Type Solid State Switch: Band Mounting Style D-H7BAL

Grommet

Water (coolant) resistant type



Caution Operating Precautions

Please consult with SMC if using coolant liquid other than water based solutions.

Auto Switch Internal Circuit



Auto Switch Specifications

	PLC: Programmable Logic Controller		
D-H7BAL (With indicator light)			
Auto switch part no.	D-H7BAL		
Wiring type	2-wire		
Output type	_		
Applicable load	24 VDC relay, PLC		
Power supply voltage	_		
Current consumption	_		
Load voltage	24 VDC (10 to 28 VDC)		
Load current	5 to 40 mA		
Internal voltage drop	4 V or less		
Leakage current	0.8 mA or less at 24 VDC		
Indicator light	Operating position ······ Red LED illuminates when ON. Optimum operating position ······ Green LED illuminates when ON.		

• Lead wires — Oilproof vinyl heavy-duty cord: ø3.4, 0.2 mm², 2 cores (brown, blue), 3 m (standard)

Note 1) Refer to page 37 for solid state switch common specifications. Note 2) Refer to page 37 for lead wire lengths.

Weight

 Auto switch part Inc.
 D-H7BA

 Lead wire length (m)
 0.5
 —

 3
 50
 5

 5
 81
 1

Dimensions

Unit : mm

Unit : g



Most sensitive position

SMC

10.5

Water Resistance 2-color Indication Type Solid State Switch: Band Mounting Style D-G5BAL

Grommet

Water (coolant) resistant type



▲Caution Operating Precautions

Please consult with SMC if using coolant liquid other than water based solutions.

Auto Switch Internal Circuit



Auto Switch Specifications

	PLC: Programmable Logic Controller		
-G5BAL (With indicator light)			
Auto switch part no.	D-G5BAL		
Wiring type	2-wire		
Output type	_		
Applicable load	24 VDC relay, PLC		
Power supply voltage	_		
Current consumption	_		
Load voltage	24 VDC (10 to 28 VDC)		
Load current	5 to 40 mA		
Internal voltage drop	4 V or less		
Leakage current	0.8 mA or less at 24 VDC		
Indicator light	Operating position ······ Red LED illuminates when ON. Optimum operating position ······ Green LED illuminates when ON.		

 Lead wires — Oilproof vinyl heavy-duty cord: ø4, 0.3 mm², 2 cores (brown, blue), 3 m (standard)

Note 1) Refer to page 37 for solid state switch common specifications. Note 2) Refer to page 37 for lead wire lengths.

Weight

Unit : g

Unit : mm

Auto switch part no.		D-G5BA
	0.5	_
Lead wire length	3	68
()	5	108

Dimensions

4



Solid State Switch: Direct Mounting Style **D-F6N/D-F6P/D-F6B** \mathbf{F}

Grommet

- 2-wire load current is reduced (2.5 to 40 mA)
- UL certified (style 2844) lead cable is used
- For RoHS



Auto Switch Specifications

PLC: Programmable Logic Controller D-F6 (With indicator light) D-F6P Auto switch part no. D-F6N D-F6B Electrical entry direction In-line Wiring type 3-wire 2-wire NPN PNP Output type 24 VDC relay, PLC Applicable load IC circuit, relay, and PLC 5, 12, 24 VDC (4.5 to 28 V) Power supply voltage Current consumption 10 mA or less Load voltage 28 VDC or less 24 VDC (10 to 28 VDC) Load current 40 mA or less 2.5 to 40 mA Internal voltage drop 0.8 V or less 4 V or less Leakage current 100 μ A or less at 24 V DC 0.8 mA or less Indicator light Red LED illuminates when ON.

 Lead wires - Oilproof vinyl heavy-duty cord: 2.7 x 3.2 ellipse : 0.15 mm² x 2 cores

D-F6B

D-F6N, D-F6P: 0.15 mm² x 3 cores

SMC

Note 1) Refer to page 37 for solid state switch common specifications.

Note 2) Refer to page 37 for lead wire lengths.

Weight

Unit : g

Auto switch part n	0.	D-F6N	D-F6P	D-F6B
	0.5	20	20	19
Lead wire length	3	53	53	50
(11)	5	80	80	75

Dimensions

Unit : mm



Caution

Operating Precautions

Fix the switch with the existing screw installed on the switch body. The switch may be damaged if a screw other than the one supplied, is used.

D-F6N O DC (+) Brown Switch ain circuit OUT nain (Black [>] DC (–) Blue

Auto Switch Internal Circuit



Series HY Safety Instructions

These safety instructions are intended to prevent a hazardous situation and/or equipment damage. These instructions indicate the level of potential hazard by labels of "**Caution**", "**Warning**" or "**Danger**". To ensure safety, be sure to observe ISO 4414 ^{Note 1}, JIS B 8370 ^{Note 2} and other safety practices.

Explanation of the Labels

Labels	Explanation of the labels	
\land Danger	In extreme conditions, there is a possible result of serious injury or loss of life.	
\land Warning	Operator error could result in serious injury or loss of life.	
▲ Caution	Operator error could result in injury Note 3) or equipment damage. Note 4)	

Note 1) ISO 4414: Pneumatic fluid power - General rules relating to systems

Note 2) JIS B 8370: General Rules for Pneumatic Equipment

Note 3) Injury indicates light wounds, burns and electrical shocks that do not require hospitalization or hospital visits for long-term medical treatment.

Note 4) Equipment damage refers to extensive damage to the equipment and surrounding devices.

Selection/Handling/Applications

1. The compatibility of the pneumatic equipment is the responsibility of the person who designs the pneumatic system or decides its specifications.

Since the products specified here are used in various operating conditions, their compatibility for the specific pneumatic system must be based on specifications or post analysis and/or tests to meet the specific requirements. The expected performance and safety assurance are the responsibility of the person who has determined the compatibility of the system. This person should continuously review the suitability of all items specified, referring to the latest catalog information with a view to giving due consideration to any possibility of equipment failure when configuring a system.

- 2. Only trained personnel should operate pneumatically operated machinery and equipment. Compressed air can be dangerous if handled incorrectly. Assembly, handling or repair of pneumatic systems should be performed by trained and experienced operators. (Understanding JIS B 8370 General Rules for Pneumatic Equipment, and other safety rules are included.)
- 3. Do not service machinery/equipment or attempt to remove components until safety is confirmed.
 - Inspection and maintenance of machinery/equipment should only be performed once measures to prevent falling or runaway of the driver objects have been confirmed.
 When againment is remained apply preserve as mentioned object. Turn off the supply preserve for this againment.
 - When equipment is removed, confirm that safety process as mentioned above. Turn off the supply pressure for this equipment and exhaust all residual compressed air in the system, and release all the energy (liquid pressure, spring, condenser, gravity).
 Before machinery/equipment is restarted, take measures to prevent quick extension of a cylinder piston rod, etc.
- 4. Contact SMC if the product will be used in any of the following conditions:
 - 1. Conditions and environments beyond the given specifications, or if product is used outdoors.
 - 2. Installation on equipment in conjunction with atomic energy, railway, air navigation, vehicles, medical equipment, food and beverages, recreation equipment, emergency stop circuits, clutch and brake circuits in press applications, or safety equipment.
 - An application which has the possibility of having negative effects on people, property, or animals, requiring special safety analysis.
 If the products are used in an interlock circuit, prepare a double interlock style circuit with a mechanical protection function for the prevention of a breakdown. And, examine the devices periodically if they function normally or not.

■ Exemption from Liability

- 1. SMC, its officers and employees shall be exempted from liability for any loss or damage arising out of earthquakes or fire, action by a third person, accidents, customer error with or without intention, product misuse, and any other damages caused by abnormal operating conditions.
- 2. SMC, its officers and employees shall be exempted from liability for any direct or indirect loss or damage, including consequential loss or damage, loss of profits, or loss of chance, claims, demands, proceedings, costs, expenses, awards, judgments and any other liability whatsoever including legal costs and expenses, which may be suffered or incurred, whether in tort (including negligence), contract, breach of statutory duty, equity or otherwise.
- 3. SMC is exempted from liability for any damages caused by operations not contained in the catalogs and/or instruction manuals, and operations outside of the specification range.
- 4. SMC is exempted from liability for any loss or damage whatsoever caused by malfunctions of its products when combined with other devices or software.



Series HY Auto Switch Precautions 1

Be sure to read this before handling.

Caution on Design / Selection

Warning

1. Confirm the specifications.

Read the specifications carefully and use this product appropriately. The product may be damaged or malfunction if it is used outside the range of specifications of current load, voltage, temperature or impact. We do not guarantee any damage in any case the product is used outside of the specification range.

2. Pay attention to the length of time that a switch is on at an intermediate stroke position.

When an auto switch is placed at an intermediate position of the stroke and a load is driven at the time the piston passes, the auto switch will operate, but if the speed is too great, the operating time will be shortened and the load may not operate properly. The maximum detectable piston speed is:

$$V (mm/s) = \frac{Auto switch operating range (mm)}{Load operating time (ms)} \times 1000$$

3. Keep wiring as short as possible.

<Solid state switch>

Although wire length should not affect switch function, use a wire that is 100 m or shorter.

4. Do not use a load that generates surge voltage. If a surge voltage is generated, the discharge occurs at the contact, possibly resulting in the shortening of product life.

<Solid state switch>

Although a zener diode for surge protection is connected at the output side of a solid state auto switch, damage may still occur if a surge is applied repeatedly. When directly driving a load which generates surge, such as a relay or solenoid valve, use a type of switch with a built-in surge absorbing element.

5. Cautions for use in an interlock circuit

When an auto switch is used for an interlock signal requiring high reliability, devise a double interlock system to safeguard against malfunctions by providing a mechanical protection function, or by also using another switch (sensor) together with the auto switch. Also perform periodic inspection and confirm proper operation.

6. Do not repair, diassemble, or make any modifications to the product, including changes in the printed circuit board, as this may result in injury or an accident.

▲Caution

1. Take precautions when multiple cylinders (actuators) are used close together.

When two or more auto switch cylinders (actuators) are lined up in close proximity to each other, magnetic field interference may cause the switches to malfunction. Maintain a minimum cylinder separation of 40 mm. (When the allowable interval is specified for each cylinder series, use the indicated value.)

2. Take precautions for the internal voltage drop of the switch.

- If auto switches are connected in series as shown below, take note that there will be a large voltage drop because of internal resistance in the light emitting diodes. (Refer to internal voltage drop in the auto switch specifications.)
 - [The voltage drop will be "n" times larger when "n" auto switches are connected.]

Even though an auto switch operates normally, the load may not operate.

_____ O____ O____ Load

• Similarly, when operating below a specified voltage, it is possible that the load may be ineffective even though the auto switch function is normal. Therefore, the formula below should be satisfied after confirming the minimum operating voltage of the load.

Supply _ Internal voltage _ Minimum operating voltage of load

<Solid state switch>

Generally, the internal voltage drop will be great with a 2wire solid state auto switch.

Also, note that a 12 VDC relay is not applicable.

3. Pay attention to leakage current. <Solid state switch>

With a 2-wire solid state auto switch, current (leakage current) flows to the load to operate the internal circuit even when in the OFF state.

Current to operate load > Leakage (OFF condition) > current

If the condition given in the above formula is not met, it will not reset correctly (stays ON). Use a 3-wire switch if this specification cannot be satisfied.

Moreover, leakage current flow to the load will be "n" times larger when "n" auto switches are connected in parallel.

4. Ensure sufficient clearance for maintenance activities.

When designing an application, be sure to allow sufficient clearance for maintenance and inspections.

Series HY Auto Switch Precautions 2

Be sure to read this before handling.

Mounting and Adjustment

A Warning

1. Instruction manual.

Install the products and operate them only after reading the instruction manual carefully and understanding its contents. Also keep the manual where it can be referred to as necessary.

2. Do not drop or bump.

Do not drop, bump or apply excessive impacts (1000 m/s 2 or greater for solid state switches) while handling.

Although the body of the switch may not be damaged, the inside of the switch could be damaged and cause a malfunction.

3. Mount switches using the proper tightening torque.

When a switch is tightened above the torque specification, the mounting screws, or switch may be damaged. On the other hand, tightening below the torque specification may allow the switch to slip out of position. (Refer to switch mounting for each series regarding switch mounting, moving, and fastening torque, etc.)

4. Mount a switch at the center of the operating range.

Adjust the mounting position of an auto switch so that the piston stops at the center of the operating range (the range in which a switch is ON). (The mounting positions shown in the catalog indicate the optimum position at the stroke end.) If mounted at the end of the operating range (around the borderline of ON and OFF), operation will be unstable.

5. Secure the space for maintenance.

When installing the products, please allow access for maintenance.

1. Do not carry an actuator by the auto switch lead wires.

Never carry a cylinder by its lead wires. This may not only cause broken lead wires, but it may cause internal elements of the switch to be damaged by the stress.

2. Fix the switch with the appropriate screw installed on the switch body. If using other screws, switch may be damaged.

Wiring

AWarning

1. Confirm proper insulation of wiring.

Be certain that there is no faulty wiring insulation (such as contact with other circuits, ground fault, improper insulation between terminals, etc.). Damage may occur due to excess current flow into a switch.

2. Do not wire in conjunction with power lines or high voltage lines.

Wire separately from power lines or high voltage lines, avoiding parallel wiring or wiring in the same conduit with these lines. Control circuits containing auto switches may malfunction due to noise from these lines.

Wiring

1. Avoid repeatedly bending or stretching lead wires.

Broken lead wires will result from repeatedly applying bending stress or stretching force to the lead wires.

2. Be sure to connect the load before power is applied.

<2-wire type>

If the power is turned ON when an auto switch is not connected to a load, the switch will be instantly damaged because of excess current.

3. Do not allow short circuit of loads.

<Solid state switch>

 $F6\square$ does not have built-in short circuit protection circuits. If loads are short circuited, the switches will be instantly damaged, as in the case of reed switches.

Take special care to avoid reverse wiring with the brown power supply line and the black output line on 3-wire type switches.

4. Avoid incorrect wiring.

<Solid state switch>

If connections are reversed on a 2-wire type switch, the switch will not be damaged if protected by a protection circuit, but the switch will always stay in an ON state. However, it is still necessary to avoid reversed connections, since the switch could be damaged by a load short circuit in this condition.

<F6□>

D-F6 \Box does not have built-in short circuit protection circuit. Be aware that if the power supply connection is reversed (e.g. (+) power supply wire and (–) power supply wire connection is reversed), the switch will be damaged.

5. When the cable sheath is stripped, confirm the stripping direction. The insulator may be split or damaged depending on the direction. (D-F6□)



Recommended Tool

Model name	Model no.
Wire stripper	D-M9N-SWY

* Stripper for a round cable (ø2.0) can be used for a 2-wire type cable.

Series HY Auto Switch Precautions 3

Be sure to read this before handling.

Operating Environment

A Warning

1. Never use in an atmosphere of explosive gases. The construction of the auto switch is not intended to prevent

explosion. Never use in an atmosphere with an explosive gas since this may cause a serious explosion.

2. Do not use in an area where a magnetic field is generated.

The auto switch will malfunction or the magnets inside of an actuator will become demagnetized if used in such an environment.

3. Do not use in an environment where the auto switch will be continually exposed to water.

The switch satisfies the IEC standard IP67 construction (JIS C 0920: waterproof construction). Nevertheless, it should not be used in applications where it is continually exposed to water splash or spray. This may cause deterioration of the insulation or swelling of the potting resin inside switch causing a malfunction.

4. Do not use in an environment with oil or chemicals.

Consult with SMC if the auto switch will be used in an environment with coolant, cleaning solvent, various oils or chemicals. If the auto switch is used under these conditions for even a short time, it may be adversely effected by a deterioration of the insulation, a malfunction due to swelling of the potting resin, or hardening of the lead wires.

5. Do not use in an environment with temperature cycles.

Consult with SMC if the switch is used where there are temperature cycles other than normal temperature changes, as they may adversely affected the switch internally.

6. Do not use in an area where surges are generated.

<Solid state switch>

When there are units (such as solenoid type lifters, high frequency induction furnaces, motors, etc.) that generate a large amount of surge in the area around an actuator with a solid state auto switch, their proximity or pressure may cause deterioration or damage to the internal circuit of the switch. Avoid sources of surge generation and crossed lines.

ACaution

1. Avoid accumulation of iron debris or close contact with magnetic substances.

When a large accumulated amount of ferrous waste such as machining chips or welding spatter, or a magnetic substance (something attracted by a magnet) is brought into close proximity to an cylinder with auto switches, this may cause the auto switches to malfunction due to a loss of the magnetic force inside the cylinder.

- 2. Contact SMC for the water resistance ability, the elasticity ability of the lead wire, and the welding site etc.
- 3. Do not expose the product to direct sunlight for an extended period of time.
- 4. Do not use the product in locations where it is exposed to radiant heat.

Maintenance

1. Perform the following maintenance periodically in order to prevent possible danger due to unexpected auto switch malfunction.

1) Securely tighten switch mounting screws. If screws become loose or the mounting position is dislocated, retighten them after readjusting the mounting position.

 Confirm that there is no damage to the lead wires. To prevent faulty insulation, replace switches or repair lead wires, etc., if damage is discovered.

2. Perform the maintenance procedures outlined in the instruction manual.

If the maintenance procedures are performed improperly, malfunction or damage to the machinery or equipment may occur.

3. Removal of equipment, and supply/exhaust of compressed air.

When an equipment is serviced, first confirm that measures are in place to prevent workpieces from dropping run-away equipment, etc. Then cut the supply pressure and power, and exhaust all compressed air from the system using the residual pressure release function.

When the equipment is operated after remounting or replacement, first confirm that measures are in place to prevent lurching of actuators, etc. Then confirm that the equipment is operating normally.



Series HY Specific Product Precautions 1

Be sure to read this before handling.

Please refer to the back of page 1 to 4 for Safety Instruction and Auto Switch Precautions.

Caution on Design

ACaution

- Speed adjustment should be conducted in the environment where the cylinder is used. In a different environment, the speed adjustment may be incorrect.
- 2. There are possibilities that dust may accumulate by the usage condition in the thread part and brackets for mounting of this products.

Do measures according to the usage condition when you mount it.

Operating Environment

A Caution

1. Avoid installing and using a cylinder inside a food zone.

<Not installable>

Food zone	An environment where food which will be
	sold as merchandize, directly touches the
	cylinder's components.
<pre>clnetallablos</pre>	

Splash zone An environment where food which will not be sold as merchandize, directly touches the cylinder's components.

Non-food zone ------ An environment where there is no contact with food.



- 2. When a detergent or chemical liquid other than water is splashed on the cylinder, the cylinder's service life may be substantially shortened. Please contact us for details.
- 3. When washing a cylinder with steam, please observe the allowable temperature range of the cylinder and perform for a short period of time.
- 4. When washing a cylinder with a brush, etc., please do not apply excessive force to the auto switch's lead wire, etc.

Mounting

Warning

1. Do not put hands or fingers, etc. between the plate and body. [Series HYG]

Care should be taken that hands or fingers do not get caught in between the cylinder body and the plate when air pressure is applied.



A Caution

- 1. Design the aptitude enough by thinking about the rigidity of mount because the cylinder puts out big power.
- 2. Tighten in following tightening torque when you install the auto switch rail when repairing it.

Thread size	Tightening torque (N•m)
M4	1.1 to 1.9

3. Do not apply any force to lead wires when auto switch is mounted on cylinder.

Never apply any force to lead wires. This may not only cause broken lead wires, but it may cause internal elements of the switch to be damaged by the stress. Moreover, the switch might not operate when force applys to the lead wire and the distance between the switch and the cylinder become long.

4. Pay attention to magnetic substance density between the auto switch and the cylinder body and the circumference.

When a magnetic substance is brought into close proximity with an auto switch and cylinder, it may cause the auto switch to malfunction due to a loss of the magnetic force inside the cylinder.

5. When the cylinder, the support bracket and the plug bolt are mounted, tighten them within below tightening torque. [Series HYB]

Bore size	Thread size	Tightening torque (N•m)
ø20	M4 x 0.7	1.1 to 1.9
ø25, ø32	M5 x 0.8	2.1 to 3.9
ø40	M6 x 1	3.7 to 6.7
ø50	M8 x 1.25	8.8 to 16.2
ø63, ø80	M10 x 1.5	17.2 to 31.8
ø100	M12 x 1.75	29.4 to 54.6





Series HY Specific Product Precautions 2

Be sure to read this before handling.

Please refer to the back of page 1 to 4 for Safety Instruction and Auto Switch Precautions.

∧ Caution

[Series HYC]

Bore size	Thread size	Tightening torque (N•m)
ø32, 40	M6 x 1	3.7 to 6.7
ø50, 63	M8 x 1.25	8.8 to 16.2



6. When the cylinder, the support bracket and the external cover are mounted, tighten them within below tightening torque. [Series HYQ]

Bore size	Thread size	Tightening torque (N•m)
ø20	M5 x 0.8	2.1 to 3.9
ø25, 32, 40	M6 x 1	3.7 to 6.7
ø50, 63	M8 x 1.25	8.8 to 16.2



7. When the cylinder, the plug bolt and the load are mounted, tighten within below tightening torque. [Series HYG]

Top Mounting

<u> </u>		
Bore size	Thread size	Tightening torque (N•m)
ø20, 25	M5 x 0.8	2.1 to 3.9
ø32, 40	M6 x 1	3.7 to 6.7
ø50, 63	M8 x 1.25	8.8 to 16.2



Lower Side Mounting

1.1		_			
Bore size		Thread size	Tightening torque (N•m)		
	ø20, 25	M6 x 1	3.7 to 6.7		
ø32, 40 M8 x 1.25		M8 x 1.25	8.8 to 16.2		
	ø50, 63	M10 x 1.5	17.2 to 31.8		



Bottom Mounting or Load Mounting

g					
Bore size	Thread size	Tightening torque (N•m)			
ø20 M5 x 0.8		2.1 to 3.9			
ø25	M6 x 1	3.7 to 6.7			
ø32, 40	M8 x 1.25	8.8 to 16.2			
ø50, 63	M10 x 1.5	17.2 to 31.8			



Bottom mounting

Load mounting

Plug Bolt Mounting (Optional)

Thread size	Tightening torque (N•m)				
M5 x 0.8	2.1 to 3.9				
M6 x 1	3.7 to 6.7				
M8 x 1.25	8.8 to 16.2				
M10 x 1.5	17.2 to 31.8				



8. Install the load when the piston rod is retracted. [Series HYG]

The twist occurs in the guide part if the load is installed on the plate when the piston rod is extended, and it causes the malfunction.

Lubrication

▲Caution

1. Lubrication of Hygienic Design Cylinder (standard grease use goods).

This unit can be operated without lubrication. If lubrication is performed, build in the lubricator in the circuit, use turbine oil Class 1 (with no additives) ISO VG32.

Moreover, the malfunction will occur if the lubrication is discontinued on the way because the disappearance of the initial lubrication part. Lubricate without fail continuously. Consult with SMC if other lubricant are used.

Series HY Specific Product Precautions 3

Be sure to read this before handling.

Please refer to the back of page 1 to 4 for Safety Instruction and Auto Switch Precautions.

Lubrication

ACaution

2. Lubrication to Hygienic Design Cylinder (food compatible grease use goods).

If this unit is lubricated, it might cause the malfunction. Moreover, when a grease out of specification is used, it causes the malfunction.

 Place a purchase order with the following model number when only the grease for maintenance is necessary.
 Standard grease (for non-food) Food compatible grease
 GR-S-010 (10 g) GR-H-010 (10 g)

3. Do not wipe off the grease adhering to the sliding part of the air cylinder.

It might cause the malfunction when compulsorily peeling off the adhering grease to the sliding parts. If the cylinder operates the long distance, the sliding parts might become black. In that case, the actuation becomes possible for a long term when the grease of the sliding parts is wiped off once, and it greases it again.

(Wipe off by water. If alcohol and a special solvent are used, the seal might be damaged.)

Cushion (HYC)

A Caution

1. Readjust with the cushion needle.

Readjust the cushion needle installed in the cover according to the load size and the operating speed before use, though it is adjusted to near the fully closed states when it ships. When the cushion adjuster is rotated to clockwise, the throttle strengthens becomes tight and the cushion strengthens will be good.

2. Do not use the cushion needle for a long term in the fully closed states.

It causes the damage of the seal.

3. Torque to the cushion adjuster should be below of the following torque when the cushion needle is adjusted.

Tightening torque (N•m)	
0.5	

Do not exceed the torque mentioned above. Otherwise it causes the damage.

4. Do not exceed the adjustable range of cushion needle.

If cushion needle is rotated with the torque over adjustable range, it causes the damage.

Bore size	Rotations		
ø32, 40	4 or less		
ø50, 63	5 or less		

Piping

A Caution

1. This product might be damaged if the compressed air is supplied to the breathing port for guide, so do not supply it. [Series HYG]



<Example>

• Piping is connected in the breathing port on guide, breathing at general environment is possible.

2. Plug piping ports and breathing port on guide according to the operating conditions. [Series HYG]

Piping Port

Bore size	Plug thread size	Plug width across flats	Tightening torque (N•m)
ø20, 25	M5	8	After tightening by hand, tighten1/6 turn.
ø32, 40	1/8	13	7 to 9
ø50, 63	1/4	16	12 to 14

Breathing Port for Guide

Bore size	Plug thread size	Plug width across flats	Tightening torque (N•m)	
ø20 to ø63 M5		8	After tightening by hand, tighten1/6 turn.	

Breathing port on guide



3. Use the piping tube installed in the breathing port for guide is more than ø4 in bore size and within 3 m in length, otherwize the cylinder piston speed might decrease.



Caution on Handling

A Caution

- 1. If the sliding parts is washed, the grease will wash out and the service life will be shorten, keep washing at a minimum.
- 2. Plug up unnecessary mounting holes with plug bolts or external cover (optional), etc., bacteria might grow if water gets in these holes.

A Safety Instructions Be sure to read "Precautions for Handling Pneumatic Devices" (M-03-E3A) before using.

SMC CORPORATION (Europe)

Austria	+43 226262280	www.smc.at	office@smc.at	Lithuania	🖀 +370 5 264 81 26		
Belgium	+32 (0)33551464	www.smcpneumatics.be	post@smcpneumatics.be	Netherlands	+31 (0)205318888	www.smcpneumatics.nl	info@smcpneumatics.nl
Bulgaria	+359 2 9744492	www.smc.bg	office@smc.bg	Norway	+47 67129020	www.smc-norge.no	post@smc-norge.no
Croatia	🖀 +385 1 377 66 74	www.smceu.com	office@smc.hr	Poland	225485085 🖀	www.smc.pl	office@smc.pl
Czech Republic	🖀 +42 0541424611	www.smc.cz	office@smc.cz	Portugal	🖀 +351 226108922	www.smces.es	postpt@smc.smces.es
Denmark	+45 70252900	www.smcdk.com	smc@smc-pneumatik.dk	Romania	213205111 1	www.smcromania.ro	smcromania@smcromania.ro
Estonia	🖀 +372 (0)6593540	www.smcpneumatics.ee	smc@smcpneumatics.ee	Russia	🖀 +812 1185445	www.smc-pneumatik.ru	marketing@smc-pneumatik.ru
Finland	🖀 +358 207 513513	www.smc.fi	smcfi@smc.fi	Slovakia	🖀 +421 244456725	www.smc.sk	office@smc.sk
France	🖀 +33 (0)164761000	www.smc-france.fr	contact@smc-france.fr	Slovenia	🖀 +386 73885249	www.smc-ind-avtom.si	office@smc-ind-avtom.si
Germany	🖀 +49 (0)61034020	www.smc-pneumatik.de	info@smc-pneumatik.de	Spain	🖀 +34 945184100	www.smces.es	post@smc.smces.es
Greece	🖀 +30 (0)13426076	www.smceu.com	parianos@hol.gr	Sweden	2 +46 (0)86031200	www.smc.nu	post@smcpneumatics.se
Hungary	🖀 +36 13711343	www.smc-automation.hu	office@smc-automation.hu	Switzerland	2 +41 (0)523963131	www.smc.ch	info@smc.ch
Ireland	+353 (0)14039000	www.smcpneumatics.ie	sales@smcpneumatics.ie	Turkey	🖀 +90 (0)2122211512	www.entek.com.tr	smc-entek@entek.com.tr
Italy	🖀 +39 (0)292711	www.smcitalia.it	mailbox@smcitalia.it	UK	🖀 +44 (0)8001382930	www.smcpneumatics.co.uk	sales@smcpneumatics.co.uk
Latvia	🖀 +371 (0)7779474	www.smclv.lv	info@smclv.lv				
	European Marketing Centre 🛛 🖀 +34 94			5184100	www.smceu.c	om	
		SMC CORPORA	ATION 🖀 +81 03	35022740	www.smcworl	d.com	
		Akibabara LIDX 15E	4-14-1 Sotokanda Chivor	da-ku Tokvo 1	01-0021 JAPAN Pho	ne: 03-5207-8240 EAX	13-5208-5362

 SMC CORPORATION
 Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249
 FAX: 03-5298-5362

 1st printing JZ printing JZ ao UK
 Printed in Spain
 Specifications are subject to change without prior notice and any obligation on the part of the manufacturer.