Fieldbus System





(For Input/Output)

Supports digital inputs/outputs, analogue inputs/outputs, and IO-Link masters



- ◆ IO-Link master unit compatible products have been added.
- 2 models (port class A and port class B)
- Up to 4 modules can be connected.
- Master/device diagnosis function
- The data can be accessed from via PC (setting tool).
- Device parameter setting function, Automatic saving/writing
- * Only the EtherNet/IP™ compatible SI unit (made to order) is applicable. p. 42



<Compatible Protocols>





















Please contact SMC for details on compatible products.

Self-diagnosis function

Equipped with an input/output open/shortcircuit detection function and an input/output signal ON/OFF counter function

Web server function*1



Various connectors available

The following connectors are selectable for the input/output devices: M12 connectors, M8 connectors, D-sub connectors, and spring type terminal blocks.

Up to 9 units*1 can be connected.


Up to 9 units can be connected in any order. *1 Excludes SI units




EX600 Series



Can be connected with digital, analogue, and IO-Link master units

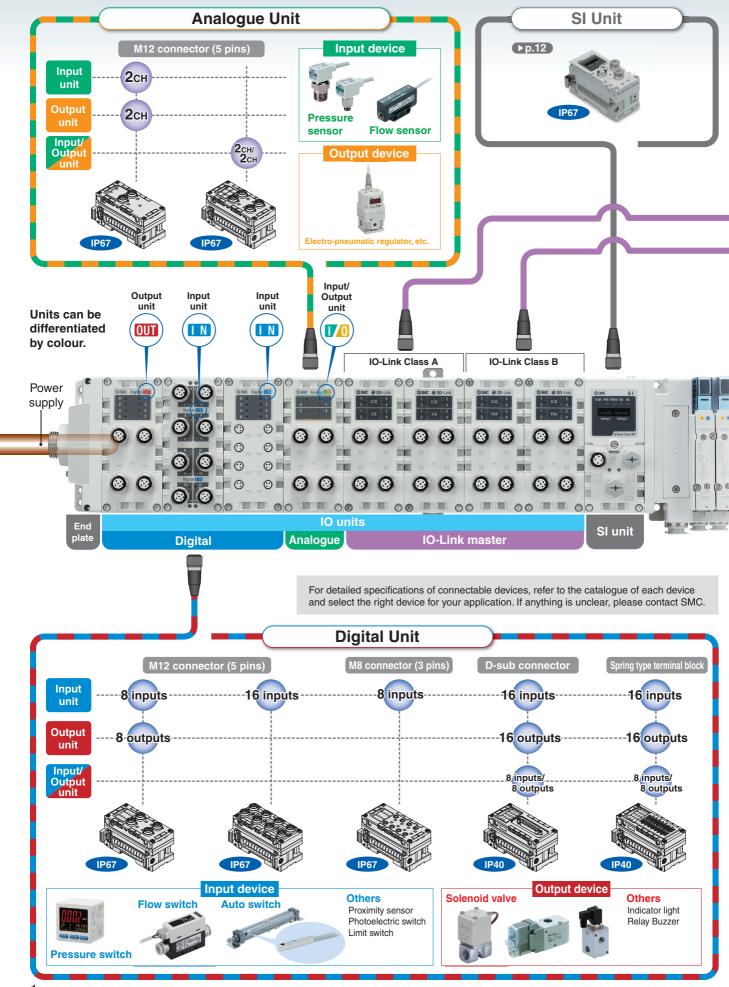

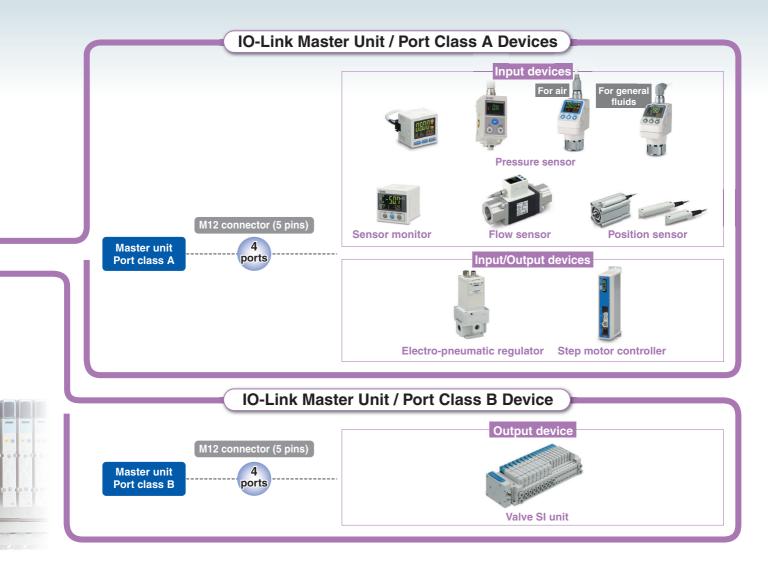

■ Connectable Solenoid Valve Series

Series	Flow rate characteristics (4/2 \rightarrow 5/3)		Max. number	Power consumption	Applicable	
Series	C [dm³/(s·bar)]	b	of solenoids	[W]	cylinder size	
1P67 *1	SY3000	1.6	0.19			Ø 50
	SY5000	3.6	0.17	32	0.35 (Standard) 0.1 (With power-saving circuit)	Ø 63
c Al us	SY7000	5.9	0.20			Ø 80
IP67 *1, *3	JSY1000	0.91	0.48		0.2 (With power-saving circuit)	Ø 40
(6	JSY3000	2.77	0.27	32	0.4 (Standard) 0.1 (With power-saving circuit)	Ø 50
	JSY5000	6.59	0.22			Ø 80
IP40 (E	S0700*2	0.37	0.39	32	0.35	Ø 25
IP67 *1	SV1000*2	1.1	0.35			Ø 40
(6	SV2000*2	2.4	0.18	32	0.6	Ø 63
c AL us	SV3000*2	4.3	0.21			Ø 80
IP67 *1	VQC1000	1.0	0.30	24	0.4 (Standard)	Ø 40
CE	VQC2000	3.2	0.30			Ø 63
	VQC4000	7.3	0.38		0.95 (Standard) 0.4 (Low-wattage type)	Ø 160
	VQC5000	17	0.31			Ø 180

^{*1} Units with a D-sub communication connector are IP40.



^{*2} There is no manifold part number setting for the IO-Link compatible units. (Please order separately.)

^{*3} The JSY1000 is IP40.

IO-Link

IO-Link is a communication technology for sensors and actuators that is an international standard, IEC61131-9.

This technology is used to send/receive device information such as manufacturer, product part number, parameters, and diagnostic data, as well as the control data including ON/OFF signals and measured values of the sensor, by connecting the IO-Link master and sensor in a 1:1 configuration.

IO-Link enables condition monitoring and error detection of the sensor and equipment, and it can contribute to the reduction of startup labour and recovery time and the realisation of preventive and predictive maintenance.

Reduced design and startup labour


- Batch setting of device parameters from the upper level
- Remote check of device information
- Detection and remote unified check of device misconnection/non-connection

Minimum recovery time due to error detection

- Early detection of location where problem is occurring via communication
- Early obtaining of information on problem phenomenon via communication
- Early recovery during product replacement (automatic setting of device parameters)


Preventive and predictive maintenance through condition monitoring

- Monitors changes in measured values of a sensor during signal ON/OFF
- Monitors the number of device operations and automatically notifies when the set number of operations has been exceeded
- Remote monitoring of device and equipment conditions via communication

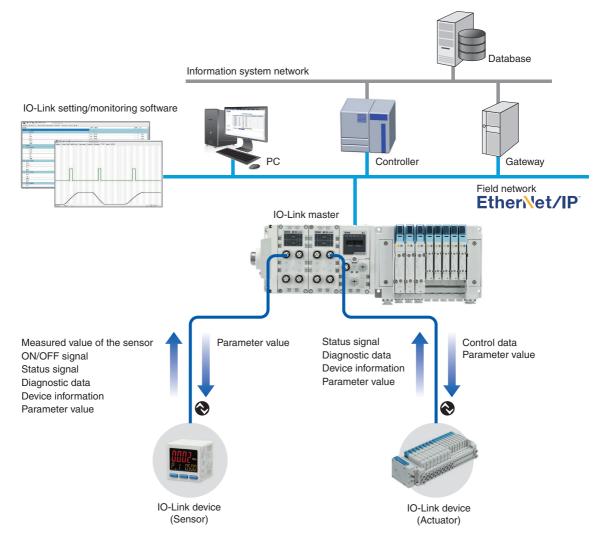



IO-Link System Configuration

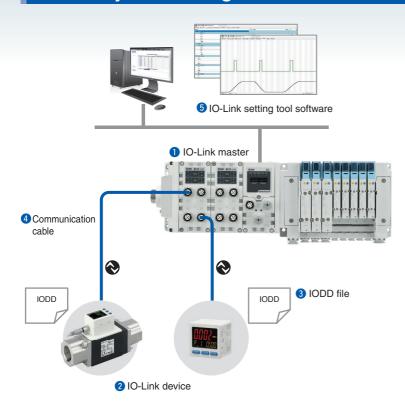

10-Link master

 Acts as a gateway between the IO-Link communication and the upper level communication

2 IO-Link device

 A sensor/actuator connecting to an IO-Link master in a 1:1 configuration

3 IODD file (IO Device Description)

- A file in which device properties and parameters are described
- Registered to the setting tool
- Provided by the device manufacturer

4 Communication cable


- A 4-wire or 5-wire general-purpose cable that is the same as the existing sensor cable (Unshielded cable)
- Max. cable length: 20 m

5 IO-Link setting tool software

- Software for the setting and monitoring of a master/ device
- Provided by the master manufacturer*1
- *1 A setting tool compatible with the masters of every manufacturer is used for the SMC EX600 series IO-Link master. (IO-Link Device Tool V5 manufactured by TMG Technologie und Engineering, Germany)


IO-Link Interface

The connecting part between the IO-Link master and the device is called a "port." Each port can be switched between "IO-Link mode" for digital communication and "standard I/O mode" for conventional contact input/output.

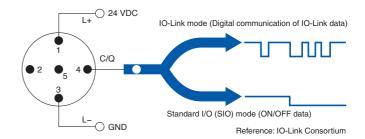


■2 types of interfaces

There are two methods for power supply: one is for sensors, and the other is for actuators.

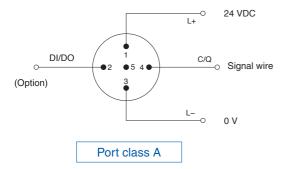

The control power supply wire and signal wire can be connected with one cable. (Mainly for sensors)

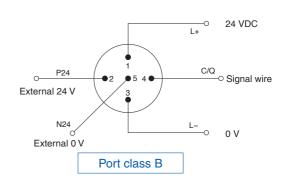

The control power supply wire, external power supply wire, and signal wire can be connected with one cable. (Mainly for actuators)




IO-Link Master Unit

■ Can be connected with digital, analog, and IO-Link master units

Up to 4 IO-Link master units can be connected. (Total of 16 ports)

* When connecting the EtherNet/IP™ unit

Digital units, analogue units, and IO-Link master units can be mixed, and up to 9 units can be connected in any order.

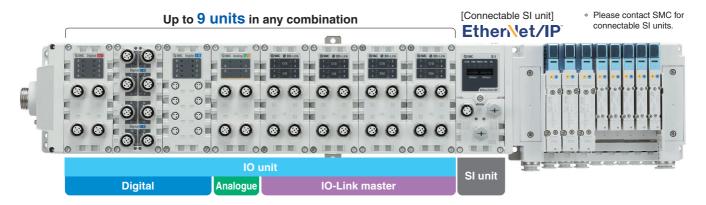


■ Supports both port class A and port class B




For connecting IO-Link sensors

Pressure sensors, flow sensors, actuator position sensors, electro-pneumatic regulators, etc.

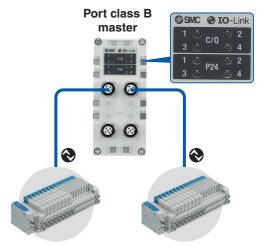

For connecting IO-Link compatible SI units (for valve driving)

■ The data can be accessed from via PC (setting tool).

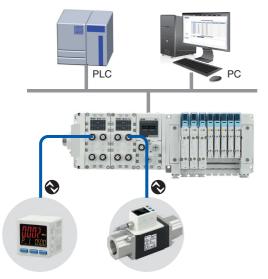

The setting and monitoring of the master and device are possible via PC, without using the PLC.


- Process data
- Device parameters, Master parameters
- Master information, Device information
- Port diagnosis, Device diagnosis



■ Diagnosis function

Diagnosis on a master and device is possible from the upper level communication.

Master (port) diagnostic information can be obtained via PLC program or PC (web browser). Device diagnostic information can be obtained via PC (setting tool).

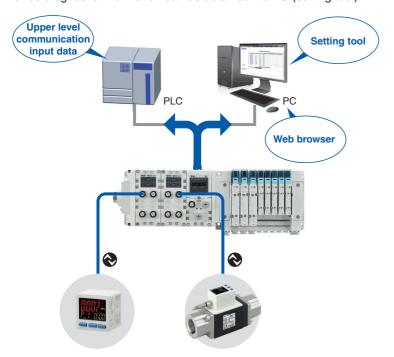

Items of master (port) diagnosis
Detection of port short-circuit
Detection of non-connected device
Detection of misconnected device (check error)
Notification of port misconfiguration (excessively large input/output data)
Conditions of diagnostic event (port, device)

Items of device diagnosis

from devices are shown in event codes.

Diagnostic results (problem phenomenon) received


■ Device parameter setting function, Automatic saving/writing

The parameter setting of devices is possible from the upper level communication.

Parameter setting is possible via PC (setting tool).

It is also possible to use output data or message data via PLC program.*1

*1 For EtherNet/IP™ communication

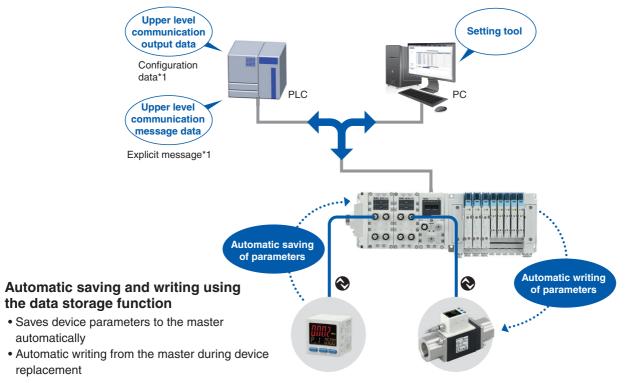


Functions of EtherNet/IP™

The following functions are available for the dual-port EtherNet/IP™ product (EX600-SEN3/4).


■ Added: Compatible topologies (Connection configuration)

EX600-SEN3/4 The dual-port product (EX600-SEN3/4) is available for both the linear and device level ring topologies, in addition to the star type. Linear type Device level ring (DLR) type PLC with ring supervisor function*1 PLC Switching hub is not required. Cable length can EtherNet/IP™ EtherNet/IP™ be shortened. EX600 4 EX6002 EX6002 EX6003 EX600 3 One or more ring supervisors are required.

For the device level ring type, even if the communication cable is disconnected in one location, EtherNet/IP™ communication can be continued, and the disconnected portion can be specified by the ring supervisor.

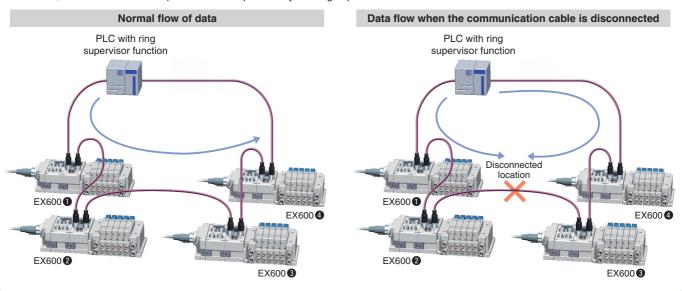


■ QuickConnect[™] function available

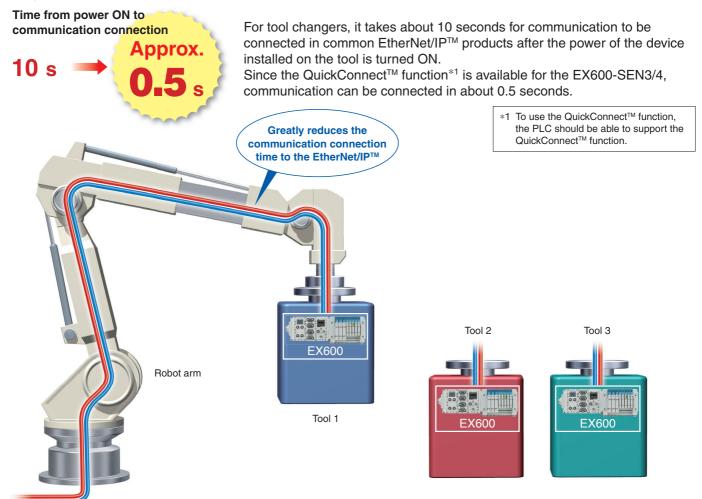

■ Built-in web server function

The EX600-SEN3/4 has a built-in web server function, which enables status checks, parameter settings, and forced output of the EX600 using general-purpose web browsers, such as Internet Explorer. Start-up of the system and maintenance can be performed efficiently.

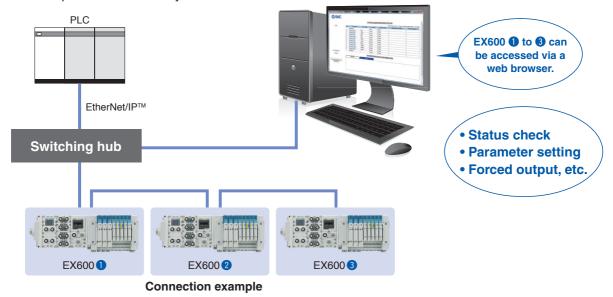

Fieldbus System EX600

D-sub connector


IP40

These units are capable of connection using a D-sub connector. There are three types of units: for digital input, output, and input/output. The digital output unit can be connected with an SMC manifold solenoid valve F kit (D-sub connector).

Manifold solenoid valves can be connected using a cable with a D-sub connector.

- SY series SV series
- S0700 series VQC series
- SJ series
 - VQ series
- SQ series JSY series
- Please limit the number of valve connections to 16 stations for single and 8 stations for double. Refer to the catalogue of each product for pin assignment details.


VVZS3000-21A-□-X192 (Non-waterproof cable example)

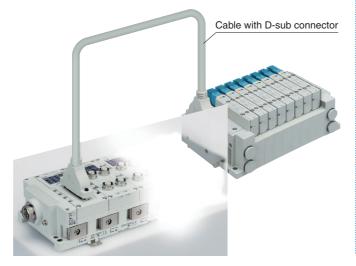

■ Spring type terminal block

IP40


These terminal block units are compatible with individual wiring configurations. There are three types of units: for digital input, output, and input/output. Wiring connection to a sensor connector box, etc., can be carried out easily using only a flat head screwdriver.

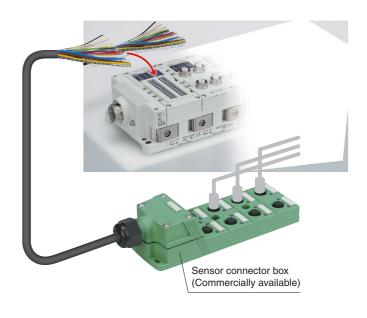

■ Digital input unit

IP67


This unit is for inputting a digital signal (ON/OFF signal). The signal of a 2-wire/3-wire auto switch attached to the actuator can be acquired to feedback a signal to the PLC. The control signal of an entire system can be managed by a Fieldbus system.

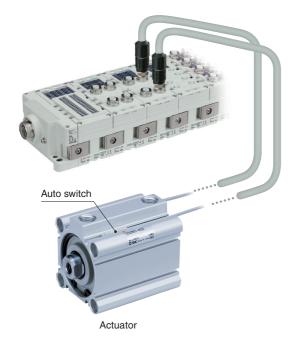

■ Analogue input/output unit

IP67

These units are for inputting or outputting an analogue signal (voltage/current). A single unit performs both input and output, allowing feedback control where analogue signals are received from a pressure sensor and sent to a pressure controller. Installation space is minimised as well.

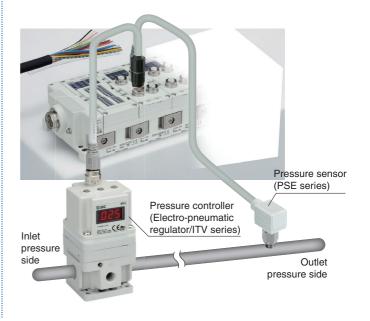

Self-diagnosis function

The following shows examples of the self-diagnosis function.

Short/Open-circuit detection

It is possible to detect short or open circuits of input devices such as electronic 2-wire switches and 3-wire switches and output devices such as solenoid valves. The location of the error can be identified by the indicator light and the network.







Red ON Short circuit

Red flashing Open circuit

Counter function


It is possible to ascertain the maintenance period and identify the parts that require maintenance by an input and output signal ON/OFF counter function. When the counter function is enabled and a certain number of contact operations is reached, the display of the counter will flash in red.

* The counter function is not provided with analogue units.

■ Individual units can be connected and removed one by one.

A unique clamping method is adopted to prevent screws from falling out. Units can be separated easily by loosening the joint bracket.

Up to 9 units can be connected in any order.

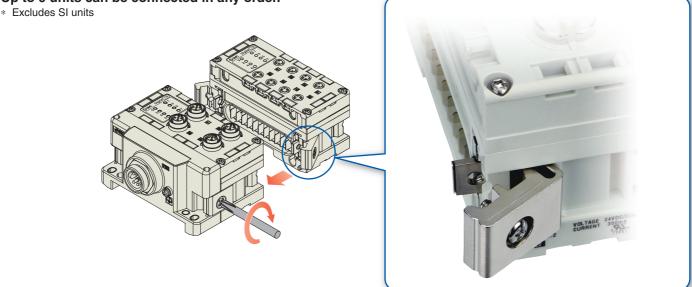




CONTENTS

Type 3 Integrated input-output type

Fieldbus System (For Input/Output) **EX600** Series



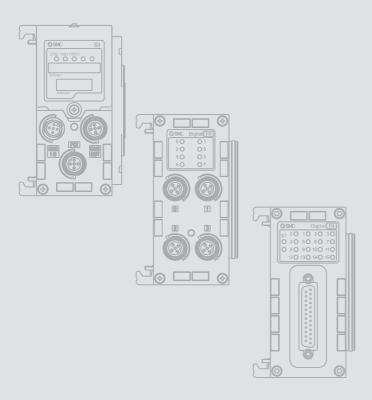

Parts Structure ·····	···· р.	12
How to Order		
SI Unit ·····		
Digital Input Unit ······	р.	13
Digital Output Unit ······	р.	13
Digital Input/Output Unit ·····	р.	13
Analogue Input Unit ······	р.	13
Analogue Output Unit ······	···· р.	13
Analogue Input/Output Unit ·····		
IO-Link Master Unit ·····	р.	14
End Plate (D side) ······	р.	14
Handheld Terminal ······	····· p.	14
Specifications	•	
All Units Common ·····	р.	15
SI Unit ·····	····· p.	15
Digital Input Unit ······	····· p.	17
Digital Output Unit ······		
Digital Input/Output Unit ······		
Analogue Input Unit ······		
Analogue Output Unit ······		
Analogue Input/Output Unit ······		
IO-Link Master Unit ······		
End Plate ·····		
Handheld Terminal ·····		
Dimensions ·····		
Parts Description ·····		
i ai is Describitori		
LED Indicator ······	···· р.	27
	р.	27
LED Indicator		
Accessories 1 End Plate Bracket	p.	31
Accessories 1 End Plate Bracket 2 Valve Plate	····· p.	31 31
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side)	····· p. ····· p. ···· p.	31 31 32
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace	····· p. ···· p. ···· p. ···· p.	31 31 32 32
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side)	····· p. ···· p. ···· p. ···· p.	31 31 32 32
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace	····· p. ···· p. ···· p. ···· p. ···· p.	31 32 32 32
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.)	p p p p p.	31 32 32 32 32
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.)	p p p p p.	31 32 32 32 32
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector)	p p p p p p.	31 32 32 32 32 33
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable	p p p p p p.	31 32 32 32 32 33
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch)	p p p p p p p.	31 32 32 32 32 33
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable	p p p p p p p.	31 32 32 32 32 33
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable (M12 connector, For EX600-ED2) 10 Power Supply Cable (M12 connector, For EX600-ED4/5)	p p p p p p p p p.	31 31 32 32 32 33 33 33
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable (M12 connector, For EX600-ED2) 10 Power Supply Cable	p p p p p p p p p.	31 31 32 32 32 33 33 33
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable (M12 connector, For EX600-ED2) 10 Power Supply Cable (M12 connector, For EX600-ED4/5)	p p p p p p p p p.	31 31 32 32 32 33 33 33 34 35
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable (M12 connector, For EX600-ED2) 10 Power Supply Cable (M12 connector, For EX600-ED4/5) 11 Communication Cable 12 Field-wireable Communication Connector	p p p p p p p p p p.	31 31 32 32 32 33 33 33 34 35 40
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable (M12 connector, For EX600-ED2) 10 Power Supply Cable (M12 connector, For EX600-ED4/5) 11 Communication Cable	p p p p p p p p p p.	31 31 32 32 32 33 33 33 34 35 40
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable (M12 connector, For EX600-ED2) 10 Power Supply Cable (M12 connector, For EX600-ED4/5) 11 Communication Cable 12 Field-wireable Communication Connector	p p p p p p p p p p.	31 31 32 32 32 33 33 33 34 35 40
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable (M12 connector, For EX600-ED2) 10 Power Supply Cable (M12 connector, For EX600-ED4/5) 11 Communication Cable 2 Field-wireable Communication Connector 13 I/O Cable with Connector, I/O Connector	p p p p p p p p p p.	31 32 32 32 32 33 33 34 35 40 41
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable (M12 connector, For EX600-ED2) (M12 connector, For EX600-ED4/5) 1 Communication Cable (Field-wireable Communication Connector 1 I/O Cable with Connector, I/O Connector	p p p p p p p p p p p.	31 32 32 32 32 33 33 33 34 35 40 41
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable (M12 connector, For EX600-ED2) 10 Power Supply Cable (M12 connector, For EX600-ED4/5) 11 Communication Cable 12 Field-wireable Communication Connector 13 I/O Cable with Connector, I/O Connector 14 MRP (PROFINET) compatible	p p p p p p p p p p p.	31 32 32 32 32 33 33 34 35 40 41
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable (M12 connector, For EX600-ED2) 10 Power Supply Cable (M12 connector, For EX600-ED4/5) 11 Communication Cable 12 Field-wireable Communication Connector 13 I/O Cable with Connector, I/O Connector 14 MRP (PROFINET) compatible 2 Ethernet POWERLINK compatible 3 Modbus/TCP compatible	p p p p p p p p p p p p p p.	31 31 32 32 32 33 33 34 35 40 41 42 42 42
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable (M12 connector, For EX600-ED2) 10 Power Supply Cable (M12 connector, For EX600-ED4/5) 11 Communication Cable 12 Field-wireable Communication Connector 13 I/O Cable with Connector, I/O Connector 14 MRP (PROFINET) compatible 2 Ethernet POWERLINK compatible 3 Modbus/TCP compatible 4 CC-Link IE Field compatible	p p p p p p p p p p p p p p p.	31 31 32 32 32 32 33 33 34 35 40 41 42 42 42 42
Accessories 1 End Plate Bracket 2 Valve Plate 3 End Plate (U side) 4 Reinforcing Brace 5 Seal Cap (10 pcs.) 6 Marker (1 sheet, 88 pcs.) 7 Power Supply Cable (7/8 inch connector) 8 Power Supply Field-wireable Connector (7/8 inch) 9 Power Supply Cable (M12 connector, For EX600-ED2) 10 Power Supply Cable (M12 connector, For EX600-ED4/5) 11 Communication Cable 12 Field-wireable Communication Connector 13 I/O Cable with Connector, I/O Connector 14 MRP (PROFINET) compatible 2 Ethernet POWERLINK compatible 3 Modbus/TCP compatible	p p p p p p p p p p p p p p p p p.	31 31 32 32 32 32 33 33 34 40 41 42 42 42 42 42

Specific Product Precautionsp. 44


Fieldbus System For Input/Output








Parts Structure

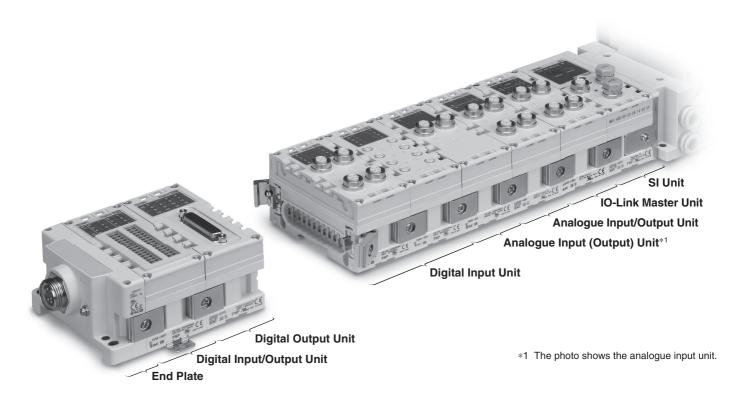

How to Order

SI Unit

EX600-SPR1A-

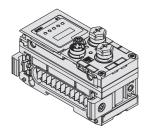

			Specifications •
Symbol	Protocol	Output type	Note
PR1A	PROFIBUS DP	PNP (Negative common)	_
PR2A	PROFIBUS DP	NPN (Positive common)	_
DN1A	DeviceNet™	PNP (Negative common)	_
DN2A	Devicemet	NPN (Positive common)	_
MJ1	CC-Link	PNP (Negative common)	_
MJ2		NPN (Positive common)	_
EN1	EtherNet/IP™	PNP (Negative common)	_
EN2		NPN (Positive common)	_
EN3		PNP (Negative common)	2 ports
EN4		NPN (Positive common)	2 ports
EC1	EtherCAT	PNP (Negative common)	_
EC2	ElliefCAT	NPN (Positive common)	_
PN1	PROFINET	PNP (Negative common)	_
PN2	FNOFINET	NPN (Positive common)	_

•Made to order (Refer to page 42.)

Ethernet POWERLINK
Modbus TCP
EtherNet/IP™
IO-Link master unit




How to Order

Digital Input Unit



Ν

N

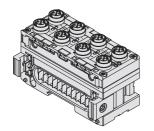


Description PNP NPN

Number of inputs, open-circuit detection, and connector

Symbol	Number of inputs	Open-circuit detection	Connector
В	8 inputs	No	M12 connector (5 pins) 4 pcs.
С	8 inputs	No	M8 connector (3 pins) 8 pcs.
C1	8 inputs	Yes	M8 connector (3 pins) 8 pcs.
D	16 inputs	No	M12 connector (5 pins) 8 pcs.
E	16 inputs	No	D-sub connector (25 pins)
F	16 inputs	No	Spring type terminal block (32 pins)

Digital Output Unit

EX600-DYPB

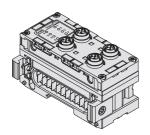

Output type Description


PNP

NPN

Number of	outputs and	connector
Number o	f	

Symbol	Number of outputs	Connector	
В	8 outputs	M12 connector (5 pins) 4 pcs.	
		D-sub connector (25 pins)	
F	16 outputs	Spring type terminal block (32 pins)	

Digital Input/Output Unit **EX600-DMP**

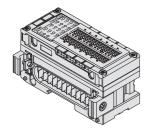

Input/Output type


•••	.6	darbar rybo -
	Symbol	Description
	Р	PNP
	N	NPN

Number of inputs/outputs and connector

Symbol	Number of inputs	Number of outputs	Connector
E	8 inputs	8 outputs	D-sub connector (25 pins)
F	8 inputs	8 outputs	Spring type terminal block (32 pins)

Analogue Input Unit

EX600-AXA

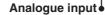

Number of input channels and connector

Symbol	Number of input channels	Connector
Α	2 channels	M12 connector (5 pins) 2 pcs.


Analogue Output Unit

EX600-AYA



Number of output channels and connector

Syml	Number of output channels	Connector
Α	2 channels	M12 connector (5 pins) 2 pcs.

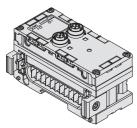



How to Order

Analogue Input/Output Unit **EX600-AMB**


Analogue input/output

Number of input/output channels and connector

Symbo	Number of input channels	Number of output channels	Connector	
В	2 channels	2 channels	M12 connector (5 pins) 4 pcs.	

IO-Link Master Unit

EX600-LAB1

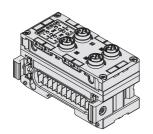

Port specification

	1 ort opoomounous
Symbol	Description
Α	Port class A
В	Port class B

Number of ports and connector

Symbol	Number of ports	Connector
В	4 ports	M12 connector (5 pins) 4 pcs.

The only available SI unit part number is "EX600-SEN3-X80" (EtherNet/ IP™ compatible). Refer to page 42.

End Plate (D side)

For M12

EX600-ED

EX600-ED4/5 are not yet UL-compliant.



End plate •

End plate mounting position: D side

Power supply connector

Symbol	Power supply connector	Specifications		
2	2 M12 (5 pins) B-coded			
3	3 7/8 inch (5 pins)			
4	IN/OUT			
5	M12 (4/5 pins) A-coded*1	IN/OUT		

^{*1} The pin layout for the "4" and "5" pin connectors is different.

Refer to the dimensions on page 22.

Mounting method

	Symbol	Description	Note	
		Without DIN rail mounting bracket	_	
2		With DIN rail mounting bracket	For SV, S0700, and VQC series	
	3	With DIN rail mounting bracket	For SY and JSY series	

* When the end plate (U side) is used, the symbol for the mounting method must be the same as the D side.

Handheld Terminal

For 7/8 inch

EX600-HT1A

Handheld terminals are not yet UL-compliant.



Cable length

Symbol	Description
_	No cable
1	1 m
3	3 m


Specifications

All Units Common Specifications

ŧ	Operating temperature range	Operating: -10 to 50 °C, Stored: -20 to 60 °C
/ironm(Operating temperature range Operating: -10 to 50 °C, Stored: -20 to 60 °C	
	Withstand voltage*1	500 VAC for 1 minute between external terminals and FE
Ē	Insulation resistance*1	500 VDC, 10 $M\Omega$ or more between external terminals and FE

^{*1} Except handheld terminals

SI Unit (EX600-SPR□A)

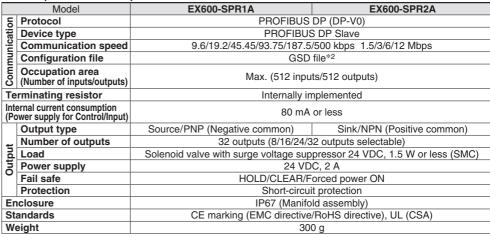

^{*2} The configuration file can be downloaded from the SMC website, https://www.smc.eu

SI Unit (EX600-SDN□A)

<u>.</u>	SI OTHE (EXCOO-SDN-A)					
	Model	EX600-SDN1A	EX600-SDN2A			
	Protocol	DeviceNet™: Volume 1 (Edition	on 2.1), Volume 3 (Edition 1.1)			
ءِ	Device type	Group 2 O	nly Server			
읉	Communication speed	125/250/	500 kbps			
<u>8</u>	Configuration file	EDS	file*3			
Communication	Occupation area (Number of inputs/outputs)	Max. (512 inpu	ts/512 outputs)			
Con	Applicable messages	Duplicate MAC ID Check Message, Grou Explicit Message (Group 2), Poll I/O Me	up 2 Only Unconnected Explicit Message ssage (Predefined M/S Connection set)			
	Applicable function	QuickConnect™				
De	viceNet™ power supply	11 to 25 VDC (Current consumption 50 mA or less)				
	ernal current consumption ower supply for Control/input)	55 mA or less				
	Output type	Source/PNP (Negative common)	Sink/NPN (Positive common)			
	Number of outputs	32 outputs (8/16/24/3	2 outputs selectable)			
Output	Load	Solenoid valve with surge voltage suppressor 24 VDC, 1.5 W or less (SMC)				
Ξ	Power supply	24 VD	C, 2 A			
	Fail safe	HOLD/CLEAR/F	orced power ON			
	Protection	Short-circui	t protection			
Enclosure		IP67 (Manifo	ld assembly)			
St	andards	CE marking (EMC directive/RoHS directive), UL (CSA)				
W	eight	300 g				
	T. C C.					

^{*3} The configuration file can be downloaded from the SMC website, https://www.smc.eu

SI Unit (EX600-SMJ)

<u> </u>	OTHE (EXOUD-SINIDE)					
	Model	EX600-SMJ1	EX600-SMJ2			
Ë	Protocol	CC-Link (Ver.	1.10, Ver. 2.00)			
∃i	Station type	Remote De	vice Station			
li.	Communication speed	156/625 kbps 2.5/5/10 Mbps				
E	Configuration file	CSP+	- file*4			
Communication	Occupation area (Number of inputs/outputs)	Max. (512 inputs/512 outputs) 1/2/3/4 stations occupied				
Int (P	ternal current consumption ower supply for Control/Input)	75 mA or less				
	Output type	Source/PNP (Negative common)	Sink/NPN (Positive common)			
-	Number of outputs	32 outputs (8/16/24/32 outputs selectable)				
utput	Load	Solenoid valve with surge voltage suppressor 24 VDC, 1.5 W or less (SMC				
ort	Power supply	24 VDC, 2 A				
	Fail safe	HOLD/CLEAR/F	orced power ON			
	Protection	Short-circui	it protection			
Er	nclosure	IP67 (Manifold assembly)				
Standards		CE marking (EMC directive/RoHS directive), UL (CSA)				
W	eight	300 g				

^{*4} The configuration file can be downloaded from the SMC website, https://www.smc.eu






 $\textbf{EX600-SDN} \square \textbf{A}$







Specifications

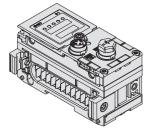

EX600-SEN1/2

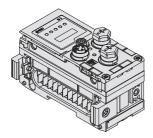


EX600-SEN3/4

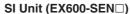

_	Model	EX600-SEN1	EX600-SEN2	EX600-SEN3	EX600-SEN4	
	Number of communication ports	1 port		2 ports		
	Protocol	EtherNet/IP™		EtherNet/IP™		
		(Conformance version: Composite 6)			sion: Composite 11)	
	Communication speed		10/100	· ·		
_	Communication method			/Half duplex		
0	Configuration file		EDS	file*1		
Communication	Occupation area (Number of inputs/outputs)		Max. (512 inpu	ts/512 outputs)		
2	IP address setting			192.168.0 or 1.1 to 2		
Ē	range		Through DHCP serv	er: Optional address		
ပ္ပ		Vendor ID: 7 (SN	MC Corporation)	Vendor ID: 7 (S	MC Corporation)	
-	Device information	Device type: 12 (Communication Adapter) Device type: 12 (Communic		nmunication Adapter)		
		Product of	ode: 126	Product code: 203		
				QuickConnect™		
	Applicable function	_	_	DLR		
				Web server function		
Int	ernal current consumption	120 mA or less				
(Po	ower supply for Control/Input)	120 IIIA OFIESS				
	Output type	Source/PNP (Negative common)	Sink/NPN (Positive common)	Source/PNP (Negative common)	Sink/NPN (Positive common)	
	Number of outputs	32 outputs (8/16/24/3	2 outputs selectable)	32 ot	utputs	
=	Load	Solenoid valve with sur	ge voltage suppressor	Solenoid valve with surge voltage suppresso		
Output	Load	24 VDC, 1.5 W	or less (SMC)	24 VDC, 1.0 W or less (SMC)		
ō	Power supply		24 VD	OC, 2 A		
	Fail safe		HOLD/CLEAR/F	orced power ON		
	Protection		Short-circui	it protection		
Er	iclosure		IP67 (Manifo	ld assembly)		
St	andards	CE marking (EMC directive/RoHS directive), UL (CSA)				
W	eight		30	0 g		
	_					

^{*1} The configuration file can be downloaded from the SMC website, https://www.smc.eu

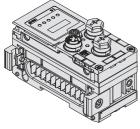


EX600-SEC□

SI Unit (EX600-SEC□)

<u> </u>	Offit (EXOUG-SEC)					
	Model	EX600-SEC1	EX600-SEC2			
ion	Protocol	EtherCAT® (Conformation	nce Test Record V.1.2)			
cat	Communication speed	100 Mbps				
Ē	Configuration file	XML	file*2			
Communication	Occupation area (Number of inputs/outputs)	Max. (512 inputs/512 outputs)				
	ernal current consumption ower supply for Control/input)	100 mA or less				
	Output type	Source/PNP (Negative common)	Sink/NPN (Positive common)			
_	Number of outputs	32 outputs (8/16/24/32 outputs selectable)				
Output	Load	Solenoid valve with surge voltage suppressor 24 VDC, 1.5 W or less (SMC)				
Ĭ	Power supply	24 VD	C, 2 A			
U	Fail safe	HOLD/CLEAR/Forced power ON				
	Protection	Short-circuit protection				
Enclosure		IP67 (Manifold assembly)				
Standards		CE marking (EMC directive/RoHS directive), UL (CSA)				
We	eight	300	0 g			
_	T1 C 11 C1	la a decomple a de el forcos de a OMO combreta de	!!			

^{*2} The configuration file can be downloaded from the SMC website, https://www.smc.eu

SI Unit (EX600-SPN□)

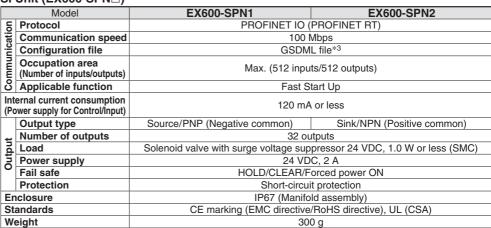


^{*3} The configuration file can be downloaded from the SMC website, https://www.smc.eu







Specifications

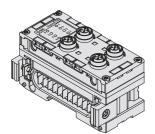


EX600-DX□B

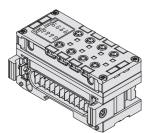


EX600-DX□C□

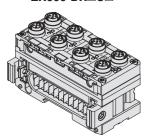

EX600-DX□D

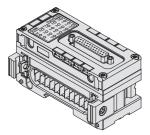

EX600-DX□E

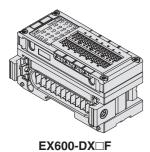


Digital Input Unit

2.5	Sightal impat office							
	Model		EX600-DXPB	EX600-DXNB	EX600-DXPC□	EX600-DXNC□	EX600-DXPD	EX600-DXND
	Input type		PNP	NPN	PNP	NPN	PNP	NPN
	Input connector		M12 (5-pir	ı) socket*1	M8 (3-pin) socket*3	M12 (5-pir	n) socket*1
	Number of inpu	uts	8 inputs (2 inp	8 inputs (2 inputs/Connector) 8 inputs (1 input/Connector)		16 inputs (2 inputs/Connector)		
	Supplied voltage	ge			24 \	/DC		
	Max. supplied current			0.5 A/Connector 0.25 A/Connector 2 A/Unit 2 A/Unit		0.5 A/Connector 2 A/Unit		
Input	Protection		Short-circuit protection					
트	Input current (at 24 VDC)		9 mA or less					
	ON voltage		17 V or more (At NPN input, between the pin for input terminal and supplied voltage of +24 V) (At PNP input, between the pin for input terminal and supplied voltage of 0 V)					
	OFF voltage		5 V or less (At NPN input, between the pin for input terminal and supplied voltage of +24 \ (At PNP input, between the pin for input terminal and supplied voltage of 0 V)					
	Open circuit	2 wires	_	_	0.5 mA	/Input*2	_	_
	detection current	3 wires	_	_	0.5 mA/Cd	onnector*2	_	_
Сι	Current consumption		50 mA	or less	55 mA	or less	70 mA	or less
En	Enclosure		IP67 (Manifold assembly)					
Standards		CE marking (EMC directive/RoHS directive), UL (CSA)						
Weight		300	0 g	27	5 g	34	0 g	


- *1 M12 (4-pin) connector can be connected.
- *2 Function only applies to the EX600-DX□C1.
 *3 When connecting the M8 plug connector, the tightening torque must be 0.2 N·m ±10 %. If tightened with an excessive tightening torque, this may cause the connector thread of the unit to break.

	Model	EX600-DXPE	EX600-DXNE	EX600-DXPF	EX600-DXNF		
	Input type	PNP	NPN	PNP	NPN		
	Input connector		D-sub socket (25 pins) Lock screw: No.4-40 UNC		nal block (32 pins)		
	Number of inputs	16 ir	puts	16 inputs (2 inp	outs x 8 blocks)		
	Supplied voltage		24 \	/DC			
Input	Max. supplied current	2 A/	2 A/Unit		0.5 A/Block 2 A/Unit		
_	Protection	Short-circuit protection					
	Input current (at 24 VDC)		5 mA	or less			
	ON voltage	,	17 V or more (At NPN input, between the pin for input terminal and supplied voltage of +24 V) (At PNP input, between the pin for input terminal and supplied voltage of 0 V)				
	OFF voltage	5 V or less (At NPN input, between the pin for input terminal and supplied voltage of +2- (At PNP input, between the pin for input terminal and supplied voltage of 0 V)					
Αŗ	plicable wire	— 0.08 to		0.08 to 1.5 mm ²	8 to 1.5 mm ² (AWG16 to 28)		
Cı	irrent consumption	50 mA	or less	55 mA	or less		
Er	closure	IP40 (Manifold assembly)					
St	andards	CE marking (EMC directive/RoHS directive), UL (CSA)					
W	eight	300 g					


Specifications

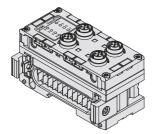

EX600-DY□B

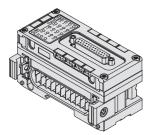

EX600-DY□E EX600-DM□E

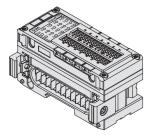

EX600-DY□F EX600-DM□F

Digital Output Unit

	Model	EX600-DYPB	EX600-DYNB	EX600-DYPE	EX600-DYNE	EX600-DYPF	EX600-DYNF	
	Output type	PNP	NPN	PNP	NPN	PNP	NPN	
_	Output connector	M12 (5-pir	M12 (5-pin) socket*1		D-sub socket (25 pins) Lock screw: No.4-40 UNC		Spring type terminal block (32 pins)	
Output	Number of outputs	8 outputs (2 out	puts/Connector)	16 oı	utputs	16 outputs (2 ou	tputs x 8 blocks)	
S T	Supplied voltage		24 VDC					
	Max. load current			0.5 A/Output 2 A/Unit				
	Protection		Short-circuit protection					
Ap	oplicable wire				1.5 mm² 6 to 28)			
Cı	urrent consumption	50 mA or less						
Er	nclosure	IP67 IP40 (Manifold assembly) (Manifold assembly)						
St	andards	CE marking (EMC directive/RoHS directive), UL (CSA)						
W	eight	300 g						

^{*1} M12 (4-pin) connector can be connected.

Digital Input/Output Unit

	Model	EX600-DMPE	EX600-DMNE	EX600-DMPF	EX600-DMNF	
1110001						
Input/Output type		PNP	NPN	PNP	NPN	
Co	onnector	D-sub sock Lock screw: I		Spring type terming	nal block (32 pins)	
	Number of inputs	8 in	outs	8 inputs (2 inp	uts x 4 blocks)	
	Supplied voltage		24 \	/DC		
	Max. supplied current	2 A/	Unit		/Block /Unit	
Input	Protection		Short-circuit protection			
드	Input current (at 24 VDC)		5 mA (or less		
	ON voltage	17 V or more (At NPN input, between the pin for input terminal and supplied voltage of +24 V) (At PNP input, between the pin for input terminal and supplied voltage of 0 V)				
	OFF voltage	5 V or less (At NPN input, between the pin for input terminal and supplied voltage of +2 (At PNP input, between the pin for input terminal and supplied voltage of 0 V)				
	Number of outputs	8 out	tputs	8 outputs (2 out	puts x 4 blocks)	
Ħ	Supplied voltage		24 \	/DC		
Output	Max. load current			/Output /Unit		
	Protection		Short-circui	uit protection		
A	oplicable wire	_		0.08 to 1.5 mm ²	2 (AWG16 to 28)	
Cı	urrent consumption	50 mA	or less	60 mA	or less	
Er	nclosure	IP40 (Manifold assembly)				
St	andards	CE marking (EMC directive/RoHS directive), UL (CSA)				
W	eight	300 g				




Specifications



Analogue Input Unit

Model		el	EX600-AXA			
	Input type		Voltage input	Current input		
	Input connector		M12 (5-pin) socket*1			
	Input chan	nel	2 channels (1 channel/Connector)			
	Supplied v	oltage	24 V	/DC		
	Max. suppl	ied current	0.5 A/Cd	onnector		
	Protection		Short-circui	t protection		
Input	Input	12 bit resolution	0 to 10 V, 1 to 5 V, 0 to 5 V	0 to 20 mA, 4 to 20 mA		
-	signal range	16 bit resolution	–10 to 10 V, –5 to 5 V	–20 to 20 mA		
	Max. rated input signal		±15 V	±22 mA*2		
	Input impedance		100 kΩ	50 Ω		
	Linearity (2	25 °C)	±0.05 % F.S.			
	Repeatabil	ity (25 °C)	±0.15 % F.S.			
	Absolute ac	curacy (25 °C)	±0.5 % F.S.	±0.6 % F.S.		
Cι	Current consumption		70 mA or less			
En	Enclosure		IP67 (Manifold assembly)			
Sta	Standards		CE marking (EMC directive/RoHS directive), UL (CSA)			
We	eight		290	0 g		

- *1 M12 (4-pin) connector can be connected.
 *2 When input signal exceeds 22 mA, the protection function activates and the input signal is interrupted.

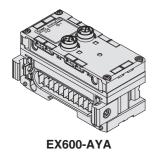


Analogue Output Unit

Model			EX600	D-AYA			
	Output type		Voltage output	Current output			
	Output con	nector	M12 (5-pin) socket*3				
	Output cha	nnel	2 channels (1 channel/Connector)				
	Supplied vo	oltage	24 \	/DC			
	Max. load o	urrent	0.5 A/Connector				
ᆵ	Protection		Short-circuit protection				
Output	Output signal range	12 bit resolution	0 to 10 V, 1 to 5 V, 0 to 5 V	0 to 20 mA, 4 to 20 mA			
	Load impedance		1 kΩ or more	600 Ω or less			
	Linearity (25 °C)		±0.05 % F.S.				
	Repeatabili	ity (25 °C)	±0.15 % F.S.				
	Absolute acc	curacy (25 °C)	±0.5 % F.S.	±0.6 % F.S.			
Current consumption		mption	70 mA or less				
Enclosure			IP67 (Manifold assembly)				
Standards			CE marking (EMC directive/RoHS directive), UL (CSA)				
Weight			29	0 g			

^{*3} M12 (4-pin) connector can be connected.

Specifications

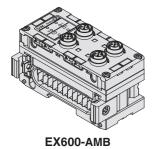


Analogue Input/Output Unit

Model			EX600-AMB				
	Input type		Voltage input	Current input			
	Input conn	ector	M12 (5-pin) socket*1				
	Input chan	nel	2 channels (1 channel/Connector)				
	Supplied v	oltage	24 VDC				
	Max. suppl	ied current	0.5 A/Co	nnector			
<u></u>	Protection		Short-circui	t protection			
Input	Input signal range	12 bit resolution	0 to 10 V, 1 to 5 V, 0 to 5 V	0 to 20 mA, 4 to 20 mA			
	Max. rated	input signal	15 V	22 mA*2			
	Input impe	dance	100 kΩ	250 Ω			
	Linearity (25 °C)		±0.05 % F.S.				
	Repeatability (25 °C)		±0.15 % F.S.				
	Absolute accuracy (25 °C)		±0.5 % F.S.	±0.6 % F.S.			
	Output type		Voltage output	Current output			
	Output connector		M12 (5-pin) socket*1				
	Output channel		2 channels (1 channel/Connector)				
	Supplied voltage		24 VDC				
_	Max. load current		0.5 A/Connector				
Output	Protection		Short-circuit protection				
ō	Output signal range	12 bit resolution	0 to 10 V, 1 to 5 V, 0 to 5 V	0 to 20 mA, 4 to 20 mA			
	Load impe	dance	1 kΩ or more	600 Ω or less			
	Linearity (2	25 °C)	±0.05 °	% F.S.			
	Repeatabil	ity (25 °C)	±0.15 °	% F.S.			
	Absolute ac	curacy (25 °C)	±0.5 % F.S.	±0.6 % F.S.			
Cı	Current consumption		100 mA or less				
E	nclosure		IP67 (Manifold assembly)				
St	tandards		CE marking (EMC directive	/RoHS directive), UL (CSA)			
Weight			300 g				




^{*1} M12 (4-pin) connector can be connected.
*2 When input signal exceeds 22 mA, the protection function activates and the input signal is interrupted.

Specifications

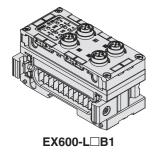

IO-Link Master Unit

Model		EX600	-LAB1	EX600-LBB1		
10	-Link version		Version	on 1.1		
IO-Link port class		Class A		Class B		
Co	ommunication speed	COM1 (4.8 kBaud) COM2 (38.4 kBaud) COM3 (230.4 kBaud) * Changes automatically according to the connected device				
Νι	umber of IO-Link ports			4		
	ompatible SI unit rotocol)			EN3-X80 let/IP TM)		
Max. supply current	Device power supply (L+)	0.5 A/Co (2 A/		0.5 A/Connector (1 A/Unit)		
Max. supp	External power supply (P24)	_		1.6 A/Connector (3 A/Unit)		
	Pin no.	2	4	4		
	Input type		PI	NP		
Input	Protection		Short-circui	it protection		
Ξ	Rated input current	Approx. 2.5 mA		Approx. 5.8 mA		
	ON voltage		13 V o	r more		
	OFF voltage		8 V o	r less		
	Pin no.			4		
Ħ	Output type		PN	NP		
Output	Max. load current (C/Q line)	(Sup		Output r supply for control/input)		
	Protection		Short-circui	it protection		
Cı	urrent consumption		50 mA	or less		
Er	nclosure	IP67 (Manifold assembly)				
St	andards	CE ma	rking (EMC directive	/RoHS directive), UL (CSA)		
W	eight	320 g				

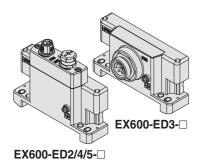

End Plate

	Model		EX600-ED2-□	EX600-ED2-□ EX600-ED3-□		
ns	Power supply	PWR IN	M12 (5-pin) plug	7/8 inch (5-pin) plug	M12 (4-pin) plug	
atio	connector	PWR OUT	_	_	M12 (5-pin) socket	
specifications	Rated Power supply for control/input			24 VDC ±10 %		
		Power supply for output	24 VDC +10/-5 %			
Power	Rated	Power supply for control/input	Max. 2 A	Max. 8 A	Max. 4 A	
8	current	Power supply for output	IVIAX. Z A	IVIAX. O A	Max. 4 A	
En	closure		IP67 (Manifold assembly)			
St	andards*1		CE marking (EMC directive/RoHS directive), UL (CSA)			
W	eight		170 g	175 g	170 g	

^{*1} The EX600-ED4/5- \square is not compliant with UL (CSA) standards.



Handheld Terminal


Model	EX600-HT1A-□		
Power supply	Power supplied from SI unit connector (24 VDC)		
Current consumption	50 mA or less		
Display	LCD with backlight		
Connection cable	Handheld terminal cable (1 m ··· EX600-AC010-1, 3 m ··· EX600-AC030-1)		
Enclosure	IP20		
Standards*1	CE marking (EMC directive/RoHS directive)		
Weight	160 g		


^{*1} The handheld terminal is not compliant with UL (CSA) standards.





Dimensions




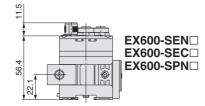

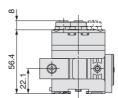


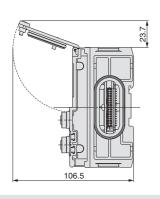


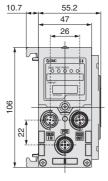

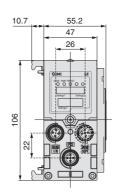

End Plate (D side) EX600-ED2/ED4/ED5

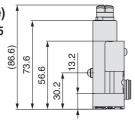

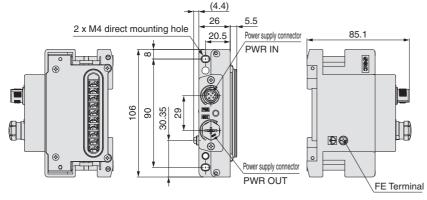

EX600-ED2

Power supply connector PWR IN: M12 5-pin plug, B-coded

Configuration	Pin no.	Description
	1	24 V (for output)
2 1	2	0 V (for output)
5(00)	3	24 V (for control/input)
3 4	4	0 V (for control/input)
	5	FE


Power supply connector PWR IN: M12 4-pin plug, A-coded


Configuration	EX600-ED4 (Pin arrangement 1) EX600-ED5 (Pin a		D5 (Pin arrangement 2)	
Configuration 3 2	Pin no.	Description	Pin no.	Description
3 _ 2	1	24 V (for control/input)	1	24 V (for output)
600	2	24 V (for output)	2	0 V (for output)
(0 0)	3	0 V (for control/input)	3	24 V (for control/input)
4 1	4	0 V (for output)	4	0 V (for control/input)


Power supply connector PWR OUT: M12 5-pin socket, A-coded

Configuration	EX600-ED4 (Pin arrangement 1)		EX600-ED5 (Pin arrangement 2)		
Corniguration	Pin no.	Description	Pin no.	Description	
1 2	1	24 V (for control/input)	1	24 V (for output)	
66	2	24 V (for output)	2	0 V (for output)	
(%)	3	0 V (for control/input)	3	24 V (for control/input)	
4 5 3	4	0 V (for output)	4	0 V (for control/input)	
. 5	5	Unused	5	Unused	

EX600-ED3

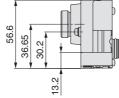

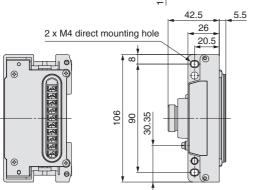

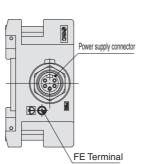



Power supply connector PWR: 7/8 inch 5-pin plug

Configuration	Pin no.	Description
	1	0 V (for output)
1 5	2	0 V (for control/input)
(2) (4)	3	FE
03	4	24 V (for control/input)
	5	24 V (for output)


Dimensions


Digital Unit

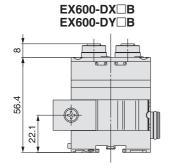

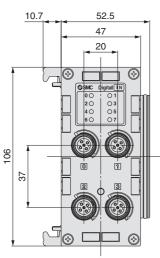



EX600-DX□C□

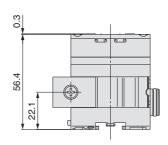

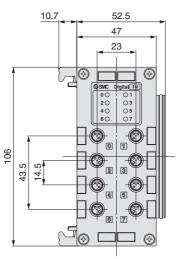


EX600-DX□D

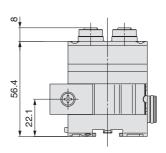


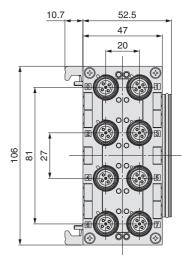



EX600-DX□E EX600-DY□E EX600-DM□E

EX600-DX□F EX600-DY□F EX600-DM□F

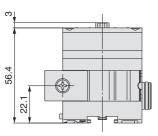

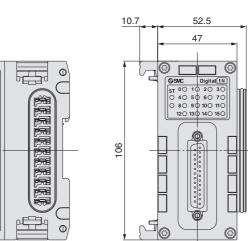

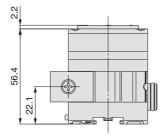

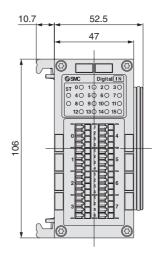







Dimensions


Analogue Unit EX600-AXA EX600-AYA 10.7 52.5 47 20 90 10.7 52.5

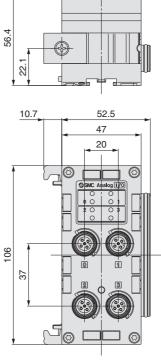

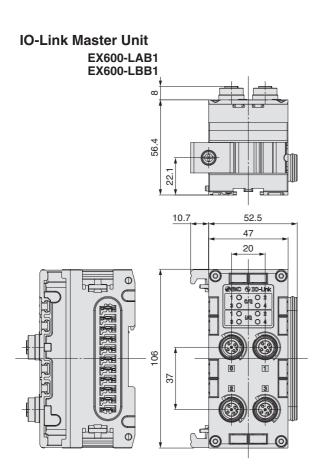

Parts Description


SI Unit

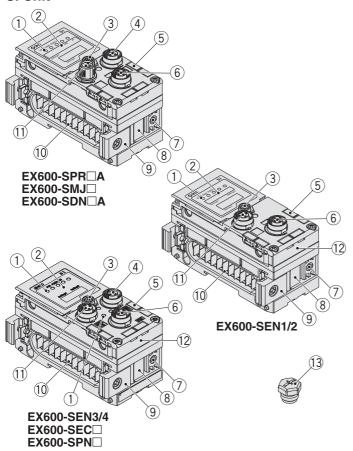


No.	Name	Use
1	Status indication LED	Displays unit status
2	Indication cover	Open for setting the switch.
3	Indication cover set screw	Loosen for opening the indication cover.
4	Connector (BUS OUT)	Connects to the fieldbus output cable (SPEEDCON)
5	Marker groove	Can be used to mount a marker
6	Connector (PCI)	Connects to the handheld terminal cable (SPEEDCON)
7	Valve plate mounting holes	Fixes a valve plate in place
8	Valve plate mounting groove	Inserts a valve plate
9	Joint bracket	Links units to one another
10	Connector for unit (Plug)	Transmits signals to the neighbouring unit and supplies power
11	Connector (BUS IN)	Connects to the cable for fieldbus input (SPEEDCON)
12	MAC address name plate*1	Displays a unique 12-digit MAC address for each SI unit
13	Seal cap	Mounted on the connectors (BUS OUT and PCI) at the time of shipment


^{*1} MAC address name plate is not provided on the EX600-SEC ...

Digital Unit

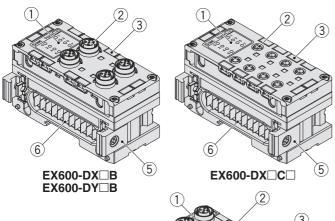


No.	Name	Use
1	Status indication LED	Displays unit status
2	Connector	Connects with input or output devices (Only the EX600-D B and EX600-DXD are SPEEDCON compatible.)
3	Marker groove	Can be used to mount a marker
4	Lock screw	Secures the D-sub connector in place (No.4-40 UNC)
5	Joint bracket	Links units to one another
6	Connector for unit (Plug)	Transmits signals to the neighbouring unit and supplies power

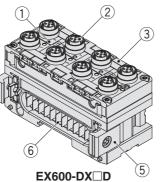

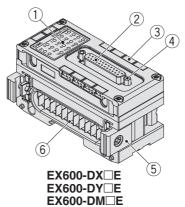


SMC

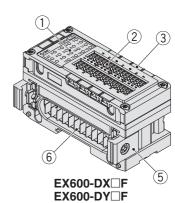

EX600-DM□F


Parts Description

Analogue Unit

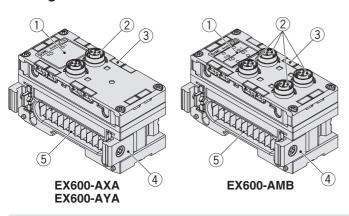


No.	Name	Use
1	Status indication LED	Displays unit status
2	Connector	Connects with input or output devices (SPEEDCON)
3	Marker groove	Can be used to mount a marker
4	Joint bracket	Links units to one another
5	Connector for unit (Plug)	Transmits signals to the neighbouring unit and supplies power

IO-Link Master Unit

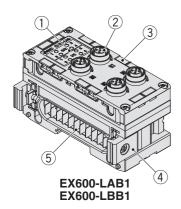

No.	Name	Use
1	Status indication LED	Displays unit status
2	Connector	Connects with IO-Link, input, or output devices (SPEEDCON)
3	Marker groove	Can be used to mount a marker
4	Joint bracket	Links units to one another
5	Connector for unit (Plug)	Transmits signals to the neighbouring unit and supplies power


End Plate

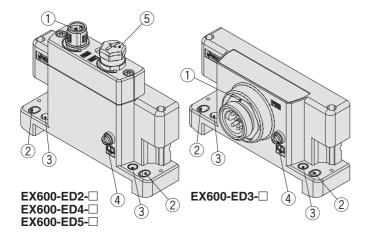


	No.	Name	Use
	1	Power connector (PWR IN)	Supplies power to the unit and/or input/output device (Only the EX600-ED2-□ is SPEEDCON compatible.)
	2	2 Fixing hole for direct mounting3 Fixing hole for DIN rail	Connects directly to equipment
	3		Converts to manifold or for DIN rail mounting
	4	FE terminal	Used for grounding Ground this terminal securely to improve noise immunity.
5		EX600-ED2-□ Connector (Unused)	This connector has not yet been used. Do not remove the seal cap.
	5	5 EX600-ED4-□ EX600-ED5-□ Power connector (PWR OUT)	Supplies power to the device on the downstream side

LED Indicator


EX600-SPR□A

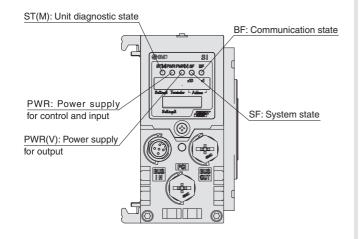


EX600-SDN□A

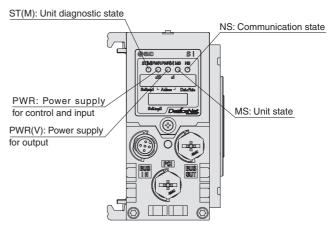


EX600-SEN1/SEN2

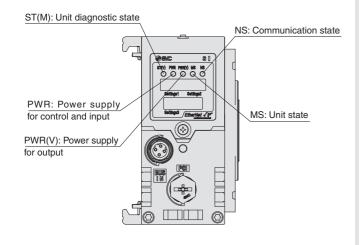


EX600-SEN3/SEN4

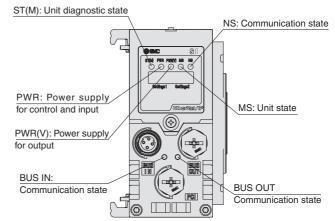

EX600-SEC□

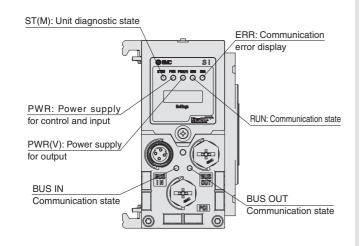


EX600-SPN□

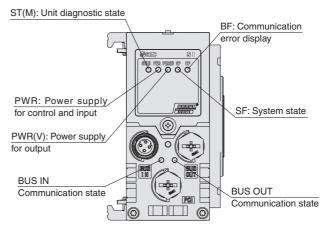




LED Indicator


EX600-SMJ□

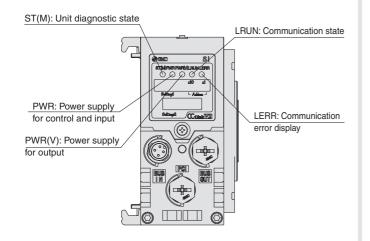


EX600-DX□B

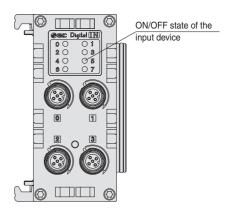


EX600-DX□C□

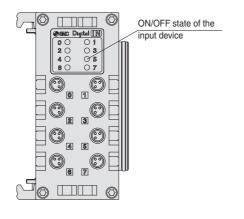


EX600-DX□D

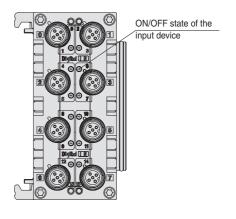

EX600-DX□E

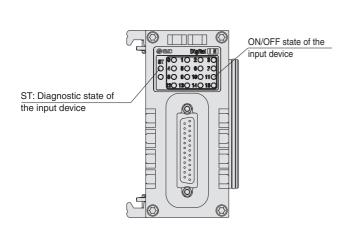


EX600-DX□F

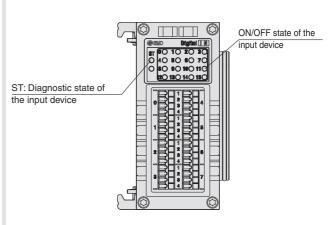




LED Indicator


EX600-DY□B

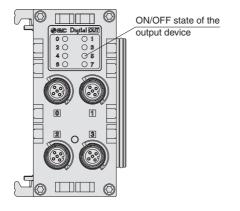


EX600-DY□E

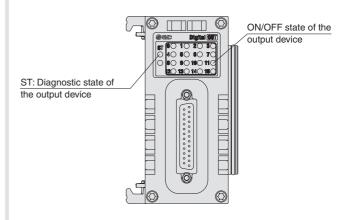


EX600-DY□F

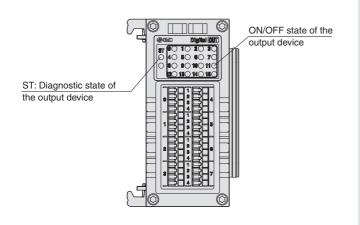


EX600-DM□E

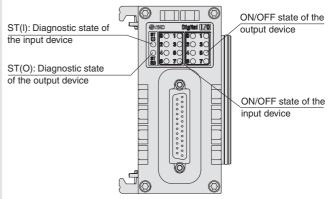

EX600-DM□F

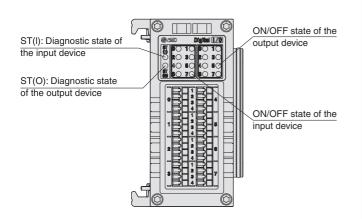


EX600-AXA

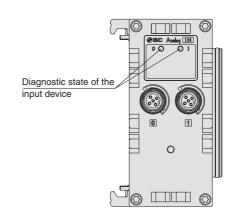


LED Indicator


EX600-AYA

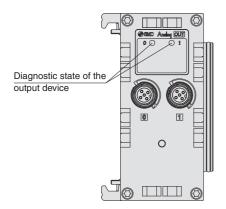


EX600-AMB

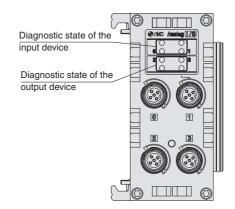


EX600-LAB1

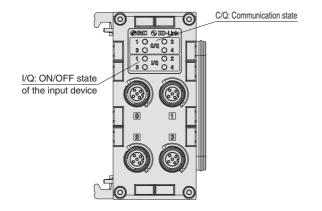

EX600-LBB1

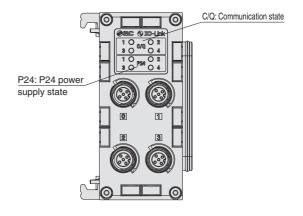

Accessories

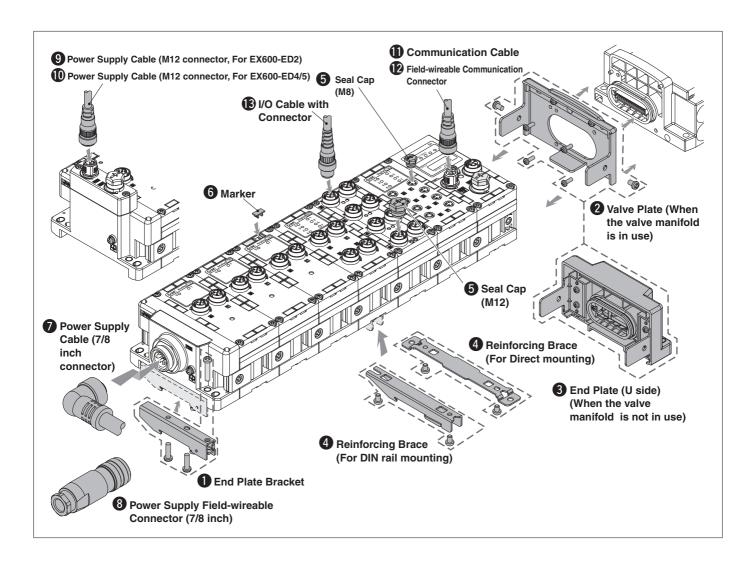

1 End Plate Bracket

This bracket is used for the end plate of DIN rail mounting.



EX600-ZMA2

Enclosed parts

Round head screw (M4 x 20) 1 pc. P-tight screw (4 x 14) 2 pcs.


EX600-ZMA3

(Specialized for SY series)

Enclosed parts

Round head screw with washer (M4 x 20) $\,$ 1 pc. P-tight screw (4 x 14) $\,$ 2 pcs.

2 Valve Plate

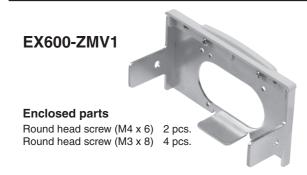

EX600-ZMV2

(Specialized for SY series)


Enclosed parts


Round head screw (M4 x 6) 2 pcs. Round head screw (M3 x 8) 2 pcs.




3 End Plate (U side)

The end plate is for use when the manifold valve is not connected.

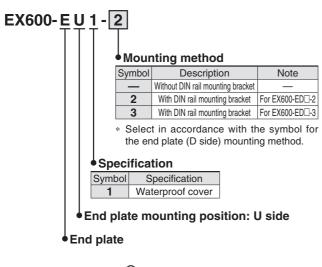

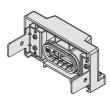

EX600-EU1

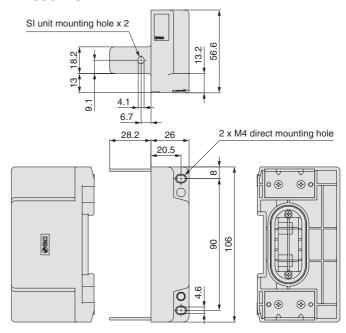

Enclosed parts

Round head screw (M4 x 5) 2 pcs.

4 Reinforcing Brace

This bracket is used on the bottom of the unit at the intermediate position for connecting 6 units or more.

st Be sure to attach this bracket to prevent connection failure between the units caused by deflection.



For DIN rail mounting EX600-ZMB2



Seal Cap (10 pcs.)


Be sure to mount a seal cap on any unused I/O connectors. Otherwise, the specified enclosure cannot be maintained.





6 Marker (1 sheet, 88 pcs.)


The signal name of I/O device and each unit address can be entered and mounted on each unit.

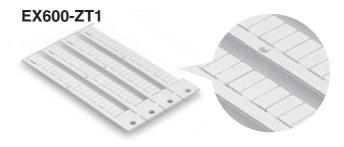


Power Supply Cable (7/8 inch connector)


PCA-1558810 Straight 2 m PCA-1558823 Straight 6 m PCA-1558836 Right angled 2 m PCA-1558849 Right angled 6 m


Straight connector type

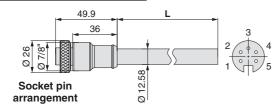

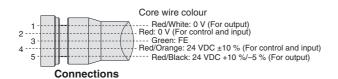

Angled connector type

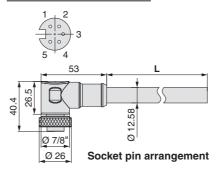

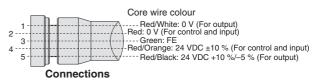

Item	Specifications
Cable O.D.	Ø 12.58 mm
Conductor nominal cross section	1.5 mm ² /AWG16
Wire O.D. (Including insulator)	2.35 mm
Min. bending radius (Fixed)	110 mm

Power Supply Field-wireable Connector (7/8 inch)

PCA-1578081

Socket [compatible with AWG22-16]



Applicable Cable

Item	Specifications
Cable O.D.	Ø 12.0 to 14.0 mm
Wire gauge (Stranded	0.34 to 1.5 mm ²
wire cross section)	AWG22 to 16


9 Power Supply Cable (M12 connector, For EX600-ED2) * The shape of the M12 connector is B-coded (Reverse key).


PCA-1564927 Straight 2 m PCA-1564930 Straight 6 m PCA-1564943 Right angled 2 m PCA-1564969 Right angled 6 m



SPEEDCON

Straight connector type

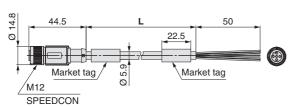

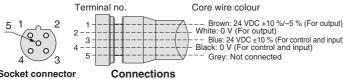


Socket connector pin arrangement B-coded (Reverse key) Brown: 24 VDC +10 %/-5 % (For output)
 White: 0 V (For output)
 Blue: 24 VDC ±10 % (For control and input)
 Black: 0 V (For control and input)


3 Socket connector pin arrangement B-coded (Reverse key)

0

2

Angled connector type

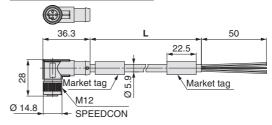

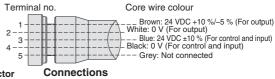


Item	Specifications
Cable O.D.	Ø 5.9 mm
Conductor nominal cross section	0.34 mm ² /AWG22
Wire O.D. (Including insulator)	1.27 mm
Min. bending radius (Fixed)	59 mm




Accessories **EX600** Series

Power Supply Cable (M12 connector, For EX600-ED4/5)

* The shape of the M12 connector is A-coded (Normal key).

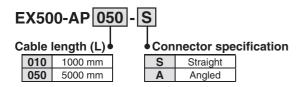


Straight connector type

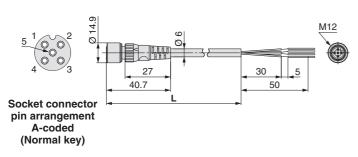


Item	Specifications
Cable O.D.	Ø 6 mm
Nominal cross section	0.3 mm ² /AWG22
Wire diameter (Including insulator)	1.5 mm
Min. bending radius	40 mm (Fixed)


Angled connector type

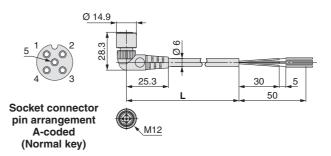



Item	Specifications
Cable O.D.	Ø 6 mm
Nominal cross section	0.3 mm ² /AWG22
Wire diameter (Including insulator)	1.5 mm
Min. bending radius	40 mm (Fixed)

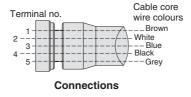

SPEEDCON

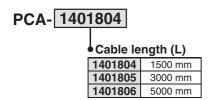


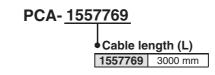


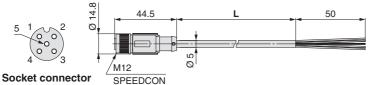

pin arrangement A-coded (Normal key)

Item	Specifications
Cable O.D.	Ø 5 mm
Nominal cross section	0.3 mm ² /AWG22
Wire diameter (Including insulator)	1.27 mm
Min. bending radius	21.7 mm (Fixed)

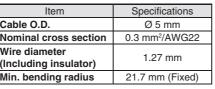


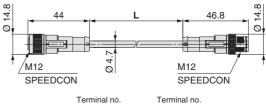




Socket connector pin arrangement A-coded (Normal key)

Plug connector pin arrangement A-coded (Normal key)

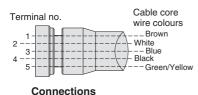




Communication Cable

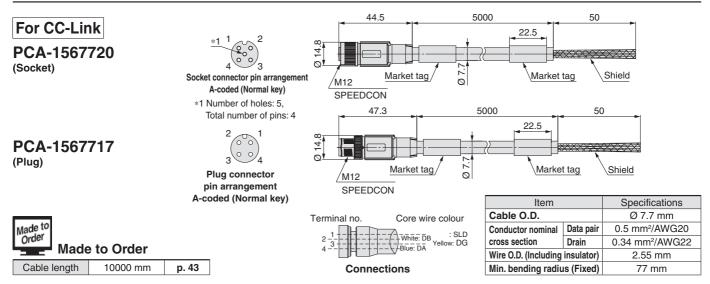

44.5


Metal parts

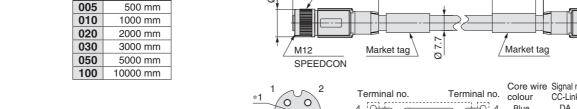

Item		Specifications
Cable O.D.		Ø 7.7 mm
Conductor nominal	Data pair	0.5 mm ² /AWG20
cross section Drain		0.34 mm ² /AWG22
Wire O.D. (Including insulator)		2.55 mm
Min. bending radius (Fixed)		77 mm

Cable length (L)



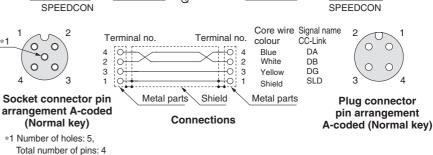

47.3

M12

Ø


Total number of pins: 4

Metal parts


22.5

EX9-AC 005 MJ-SAPA (With angled connector on both sides (Socket/Plug))


EX9-AC 005 MJ-SSPS (With connector on both sides (Socket/Plug))

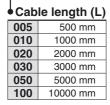

Item		Specifications
Cable O.D.		Ø 7.7 mm
Conductor nominal	Data pair	0.5 mm ² /AWG20
cross section	Drain	0.34 mm ² /AWG22
Wire O.D. (Including insulator)		2.55 mm
Min. bending radius (Fixed)		77 mm

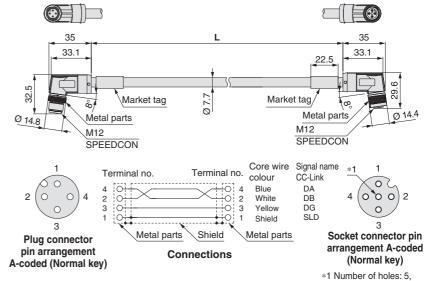


① Communication Cable

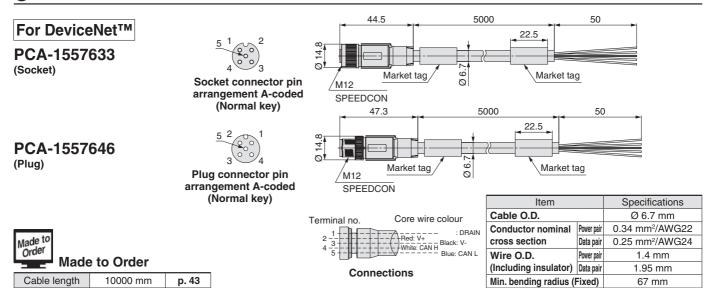

EX9-AC 005 DN-SSPS (With connector on both sides (Socket/Plug)) 47.3 14.8 **♦** Cable length (L) Metal parts 22.5 Metal parts Ø Ø 005 500 mm 010 1000 mm 020 2000 mm 030 3000 mm M12 Market tag Market tag M12 050 5000 mm SPEEDCON SPEEDCON 100 10000 mm Signal name DeviceNetTM Core wire Terminal no Terminal no. colour


Item		Specifications
Cable O.D.		Ø 6.7 mm
Conductor nominal	Power pair	0.34 mm ² /AWG22
cross section	Data pair	0.25 mm ² /AWG24
Wire O.D.	Power pair	1.4 mm
(Including insulator)	Data pair	1.95 mm
Min. bending radius (Fixed)		67 mm

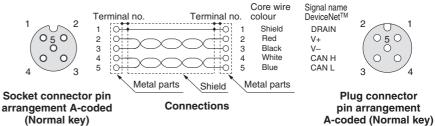





Cable length (L)			
005	500 mm		
010	1000 mm		
020	2000 mm		
030	3000 mm		
050	5000 mm		
100	10000 mm		

Item		Specifications
Cable O.D.		Ø 6.7 mm
Conductor nominal	Power pair	0.34 mm ² /AWG22
cross section	Data pair	0.25 mm ² /AWG24
Wire O.D.	Power pair	1.4 mm
(Including insulator) Data pair		1.95 mm
Min. bending radius (Fixed)		67 mm

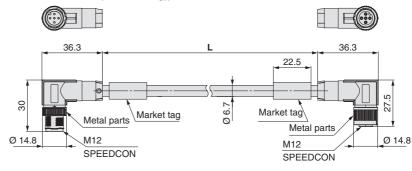

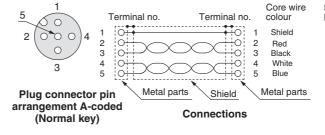

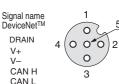

Socket connector pin arrangement A-coded (Normal key)



1 Communication Cable



PCA-1557688

(Socket)


PCA-1557691 (Plug)




Socket connector pin arrangement B-coded (Reverse key)



Plug connector pin arrangement B-coded (Reverse key)

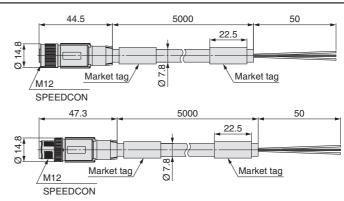

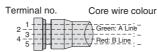



Shield line is connected to the knurl. **Connections**

Item	Specifications
Cable O.D.	Ø 7.8 mm
Conductor nominal cross section	0.34 mm ² /AWG22
Wire O.D. (Including insulator)	2.55 mm
Min. bending radius (Fixed)	78 mm

For EtherCAT® For PROFINET For EtherNet/IP™

EX9-AC 020 EN-PSRJ (Plug/RJ-45 connector)

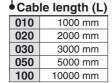


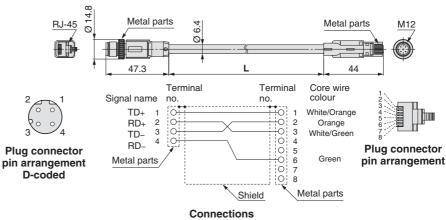

Connections (Straight cable)

Item	Specifications
Cable O.D.	Ø 6.4 mm
Conductor nominal cross section	0.14 mm ² /AWG26
Wire O.D. (Including insulator) 0.98 mm	
Min. bending radius (Fixed)	26 mm

PCA-1446566 (Plug)

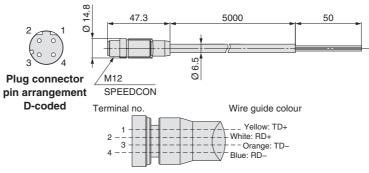

Connections

Item	Specifications
Cable O.D.	Ø 6.5 mm
Conductor nominal cross section	AWG22
Wire O.D. (Including insulator)	1.55 mm
Min. bending radius (Fixed)	45.5 mm




19.5 mm

① Communication Cable

For EtherCAT[®] For PROFINET For EtherNet/IP™ EX9-AC 005 EN-PSPS (With connector on both sides (Plug/Plug)) 47.3 Cable length (L) Ö Ö 005 500 mm 010 1000 mm 2000 mm 020 0.5 Metal parts Metal parts 030 3000 mm Plug connector pin $M\overline{12}$ Plug connector pin M12 050 5000 mm arrangement SPEEDCON arrangement SPEEDCON 100 10000 mm D-coded D-coded Core wire Terminal Signal Terminal colour name no no. Specifications Item TD+ 000 1 2 3 4 Cable O.D. Ø 6.5 mm RD+ TD-0.34 mm²/AWG22 Conductor nominal cross section 3 RD-Wire O.D. (Including insulator) 1.55 mm Shield Min. bending radius (Fixed)

Metal parts

Metal parts

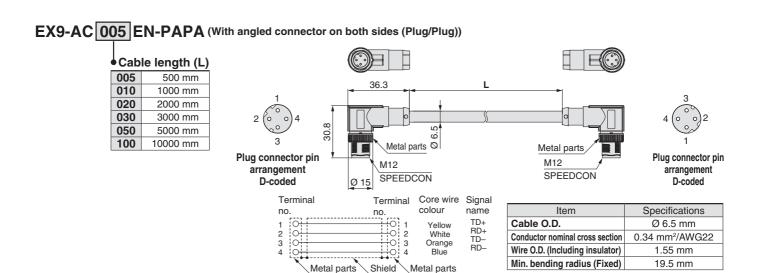


1 Communication Cable


For IO-Link Master Unit

EX9-AC 005 -SSPS (With connector on both sides (Socket/Plug))

Cable length (L) 005 500 mm 010 1000 mm 020 2000 mm 030 3000 mm 050 5000 mm 100 10000 mm

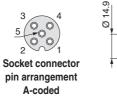

(Normal key)

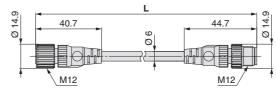



Plug connector pin arrangement A-coded (Normal key)


Terminal no.			Core wire colour
1 O	$\begin{array}{c c} & & & \\ & & & \\ \end{array}$	1 2 3 4 5	Brown White Blue Black Grey
Connections			

Item	Specifications
Cable O.D.	Ø 6 mm
Conductor nominal cross section	0.3 mm ² /AWG22
Wire O.D. (Including conductor)	1.5 mm
Min. bending radius (Fixed)	40 mm


Prield-wireable Communication Connector

Plug

For CC-Link | For DeviceNet™ PCA-1075526 PCA-1075528

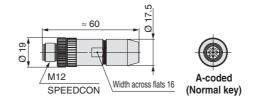

For PROFIBUS DP PCA-1075530

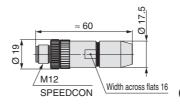




Applicable Cable

Item	Specifications
Cable O.D.	4.0 to 8.0 mm
Wire gauge (Stranded wire cross section)	0.14 to 0.75 mm²/AWG26 to 18 (Solid cable/Flexible cable) 0.08 to 0.5 mm²/AWG28 to 20 (With ferrule)

For EtherCAT[®] | For PROFINET | For EtherNet/IP™

PCA-1446553



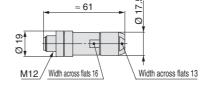


Applicable Cable

Item	Specifications
Cable O.D.	4.0 to 8.0 mm
Wire gauge (Stranded wire cross section)	0.14 to 0.34 mm ² /AWG26 to 22

* The table above shows the specifications for the applicable cable. Adaptation for the connector may vary on account of the conductor construction of the electric wire.


Socket

For CC-Link For DeviceNet™ PCA-1075527 PCA-1075529

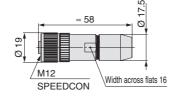



For PROFIBUS DP PCA-1075531

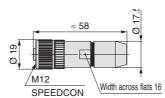



Applicable Cable


Item	Specifications	
Cable O.D.	4.0 to 8.0 mm	
Wire gauge (Stranded wire cross section)	0.14 to 0.75 mm²/AWG26 to 18 (Solid cable/Flexible cable) 0.08 to 0.5 mm²/AWG28 to 20 (With ferrule)	

1/O Cable with Connector, I/O Connector

For details, refer to the Web Catalog.

Name	Use	Part no.	Description
Cable with	For sensor	PCA-1557769	Cable with M12 connector (4 pins/3 m)
connector		PCA-1557772	Cable with M8 connector (3 pins/3 m)
Field-wireable connector	PCA-1557730	Field-wireable connector (M8/3 pins/Plug/Piercecon® connection)	
	For sensor	PCA-1557743	Field-wireable connector
		PCA-1557756	(M12/4 pins/Plug/QUICKON-ONE connection/SPEEDCON)
Y connector	For sensor	PCA-1557785	Y connector (2 x M12 (5 pins)-M12 (5 pins)/SPEEDCON)
1 connector		PCA-1557798	Y connector (2 x M8 (3 pins)-M12 (4 pins)/SPEEDCON)

* When using the Y connector, connect it to the connector on the I/O unit through the sensor cable (PCA-1557769) with the M12 connector.

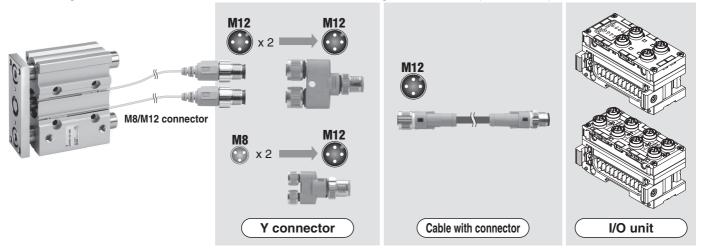

EX600 Series **Made to Order**

Please contact SMC for detailed specifications and lead times.



SI Unit

Prepare the SI unit, each type of unit, and the manifold valve (without SI unit) separately, and combine them before use.

2 Modbus/TCP compatible

- **1) Ethernet POWERLINK compatible**
 - Dimensions are the same as those of the EX600-SEN3.
 - EX600-SPL1-X26 EX600-SMT1-X25
 - Dimensions are the same as those of the EX600-SEN3.
- ③ EtherNet/IP™ IO-Link master unit compatible EX600-SEN3-X80
 - Dimensions are the same as those of the EX600-SEN3.



Communication Cable

With connector on one side (Socket)
Cable length: 10000 mm

For CC-Link For DeviceNetTM

EX9-AC100 MJ -X12

Applicable protocol

MJ CC-Link


DN DeviceNet™



Socket connector pin arrangement A-coded (Normal key)

For CC-Link

Dimensions

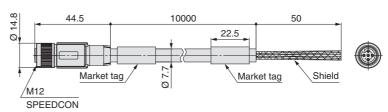

Connections


Terminal no.	Core wire colour: Signal name (CC-Link)		
1	Shield: SLD		
2	White: DB		
3	Yellow: DG		
4	Blue: DA		

*1	Number of holes: 5, Total number o
	pins: 4

Item		Specifications	
Cable O.D.		Ø 7.7 mm	
Conductor nominal	Data pair	0.5 mm ² /AWG20	
cross section Drain		0.34 mm ² /AWG22	
Wire O.D. (Including insulator)		2.55 mm	
Min. bending radius (Fixed)		77 mm	

For DeviceNet™

Dimensions

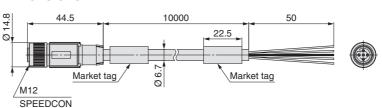



Socket connector pin arrangement A-coded (Normal key)

Connections

Terminal no.	Core wire colour: Signal name (DeviceNet		
1	Shield: DRAIN		
2	Red: V+		
3	Black: V-		
4	White: CAN H Blue: CAN L		
5			

Item		Specifications	
Cable O.D.		Ø 6.7 mm	
Conductor nominal	Power pair	0.34 mm ² /AWG22	
cross section	Data pair	0.25 mm ² /AWG24	
Wire O.D.	Power pair	1.4 mm	
(Including insulator) Data pai	Data pair	2.05 mm	
Min. bending radius (Fixed)	67 mm	



EX600 Series Specific Product Precautions

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For fieldbus system precautions, refer to the "Operation Manual" on the SMC website: https://www.smc.eu

Mounting

- 1. When handling and assembling units, do not touch the sharp metal parts of the connector or plug.
- 2. When connecting six stations or more, be sure to use the intermediate reinforcing brace (EX600-ZMB1 or EX600-ZMB2).

Operating Environment

∧ Caution

1. Select the proper type of enclosure according to the operating environment.

IP65/67 is achieved when the following conditions are met.

- Provide appropriate wiring between all units using electrical wiring cables, communication connectors and cables with M12 connectors.
- 2) Appropriately mount each unit and valve manifold.
- 3) Be sure to mount a seal cap on any unused connectors. If using in an environment that is exposed to water splashes, please take measures such as using a cover.

When the enclosure is IP40, do not use in an operating environment or atmosphere where it may come in contact with corrosive gas, chemical agents, seawater, water, or water vapour.

When connected to the EX600-D \square E or EX600-D \square F, manifold enclosure is IP40.

Also, the handheld terminal conforms to IP20, so prevent foreign matter from entering inside, and water, solvent or oil from coming in direct contact with it.

Adjustment / Operation

Marning

<Handheld Terminal>

1. Do not apply pressure to the LCD.

There is a possibility of the crack of LCD and injuring.

The forced input/output function is used to change the signal status forcibly. When operating this function, be sure to check the safety of the surroundings and installation.

This may cause injuries or equipment damage.

3. Incorrect setting of parameters can cause a malfunction. Be sure to check the settings before use.

This may cause injuries or equipment damage.

⚠ Caution

<Handheld Terminal>

1. Do not press the setting buttons with a sharp pointed object.


This may cause damage or equipment failure.

Do not apply excessive load and impact to the setting buttons.

This may cause damage, equipment failure or malfunction.

When the order does not include the SI unit, a valve plate which connects the manifold and SI unit, is not mounted. Use attached valve holding screws and mount the valve plate.

(Tightening torque: 0.6 to 0.7 N·m)

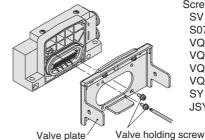

Screw tightened parts SV series: 2 places S0700 series: 2 places VQC1000 series: 2 places VQC2000 series: 3 places VQC4000 series: 4 places VQC5000 series: 4 places SY series: 2 places JSY series: 2 places

■Trademark

DeviceNet[™] is a trademark of ODVA.

EtherNet/IP[™] is a trademark of ODVA.

EtherCAT[®] is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany. Modbus[®] is a registered trademark of Schneider Electric, licensed to the Modbus Organisation, Inc. QuickConnect[™] is a trademark of ODVA.



⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) ¹⁾, and other safety regulations.

↑ Caution:

Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate

injury.

Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious

njury.

⚠ Danger:

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious

injury.

ISO 4414: Pneumatic fluid power – General rules relating to systems.
 ISO 4413: Hydraulic fluid power – General rules relating to systems.
 IEC 60204-1: Safety of machinery – Electrical equipment of machines.
 (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.

- The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
- When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
- 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions

- 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
- 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
- 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
- 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

⚠ Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements". Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first. ²⁾ Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
- 2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

∧ Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country.

Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Revision History				
Edition B	 The EtherNet/IP™ communication protocol has been added. An analog output unit and an input/output unit have been added. A D-sub connector and a spring type terminal block have been added. SY3000/5000 series valves have been added as applicable solenoid valves. Number of pages has been decreased from 64 to 60. 	OW		
Edition C	The EtherCAT® communication protocol has been added.			
Edition D	- The PROFINET communication protocol has been added.	RS		
Edition E	 A dual port EtherNet/IP™ product has been added. SY7000 series valves have been added as applicable solenoid valves. 	TS		
Edition F	 The IO-Link master unit has been added. JSY series valves have been added as connectable valves. The "How to Order" and "Dimensions" pages of the connectable valves have been deleted. An end plate (D side) and M12 (4/5 pins) A-coded power supply connectors have been added. Number of pages has been decreased from 68 to 48. 	YT		

Lithuania +370 5 2308118 www.smclt.lt info@smclt.lt

SMC Corporation (Europe)

		. ,	
Austria	+43 (0)2262622800	www.smc.at	office@smc.at
Belgium	+32 (0)33551464	www.smc.be	info@smc.be
Bulgaria	+359 (0)2807670	www.smc.bg	office@smc.bg
Croatia	+385 (0)13707288	www.smc.hr	office@smc.hr
Czech Republic	+420 541424611	www.smc.cz	office@smc.cz
Denmark	+45 70252900	www.smcdk.com	smc@smcdk.com
Estonia	+372 6510370	www.smcpneumatics.ee	info@smcee.ee
Finland	+358 207513513	www.smc.fi	smcfi@smc.fi
France	+33 (0)164761000	www.smc-france.fr	info@smc-france.fr
Germany	+49 (0)61034020	www.smc.de	info@smc.de
Greece	+30 210 2717265	www.smchellas.gr	sales@smchellas.gr
Hungary	+36 23513000	www.smc.hu	office@smc.hu
Ireland	+353 (0)14039000	www.smcautomation.ie	sales@smcautomation.ie
Italy	+39 03990691	www.smcitalia.it	mailbox@smcitalia.it
Latvia	+371 67817700	www.smc.lv	info@smc.lv

Lithuania	+370 5 2308118	WWW.SITICIL.IL	INIO@SMCIL.II
Netherlands	+31 (0)205318888	www.smc.nl	info@smc.nl
Norway	+47 67129020	www.smc-norge.no	post@smc-norge.no
Poland	+48 222119600	www.smc.pl	office@smc.pl
Portugal	+351 214724500	www.smc.eu	apoioclientept@smc.smces.es
Romania	+40 213205111	www.smcromania.ro	smcromania@smcromania.ro
Russia	+7 8123036600	www.smc.eu	sales@smcru.com
Slovakia	+421 (0)413213212	www.smc.sk	office@smc.sk
Slovenia	+386 (0)73885412	www.smc.si	office@smc.si
Spain	+34 945184100	www.smc.eu	post@smc.smces.es
Sweden	+46 (0)86031200	www.smc.nu	smc@smc.nu
Switzerland	+41 (0)523963131	www.smc.ch	helpcenter@smc.ch
Turkey	+90 212 489 0 440	www.smcpnomatik.com.tr	info@smcpnomatik.com.tr
UK	+44 (0)845 121 5122	www.smc.uk	sales@smc.uk