Electro-Pneumatic Regulator Electronic Vacuum Regulator














Compact Electro-Pneumatic Regulator Series ITV0000 Compact Vacuum Regulator Series ITV009



Realizes space-saving and reduction of weight for manifold use.

Stations can easily be increased or decreased due to DIN rail mount design.

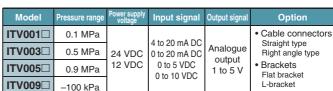


Equivalent to IP65

- Linearity: Within ±1% (F.S.)

 Hysteresis: Within 0.5% (F.S.)

 Repeatability: Within ±0.5% (F.S.)
- High-speed response time: 0.1 sec (Without load)
- High stability
 Sensitivity within 0.2% (F.S.)

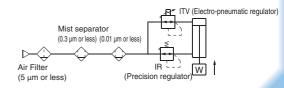

ITV1000


ITV3000

ITV2000

ITV2090

Cable connectors

Straight type and right angle type are available.

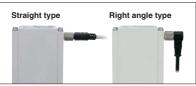

- Built-in One-touch fittings
- With error indication LED
- Brackets

Flat and L-brackets are available.



Electro-Pneumatic Regulator Series ITV 1000/2000/3000 Electronic Vacuum Regulator Series ITV209



Added Fieldbus compliant specifications to Series *ITV1000/2000/3000*!

Reduced wiring
Applicable Fieldbus protocols












- Sensitivity: Within 0.2% (F.S.)
- Linearity: Within ±1% (F.S.)
- Hysteresis: Within 0.5% (F.S.)
- IP65
- Cable connections in 2 directions






Grease-free specification (Series ITV1000)

Application examples

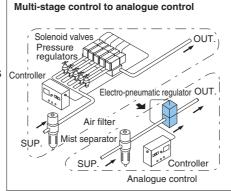

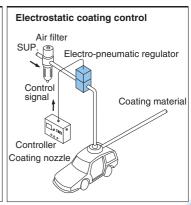



Electro-Pneumatic Regulator Electronic Vacuum Regulator

• Stepless control of air pressure proportional to an electrical signal.

Series ITV

	Series	Model	Set pressure range	Input signal	Port size	Page
	Series ITV0000	ITV001□	0.001 to 0.1 MPa	Current type: 4 to 20 mA DC Current type:	Built-in One-touch fittings Metric size: ø4 Inch size: ø5/32	
		ITV003□	0.001 to 0.5 MPa	0 to 20 mA DC Voltage type: 0 to 5 VDC		1
	18	ITV005□	0.001 to 0.9 MPa	Voltage type: 0 to 10 VDC		
tor	Series ITV1000	ITV101□	0.005 to 0.1 MPa			
egulat	DES No. 62 A	ITV103□	0.005 to 0.5 MPa		1/8, 1/4	9
natic R	ان ان	ITV105□	0.005 to 0.9 MPa	Current type: 4 to 20 mA DC (Sink type)		
Electro-Pneumatic Regulator	Series ITV2000	ITV201□	0.005 to 0.1 MPa	Current type: 0 to 20 mA DC (Sink type)	1/4, 3/8	
ectro-		ITV203□	0.005 to 0.5 MPa	Voltage type: 0 to 5 VDC Voltage type: 0 to 10 VDC		9
▥		ITV205□	0.005 to 0.9 MPa	Preset input (4 points/16 points) 10 bit digital input		
	Series ITV3000	ITV301□	0.005 to 0.1 MPa	CC-Link compatible DeviceNet™ compatible PROFIBUS DP compatible RS-232C communication		
		ITV303□	0.005 to 0.5 MPa			9
		ITV305□	0.005 to 0.9 MPa			
Regulator	Series ITV009□	ITV009□	−1 to −100 kPa	Current type: 4 to 20 mA DC Current type: 0 to 20 mA DC Voltage type: 0 to 5 VDC Voltage type: 0 to 10 VDC	Built-in One-touch fittings Metric size: ø4 Inch size: ø5/32	28
Electronic Vacuum Regulator	Series ITV209	ITV209□	−1.3 to −80 kPa	Current type: 4 to 20 mA DC (Sink type) Current type: 0 to 20 mA DC (Sink type) Voltage type: 0 to 5 VDC Voltage type: 0 to 10 VDC Preset input (4 points/16 points) 10 bit digital input CC-Link compatible DeviceNet™ compatible PROFIBUS DP compatible RS-232C communication	1/4	35


Compact Electro-Pneumatic Regulator

Series ITV0000






How to Order

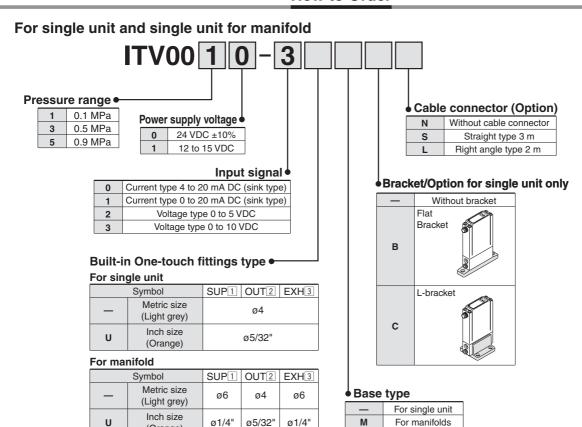

Manifold

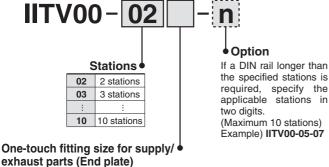

ø6 (Light grey) ø1/4" (Orange)

(Orange)

Note) A DIN rail with the length specified by the number of stations is attached to the manifold. For dimensions of the DIN rail, refer to the external dimensions.

How to Order Manifold Assembly (Example)

Indicate the part numbers of electro-pneumatic regulators and options to be mounted below the manifold part number.

Example)

Due to the common supply/exhaust feature, note that different pressure range combinations are not available.


IITV00-03·······1 set (Manifold part no.)

- *ITV0030-3MS-----2 sets (Electro-pneumatic regulator part no. (1, 2 stations))
- *ITV0030-3ML······1 set (Electro-pneumatic regulator part no. (3 stations))

Indicate part numbers in order starting from the first station on the D side.

→ Note)Combination with having different pressure ranges is not available due to common supply/exhaust features.

The asterisk (*) specifies mounting. Add an asterisk (*) at the beginning of electro-pneumatic regulator part numbers to be mounted.

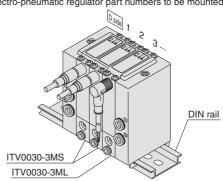



Compact Electro-Pneumatic Regulator Series ITV0000





Mode	ıl	ITV001□	ITV003□	ITV005□
Minimum supply p	ressure	Set pressure +0.1 MPa		
Maximum supply	oressure	0.2 MPa	1.0	MPa
Set pressure range	е	0.001 to 0.1 MPa	0.001 to 0.5 MPa	0.001 to 0.9 MPa
	Voltage	24 V	DC ±10%, 12 to 15	VDC
Power supply	Current consumption		oltage 24 VDC type age 12 to 15 VDC ty	
Input signal	Voltage type	0	to 5 VDC, 0 to 10 VI	C
input signal	Current type	4 to 2	20 mA DC, 0 to 20 m	A DC
Input impedance	Voltage type		Approximately 10 kg	Ω
input impedance	Current type	,	Approximately 250 Ω)
Output signal	Analogue output	1 to 5 VDC (Output impedance: Approximately 1 kΩ) Output accuracy: Within ±6% (Full span)		
Linearity		Within ±1% (Full span)		
Hysteresis		Within 0.5% (Full span)		
Repeatability		Within ±0.5% (Full span)		
Sensitivity		Within 0.2% (Full span)		
Temperature chara	acteristics	Within ±0.12% (Full span)/°C		
Operating tempera	ature range	0 to 50°C (No condensation)		
Enclosure		Equivalent to IP65 *		
Connection type		Ви	ilt-in One-touch fittir	ngs
	For single unit	Metric size	1, 2,	3: ø4
Connection size	For single unit	Inch size	1, 2, 3	B: ø5/32"
Connection Size	Manifold	Metric size	1, 3: ø	6, 2: ø4
	walliolu	Inch size	1, 3: ø1/4	", 2: ø5/32"
Weight Note 1)		100	g or less (without op	tion)

Note 1) Indicates the weight of a single unit.

For IITV00-n

Total weight (g) Stations (n) x 100 + 130 (Weight of end block A, B assembly) + Weight

(g) of DIN rail

Note 2) When there is a downstream flow consumption, pressure may become unstable

depending on piping conditions.

Note 3) When the power is turned on, a noise may be generated. This noise is normal and does not indicate a fault.

* When using under the conditions equivalent to IP65, connect the fitting or tube to the breathing hole prior to use. (For details, refer to "Specific Product Precautions 1" on page 41)

Accessories (Option)

Bracket

Flat bracket assembly (includes 2 mounting screws) P39800022



L-bracket assembly (includes 2 mounting screws) P39800023



Tighting torque when assembling is 0.3 N·m.

Cable connector



Right angle type P398000-501-2






Series ITV0000


Working Principle

When the input signal rises, the air supply soloenoid valve ① turns ON. Due to this, part of the supply pressure passes through the air supply solenoid valve ① and changes to output pressure. This output pressure feeds back to the control circuit ④ via the pressure sensor ③. Here, pressure corrections continue until output pressure becomes proportional to the input signal, enabling output pressure that is proportional to the input signal.

Diagram of working principle

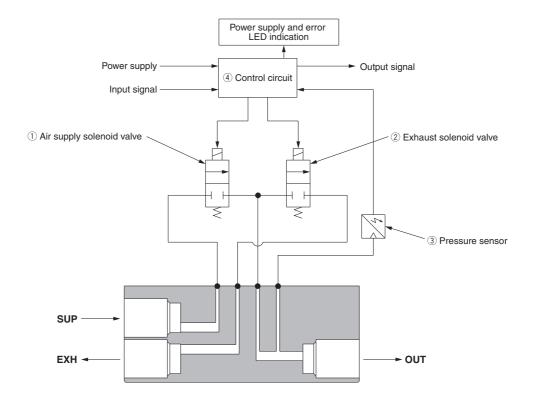



Block diagram

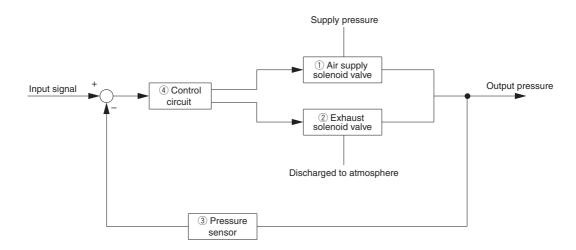




Series ITV001□

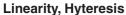


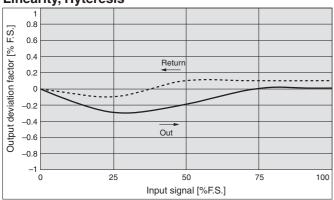


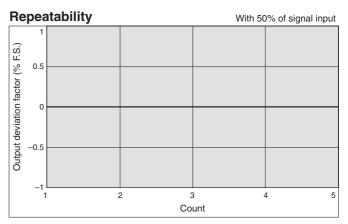

Pressure Characteristics




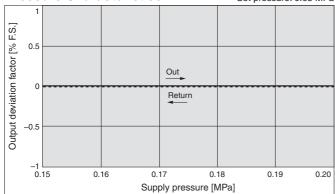


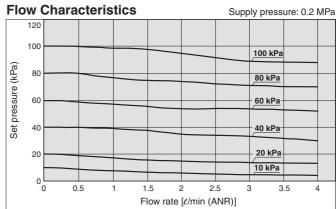


Series ITV003□

Linearity, Hyteresis

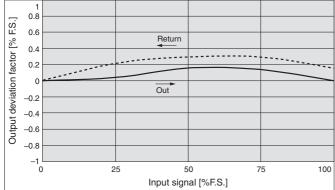

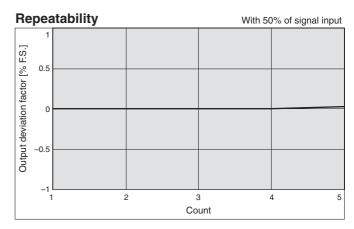

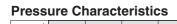


0.3

Output deviation factor [% F.S.]


0.5

0.2

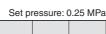

0.9



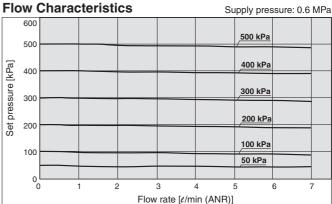


Supply pressure [MPa]


Return

Series ITV0000


Series ITV005□

Linearity, Hyteresis

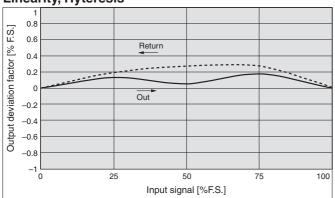


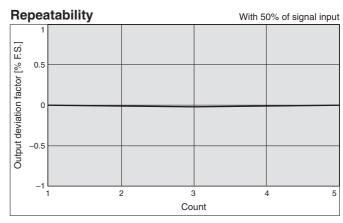

Pressure Characteristics Set pressure: 0.45 MPa Out Out Return Out Out Out Out Supply pressure [MPa]

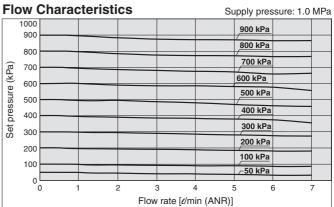


Dimensions

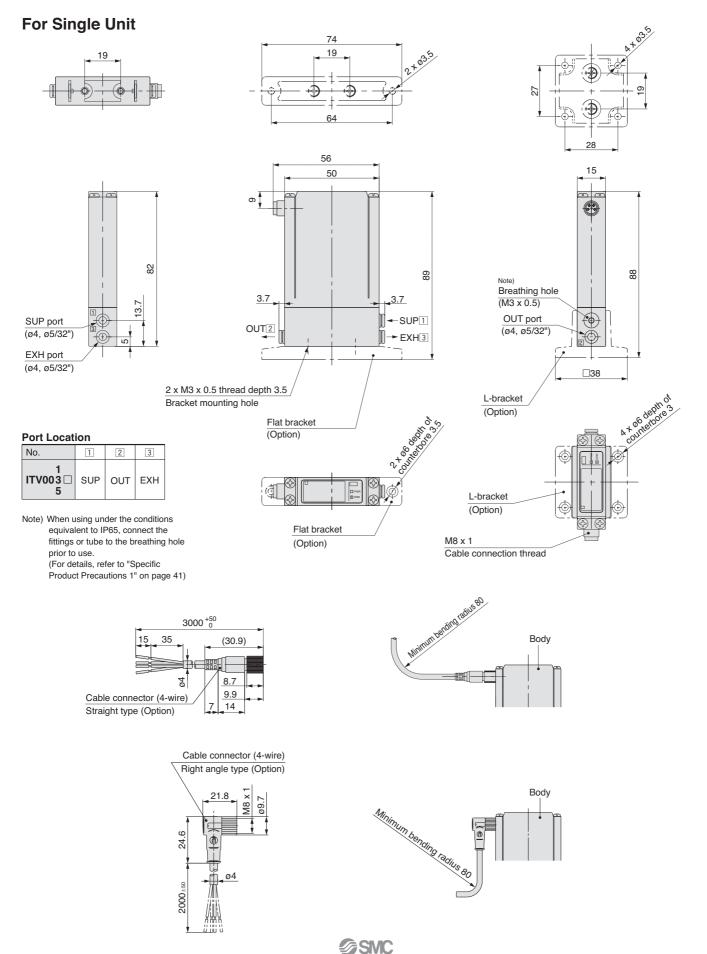


Series ITV0000


Dimensions


Single unit for manifold

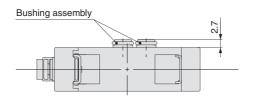



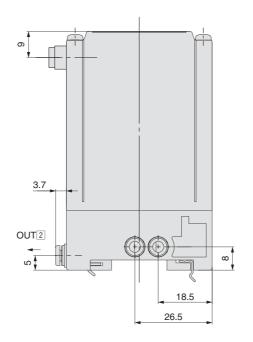

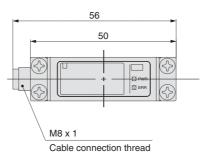

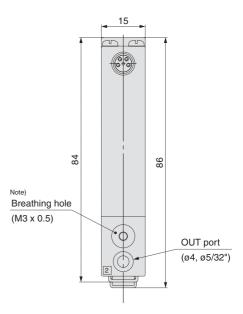


Note) When using under the conditions equivalent to IP65, connect the fittings or tube to the breathing hole prior to use. (For details, refer to "Specific Product Precautions 1" on page 41)


Note) For dimensions of the cable connector, refer to single unit on page 6.


Dimensions

Manifold

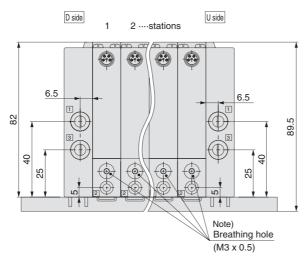


Note) When using under the conditions equivalent to IP65, connect the fittings or tubing to the breathing hole prior to use. (For details, refer to "Specific Product Precautions 1" on page 41).

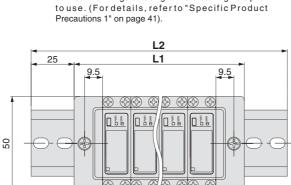

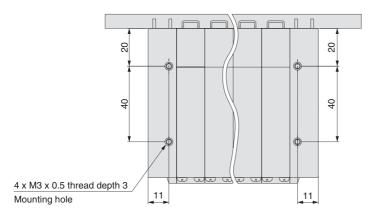

Note) For dimensions of the cable connector, refer to single unit on page 6.

									[mm]
Manifold stations n	2	3	4	5	6	7	8	9	10
L1	60	75	90	105	120	135	150	165	180
L2	110.5	123	148	160.5	173	185.5	198	223	235.5
Weight of DIN rail [g]	20	22	27	29	31	34	36	41	43

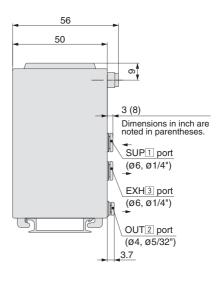

Port Location

No.	1	2	3
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	SUP	OUT	EXH

Note) Stations are counted starting from the D side.




Electro-Pneumatic Regulator

Series ITV1000/2000/3000





How to Order

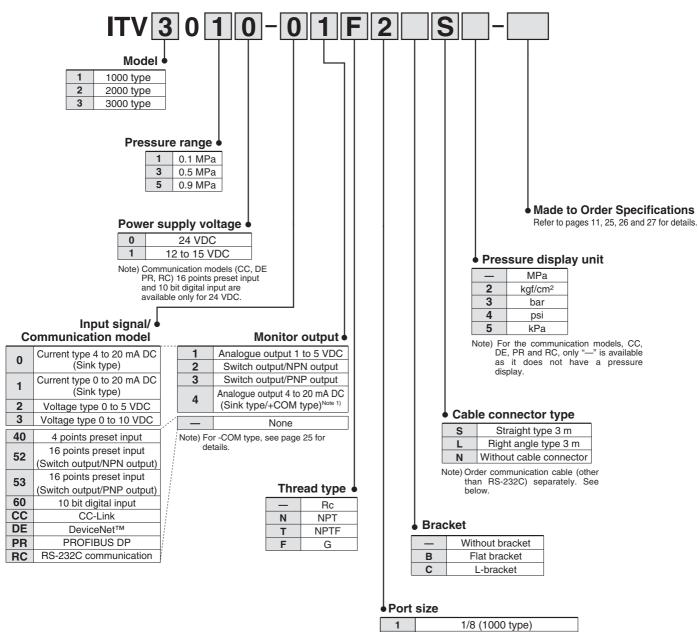

1	1/8 (1000 type)
2	1/4 (1000, 2000, 3000 type)
3	3/8 (2000, 3000 type)
4	1/2 (3000 type)

For communication cables, use the parts listed below (refer to the catalogue [M8/M12 Connector] CAT.ES100-73 for details) or order the product certified for the respective protocol (with M12 connector) separately.

		, , , ,
Application	Communication cable part number	Remarks
CC-Link compatibility	PCA-1567720 (Socket type)	Dedicated Bus adapter supplied
CC-LINK Compatibility	PCA-1567717 (Plug type)	with the product.
DeviceNet™	PCA-1557633 (Socket type)	T-branch connector not supplied.
compatibility	PCA-1557646 (Plug type)	1-branch connector not supplied.
PROFIBUS DP	PCA-1557688 (Socket type)	Through composter not complied
compatibility	PCA-1557691 (Plug type)	T-branch connector not supplied.









ITV1000



ITV3000

Fieldbus-compatible model

JIS Symbol



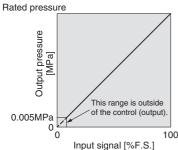


Figure 1. Input/output characteristics chart

Communication Specifications (CC, DE, PR, RC)

Standard Specifications

		ITV101 ☐ Note 10)	ITV103□ Note 10)	ITV105 Note 10)			
Mod	el	ITV201□	ITV203□	ITV205□			
		ITV301□	ITV303□	ITV305□			
Minimum supp	ly pressure	Set pressure +0.1 MPa					
Maximum supp	oly pressure	0.2 MPa	1.0 l	MРа			
Set pressure ra	ange Note 1)	0.005 to 0.1 MPa	0.005 to 0.5 MPa	0.005 to 0.9 MPa			
	Voltage	24	VDC ±10%, 12 to 15 V	DC			
Power supply	Current		oltage 24 VDC type: 0.12				
	consumption	,	oltage 12 to 15 VDC type				
	Current type Note 2)	4 to 20 m	A DC, 0 to 20 mA DC (S	Sink type)			
Input signal	Voltage type	(0 to 5 VDC, 0 to 10 VDC	,			
	Preset input	4 points (Negative	common), 16 points (No	common polarity)			
	Digital input	10 bit (parallel)					
	Current type		250 Ω or less Note 6)				
Input	Voltage type	Approx. 6.5 kΩ					
impedance	Preset input	Power supply voltage 24 VDC type: Approx. 4.7 kΩ; Power supply voltage 12 VDC type: Approx. 2.0 kΩ					
	Digital input	Approx. 4.7 kΩ					
Note 3)		1 to 5 VDC (Output impedance: Approximately 1 kΩ) 4 to 20 mA DC (Sink type) (Load impedance: 250Ω or less)					
Output signal (monitor	output	Output accuracy within ±6% (Full span)					
output)	Switch	NPN open collector output: Max. 30 V, 80 mA					
	output	PNP open collector output: Max. 80 mA					
Linearity		Within ±1% (Full span)					
Hysteresis		Within 0.5% (Full span)					
Repeatability		Within ±0.5% (Full span)					
Sensitivity		Within 0.2% (Full span)					
Temperature ch	aracteristics	Within ±0.12% (Full span)/C					
Output pressure	Accuracy	±2%F.S. ±1 digit					
display Note 4)	Minimum unit	MPa: 0.001, kgf/c	m ² : 0.01, bar: 0.01, psi:	0.1 Note 5), kPa: 1			
Ambient and fluid	d temperature	0 to 50°C (No condensation)					
Enclosure		IP65					
	ITV10□□	Арр	orox. 250 g (without option	ons)			
Weight Note 9)	ITV20□□	Approx. 350 g (without options)					
	ITV30□□	Approx. 645 g (without options)					
Nicha di Dicasa	Complete Figure 4		a cet preceive and input				

- Note 1) Please refer to Figure 1 for the relationship between set pressure and input. Because the maximum set pressure differs for each pressure display, refer to page 45.

 Note 2) 2-wire type 4 to 20 mA DC is not available. Power supply voltage (24 VDC or 12 to 15 VDC) is required.

 Note 3) Select either analogue output or switch output.

 Further, when switch output is selected, select either NPN output or PNP output.

 Note 4) Adjustment of numerical values such as the zero/span adjustment or preset input type is set based on the

minimum units for output pressure display (e.g. 0.01 to 0.50 MPa). Note that the unit cannot be changed. Note 5) The minimum unit for 0.9 MPa (130 psi) types is 1 psi.

- Note 6) Value for the state with no over current circuit included. If an allowance is provided for an over current circuit, the input impedance varies depending on the input current. This is $350~\Omega$ or less for an input current of 20 mA DC.
- Note 7) The above characteristics are confined to the static state. When air is consumed on the output side, the Note /) The above characteristics are confined to the static state. When all is consumed on a pressure may fluctuate.

 Note 8) For communication models, the maximum current consumption is 0.16 A or less.

 Note 9) For communication models, add roughly 80 g to the weight (100 g for the PROFIBUS DP).

 Note 10) The ITV1000 series is a Grease-free specification (Wetted parts).

Model	ITV□0□0-CC	ITV□0□0-DE	ITV□0□0-PR	ITV□0□0-RC
Protocol	CC-Link	DeviceNet™	PROFIBUS DP	RS-232C
Version Note 1)	Ver 1.10	Volume 1 (Edition 3.8), Volume 3 (edition 1.5)	DP-V0	_
Communication speed	156 k/625 k 2.5 M/5 M/10 M bps	125 k/250 k/500 k bps	9.6 k/19.2 k/45.45 k 93.75 k/187.5 k/500 k 1.5 M/3 M/6 M/12 M bps	9.6 kbps
Configulation file Note 2)	_	EDS	GSD	_
I/O occupation area (input/output data)	4 word/4 word, 32 bit/32 bit (per station, remote device station)	16 bit/16 bit	16 bit/16 bit	_
Communication data resolution	12 bit (4096 resolution)	12 bit (4096 resolution)	12 bit (4096 resolution)	10 bit (1024 resolution)
Fail safe	HOLD Note 3)/CLEAR (Switch setting)	HOLD/CLEAR (Switch setting)	CLEAR	HOLD
Electric insulation Note 4)	No	No	Yes	No
Terminating resistor	_		Built into the product (Switch setting)	_

Note 1) Note that version information is subject to change.

Note 2) Configulation files can be downloaded from the SMC's website: http://www.smcworld.com

Note 3) The output HOLD value when a CC-Link communications error occurs can be set based on the bit area data.

Note 4) The insulation between the electrical signal of the communication system and ITV power supply.



Series ITV1000/2000/3000

4 Spacer ITV20 ITV

Order Made Made to Order

(Refer to pages 25, 26 and 27 for details.)

=			
Symbol	Specifications		
X256	Monitor analogue output 4-20mA (source type/-COM type)		
X102	Reverse type		
X224	High pressure type (SUP 1.2 MPa, OUT 1.0 MPa)		
X25	Set pressure range 1 to 100 kPa (Except Series ITV3000)		
X410	Linearity ±0.5% F.S. or less		
X420	With alarm output		
X88	High speed response type (Except Series ITV3000)		
X26	For manifold mounting (Except Series ITV3000)		

Note 1) Manifolds are compatible with 2 to 8 stations. Consult with SMC for 9 stations or more.

Note 2) Products without symbols are also compatible. Consult with SMC separately.

Model	Bracket tightening torque
ITV1000	0.76 ± 0.05 N·m
ITV2000/3000	1.5 ± 0.05 N⋅m

Modular Products and Accessory Combinations

* ITV10 models are not applicable.

Applicable products and accessories	Applicable model		
Applicable products and accessories	ITV20□□	ITV30□□	
① Air filter	AF30-A	AF40-A	
② Mist separator	AFM30-A	AFM40-A	
③ L-bracket	B310L	B410L	
4 Spacer	Y30	Y40	
5 Spacer with L-bracket (3 + 4)	Y30L	Y40L	
6 Spacer with T-bracket	_	Y40T	

Accessories (Option)/Part No.

[Bracket]

Applicable model	Description	Part No.
ITV10□□		P398010-600
ITV20□□, 30□□	Flat bracket assembly (including mounting screws)	P398020-600
ITV10□□		P398010-601
ITV20□□, 30□□	L-bracket assembly (including mounting screws)	P398020-601

[Cable connector]

Applicable model	Descr	Part No.	
Current type		Straight type 3 m	P398020-500-3
Voltage type 4 points preset input	Cable connector (4 cores)	Right angle type 3 m	P398020-501-3
	Dower cable (4 cores)	Straight type 3 m	P398020-500-3
16 points preset input	Power cable (4 cores)	Right angle type 3 m	P398020-501-3
	Signal cable (5 cores)	Straight type 3 m	P398020-502-3
		Right angle type 3 m	P398020-503-3
10 bit digital input	Cable connector (13 cores)	Straight type 3 m	INI-398-0-59
CC-Link PROFIBUS DP	Power cable (4 cores)	Straight type 3 m	P398020-500-3
DeviceNet [™]	1 ower cable (4 cores)	Right angle type 3 m	P398020-501-3
RS-232C	D	Straight type 3 m	P398020-500-3
	Power cable (4 cores)	Right angle type 3 m	P398020-501-3
	Communication cables	Straight type 3 m	P398020-502-3
	connector (5 cores)	Right angle type 3 m	P398020-503-3


Note 1) For the 10-bit digital type, there is no right angle type cable connector.

Note 2) Even when "with cable connector" is selected the communication cable is not included in the communication model (CC, DE, PR). Please order separately.

[Bus adapter]

[_aaa aaabta:]		
Applicable model	Description	Part No.
CC-Link	Bus adapter (Bus adapter supplied with the product.)	EX9-ACY00-MJ

Dimensions

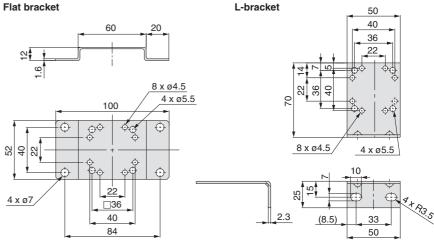




Working Principles

When the input signal rises, the air supply solenoid valve 1 turns ON, and the exhaust solenoid valve 2 turns OFF. Therefore, supply pressure passes through the air supply solenoid valve 1 and is applied to the pilot chamber 3. The pressure in the pilot chamber 3 increases and operates on the upper surface of the diaphragm 4.


As a result, the air supply valve ⑤ linked to the diaphragm ④ opens, and a portion of the supply pressure becomes output pressure.

This output pressure feeds back to the control circuit ® via the pressure sensor ⑦. Here, a correct operation functions until the output pressure is proportional to the input signal, making it possible to always obtain output pressure proportional to the input signal.

Working Principle Diagram

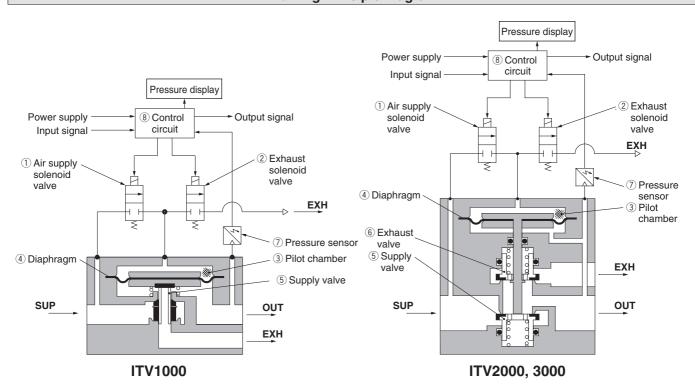

Block diagram

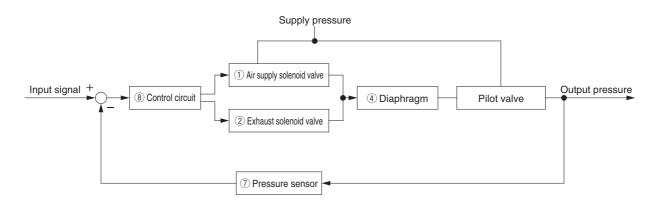





Series ITV1000/2000/3000

Series ITV101□


Linearity

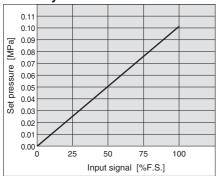


Hysteresis

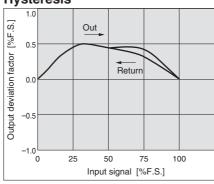


Repeatability

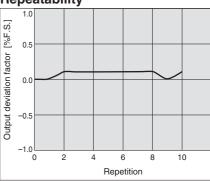


Pressure characteristics Set pressure: 0.05 MPa

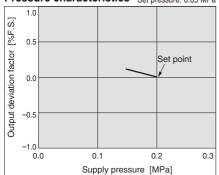

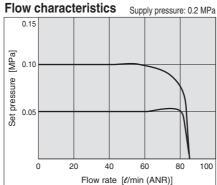


Relief flow characteristics Supply pressure: 0.2 MPa

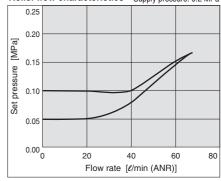


Series ITV201


Linearity

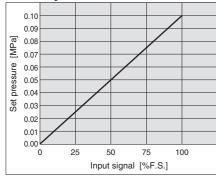


Hysteresis

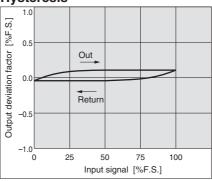


Repeatability

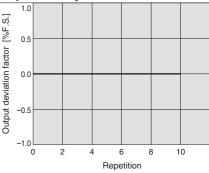


Pressure characteristics Set pressure: 0.05 MPa

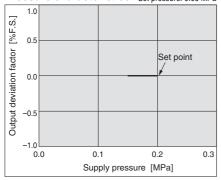

Flow characteristics Supply pressure: 0.2 MPa

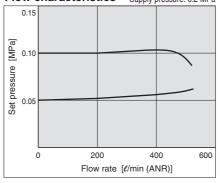


Relief flow characteristics Supply pressure: 0.2 MPa

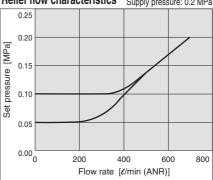




Series ITV301□


Linearity

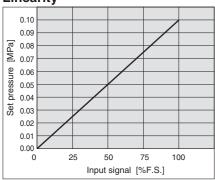


Hysteresis

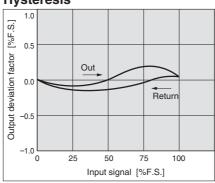


Repeatability

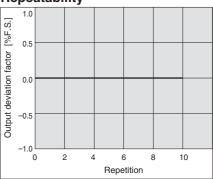


Pressure characteristics Set pressure: 0.05 MPa

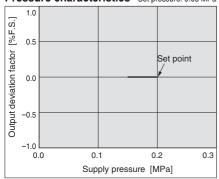

Flow characteristics Supply pressure: 0.2 MPa

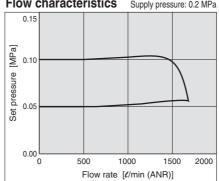


Relief flow characteristics Supply pressure: 0.2 MPa

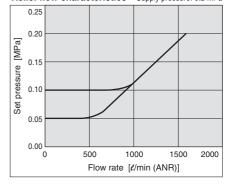


Series ITV1000/2000/3000

Series ITV103□


Linearity

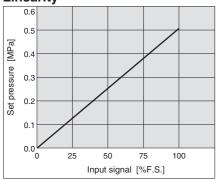


Hysteresis

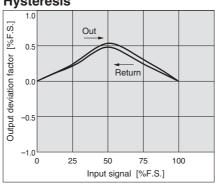


Repeatability

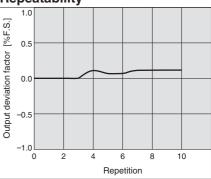


Pressure characteristics Set pressure: 0.2 MPa

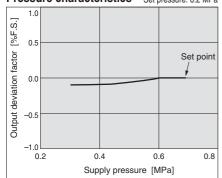

Flow characteristics

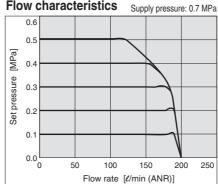


Relief flow characteristics Supply pressure: 0.7 MPa

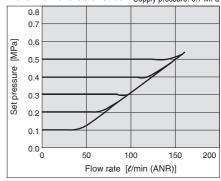


Series ITV203


Linearity

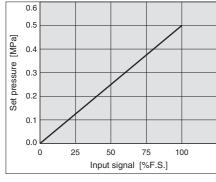


Hysteresis

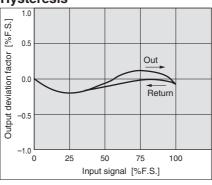


Repeatability

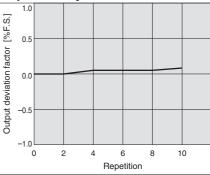


Pressure characteristics Set pressure: 0.2 MPa

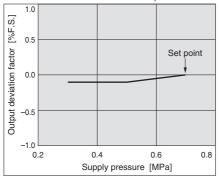

Flow characteristics Supply pressure: 0.7 MPa

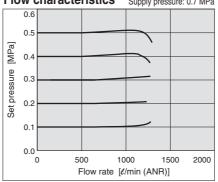


Relief flow characteristics Supply pressure: 0.7 MPa

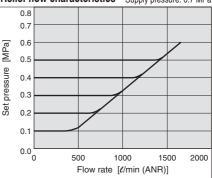




Series ITV303□


Linearity

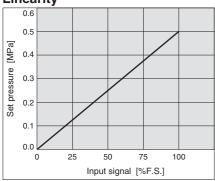


Hysteresis

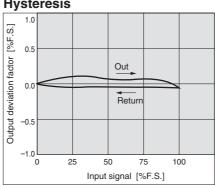


Repeatability

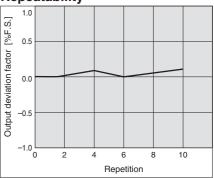


Pressure characteristics Set pressure: 0.2 MPa

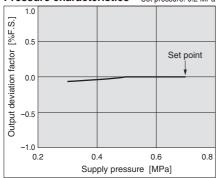

Flow characteristics Supply pressure: 0.7 MPa

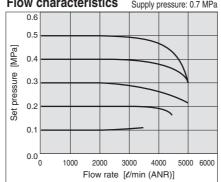

Relief flow characteristics Supply pressure: 0.7 MPa

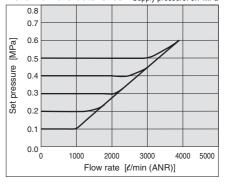





Series ITV1000/2000/3000

Series ITV105□


Linearity

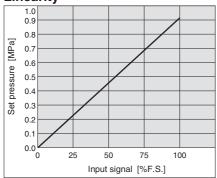


Hysteresis

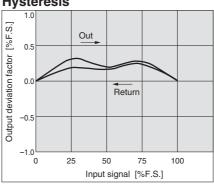


Repeatability

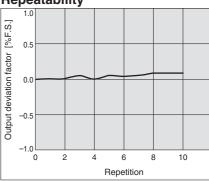


Pressure characteristics Set pressure: 0.4 MPa

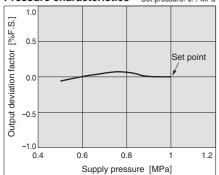

Flow characteristics Supply pressure: 1.0 MPa

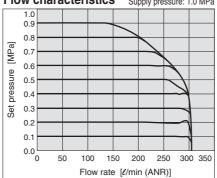


Relief flow characteristics Supply pressure: 1.0 MPa

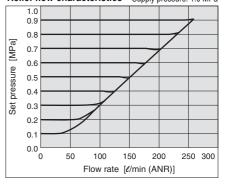


Series ITV205


Linearity

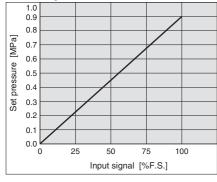


Hysteresis

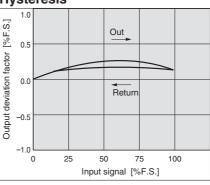


Repeatability

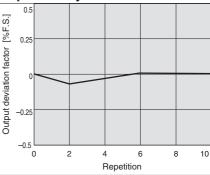


Pressure characteristics Set pressure: 0.4 MPa

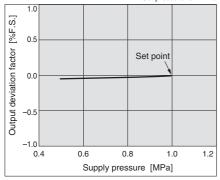

Flow characteristics Supply pressure: 1.0 MPa

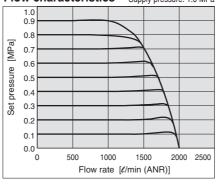


Relief flow characteristics Supply pressure: 1.0 MPa

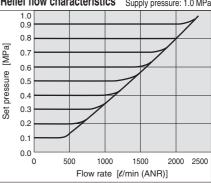


Series ITV305□


Linearity

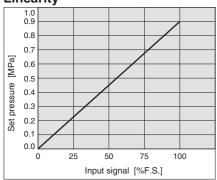


Hysteresis

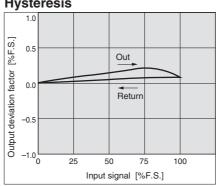


Repeatability

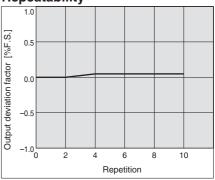


Pressure characteristics Set pressure: 0.4 MPa

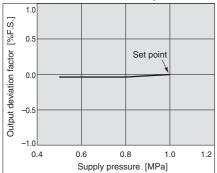

Flow characteristics Supply pressure: 1.0 MPa

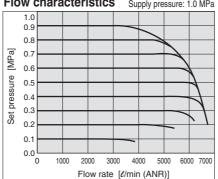

Relief flow characteristics Supply pressure: 1.0 MPa

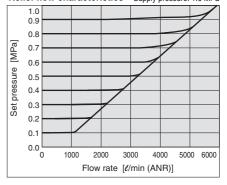





Series ITV1000/2000/3000

Dimensions

ITV10□□


Flat bracket

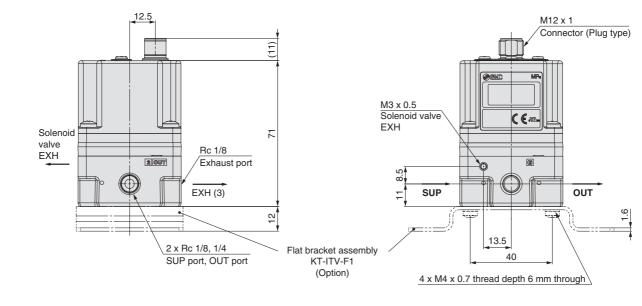

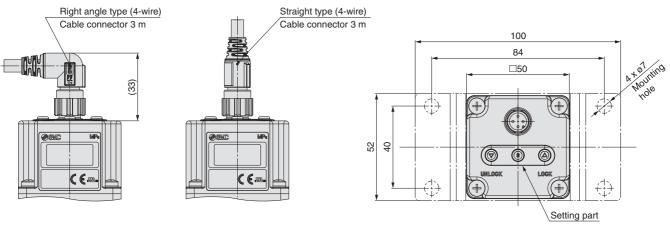

Note) Do not attempt to rotate, as the cable connector does not turn.

L-bracket

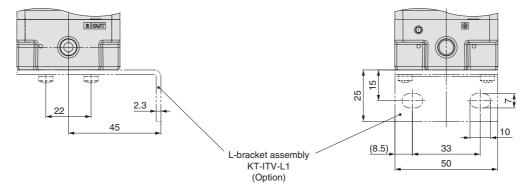





Dimensions (16 points preset input, 10 bit digital input, CC-Link, DeviceNet™, PROFIBUS DP and RS-232C)


M12 x 1 16 points preset input Power cable connection thread M12 x 1 (Plug type) Signal cable connection thread (Plug type) 20 Digital pressure display M3 x 0.5 Solenoid 86 Solenoid valve EXH valve **EXH (3)** SUP OUT 13.5 ₫

10 bit digital input

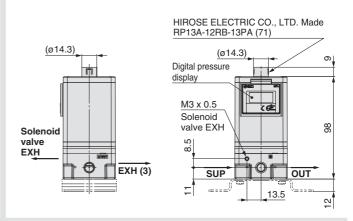


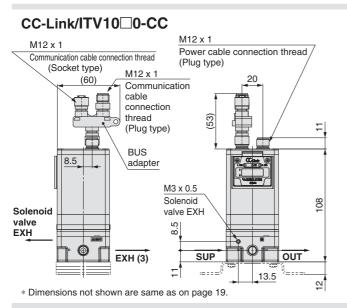



DeviceNet™/ITV10□0-DE

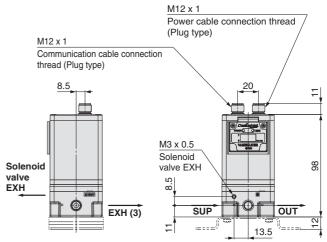


* Dimensions not shown are same as on page 19.

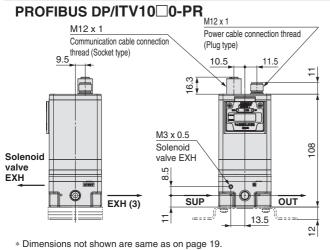

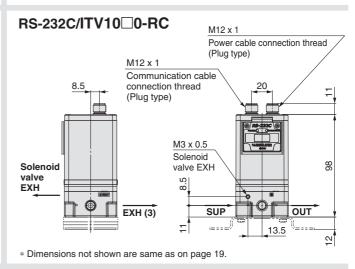

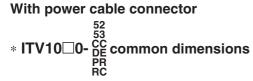

Note) Order communication cable (other than 16 points, RS-232C) separately. (Refer to page 9.)

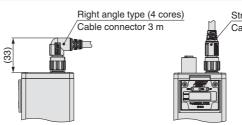

Straight type (4 cores)
Cable connector 3 m


Note) Do not attempt to rotate, as the cable connector does not turn.

Series ITV1000/2000/3000

Dimensions


ITV20□□

Flat bracket

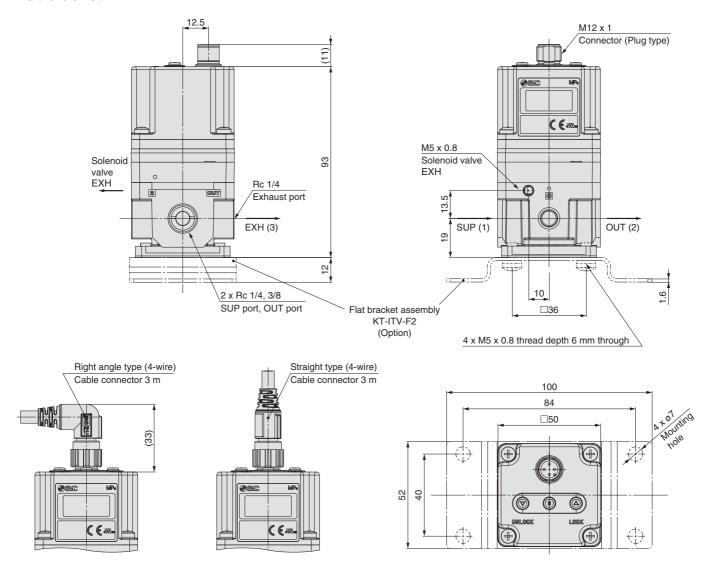


Note) Do not attempt to rotate, as the cable connector does not turn.


L-bracket

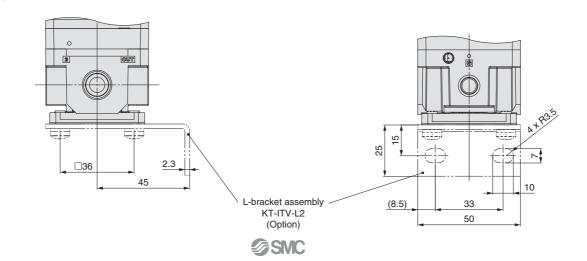



Dimensions (16 points preset input, 10 bit digital input, CC-Link, DeviceNet™, PROFIBUS DP and RS-232C)

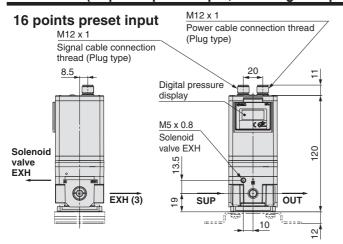



10 bit digital input HIROSE ELECTRIC CO., LTD. Made RP13A-12RB-13PA (71) (Ø14.3)(Ø14.3)Digital pressure m display M5 x 0.8 Solenoid valve EXH 120 Solenoid **EXH EXH** (3) 9 SUP OUT 10 12

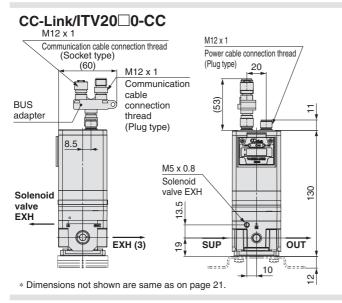


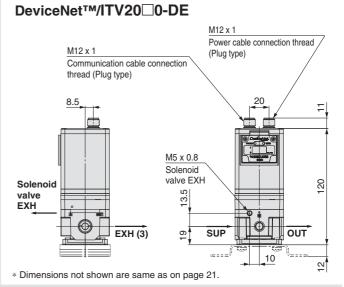

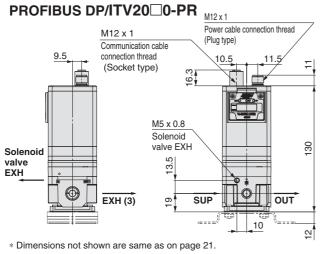

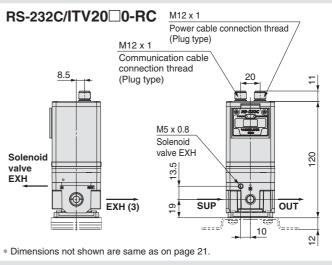

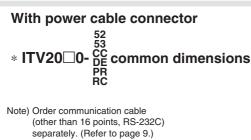

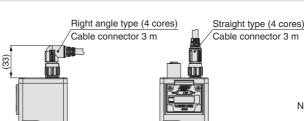


Note) Do not attempt to rotate, as the cable connector does not turn.




Series ITV1000/2000/3000

Dimensions

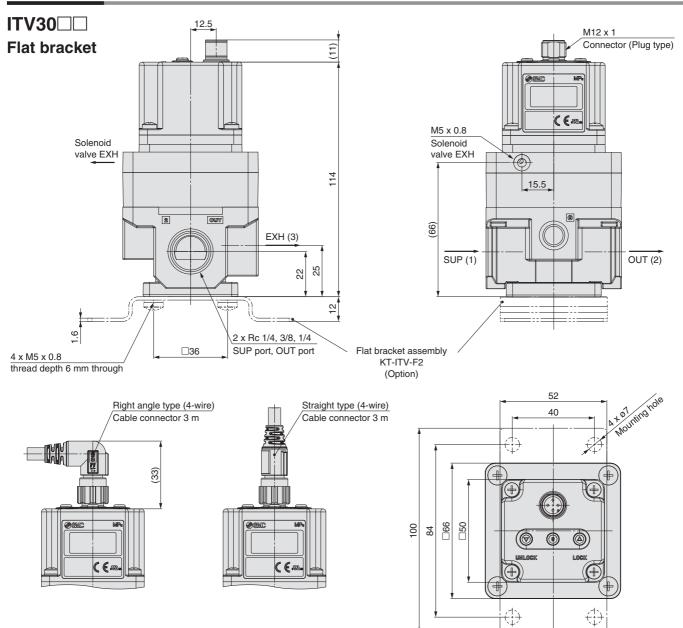

Note) Do not attempt to rotate, as the cable connector does not turn.

L-bracket

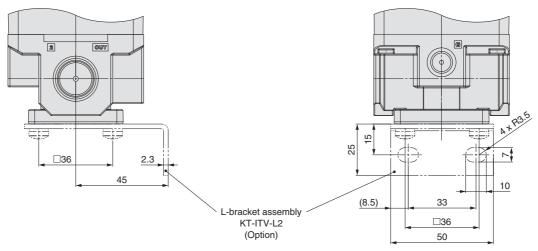


Dimensions (16 points preset input, 10 bit digital input, CC-Link, DeviceNet™, PROFIBUS DP and RS-232C)


M12 x 1 16 points preset input Power cable connection thread (Plug type) Signal cable connection thread (Plug type) Digital pressure display M5 x 0.8 Solenoid Solenoid valve valve EXH 4 EXH (3) SUP OUT 15.5 2


10 bit digital input HIROSE ELECTRIC CO., LTD. Made RP13A-12RB-13PA (71) <u>(ø</u>14.3) (Ø14.3)Digital pressure display M5 x 0.8 Solenoid Solenoid valve valve EXH 4 44 **EXH (3)** SUP OUT 22


15.5


5,

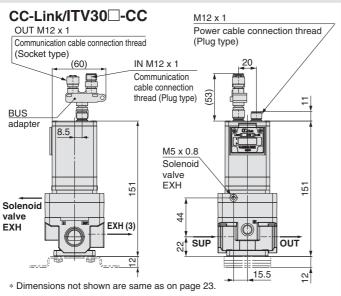


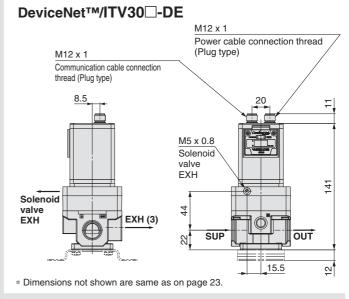


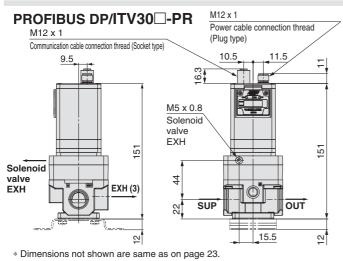

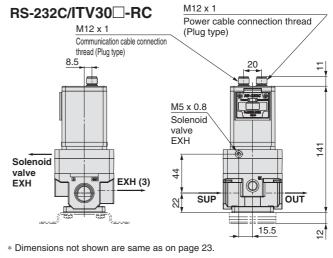

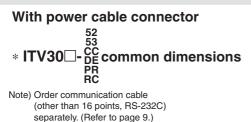

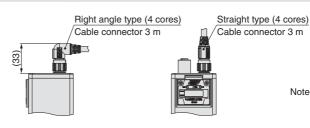

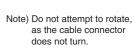




Series ITV1000/2000/3000 Made to Order Specifications 1 Please contact SMC for detailed dimensions, specifications and lead times.





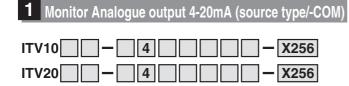


Note 1) in part number is the same model no. for the standard products

Reverse Type In compliance with input, inverse proportional pressure is displayed. ITV10 ITV20 ITV30 Rated Output pressure (MPa) This range is outside of the control (output). 0.005 MPa 100 Input signal (%F.S.)


Input/output characteristics chart

Note 1) \square in part number is the same model no. for the standard products.

Note 2) Except for preset input type and digital input type. Note 3) For communication models, consult SMC for availability.

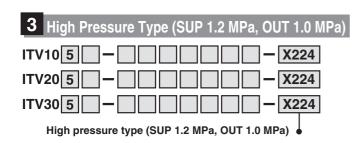

Note) For preset input type, digital input type and communication models, consult SMC for availability.

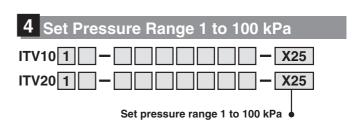


Note) For preset input type, digital input type and communication models, consult SMC for availability.

Series ITV1000/2000/3000 Made to Order Specifications 2






Please contact SMC for detailed dimensions, specifications and lead times.

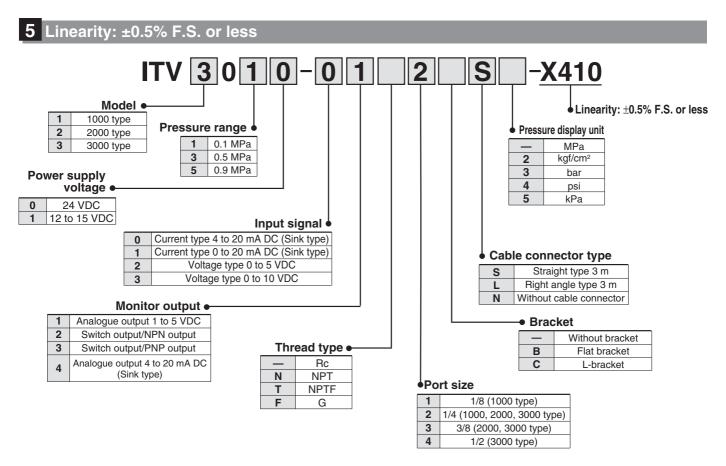

6 With Alarm Output

Alarm is output if the set pressure is not reached or maintained for 5 seconds or more.

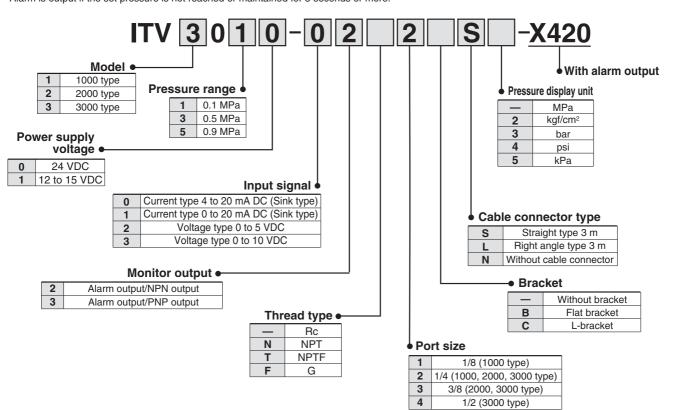


Series ITV1000/2000/3000 Made to Order Specifications 3 Please contact SMC for detailed dimensions, specifications and lead times.





High-Speed Response Time Type

Pressure response with no load is approx. 0.1 sec

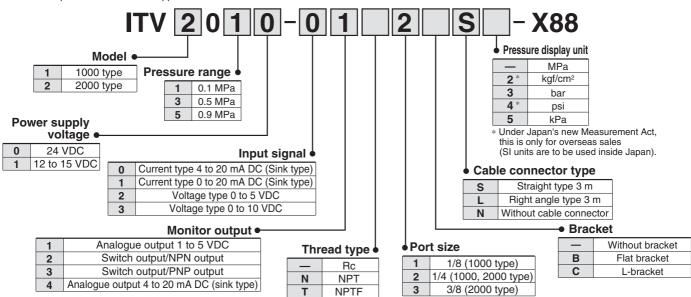


G

Manifold Specifications (Except Series ITV3000)

2 through 8 station manifold.

How to Order Manifolds

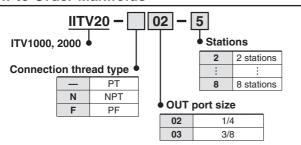

How to Order Manifold Mounted



Note 1) \square in part number is the same model no, for the standard products.

Note 2) For communication models, consult SMC for availability.

Note 3) The thread type is Rc only.

Note 4) For Series ITV1000, the port size is 1/8 only.

Note 5) For Series ITV2000, the port size is 1/4 only. Note 6) The bracket accessory can not be selected. Note 7) Not applicable to Series ITV3000


IITV20-02-31 s	et (3 station manifold base part no.)
*ITV1030-311S-X261 s	et (Electro-pneumatic regulator part no.) Note 2)
*P398020-131 s	et (Blanking plate assembly part no.)
*ITV2050-212S-X261 s	et (Electro-pneumatic regulator part no.) Note 2)
ΙΤ	

The * is the symbol for mounting. Add the * symbol at the beginning of part numbers for electro-pneumatic regulators, etc. to be mounted on the base.

Note) Refer to the table below for possible mixed combination

		<u>'</u>				
Model	ITV101□	ITV103□	ITV105□	ITV201□	ITV203□	ITV205□
ITV101□	•	_	_	•	_	_
ITV103□	_	•	•	_	•	•
ITV105□	_	•	•	_	•	•
ITV201□	•	_	_	•	_	_
ITV203□	_	•	•	_	•	•
ITV205□	_	•	•	_	•	

How to Order Manifold Assemblies

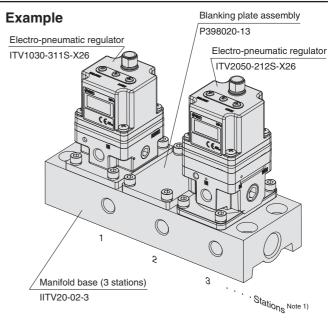

- Note 1) Electro-pneumatic regulators are counted starting from station 1 on the left side with the OUT ports in front.
- Note 2) The port size for mounted electro-pneumatic regulators is Rc 1/8 (ITV1000), Rc 1/4 (ITV2000) only.
- Note 3) When there is a large number of stations, use piping with the largest
- possible inside diameter for the supply side, such as steel piping. Note 4) The use of the straight type cable connector is recommended. To mount right angle type, be certain to check that no possible interference occurs.
- Note 5) When mounting a blanking plate and the regulator with different pressure set, please inform SMC of the order of a manifold station beside a purchase order.

Compact Vacuum Regulator


Series ITV009






How to Order



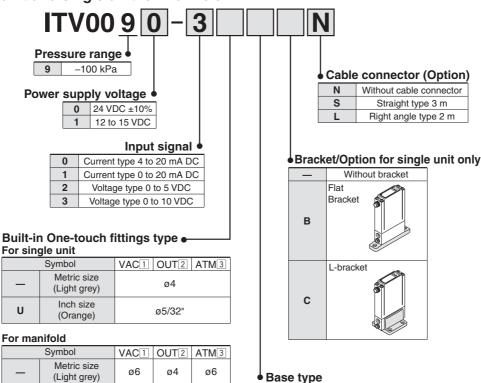

Manifold

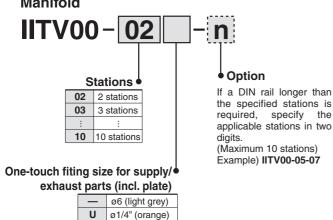

Inch size

(Orange)

ø1/4"

ø5/32'

ø1/4"

Note) A DIN rail with the length specified by the number of stations is attached to the manifold. For dimensions of the DIN rail, refer to the external dimensions.

How to Order Manifold Assembly (Example)

Indicate the part numbers of electro-pneumatic regulators and options to be mounted below the manifold part number.

Example)


Due to the common supply/exhaust feature, note that different pressure range combinations are not available.

IITV00-03......1 set (Manifold part no.)

For single unit

For manifolds

- *ITV0090-3MS-----2 sets (Vacuum regulator part no. (1, 2 stations))
- *ITV0090-3ML······1 set (Vacuum regulator part no. (3 stations))
 - Indicate part numbers in order starting from the first station on the D side.
 - → Note)Combination with having different pressure ranges is not available due to common supply/exhaust features.
 - The asterisk (*) specifies mounting. Add an asterisk (*) at the beginning of electro-pneumatic regulator part numbers to be mounted.

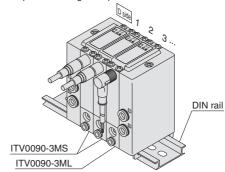



Series ITV009



Specifications

Model		ITV009□		
Minimum supply pressure		Set pressure -1 kPa		
Maximum supply pressure		-101 kPa		
Set pressure range		−1 to −100 kPa		
Maximum flow rate		2 ∉/min (ANR) (Supply pressure: –101 kPa)		
	Voltage	24 VDC ±10%, 12 to 15 VDC		
Power supply	Current consumption	Power supply voltage 24 VDC type: 0.12 A or les Power supply voltage 12 to 15 VDC type: 0.18 A or		
	Voltage type	0 to 5 VDC, 0 to 10 VDC		
Input signal	Current type	4	4 to 20 mA DC, 0 to 20 mA DC	
Input impedance	Voltage type	Approximately 10 kΩ		
input impedance	Current type		Approximately 250 Ω	
Output signal	Analogue output	1 to 5 VDC (Output impedance: Approximately 1 kΩ) Output accuracy: Within ±6% (Full span)		
Linearity		Within ±1% (Full span)		
Hysteresis		Within 0.5% (Full span)		
Repeatability		Within ±0.5% (Full span)		
Sensitivity		Within 0.2% (Full span)		
Temperature chara	cteristics	Within ±0.12% (Full span)/°C		
Operating tempera	ture range	0 to 50°C (No condensation)		
Enclosure		IP65 equivalent *		
Connection type		Built-in One-touch fittings		
Connection size	For single unit	Metric size	1, 2, 3: ø4	
		Inch size	1, 2, 3: ø5/32"	
	Manifold	Metric size	1, 3: Ø6, 2: Ø4	
		Inch size	1, 3: Ø1/4", 2: Ø5/32"	
Weight Note 1)		100 g or less (without option)		

Note 1) Indicates the weight of a single unit.

For IITV00-n

Total weight (g) Stations (n) x 100 + 130 (Weight of end block A, B assembly) + Weight (g) of DIN rail

Note 2) When there is a downstream flow consumption, pressure may become unstable depending on piping conditions.

* When using under the conditions equivalent to IP65, connect the fitting or tube to the breathing hole prior to use. (For details, refer to "Specific Product Precautions 1" on page 41)

Accessories (Option)

Bracket

Flat bracket assembly (including 2 mounting screws) P39800022



L-bracket assembly (including 2 mounting screws) P39800023



Tighting torque when assembling is 0.3 N·m.

Cable connector

Straight type M8-4DSX3MG4




Right angle type P398000-501-2




Working Principle

When the input signal rises, the air supply soloenoid valve ① turns ON. Due to this, part of the supply pressure passes through the air supply solenoid valve ① and changes to output pressure. This output pressure feeds back to the control circuit ④ via the pressure sensor ③. Here, pressure corrections continue until output pressure becomes proportional to the input signal, enabling output pressure that is proportional to the input signal.

Diagram of working principle

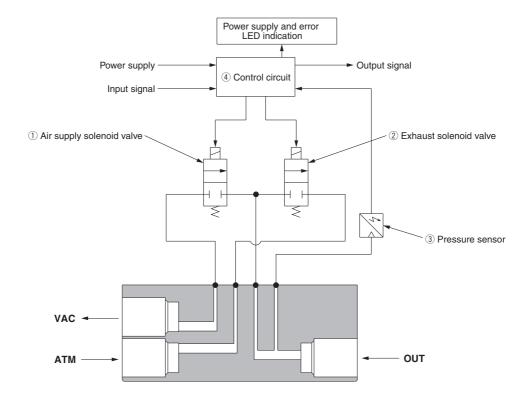


Block diagram

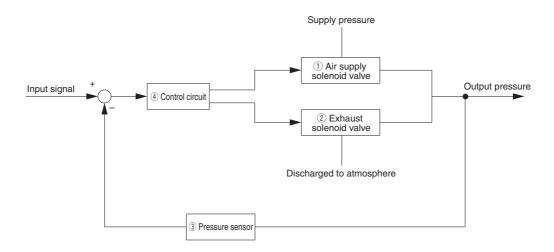

Series ITV009□

Series ITV009□

Linearity, Hyteresis

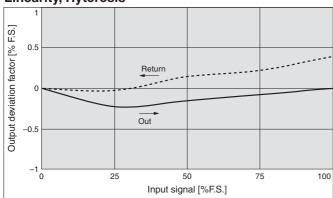


Repeatability With 50% of signal input Output deviation factor [% F.S.] 0.5 -0.5

Count


4

Pressure Characteristics

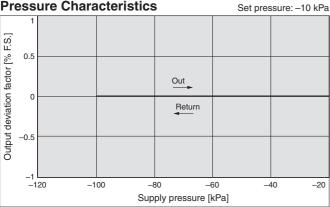


Flow Characteristics

2

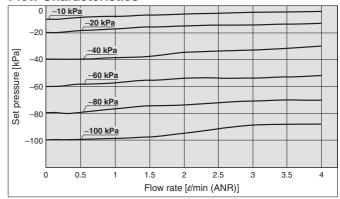

Compact Vacuum Regulator Series ITV009

Dimensions

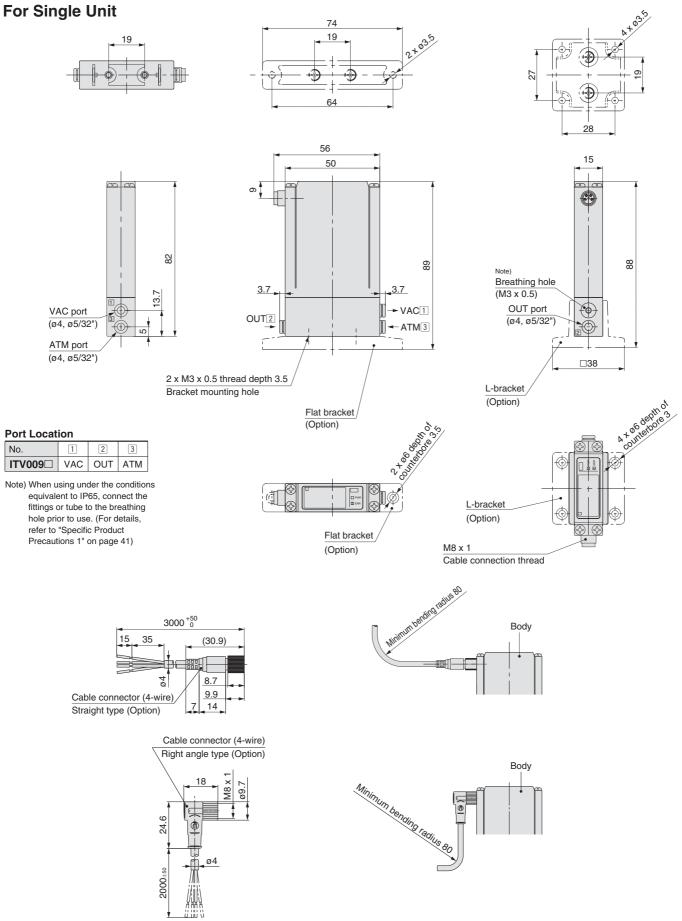



SMC


Series ITV009□


Dimensions

Single unit for manifold

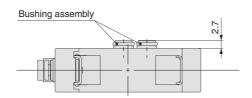


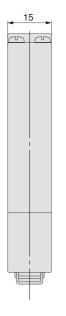

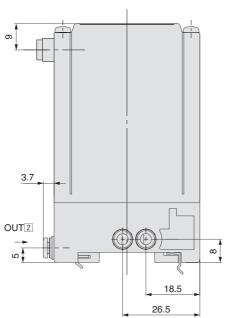

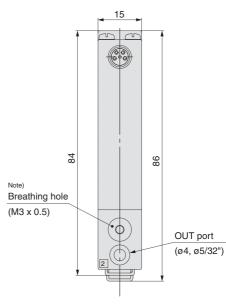

Note) When using under the conditions equivalent to IP65, connect the fittings or tube to the breathing hole prior to use. (For details, refer to "Specific Product Precautions 1" on page 41)

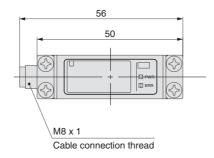


Note) For dimensions of the cable connector, refer to single unit on page 32.

Compact Vacuum Regulator Series ITV009


Dimensions


Manifold

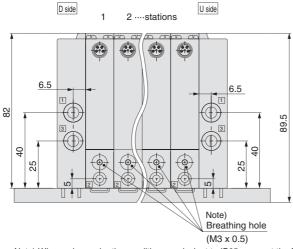

Note) When using under the conditions equivalent to IP65, connect the fittings or tubing to the breathing hole prior to use.


(For details, refer to "Specific Product Precautions 1" on page 41)

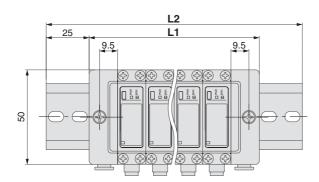

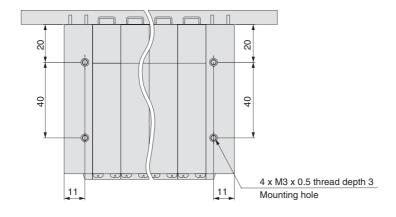

Note) For dimensions of the cable connector, refer to single unit on page 32.

									[mm]
Manifold stations n	2	3	4	5	6	7	8	9	10
L1	60	75	90	105	120	135	150	165	180
L2	110.5	123	148	160.5	173	185.5	198	223	235.5
Weight of DIN rail [g]	20	22	27	29	31	34	36	41	43

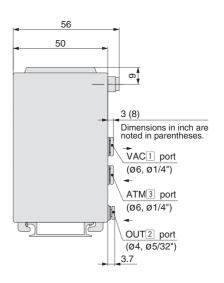

Port Location

No.	1	2	3
ITV009□	VAC	OUT	ATM

Note) Stations are counted starting from the D side.




Electronic Vacuum Regulator

Series ITV2090/2091





How to Order

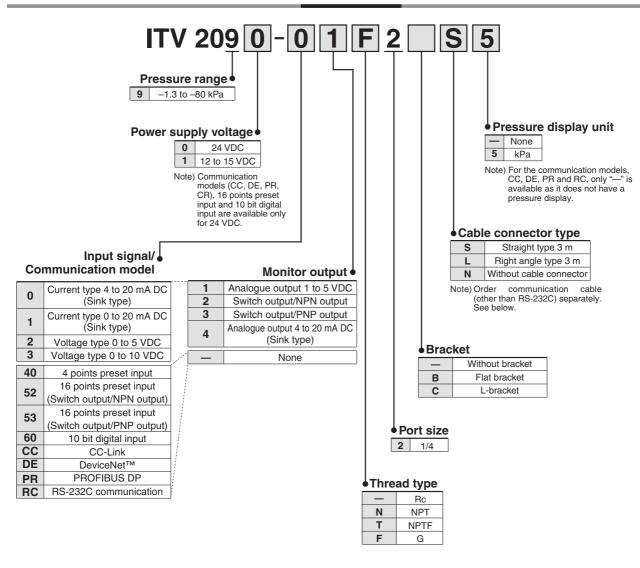

For communications cables, use the parts listed below (refer to the catalogue [M8/M12 Connector] CAT.ES100-73 for details) or order the product certified for the respective protocol (with M12 connector) separately.

or or dor and product contained for and respective protector (man in 12 continuoter) coparately.				
Application	Communication cable part number	Remarks		
CC-Link compatibility	PCA-1567720 (Socket type)	Dedicated Bus adapter supplied		
CC-LITIK COMPANDING	PCA-1567717 (Plug type)	with the product.		
DeviceNet™	PCA-1557633 (Socket type)	T-branch connector not supplied.		
compatibility	PCA-1557646 (Plug type)	1-branch connector not supplied.		
PROFIBUS DP	PCA-1557688 (Socket type)	T branch connector not cumplied		
compatibility	PCA-1557691 (Plug type)	T-branch connector not supplied.		



Electronic Vacuum Regulator Series ITV2090/2091


Standard Specifications

Stepless control of vacuum pressure in proportion to an electrical signal





Piping/Wiring Diagram

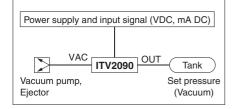

Mod	del	ITV2090	ITV2091	
	Voltage	24 VDC 10%	12 to 15 VDC	
Power supply	Current consumption	Power supply voltage 24 VDC type: 0.12 A or less Note of Power supply voltage 12 to 15 VDC type: 0.18 A or les		
Minimum supply vac	uum pressure Note 1)	Set pressur	e –13.3 kPa	
Maximum supply va	cuum pressure	-101	kPa	
Set pressure rang		−1.3 to	-80 kPa	
	Current type Note 2)	4 to 20 mA DC,	0 to 20 mA DC	
Input signal	Voltage type	0 to 5 VDC,	0 to 10 VDC	
input signal	Preset input	4 points (Negative common), 1	6 points (No common polarity)	
	Digital input	10 bit (p	parallel)	
Input impedance	Current type	250 Ω or	less Note 3)	
	Voltage type	Approxima	tely 6.5 kΩ	
	Preset input	Power supply voltage 24 VDC type: Approximately 4.7 kg. Power supply voltage 12 VDC type: Approximately 2.0 kg.		
	Digital input	Approx. 4.7 kΩ		
Output signal (Monitor output)	Analogue output	1 to 5 VDC (Output impedance: Approximately 1 kΩ) 4 to 20 mA DC (Sink type) (Load impedance: 250 Ω or less Output accuracy within ±6% (Full span)		
(Monitor output)	Switch output	NPN open collector output: Max. 30 V, 80 mA PNP open collector output: Max. 80 mA		
Linearity		Within ±1% (Full span)		
Hysteresis		Within 0.5%	(Full span)	
Repeatability		Within ±0.5%	% (Full span)	
Sensitivity		Within 0.2%	\ ' '	
Temperature characteristics		Within ±0.12%	(Full span)/C	
Output pressure	Accuracy	±2%F.S. ±1 digit		
display	Units	kPa Note 5) Minimum display: 1		
Ambient and fluid temperature		0 to 50°C (No condensation)		
Enclosure		IP65		
Weight Note 7)		350 g		

- Note 1) The minimum supply vacuum pressure should be 13.3 kPa less than the maximum vacuum pressure setting value.
- Note 2) 4 to 20 mA DC is not possible with the 2-wire type. Power supply voltage (24 VDC or 12 to 15 VDC) is required.
- Note 3) Value for the state with no over current circuit included. If an allowance is provided for an over current circuit, the input impedance varies depending on the input power supply. This is 350 Ω or less for an input current of 20 mA DC.
- Note 4) When measuring ITV analogue output from 1 to 5 VDC, if the load impedance is less than 100 k Ω , the analogue output monitor accuracy of within $\pm 6\%$ (full span) may not be available. The product with the accuracy of within ±6% is supplied upon your request. Output pressure remains unaffected.
- Note 5) Please contact SMC regarding indication with other units of pressure.
- Note 6) For communication models, the maximum current consumption is 0.16 A or less.
- Note 7) For communication models, add roughly 80 g to the weight (100 g for the PROFIBUS DP).

Communication Specifications (CC, DE, PR, RC)

Model		ITV□0□0-DE□□	ITV□0□0-PR□□	ITV□0□0-RC□□
Protocol	CC-Link	DeviceNet™	PROFIBUS DP	RS-232C
Version Note 1)	Ver 1.10	Volume 1 (Edition 3.8), Volume 3 (edition 1.5)	DP-V0	
Communication speed	156 k/625 k 2.5 M/5 M/10 M bps	125 k/250 k/500 k bps	9.6 k/19.2 k/45.45 k 93.75 k/187.5 k/500 k 1.5 M/3 M/6 M/12 M bps	9.6 kbps
Configulation file Note 2)	_	EDS	GSD	_
I/O occupation area (input/output data)	4 word/4 word, 32 bit/32 bit (per station, remote device station)	16 bit/16 bit	16 bit/16 bit	_
Communication data resolution	12 bit (4096 resolution)	12 bit (4096 resolution)	12 bit (4096 resolution)	10 bit (1024 resolution)
Fail safe	HOLD Note 3)/CLEAR (Switch setting)	HOLD/CLEAR (Switch setting)	CLEAR	HOLD
Terminating resistor		_	Built into the product (Switch setting)	_


Note 1) Note that version information is subject to change.

Note 2) Configulation files can be downloaded from the SMC's website: http://www.smcworld.com Note 3) The output HOLD value when a CC-Link communications error occurs can be set based on the bit area data.



Series ITV209

Working Principle

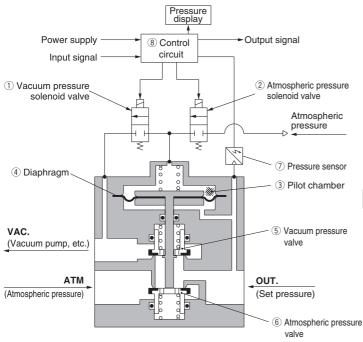


Working Principle

When the input signal increases, the vacuum pressure solenoid valve 1) turns ON, and the atmospheric pressure solenoid valve 2 turns OFF. Because of this, VAC. and the pilot chamber 3 are connected, the pressure in the pilot chamber ③ becomes negative and acts on the top of the diaphragm ④.


As a result, the vacuum pressure valve (§) which is linked to the diaphragm (4) opens, VAC. and OUT. are connected, and the set pressure becomes negative.

This negative pressure feeds back to the control circuit ® via the pressure sensor 7. Then, a correct operation works until a vacuum pressure proportional to the input signal is reached, and a vacuum pressure is obtained which is always proportional to the input signal.

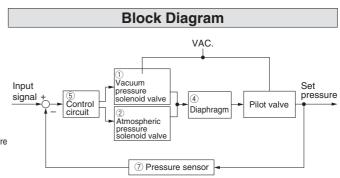


Series ITV209□


Linearity

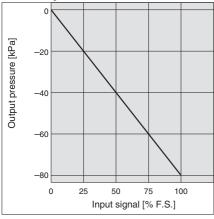


Hysteresis

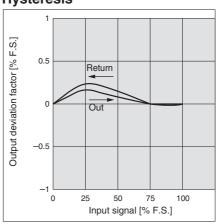


Repeatability

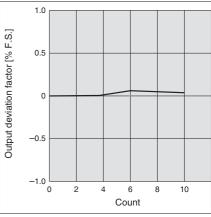

Pressure

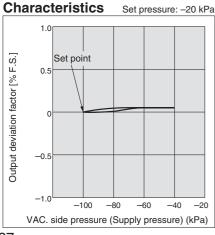

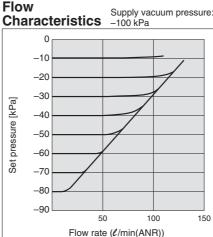

Flow characteristics measurement conditions


- Exhaust flow rate of the vacuum pump used for measurement: 500 ℓ/min (ANR)
- Inlet vacuum pressure: -100 kPa (When outlet flow rate is 0 e/min (ANR))
- Maximum flow rate: 132 *l*/min (ANR) (With inlet vacuum pressure at -39 kPa)




Dimensions

ITV209□


Flat bracket

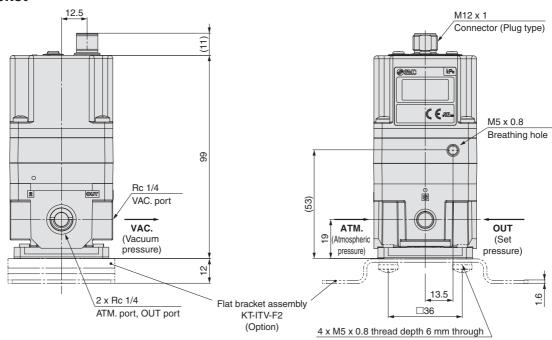

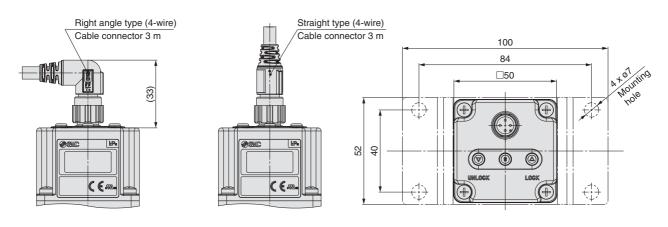

Note) Do not attempt to rotate the cable connector, as it does not turn.


L-bracket

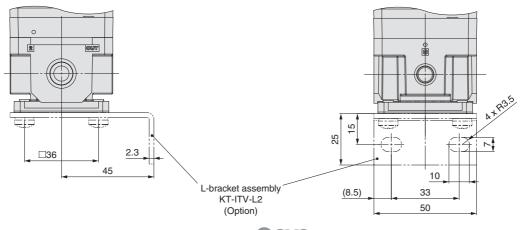


Series ITV209

Dimensions (16 points preset input, 10 bit digital input, CC-Link, DeviceNet™, PROFIBUS DP and RS-232C)

16 points preset input M12 x 1 Power cable connection thread (Plug type) Signal cable connection 8.5 thread (Plug type) Digital pressure display M5 x 0.8 Air introduction port introduction port VAC 13.5 7,

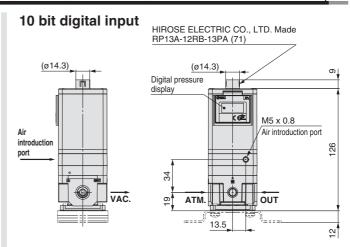


CC-Link/ITV2090-CC OUT M12 x 1 (60)

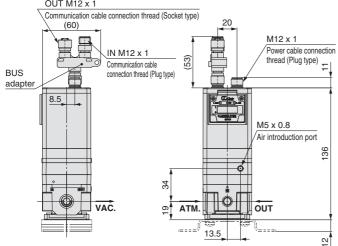


* Dimensions not shown are same as on page 38.

DeviceNet™/ITV2090-DE

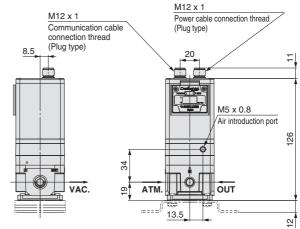

* Dimensions not shown are same as on page 38.


M12 x 1 PROFIBUS DP/ITV2090-PR Power cable connection M12 x 1 thread (Plug type) Communication cable connection thread (Soket type) 10.5 M5 x 0.8 Air introduction port 136 34 VAC. ATM. 13.5 42, * Dimensions not shown are same as on page 38.

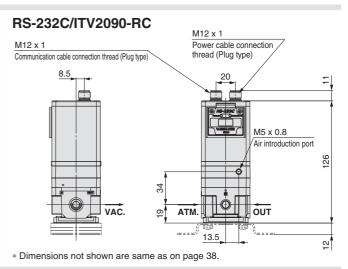


With power cable connector

* ITV2090-CC common dimensions

Note) Order communication cable (other than 16 points, RS-232C) separately. (Refer to page 19.)

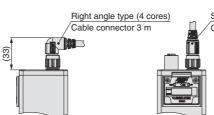

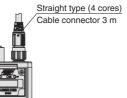

Note) Do not attempt to rotate the cable connector, as it does not turn.



Accessories (Option)/Part No.

[Bracket]

Description	Part No.
Flat bracket assembly (including mounting screws)	P398020-600
L-bracket assembly (including mounting screws)	P398020-601

[Cable connector]

Applicable model	Descrip	otion	Part No.
Current type Voltage type	0-11	Straight type 3 m	P398020-500-3
4 points preset input	Cable connector (4 cores)	Right angle type 3 m	P398020-501-3
	Power cable (4 cores)	Straight type 3 m	P398020-500-3
16 nainta nyaast innut	Power cable (4 cores)	Right angle type 3 m	P398020-501-3
16 points preset input	Cianal cable (F cares)	Straight type 3 m	P398020-502-3
	Signal cable (5 cores)	Right angle type 3 m	P398020-503-3
10 bit digital input	Cable connector (13 cores)	Straight type 3 m	INI-398-0-59
CC-Link PROFIBUS DP	Power cable (4 cores)	Straight type 3 m	P398020-500-3
DeviceNet [™]	rower cable (4 cores)	Right angle type 3 m	P398020-501-3
	Dower coble (4 cores)	Straight type 3 m	P398020-500-3
	Power cable (4 cores)	Right angle type 3 m	P398020-501-3
RS-232C	Communication cables	Straight type 3 m	P398020-502-3
	connector (5 cores)	Right angle type 3 m	P398020-503-3


Note 1) For the 10-bit digital type, there is no right angle type cable connector.

Note 2) Even when "with cable connector" is selected the communication cable is not included in the communication model (CC, DE, PR). Please order separately.

[Bus adapter]

Applicable model	Description	Part No.
CC-Link	Bus adapter (Bus adapter supplied with the product.)	EX9-ACY00-MJ

Dimensions

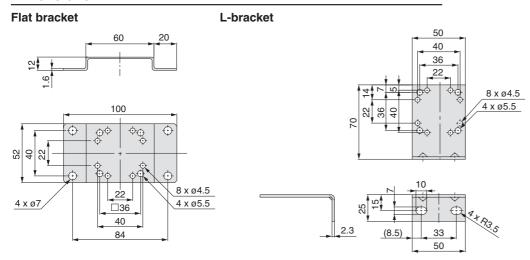

Model	Bracket tightening torque
ITV1000	0.76 ± 0.05N·m
ITV2000/3000	1.5 ± 0.05N⋅m



Be sure to read before handling. Refer to back page for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Common Precautions.

Series ITV0000/009 ☐ Precautions

Air Supply

- 1. Install an air filter near this product on the supply side. Select a filtration degree of 5 μ m or less.
- Compressed air containing large amounts of drainage can cause malfunction of this product and other pneumatic equipment. As a countermeasure, install an aftercooler, air dryer or Drain Catch, etc.
- If large amounts of carbon dust are generated by the compressor, it can accumulate inside this product and cause malfunction.


For details on the above compressed air quality, refer to SMC's "Air Preparation Systems".


Wiring

⚠ Caution


Connect the cable to the connector on the body with the wiring arranged as shown below. Proceed carefully, as incorrect wiring can cause damage.

Further, use DC power with sufficient capacity and a low ripple.

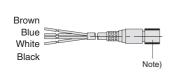

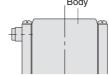



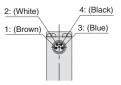

Note) A right angle type cable is also available. The entry direction for the right angle type connector is to downwards (SUP port side). Never turn the connector as it

is not designed to turn. Using force to turn the connector will damage the connector coupling.

Wiring Diagrams

Current signal type




Vs: Power Supply 24 VDC ±10% 12 to 15 VDC A : Input signals 4 to 20 mA DC 0 to 20 mA DC

Voltage signal type



Vs : Power Supply 24 VDC ±10% 12 to 15 VDC Vin: Input signals 0 to 5 VDC 0 to 10 VDC


Monitor output wiring diagram

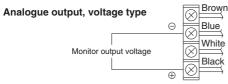

Handling

⚠ Caution

- Do not use a lubricator on the supply side of this product, as this can cause malfunction. When lubrication of terminal equipment is necessary, connect a lubricator on the output side of this equipment.
- 2. If electric power is shut off while pressure is being applied, pressure will be retained on the output side.
 - However, this output pressure is held only temporarily and is not guaranteed. If exhausting of this pressure is desired, shut off the power after reducing the set pressure, and discharge the air using a residual pressure exhaust valve, etc.
- If power to this product is cut off due to a power failure, etc. when it is in a controlled state, output pressure will be retained temporarily. Handle carefully when operating with output pressure released to the atmosphere, as air will continue to flow out.
- If supply pressure to this product is interrupted while the power is still on, the internal solenoid valve will continue to operate and a humming noise may be generated.
 - Since the life of the product may be shortened, shut off the power supply also when supply pressure is shut off.
- This product is adjusted for each specification at the time of shipment from the factory. Avoid careless disassembly or removal of parts, as this can lead to malfunction.
- The optional cable connector is a 4 wire type. When the monitor output (output or switch output) is not being used, keep it from touching the other wires as this can cause malfunction.
- Please note that the right angle cable does not rotate and is limited to only one entry direction.
- 8. Take the following steps to avoid malfunction due to noise.
 - 1) Remove power supply noise during operation by installing a line filter, etc. in the AC power line.
 - 2) For avoiding the influence of noise or static electricity, install this product and its wiring as far as possible from strong electric fields such as those of motors and power lines, etc.
 - 3) Be sure to implement protective measures against load surge for induction loads (solenoid valves, relays, etc.).
- 9. The product characteristics are confined to the static state. When air is consumed on the output side, and especially used in the system with large leakage, pressure cannot approach the set pressure and the service life is drastically shortened with a humming noise of the solenoid valve.
- For details on the handling of this product, refer to the instruction manual which is included with the product.
- 11. In locations where the body is exposed to water, dust, etc., there is a possibility that moisture or dust could enter the body through the breathing hole. Mount a fitting and tube (M-3AU-3 fitting

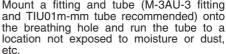



12. If this product will be used in a sealed environment, such as inside an inspection box, a ventilation fan should be installed to ensure adequate ventilation as this product can generate heat in some operating conditions.

When the power is turned on, a noise may be generated as a means of checking the operating condition of the solenoid valve. This noise is normal and does not indicate a fault.





Be sure to read before handling. Refer to back page for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Common Precautions.

Series ITV1000/2000/3000/209 ☐ Precautions

Piping


Marning

1. Screw piping together with the recommended proper torque while holding the side that has female threads.

Looseness or faulty sealing will occur if tightening torque is insufficient, while thread damage will result if the torque is excessive. Furthermore, if the side with the female threads is not held while tightening, excessive force will be applied directly to piping brackets, etc. causing damage or other problems.


Recommended proper torque: N · m

Connection thread	1/8	1/4	3/8	1/2
Torque	3 to 5	8 to 12	15 to 20	20 to 25

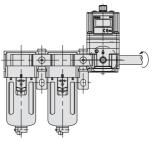

2. Do not allow twisting or bending moment to be applied other than the weight of the equipment itself.

Provide separate support for external piping, as damage may otherwise occur.

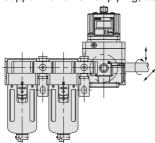

 Since excessive moment loads and the propagation of vibrations, etc. can easily result from inflexible piping made of materials such as steel, avoid these problems by using flexible tubing for intermediate connections.


1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

2. Wrapping of pipe tape

When screwing together pipes and fittings, etc., be certain that chips from the pipe threads and sealing material do not get inside the piping.

Also, when pipe tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.

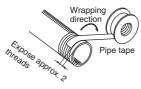

Operating Environment

⚠ Warning

- 1. Do not operate in locations having an atmosphere of corrosive gases, chemicals, sea water, or where there will be contact with the same.
- 2. Do not operate in locations where vibration or impact occurs.

⚠ Caution

- In locations where the body is exposed to water, steam, dust, etc., there is a possibility that moisture or dust could enter the body through the EXH (solenoid) ports, thereby causing problems.
- 2. To overcome this, simply install tubing to each port, using the fittings, and extend the tubing so that the other end is at a location where no water splash, etc. occurs. Make sure not to bend, or block the I.D. of the tubing as this will have a detrimental affect on the pressure control.
- Do not operate in locations where vibration or impact occurs.
- 4. In locations which receive direct sunlight, provide a protective cover, etc.
- 5. In locations near heat sources, block off any radiated heat.
- In locations where there is contact with spatter from water, oil or solder etc., implement suitable protective measures.

Air Supply

- 1. Employ suitable protective measures in locations where there is contact with water droplets, oil or welding spatter, etc.
- 2. Consult with SMC when used in power plants, or if instrumentation related.

⚠ Caution

- 1. Install an air filter near this product on the supply side. Select a filtration degree of 5 m or less.
- 2. Compressed air containing large amounts of drainage can cause malfunction of this product and other pneumatic equipment. As a countermeasure, install an aftercooler, air dryer or Drain Catch, etc.
- If large amounts of carbon dust are generated by the compressor, it can accumulate inside this product and cause malfunction. For details on the above compressed air quality, refer to SMC's "Air Preparation Systems".





Be sure to read before handling. Refer to back page for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Common Precautions.

Series ITV1000/2000/3000/209 ☐ Precautions

Handling

⚠ Caution

- Do not use a lubricator on the supply side of this product, as this can cause malfunction. When lubrication of terminal equipment is necessary, connect a lubricator on the output side of this equipment.
- 2. If electric power is shut off while pressure is being applied, pressure will be retained on the output side.
 - However, this output pressure is held only temporarily and is not guaranteed. If exhausting of this pressure is desired, shut off the power after reducing the set pressure, and discharge the air using a residual pressure exhaust valve, etc.
- 3. If power to this product is cut off due to a power failure, etc. when it is in a controlled state, output pressure will be retained temporarily. Handle carefully when operating with output pressure released to the atmosphere, as air will continue to flow out.
- 4. If supply pressure to this product is interrupted while the power is still on, the internal solenoid valve will continue to operate and a humming noise may be generated. Since the life of the product may be shortened, shut off the power supply also when supply pressure is shut off.
- 5. In this product, the output side pressure cannot be completely relieved within the range of 0.005 MPa or less. If it is desired to reduce the pressure completely to 0 MPa, install a 3 way valve or other device on the output side to exhaust the pressure.
- This product is adjusted for each specification at the time of shipment from the factory. Avoid careless disassembly or removal of parts, as this can lead to malfunction.
- 7. The optional cable connector is a 4-wire type. When the monitor output (analogue output or switch output) is not being used, keep it from touching the other wires as this can cause malfunction.
- 8. Please note that the right angle cable does not rotate and is limited to only one entry direction.
- 9. Take the following steps to avoid malfunction due to noise.
 - Remove power supply noise during operation by installing a line filter, etc. in the AC power line.
 - 2) For avoiding the influence of noise or static electricity, install this product and its wiring as far as possible from strong electric fields such as those of motors and power lines, etc.
 - 3) Be sure to implement protective measures against load surge for induction loads (solenoid valves, relays, etc.).

Handling

⚠ Caution

- 10. Due to the large volume of the output side, a loud exhaust noise will be produced when being used for the purpose of a relief function. Therefore, install a silencer (SMC Series AN200 or AN400) on the exhaust port (EXH port). The port sizes are Rc 1/8, Rc 1/4 and Rc 1/2.
- 11. Specifications on page 10 is in case of static environment. Pressure may fluctuate when air is consumed at the output side.
- 12. For details on the handling of this product, refer to the instruction manual which is included with the product.

Design and Selection

∧Caution


- 1. The direct-current power supply to combine should be UL authorized power supply.
- (1) Limited voltage current circuit in accordance with UL 508. A circuit in which power is supplied by the secondary coil of a transformer that meets the following conditions.
 - Maximum voltage (with no load):
 30 Vrms (42.4 V peak) or less
 - Maximum current:
 - (1) 8 A or less (including when short circuited)
 - (2) limited by circuit protector (such as fuse) with the following ratings.

No load voltage (V peak)	Max. current rating
0 to 20 [V]	5.0
Al 00 t- 00 D/I	100
Above 20 to 30 [V]	Peak voltage

- (2) A circuit using max. 30 Vrms or less (42.4 V peak), which is powered by UL1310 or UL1585 compatible Class-2 power supply.
- 2. Operate these products only within the specified voltage.

Using voltages beyond the specified levels could cause faults or malfunctions.

3. Use 0 V as the baseline for the power supplied to the unit for output, control and input.

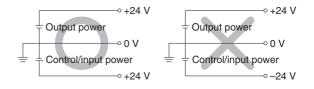



43






Be sure to read before handling. Refer to back page for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Common Precautions.


Series ITV1000/2000/3000/209 ☐ Precautions

Wiring

A Caution

Connect the cable to the connector on the body with the wiring arranged as shown below. Proceed carefully, as incorrect wiring can cause damage. Further, use DC power with sufficient capacity and a low ripple.

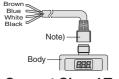

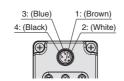



Current Signal Type Voltage Signal Type


			Power supply
	2	White	Input signal
ĺ	3	Blue	GND (COMMON)
	4	Black	Monitor output
ì			

Preset Input Type

1	Brown	Power supply					
2	White	Input signal 1					
3	Blue	GND (COMMON)					
4	Black	Input signal 2					

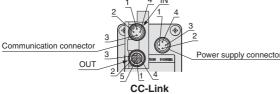

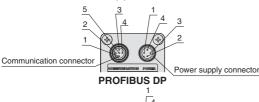

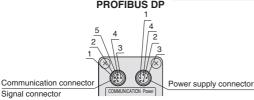

DeviceNet™, RS-232C, 16 points preset

	IN/	IN/OUT communication connector								
Pin No.	CC-Link	DeviceNet™	PROFIBUS DP	RS-232C	16 points preset					
1	SLD [-]	DRAIN [-]	No connection	No connection	Input signal 1 [Brown]					
2	DB [White]	V+ [Red]	RxD/TxD-N [Green]	TxD [White]	Input signal 2 [White]					
3	DG [Yellow]	V- [Black]	No connection	RxD [Blue]	Input signal 3 [Blue]					
4	DA [Blue]	CAN_H [White]	RxD/TxD-P [Red]	GND [Black]	Input signal 4 [Black]					
5	No connection	CAN_L [Blue]	No connection	No connection	Common [Grey]					

			Power supply connector									
F	Pin No.	CC-Link	DeviceNet™	PROFIBUS DP	RS-232C	16 points preset						
1	[Brown]	Vcc	Vcc	Vcc	Vcc	Vcc						
2	[White]	FG	Can not connect	FG	No connection	No connection						
3	B[Blue]	GND	GND	GND	GND	GND						
4	[Black]	No connection	Can not connect	No connection	FG	Monitor output						

Note 1) The indicated wire colours are when a cable connector made by SMC is used.

Note 2) The cable is also available in a right angle type. (Communication cable: straight type only)

A right angle type connector is attached facing left (towards the SUP port). On communication models, the connector faces backwards (towards the EXH port). Do not attempt to rotate, as the connector does not turn.

■ Trademark Information


DeviceNet™ is a trademark of ODVA.

Knock-down connectors * Order separately.

Application		Link atibility	DeviceNet TM compatibility			PROFIBUS DP compatibility			
Part number	Plug Socket		Plug PCA-	Socket PCA-	Terminal Plug PCA- 1557675	Plug PCA-	Socket PCA-	Terminal Plug PCA-	

Wiring diagram


Current signal type

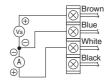


Vs : Power supply 24 VDC 12 to 15 VDC A : Input signal 4 to 20 mA D

nput signal 4 to 20 mA DC 0 to 20 mA DC

4 points preset input type

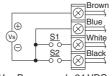


Vs : Power supply 24 VDC 12 to 15 VDC (Negative common)

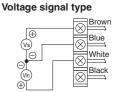

Vs : Power supply 24 VDC 12 to 15 VDC Vin: Input signal 0 to 5 VDC

0 to 10 VDC

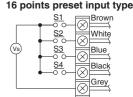

Vs : Power supply 24 VDC (No polarity)

One of the preset pressures P1 through P4 is selected by the ON/OFF combination of S1 and S2.

S1	OFF	ON	OFF	ON	OFF	
S2	OFF	OFF	ON	ON	OFF	
S3	OFF	OFF	OFF	OFF	ON	
S4	OFF	OFF	OFF	OFF	OFF	
Preset pressure	P01	P02	P03	P04	P05	

ON	OFF	ON
OFF	ON	ON
 ON	ON	ON
ON	ON	ON
P14	P15	P16

- * For safety reasons, it is recommended that one of the preset pressures be set to 0 MPa.
- * Preset pressures are set based on the minimum unit for output display.

MPa	kgf/cm ²	bar	psi	kPa
0.001	0.01	0.01	0.1	1

 \cdot Note that this is 1 psi for 130 psi types.

10 bit digital input type

10 bit digital input type					
Wire Colour	Signal name				
Pink-Black 2	Power supply (24 VDC)				
Green-Black 2	Power supply (GND)				
Blue	Signal Common (No Polarity)				
Blue-Black 2	MSB 10 bit				
Grey-Black 1	9 bit				
Orange-Black 1	8 bit				
Green-Black 1	7 bit				
Pink-Black 1	6 bit				
Blue-Black 1	5 bit				
Grey	4 bit				
Orange	3 bit				
Green	2 bit				
Pink	LSB 1 bit				

Note) The wire colour is shown for when an option cable is used.




Be sure to read before handling. Refer to back page for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Common Precautions.

Series ITV1000/2000/3000/209 ☐ Precautions


Wiring

Monitor output wiring diagram


Analogue output: Voltage type

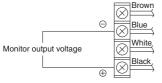


Analogue output: Current type (Sink type)

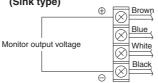

Switch output: NPN type

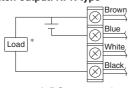



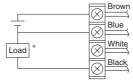

*When 80 mA DC or more is applied, detecting device for overcurrentstarts activating and then emits an error signal. (Error number "5")

Set Pressure Range

The set pressure range, by unit of standard measured pressure, is shown in the table below.

Set pressure range, by unit of standard measured pressure

Unit					Set	press	ure ra	nge		
Offic	IT۱	/□0	1 🗆	IT۷	′ □0	3□	ITV	′ □0)5□	ITV209□
MPa	0.005	to	0.1	0.005	to	0.5	0.005	to	0.9	_
kgf/cm ²	0.05	to	1	0.05	to	5	0.05	to	9	_
bar	0.05	to	1	0.05	to	5	0.05	to	9	_
psi	0.7	to	15	0.7	to	70	0.7	to	130	_
kPa	5	to	100	5	to	500	5	to	900	−1.3 to −80

CE Marking

• Series ITV0000

Model	Ferrite core necessity	Recommended power supply cable
ITV0000-□□-Q	Unnecessary	M8-4DSX3MG4 (Straight type) P398000-501-2 (Right angle type)

Note) Recommended power supply cable length is 3 m. (P398000-501-2 is 2 m.) If any other length is desired, please consult with SMC.

• Series ITV1000/2000/3000

Model	Ferrite core necessity		Recommended power supply cable
ITV		_	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)
ITV□□-52□		Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)
ITV□□-53□		Signal	P398020-502-3 (Straight type) P398020-503-3 (Right angle type)
ITV□□-60□		_	INI-398-0-59 (Straight type)
ITV		Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)
Note 2) Note 3)		Communication	PCA-1567720 (Socket type) PCA-1567717 (Plug type)
ITV -DE	Unnecessary	Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)
Note 2) Note 4)		Communication	PCA-1557633 (Socket type) PCA-1557646 (Plug type)
ITVPR		Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)
Note 2) Note 4)		Communication	PCA-1557688 (Socket type) PCA-1557691 (Plug type)
ITV□□-RC□		Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)
II VUU-NCU		Communication	P398020-502-3 (Straight type) P398020-503-3 (Right angle type)

- Note 1) Recommended power supply cable length is 3 m. If any other length is desired, please consult with SMC.
- Note 2) Even when the "with cable connector" type is selected, the communication connector is not included. Refer to the catalogue [M8/M12 Connector] for the details of the communication cable.
- Note 3) For CC-Link compatible products, a dedicated Bus adapter is included with the product.
- Note 4) For DeviceNet™ compatible products, and PROFIBUS DP compatible products, a T-branch connector is not included with the product.





Be sure to read before handling. Refer to back page for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Common Precautions.

Series ITV009□/209□ Precautions

Handling

⚠Caution

- Connect the vacuum pump to the port, which is labelled "VAC".
- 2. Pressure adjustment changes from "atmospheric pressure to vacuum pressure" when the input signal is increased, and from "vacuum pressure to atmospheric pressure" when the input signal is decreased.
- 3. When adjusting the vacuum pressure, be careful not to block the atmospheric pressure inlet port labelled "ATM".
- 4. Since this product is designed exclusively for use with negative pressure, be careful not to apply positive pressure in error.
- 5. In cases where the vacuum pump being used has a relatively small capacity, or the piping has a small inside diameter, etc., large variations in the set pressure (the range of pressure variation when changing from no flow to flow state) may appear. In this situation, the vacuum pump or the piping, etc. should be changed. In cases where it is not practical to change the vacuum pump, install a capacity tank (volume depending on the operating conditions) on the VAC side.
- 6. The vacuum pressure response time after a change in the input signal is influenced by the internal volume on the setting side (including piping). Since the capacity of the vacuum pump also influences the response time, give careful consideration to these points before operation.
- 7. If the electric power is shut off when in a control state, the pressure on the setting side will go into a holding condition. However, this setting side pressure will be held only temporarily and is not guaranteed. In addition, when atmospheric pressure is desired, shut off the power after reducing the set pressure, and then introduce atmospheric pressure by using a vacuum release valve, etc.
- 8. If the power for this product is cut off by a power failure, etc. when it is in a controlled state, the setting side pressure will be held temporarily. Further, if operated without sealing the setting side so that atmospheric air is sucked in, handle with care as air will continue to be sucked in.

- 9. If the VAC side pressure to this product is interrupted while the power is still on, the internal solenoid valve will continue to operate and may cause a humming noise. Since this may shorten the life of the product, be sure to shut off the power when the VAC side pressure is shut off.
- 10. The setting side pressure cannot be completely released from this product in the range below -1.3 kPa. In cases where the pressure needs to be reduced completely to 0 kPa, install a 3 port valve, etc. on the setting side to discharge the residual pressure.
- 11. This product is adjusted for each specification at the factory before shipment. Avoid careless disassembly or removal of parts, as this can cause failure.
- 12. The optional cable connector is a 4-wire type. When the monitor output (analogue output, switch output) is not being used, keep it from touching the other wires, as this can cause malfunction.
- 13. Use caution that the right angle cable does not rotate and is limited to only one entry direction.
- 14. Take the following steps to avoid malfunction due to noise.
 - 1) Eliminate power supply noise during operation by installing a line filter, etc. in the AC power line.
 - 2) For avoiding the influence of noise or static electricity, install this product and its wiring as far as possible from strong electric fields such as those of motors and power lines, etc.
 - 3) Make sure to take protective measures against load surge for an induction load (solenoid valves, relays, etc.).
- 15. Refer to the instruction manual included with the product for details on its handling.



⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

Caution indicates a hazard with a low level of risk which if not avoided could result in minor or mode

which, if not avoided, could result in minor or moderate injury

njury.

Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious

injury.

⚠ Danger : Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

*1) ISO 4414: Pneumatic fluid power – General rules relating to systems. ISO 4413: Hydraulic fluid power – General rules relating to systems. IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

⚠ Warning

 The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3.Do not service or attempt to remove product and machinery/equipment until safety is confirmed.
 - The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.
 - Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
 - An application which could have negative effects on people, property, or animals requiring special safety analysis.
 - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, wichever is first.*2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
 - *2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

A Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

∧ Caution

 $\ensuremath{\mathsf{SMC}}$ products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Be sure to read "Handling Precautions for SMC Products" (M-E03-3) before using.

SMC Corporation (Europe)

Austria Belgium Bulgaria Croatia Czech Republic Denmark Estonia Finland France Germany Greece Hungary Ireland	☎ +43 (0)2262622800 ☎ +32 (0)33551464 ☎ +359 (0)2807670 ☎ +385 (0)13707288 ☎ +420 541424611 ☎ +45 70252900 ☎ +372 6510370 ☎ +358 207513513 ☎ +33 (0)164761000 ☎ +49 (0)61034020 ☎ +30 210 2717265 ☎ +36 23511390 ☎ +353 (0)14039000 ☎ +39 0792711	www.smc.at www.smcpneumatics.be www.smc.bg www.smc.hr www.smc.cz www.smcdk.com www.smcpneumatics.ee www.smc.fi www.smc.france.fr www.smc.de www.smc.hellas.gr www.smc.hellas.gr	office@smc.at info@smcpneumatics.be office@smc.bg office@smc.hr office@smc.cz smc@smcdk.com smc@smcpneumatics.ee smcfi@smc.fi info@smc-france.fr info@smc.de sales@smchellas.gr office@smc.hu sales@smcpneumatics.ie mailbov@smcitalia.it	Lithuania Netherlands Norway Poland Portugal Romania Russia Slovakia Slovenia Spain Sweden Switzerland Turkey IIK	### 370 5 2308118 34 370 5 2308118 35 370 5 2308118 36 370 5 23081888 36 47 67129020 36 48 222119600 37 38 1226166570 37 38 127185445 37 38 127185445 37 38 127185445 37 38 127185445 37 38 127185445 37 38 127185445 37 38 127185445 38 421 4210 38 42 421 4210 38 42 421 4210 38 42 421 4210 38 42 421 421 421 421 421 421 421 421 421	www.smclt.lt www.smcpneumatics.nl www.smc-norge.no www.smc.pl www.smc.eu www.smc-pneumatik.ru www.smc.sk www.smc.si www.smc.eu www.smc.eu www.smc.nu www.smc.ch	info@smcl.lt info@smcpneumatics.nl post@smc-norge.no office@smc.pl postpt@smc.smces.es smcromania@smcromania.ro info@smc-pneumatik.ru office@smc.sk office@smc.si post@smc.smces.es post@smc.smces.es post@smc.nu info@smc.ch
Italy Latvia	☎+39 0292711 ☎+371 67817700	www.smcitalia.it www.smclv.lv	mailbox@smcitalia.it info@smclv.lv	UK	* +44 (0)845 121 5122	www.smcpneumatics.co.uk	sales@smcpneumatics.co.uk