

Electric Actuator




Guide Rod Slider

Step Motor (Servo/24 VDC)


Low-profile/Flat **Height 48 mm**

Profile reduced by side mounting of motor

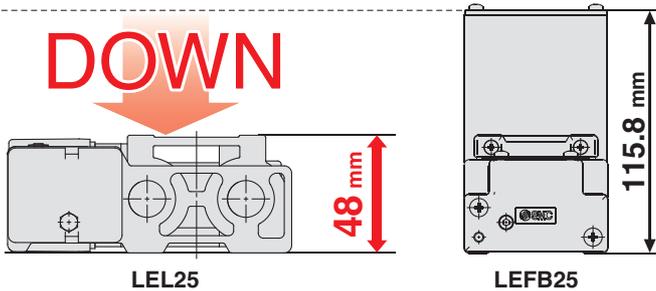


Max. stroke: 1000 mm
Transfer speed: 1000 mm/s

No interference with motor, even with large workpieces!

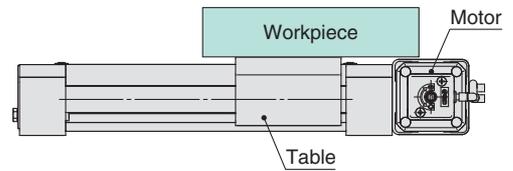

Belt drive
With belt cover

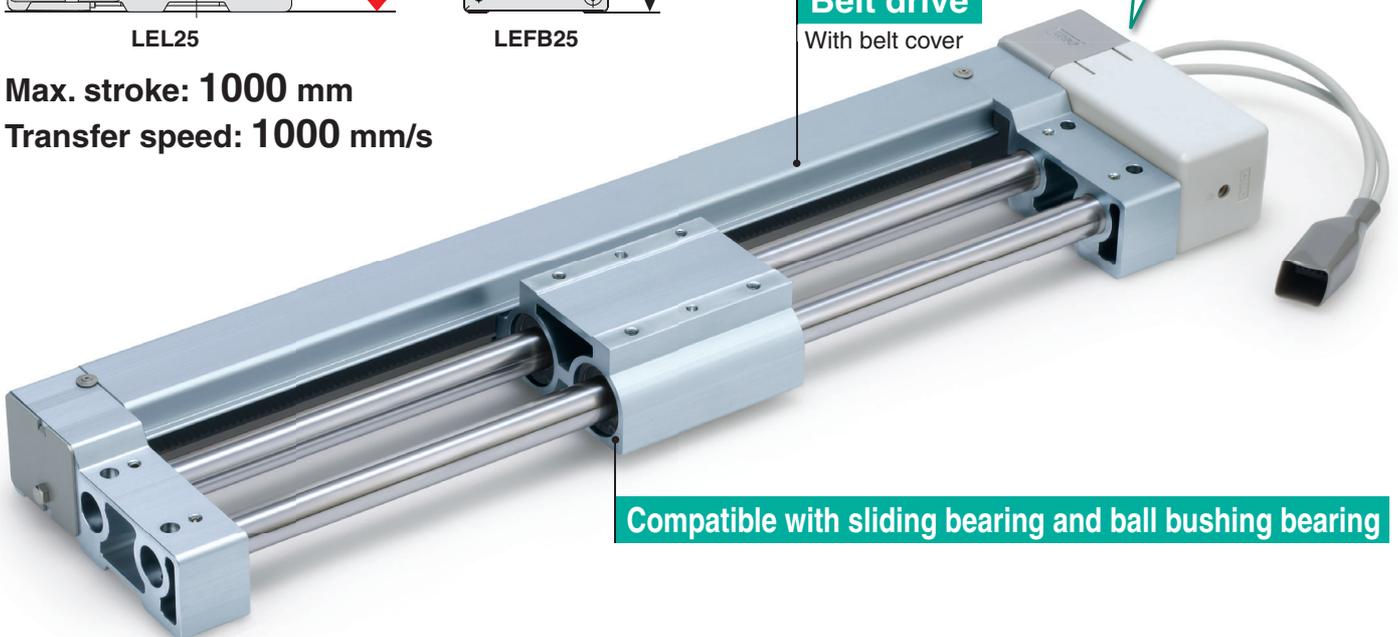

Compatible with sliding bearing and ball bushing bearing

Model	Size	Bearing	Stroke [mm]	Work load (Horizontal) [kg]	Speed [mm/s]	Positioning repeatability [mm]
LEL25M	25	Sliding bearing	Up to 1000	3	Up to 500	±0.08
LEL25L		Ball bushing bearing	Up to 1000	5	Up to 1000	±0.08

▶ Step data input type
Series LECP6



▶ Programless type
Series LECP1



▶ Direct Input Type Controller
Series JXC□1



Controller

Step Motor (Servo/24 VDC)

Series **LEL**



CAT.EUS100-101Bbb-UK

Series LEL

Step Motor (Servo/24 VDC) Type

Guide Rod Slider Size: 25

Simple construction. Guide type can be selected.

Max. stroke: **1000** mm

Transfer speed: **1000** mm/s

Guide type


- **Sliding bearing**
Work load: 3 kg (Horizontal)
Reduced noise (60 dB or less) ^{Note)}
- **Ball bushing bearing**
Work load: 5 kg (Horizontal)
Transfer speed: 1000 mm/s

Note) When the maximum speed is 500 mm/s
(Measured by SMC)

Auto switch mountable (Option: With magnet/switch rail)

For checking the limit and intermediate signal
Applicable to the D-M9□ and D-M9□W (2-colour indication)


* The auto switches should be ordered separately. Refer to pages 10 and 11 for details.

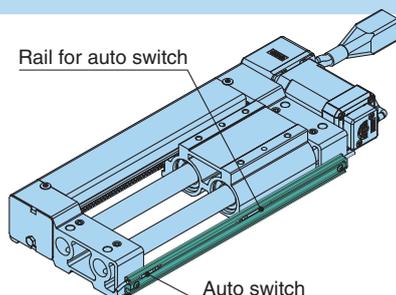


2-colour indication solid state auto switch

Appropriate setting of the mounting position
can be performed without mistakes.


A **green** light
lights up at the
optimum operating
range.

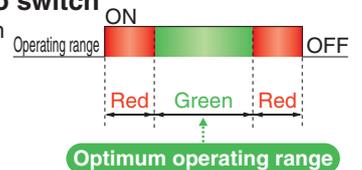

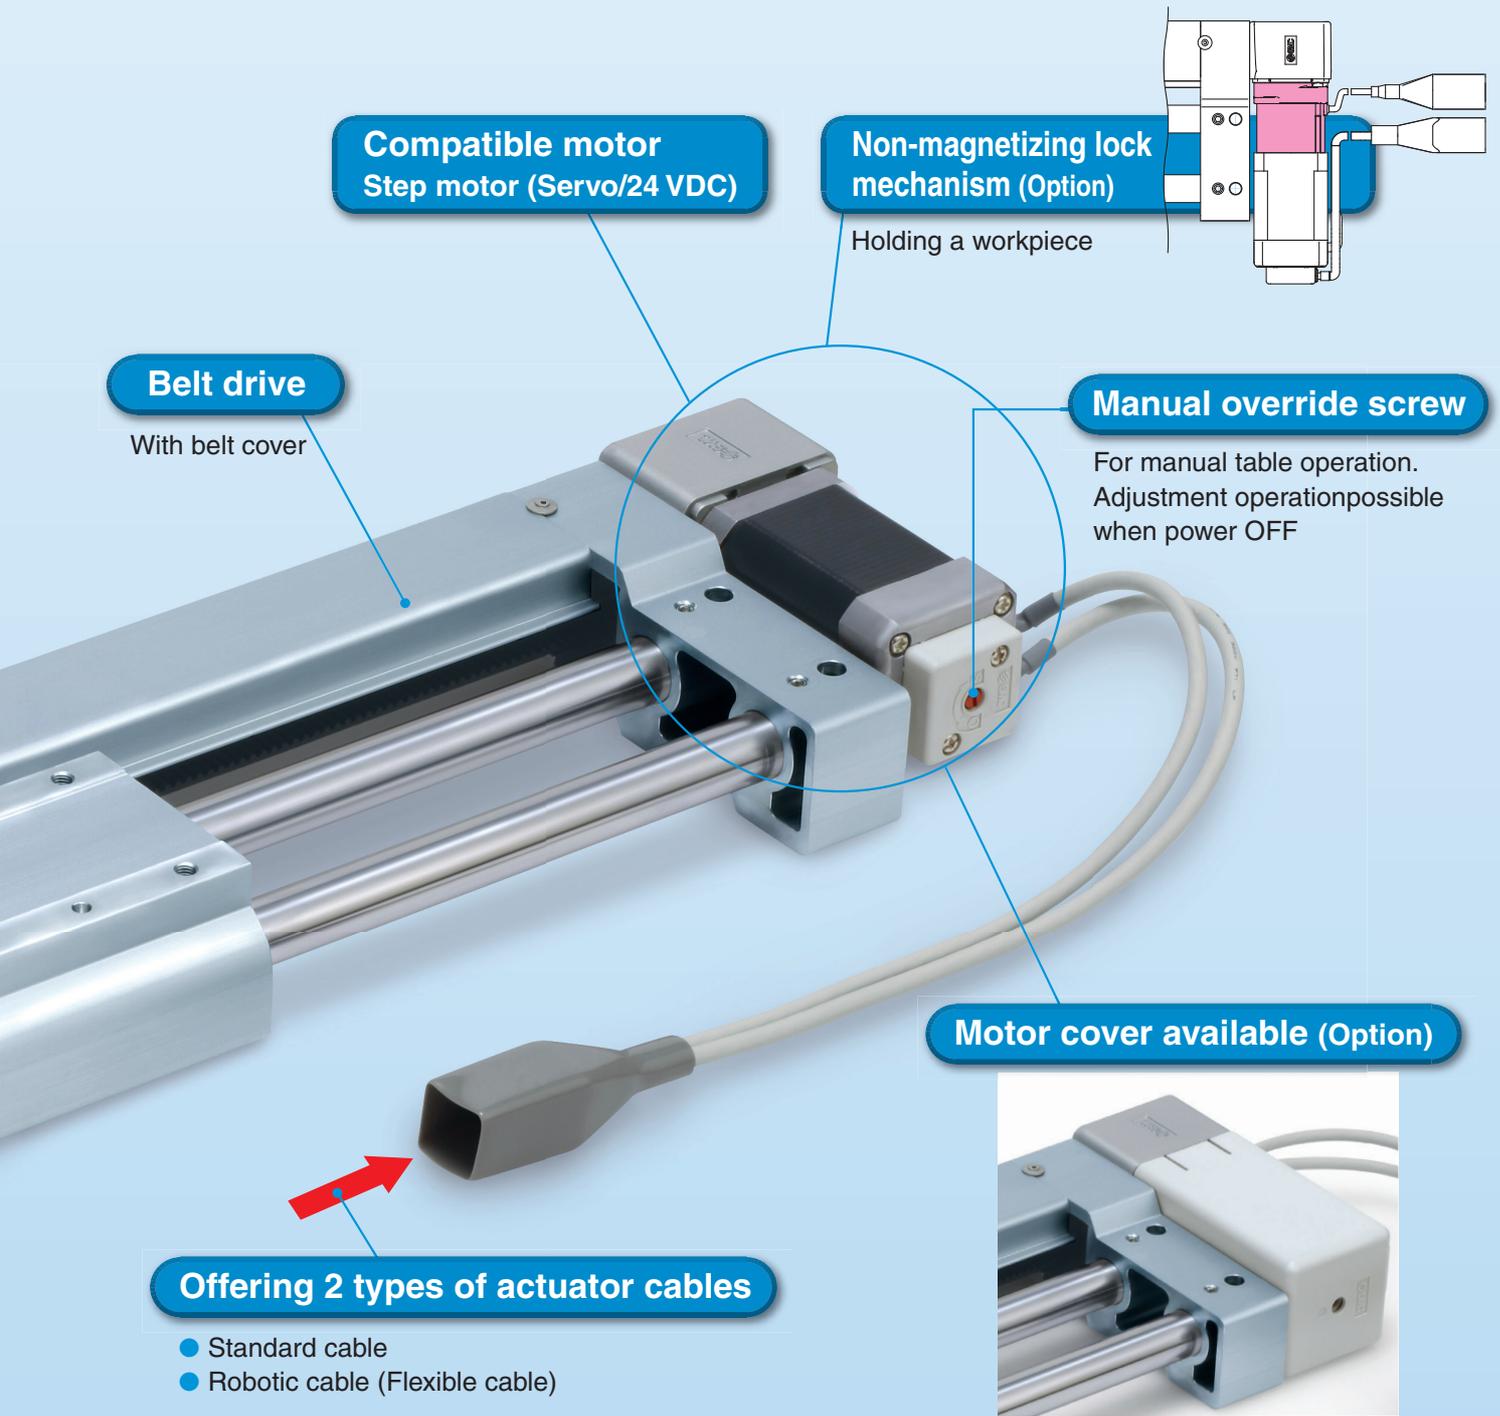


Application Examples

Load and unload transfer of workpieces

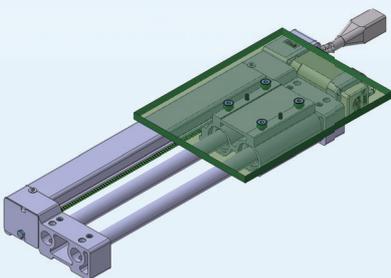

Pick and place

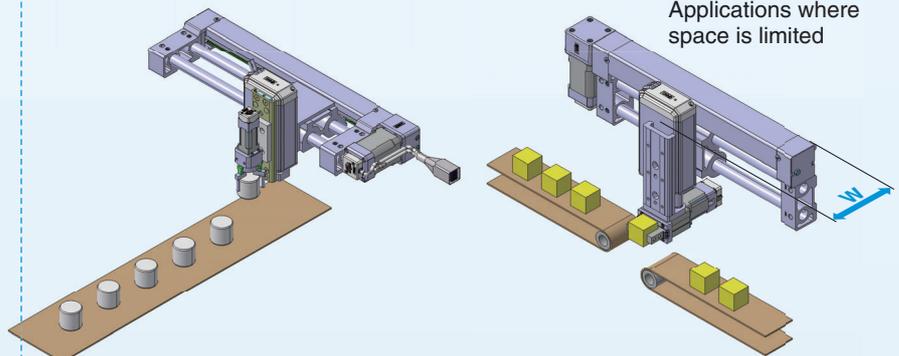

Simple Setting to Use Straight Away

Easy Mode for Simple Setting

If you want to use it right away, select "Easy Mode."

Step motor
(Servo/24 VDC)
LECP6



<When a PC is used> Controller setting software

- Step data setting, test operation, move jog and move for the constant rate can be set and operated on one screen.

Setting of jog and speed of the constant rate

Move jog

Start testing

Step data setting

Move for the constant rate

No.	Move M	Spec	Position	PushingF	PushingSp	In pos
		mm/s	mm	%	%	
0	Absolute	100	5.00	0	0	1.00
1	Absolute	100	10.00	0	0	1.00
2	Absolute	100	20.00	0	0	1.00
3	Absolute	200	30.00	0	0	1.00
4	Absolute	200	40.00	0	0	1.00
5	Absolute	300	50.00	0	0	1.00
6	Absolute	300	60.00	0	0	1.00
7	Absolute	400	70.00	0	0	1.00
8	Absolute	400	80.00	0	0	1.00
9	Absolute	500	90.00	0	0	1.00

<When a TB (teaching box) is used>

- Simple screen without scrolling promotes ease of setting and operating.
- Pick up an icon from the first screen to select a function.
- Set up the step data and check the monitor on the second screen.



Example of setting the step data

1st screen

2nd screen

Step Axis 1

Step No. 0

Posn 123.45 mm

Speed 100 mm/s

It can be registered by "SET" after entering the values.

Example of checking the operation status

1st screen

2nd screen

Monitor Axis 1

Step No. 1

Posn 12.34 mm

Speed 10 mm/s

Operation status can be checked.

Teaching box screen

- Data can be set with position and speed. (Other conditions are already set.)

Step	Axis 1
Step No.	0
Posn	50.00 mm
Speed	200 mm/s



Step	Axis 1
Step No.	1
Posn	80.00 mm
Speed	100 mm/s

⊙ Normal Mode for Detailed Setting

Select normal mode when detailed setting is required.

- Step data can be set in detail.
- Parameters can be set.
- Signals and terminal status can be monitored.
- JOG and constant rate movement, return to origin, test operation and testing of forced output can be performed.

<When a PC is used> Controller setting software

- Step data setting, parameter setting, monitor, teaching, etc., are indicated in different windows.



Step data setup window

Parameter setup window

Monitoring window


Teaching window

<When a TB (teaching box) is used>

- Multiple step data can be stored in the teaching box, and transferred to the controller.
- Continuous test operation by up to 5 step data.

Teaching box screen

- Each function (step data setting, test, monitor, etc.) can be selected from the main menu.


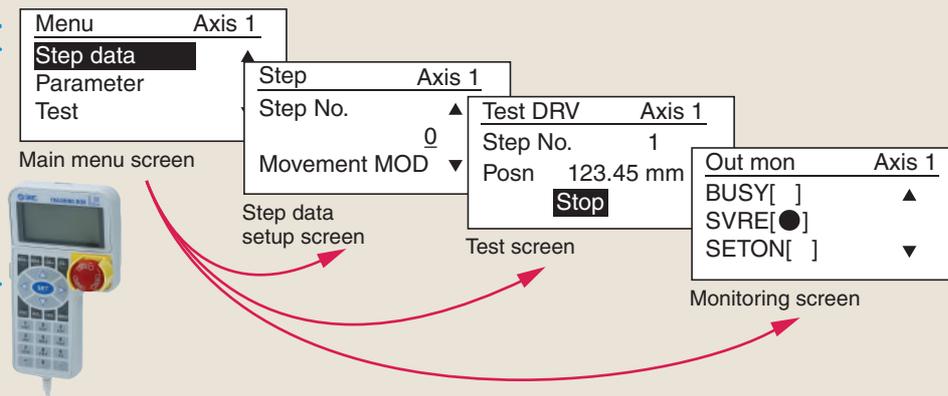


The actuator and controller are provided as a set. (They can be ordered separately.)

Confirm that the combination of the controller and the actuator is correct.

<Check the following before use.>

- ① Check the actuator label for model number. This matches the controller.
- ② Check Parallel I/O configuration matches (NPN or PNP).

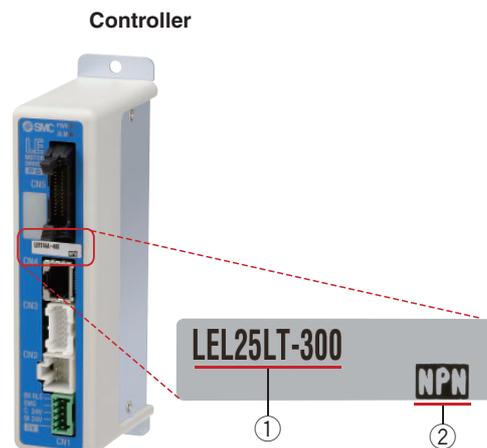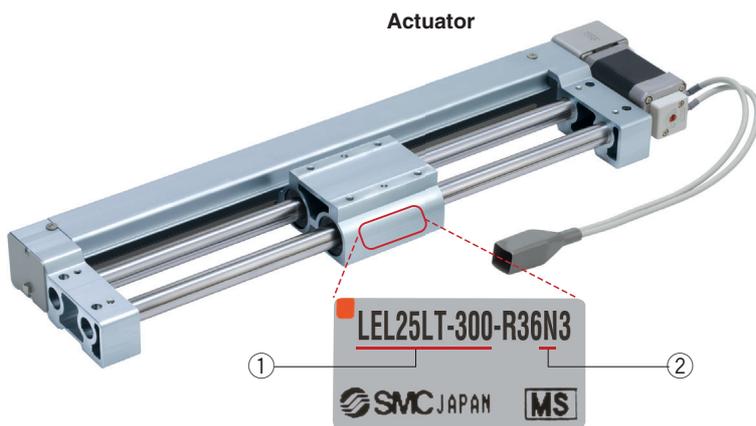

Fieldbus Network

Fieldbus-compatible Gateway (GW) Unit Series LEC-G



- Conversion unit for Fieldbus network and LEC serial communication


Applicable Fieldbus protocols:

- Two methods of operation

Step data input: Operate using preset step data in the controller.

Numerical data input: The actuator operates using values such as position and speed from the PLC.

- Values such as position, speed can be checked on the PLC.

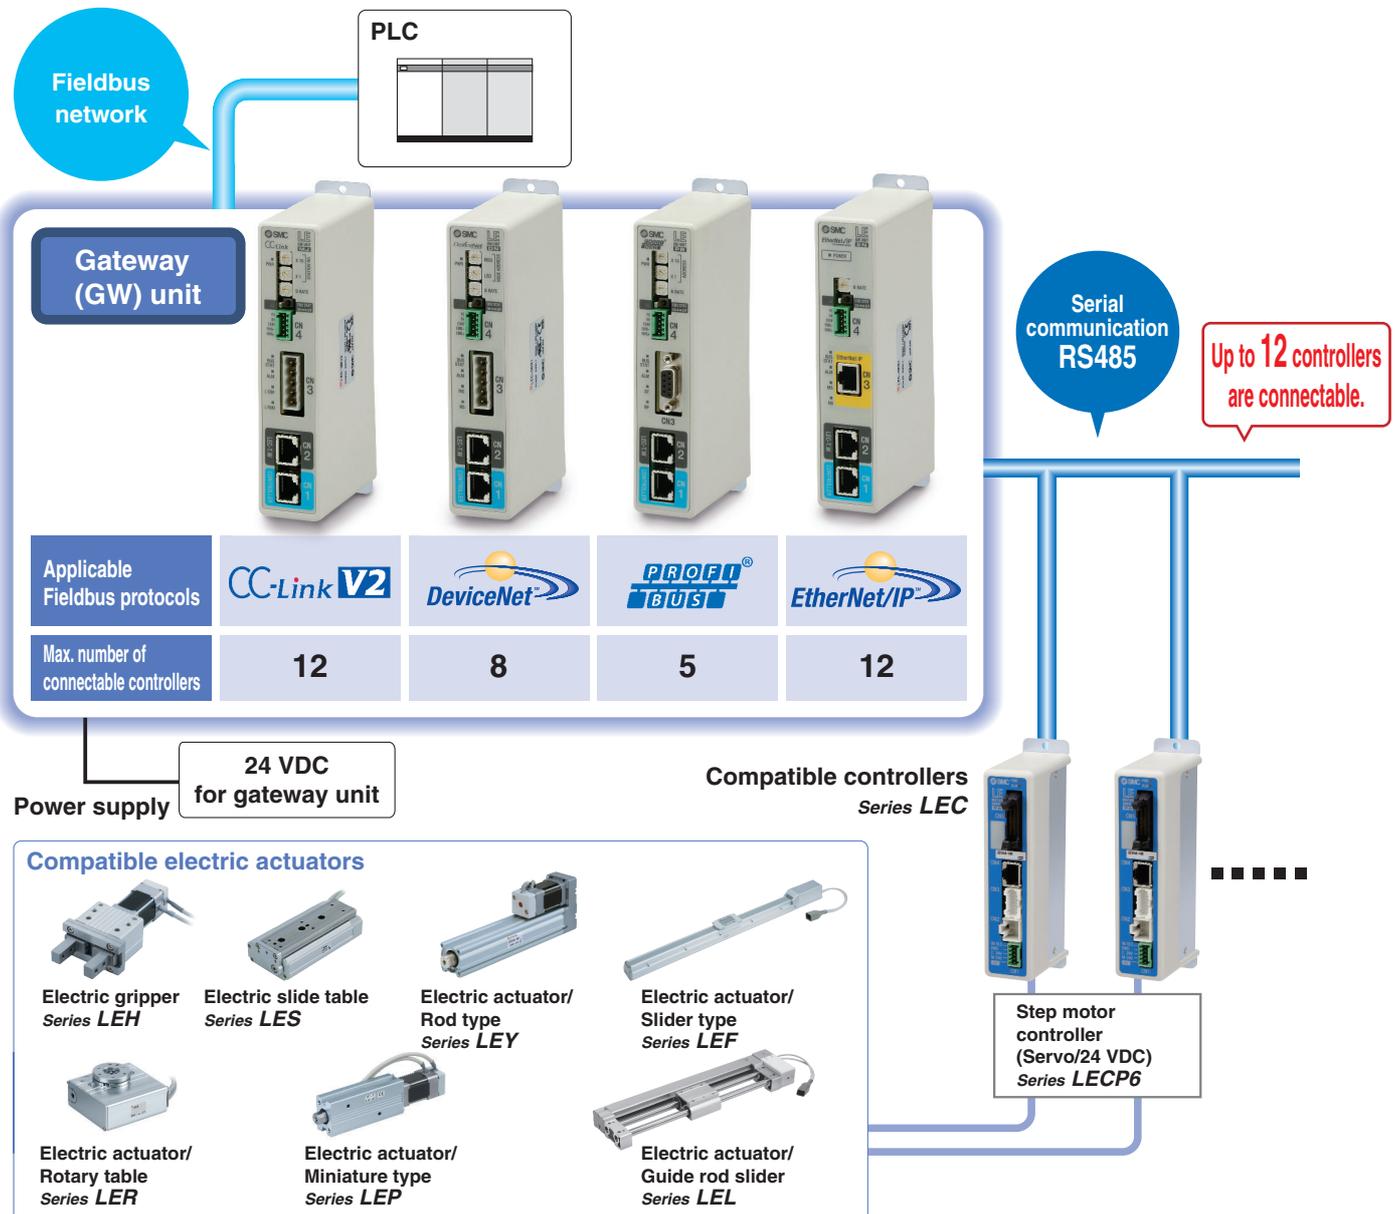

Programless Type Series LECP1

No Programming


Capable of setting up an electric actuator operation without using a PC or teaching box



Step motor
(Servo/24 VDC)
LECP1

1 Setting position number

Setting a registered number for the stop position
Maximum 14 points

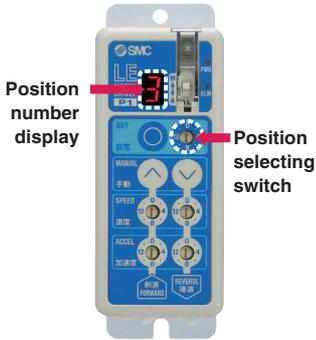

2 Setting a stop position

Moving the actuator to a stop position using FORWARD and REVERSE buttons




3 Registration

Registering the stop position using SET button



Speed/Acceleration 16-level adjustment

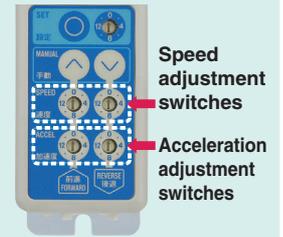

Function

Item	Step data input type LECP6	Programless type LECP1
Step data and parameter setting	<ul style="list-style-type: none"> Input from controller setting software (PC) Input from teaching box 	<ul style="list-style-type: none"> Select using controller operation buttons
Step data "position" setting	<ul style="list-style-type: none"> Input the numerical value from controller setting software (PC) or teaching box Input the numerical value Direct teaching JOG teaching 	<ul style="list-style-type: none"> Direct teaching JOG teaching
Number of step data	64 points	14 points
Operation command (I/O signal)	Step No. [IN*] input ⇒ [DRIVE] input	Step No. [IN*] input only
Completion signal	[INP] output	[OUT*] output

Setting Items

TB: Teaching box PC: Controller setting software

Item	Contents	Easy mode		Normal mode	Step data input type LECP6	Programless type LECP1*	
		TB	PC	TB·PC			
Step data setting (Excerpt)	Movement MOD	Selection of "absolute position" and "relative position"	△	●	●	Set at ABS/INC	Fixed value (ABS)
	Speed	Transfer speed	●	●	●	Set in units of 1 mm/s	Select from 16-level
	Position	[Position]: Target position [Pushing]: Pushing start position	●	●	●	Set in units of 0.01 mm	Direct teaching JOG teaching
	Acceleration/Deceleration	Acceleration/deceleration during movement	●	●	●	Set in units of 1 mm/s ²	Select from 16-level
	Pushing force	Rate of force during pushing operation	●	●	●	Set in units of 1 %	Select from 3-level (weak, medium, strong)
	Trigger LV	Target force during pushing operation	△	●	●	Set in units of 1 %	No setting required (same value as pushing force)
	Pushing speed	Speed during pushing operation	△	●	●	Set in units of 1 mm/s	No setting required
	Moving force	Force during positioning operation	△	●	●	Set to 100 %	
	Area output	Conditions for area output signal to turn ON	△	●	●	Set in units of 0.01 mm	
In position	[Position]: Width to the target position [Pushing]: How much it moves during pushing	△	●	●	Set to 0.5 mm or more (Units: 0.01 mm)		
Parameter setting (Excerpt)	Stroke (+)	+ side limit of position	×	×	●	Set in units of 0.01 mm	
	Stroke (-)	- side limit of position	×	×	●	Set in units of 0.01 mm	
	ORIG direction	Direction of the return to origin can be set.	×	×	●	Compatible	No setting required
	ORIG speed	Speed during return to origin	×	×	●	Set in units of 1 mm/s	
	ORIG ACC	Acceleration during return to origin	×	×	●	Set in units of 1 mm/s ²	
Test	JOG		●	●	●	Continuous operation at the set speed can be tested while the switch is being pressed.	Hold down MANUAL button (⊕⊖) for uniform sending (speed is specified value)
	MOVE		×	●	●	Operation at the set distance and speed from the current position can be tested.	Press MANUAL button (⊕⊖) once for sizing operation (speed, sizing amount are specified values)
	Return to ORIG		●	●	●	Compatible	Compatible
	Test drive	Operation of the specified step data	●	●	● (Continuous operation)	Compatible	Compatible
	Forced output	ON/OFF of the output terminal can be tested.	×	×	●	Compatible	Not compatible
Monitor	DRV mon	Current position, speed, force and the specified step data can be monitored.	●	●	●	Compatible	
	In/Out mon	Current ON/OFF status of the input and output terminal can be monitored.	×	×	●	Compatible	
ALM	Status	Alarm currently being generated can be confirmed.	●	●	●	Compatible	Compatible (display alarm group)
	ALM Log record	Alarm generated in the past can be confirmed.	×	×	●	Compatible	
File	Save/Load	Step data and parameter can be saved, forwarded and deleted.	×	×	●	Compatible	Not compatible
Other	Language	Can be changed to Japanese or English.	●	●	●	Compatible	

△: Can be set from TB Ver. 2.** (The version information is displayed on the initial screen)

* Programless type LECP1 cannot be used with the teaching box and controller setting kit.

System Construction/General Purpose I/O

● Electric Actuator/
Rod type



Programless type Page 29
LECP1

Note) The teaching box, controller setting kit and Touch Operator Interface cannot be connected.


Provided by customer
Power supply for controller
24 VDC (Note)

Note) When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

● Actuator cable* Pages 21, 34

Controller type	Standard cable	Robotic cable
LECP6 (Step data input type)	LE-CP-□-S	LE-CP-□
LECP1 (Programless type)	LE-CP-□-S	LE-CP-□

● Controller* Page 14

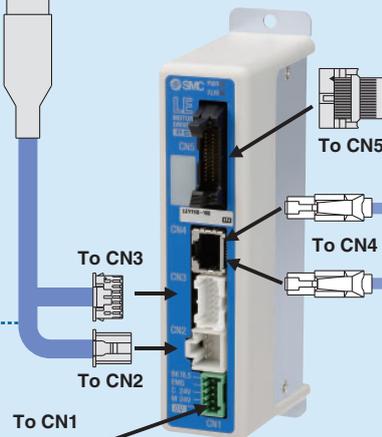


To CN3
To CN2



● Power supply plug Page 15
(Accessory)
<Applicable cable size>
AWG20 (0.5 mm²)

Step data input type
LECP6
Page 15

Provided by customer

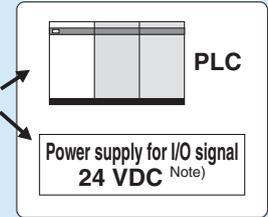

● I/O cable Pages 22, 35

Controller type	Part no.
LECP6	LEC-CN5-□
LECP1 (Programless)	LEC-CK4-□

● Touch Operator Interface (Provided by customer)

GP4501T/GP3500T

Manufactured by Digital Electronics Corp.

Pro-face
for the best interface



Cockpit parts can be downloaded free via the Pro-face website. Using cockpit parts makes adjustment from the Touch Operator Interface possible.

GOT2000 Series

Mitsubishi Electric Corporation

GOT2000
Graphic Operation Terminal



Sample screens for monitoring and changing the current value and the set value of the electric actuator can be downloaded free via the Mitsubishi Electric website.

The * mark: Can be included in the "How to Order" for the actuator.

Options

● Teaching box Page 24


(With 3 m cable)
LEC-T1-3EG□



● Controller setting kit Page 23

Controller setting kit
(Communication cable, conversion unit and USB cable are included.)
LEC-W2

Or

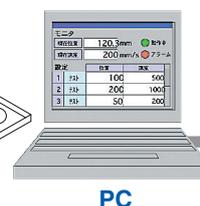


PC

Communication cable ● (3 m)

● USB cable (A-mini B type) (0.3 m)

Note) Cannot be used with the programless type (LECP1).

System Construction/Fieldbus Network

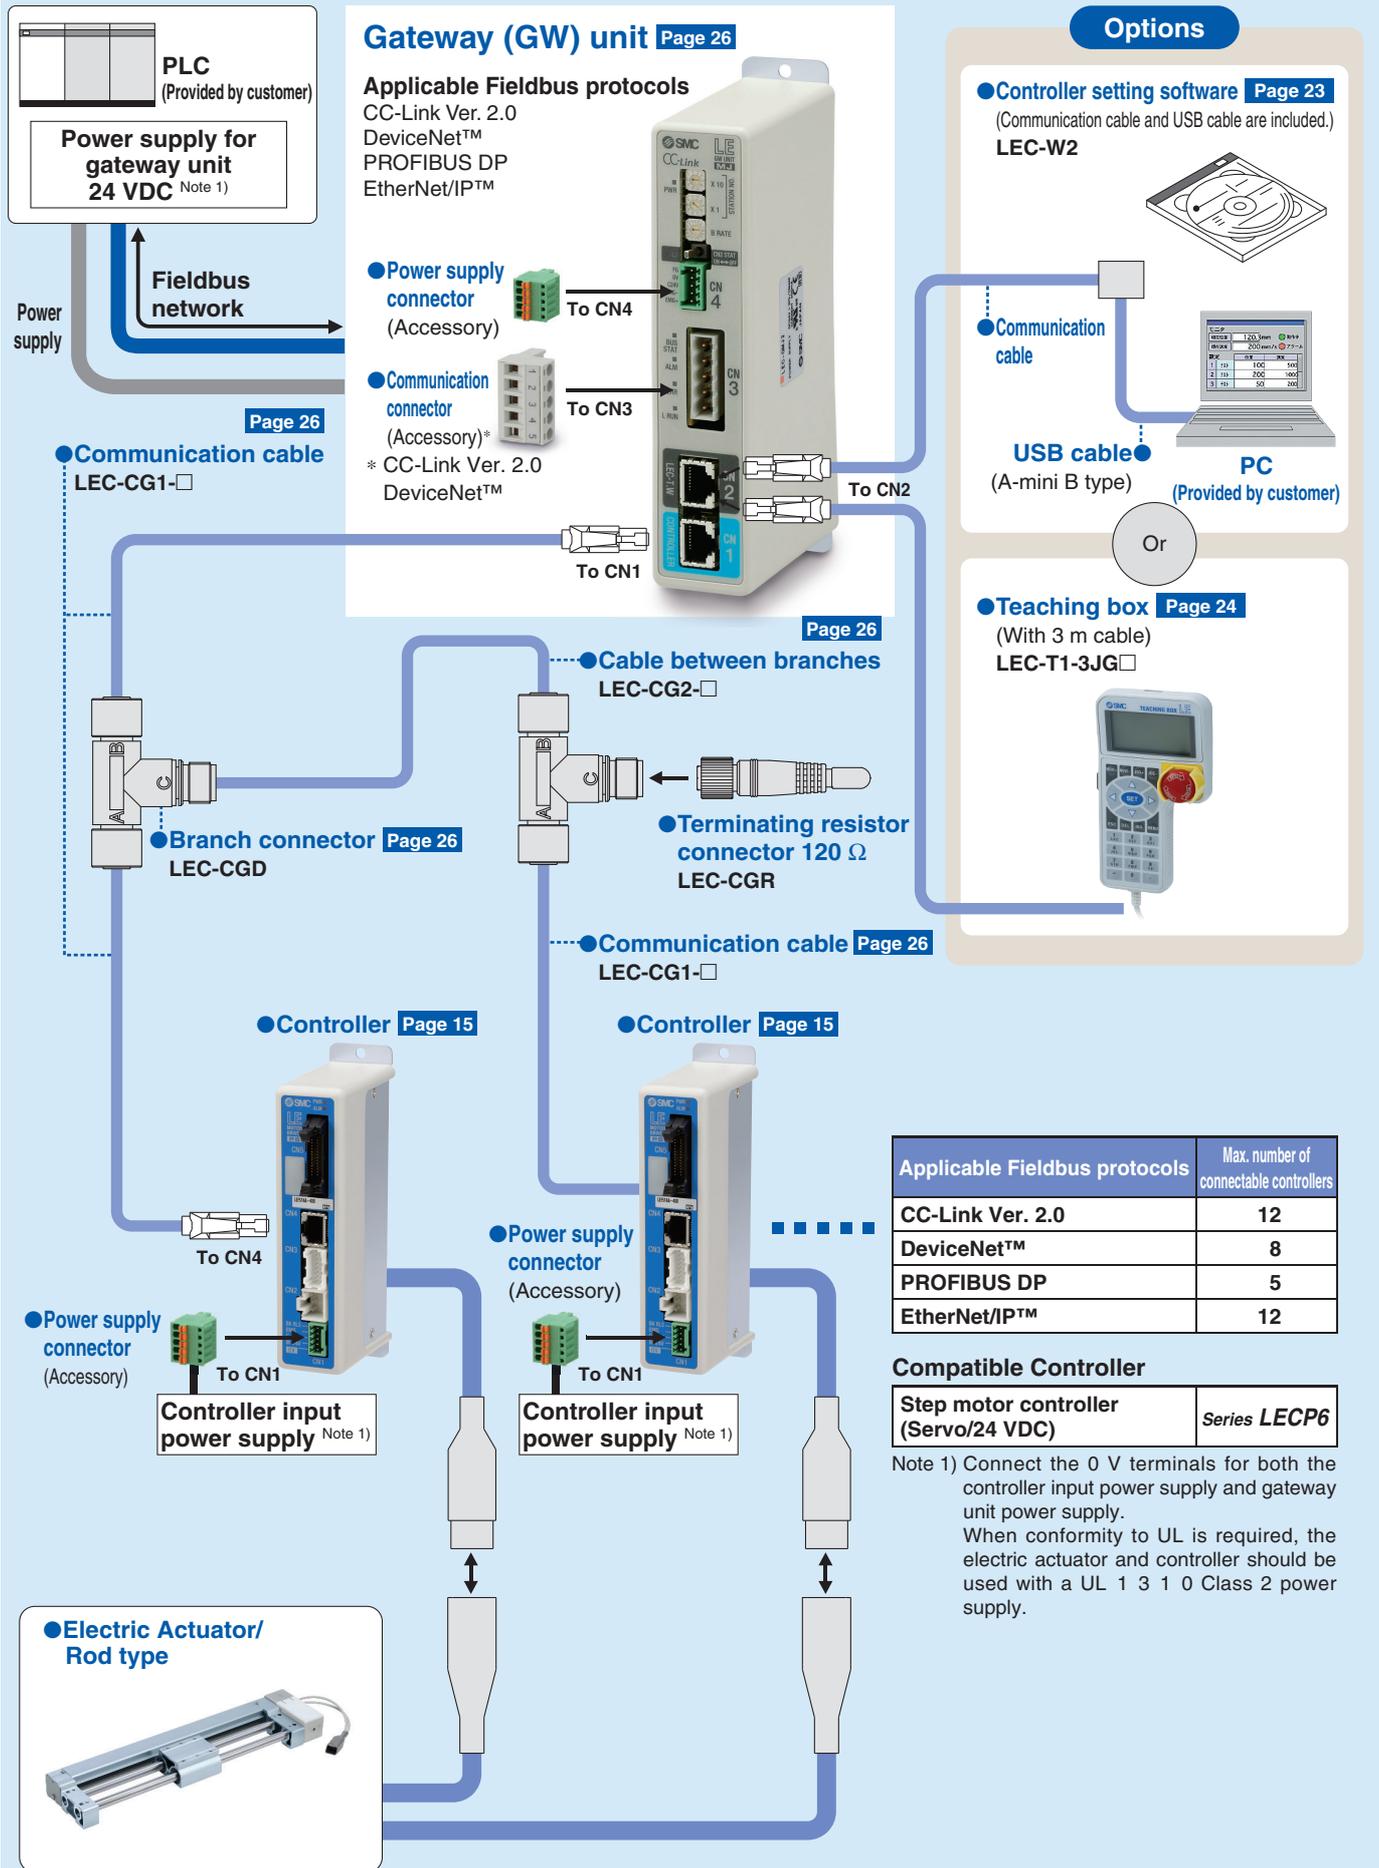

Gateway (GW) unit Page 26

Applicable Fieldbus protocols
 CC-Link Ver. 2.0
 DeviceNet™
 PROFIBUS DP
 EtherNet/IP™

- Power supply connector (Accessory) To CN4
- Communication connector (Accessory)* To CN3
* CC-Link Ver. 2.0
 DeviceNet™

Options

- Controller setting software Page 23
(Communication cable and USB cable are included.)
LEC-W2

- Communication cable
- USB cable (A-mini B type)
- PC (Provided by customer)

Or

- Teaching box Page 24
(With 3 m cable)
LEC-T1-3JG

- Cable between branches Page 26
LEC-CG2

- Terminating resistor connector 120 Ω **LEC-CGR**

- Communication cable Page 26
LEC-CG1

- Controller Page 15

- Controller Page 15

- Power supply connector (Accessory) To CN4

Controller input power supply Note 1)

- Power supply connector (Accessory) To CN1

Controller input power supply Note 1)

- Electric Actuator/
Rod type

Applicable Fieldbus protocols	Max. number of connectable controllers
CC-Link Ver. 2.0	12
DeviceNet™	8
PROFIBUS DP	5
EtherNet/IP™	12

Compatible Controller

Step motor controller (Servo/24 VDC)	Series LECP6
--------------------------------------	---------------------

Note 1) Connect the 0 V terminals for both the controller input power supply and gateway unit power supply.
 When conformity to UL is required, the electric actuator and controller should be used with a UL 1 3 1 0 Class 2 power supply.

SMC Electric Actuators

Slider Type Step Motor (Servo/24 VDC) Servo Motor (24 VDC) AC Servo Motor

Ball screw drive
Series LEFS

Clean room compatible



Series LEFS

Size	Max. work load [Kg]	Stroke [mm]
16	10	Up to 400
25	20	Up to 600
32	45	Up to 800
40	60	Up to 1000

Belt drive
Series LEFB



Series LEFB

Size	Max. work load [Kg]	Stroke [mm]
16	1	Up to 1000
25	5	Up to 2000
32	14	Up to 2000

Ball screw drive
Series LEFS

Clean room compatible



Series LEFS

Size	Max. work load [Kg]	Stroke [mm]
25	20	Up to 600
32	45	Up to 800
40	60	Up to 1000

Belt drive
Series LEFB



Series LEFB

Size	Max. work load [Kg]	Stroke [mm]
25	5	Up to 2000
32	15	Up to 2500
40	25	Up to 3000



CAT.ES100-87

High Rigidity Slider Type AC Servo Motor

Ball screw drive
Series LEJS

Clean room compatible



Series LEJS

Size	Max. work load [Kg]	Stroke [mm]
40	55	200 to 1200
63	85	300 to 1500

Belt drive
Series LEJB



Series LEJB

Size	Max. work load [Kg]	Stroke [mm]
40	20	200 to 2000
63	30	300 to 3000



CAT.ES100-104

Guide Rod Slider Step Motor (Servo/24 VDC)

Belt drive
Series LEL



Series LEL25M
Sliding bearing

Size	Max. work load [Kg]	Stroke [mm]
25	3	Up to 1000

Series LEL25L
Ball bushing bearing

Size	Max. work load [Kg]	Stroke [mm]
25	5	Up to 1000



CAT.E102

Low Profile Slider Type Step Motor (Servo/24 VDC)

Basic type
Series LEMB



Series LEMB

Size	Max. work load [Kg]	Stroke [mm]
25	6	Up to 2000
32	11	Up to 2000

Cam follower guide type
Series LEMC



Series LEMC

Size	Max. work load [Kg]	Stroke [mm]
25	10	Up to 2000
32	20	Up to 2000

Linear guide single axis type
Series LEMH



Series LEMH

Size	Max. work load [Kg]	Stroke [mm]
25	10	Up to 1000
32	20	Up to 1500

Linear guide double axis type
Series LEMHT



Series LEMHT

Size	Max. work load [Kg]	Stroke [mm]
25	10	Up to 1000
32	20	Up to 1500



CAT.ES100-98

SMC Electric Actuators

Rod Type Step Motor (Servo/24 VDC) Servo Motor (24 VDC)

Basic type Series LEY

Dust/Drip proof compatible



Series LEY


Size	Pushing force [N]	Stroke [mm]
16	141	Up to 300
25	452	Up to 400
32	707	Up to 500
40	1058	Up to 500

In-line motor type Series LEY□D

Dust/Drip proof compatible



Guide rod type Series LEYG

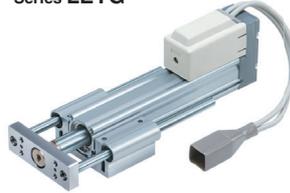

Series LEYG

Size	Pushing force [N]	Stroke [mm]
16	141	Up to 200
25	452	Up to 300
32	707	Up to 300
40	1058	Up to 300

Guide rod type /In-line motor type Series LEYG□D



CAT.E102

AC Servo Motor

Basic type Series LEY

Dust/Drip proof compatible



Series LEY

Size	Pushing force [N]	Stroke [mm]
25	485	Up to 400
32	588	Up to 500

In-line motor type Series LEY□D

Dust/Drip proof compatible



Series LEY

Size	Pushing force [N]	Stroke [mm]
25	485	Up to 400
32	736	Up to 500
63	1910	Up to 800

Guide rod type Series LEYG



Series LEYG

Size	Pushing force [N]	Stroke [mm]
25	485	300
32	588	

Guide rod type /In-line motor type Series LEYG□D



Series LEYG

Size	Pushing force [N]	Stroke [mm]
25	485	300
32	736	

Slide Table Step Motor (Servo/24 VDC) Servo Motor (24 VDC)

Series LES

Basic type/R type Series LES□R



Size	Max. work load [Kg]	Stroke [mm]
8	1	30, 50, 75
16	3	30, 50, 75, 100
25	5	30, 50, 75, 100, 125, 150

Symmetrical type/L type Series LES□L



In-line motor type/D type Series LES□D



Series LESH

Basic type/R type Series LESH□R



Size	Max. work load [Kg]	Stroke [mm]
8	2	50, 75
16	6	50, 100
25	9	50, 100, 150

Symmetrical type/L type Series LESH□L



In-line motor type/D type Series LESH□D



CAT.E102

Miniature Step Motor (Servo/24 VDC)

Rod type Series LEPY



Series LEPY

Size	Max. work load [Kg]	Stroke [mm]
6	1	25, 50, 75
10	2	

Slide table type Series LEPS



Series LEPS

Size	Max. work load [Kg]	Stroke [mm]
6	1	25
10	2	50



CAT.E102

Rotary Table Step Motor (Servo/24 VDC)

Basic type Series LER



Series LER

Size	Rotating torque (N·m)		Max. speed (°/s)	
	Basic	High torque	Basic	High torque
10	0.22	0.32	420	280
30	0.8	1.2		
50	6.6	10		

High precision type Series LERH



CAT.E102

SMC Electric Actuators

Gripper (Step Motor (Servo/24 VDC))

2-finger type
Series LEHZ



Size	Max. gripping force [N]		Stroke/both sides [mm]
	Basic	Compact	
10	14	6	4
16		8	6
20	40	28	10
25		—	14
32	130	—	22
40	210	—	30

2-finger type
With dust cover
Series LEHZJ



Size	Max. gripping force [N]		Stroke/both sides [mm]
	Basic	Compact	
10	14	6	4
16		8	6
20	40	28	10
25		—	14

2-finger type
Long stroke
Series LEHF



Size	Max. gripping force [N]	Stroke/both sides [mm]	
		Basic	Compact
10	7	16 (32)	—
20	28	24 (48)	—
32	120	32 (64)	—
40	180	40 (80)	—

Note) (): Long stroke

3-finger type
Series LEHS



Size	Max. gripping force [N]		Stroke/diameter [mm]
	Basic	Compact	
10	5.5	3.5	4
20	22	17	6
32	90	—	8
40	130	—	12



CAT.E102

Controllers/Driver

Step Motor (Servo/24 VDC)

Servo Motor (24 VDC)

Step Data Input Type

Series **LECP6**
Series **LECA6**

- 64 points positioning
- Input using controller setting kit or teaching box



Step Data Input Type

Series **JXC73/83**



Step Motor (Servo/24 VDC)

Programless Type

Series **LECP1**

- 14 points positioning
- Control panel setting (PC is not required.)



Programless Type (With Stroke Study)

Series **LECP2**

- End to end operation similar to an air cylinder
- 2 stroke end points + 12 intermediate points positioning



Specialized for Series LEM

Step Motor (Servo/24 VDC)

Fieldbus-compatible Network Controller/Gateway Unit

Pulse Input Type

Series **LECPA**



Series **JXC□1**

PROFIBUS
EtherCAT
DeviceNet
EtherNet/IP
IO-Link



Series **JXC92**

EtherNet/IP



Series **JXC93**

EtherNet/IP



Series **LEC-G**

PROFIBUS
CC-Link V2
DeviceNet
EtherNet/IP



AC Servo Motor

Pulse Input Type

Series **LECSA**

Series **LECSB**

- Absolute encoder (LECSB)
- Built-in positioning function (LECSA)



Series **LECSA** Series **LECSB**

CC-Link Direct Input Type
Series **LECS**
CC-Link



SSCNET III Type
Series **LECSS**

SSCNET III
SERVO SYSTEM CONTROLLER NETWORK



MECHATROLINK II Type

Series **LECYM**

MECHATROLINK - II



MECHATROLINK III Type

Series **LECYU**

MECHATROLINK - III



SSCNET III/H Type

Series **LECS-T**

SSCNET III/H
SERVO SYSTEM CONTROLLER NETWORK



Series Variations

Electric Actuator/Guide Rod Slider *Series LEL*



Series	Bearing	Stroke [mm]	Work load [kg]	Speed [mm/s]	Positioning repeatability [mm]	Controller series	Reference page
LEL25M	Sliding bearing	Up to 1000	3	Up to 500	±0.1	Series LECP6 Series LECP1	Page 1
LEL25L	Ball bushing bearing	Up to 1000	5	Up to 1000	±0.1		

Controller *LEC*



LECP6



LECP1

Type	Series	Compatible motor	Power supply voltage	Parallel I/O		Number of positioning pattern points	Reference page
				Input	Output		
Step data input type	LECP6	Step motor (Servo/24 VDC)	24 VDC ±10 %	11 inputs (Photo-coupler isolation)	13 outputs (Photo-coupler isolation)	64	Page 15
Programless type	LECP1	Step motor (Servo/24 VDC)	24 VDC ±10 %	6 inputs (Photo-coupler isolation)	6 outputs (Photo-coupler isolation)	14	Page 29

INDEX

Step Motor (Servo/24 VDC) Type

◎Electric Actuator/Guide Rod Slider Series LEL



Model Selection	Page 1
How to Order	Page 6
Specifications	Page 7
Construction	Page 8
Dimensions	Page 9
Auto Switch	Page 10
Specific Product Precautions	Page 12

◎Step Motor (Servo/24 VDC) Controller



Step Data Input Type/Series LECP6	Page 15
Controller Setting Kit/ LEC-W2	Page 23
Teaching Box/ LEC-T1	Page 24
Gateway Unit/Series LEC-G	Page 26
Programless Controller/Series LECP1	Page 29
Direct Input Type Controller/Series JXC□1	Page 36



Series **LEL**

Model Selection



Selection Procedure





Selection Example

Operating conditions

- Workpiece mass: 4 [kg]
- Speed: 300 [mm/s]
- Acceleration/Deceleration: 3000 [mm/s²]
- Stroke: 500 [mm]
- Mounting position: Horizontal upward

• Workpiece mounting condition:

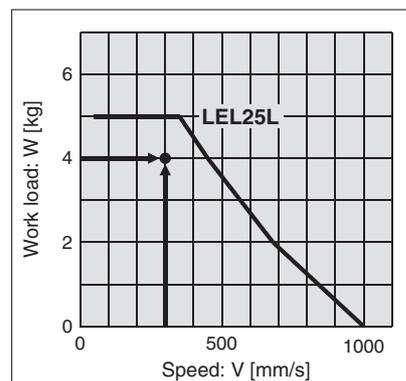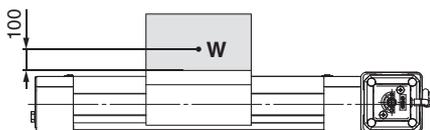

<Speed-Work load graph>
(LEL25L/Step motor)

Step 1 Check the work load-speed. <Speed-Work load graph> (Page 4)

Select the target model based on the workpiece mass and speed with reference to the <Speed-Work load graph>.

Selection example) The **LEL25LT-500** is temporarily selected based on the graph shown on the right side.

Step 2 Check the cycle time.

Calculate the cycle time using the following calculation method.

Cycle time:

T can be found from the following equation.

$$T = T1 + T2 + T3 + T4 \text{ [s]}$$

- T1: Acceleration time and T3: Deceleration time can be obtained by the following equation.

$$T1 = V/a1 \text{ [s]} \quad T3 = V/a2 \text{ [s]}$$

- T2: Constant speed time can be found from the following equation.

$$T2 = \frac{L - 0.5 \cdot V \cdot (T1 + T3)}{V} \text{ [s]}$$

- T4: Settling time varies depending on the conditions such as motor types, load and in positioning of the step data. Therefore, please calculate the settling time with reference to the following value.

$$T4 = 0.3 \text{ [s]}$$

Calculation example)

T1 to T4 can be calculated as follows.

$$T1 = V/a1 = 300/3000 = 0.1 \text{ [s]}$$


$$T3 = V/a2 = 300/3000 = 0.1 \text{ [s]}$$

$$T2 = \frac{L - 0.5 \cdot V \cdot (T1 + T3)}{V} = \frac{500 - 0.5 \cdot 300 \cdot (0.1 + 0.1)}{300} = 1.57 \text{ [s]}$$

$$T4 = 0.3 \text{ [s]}$$

Therefore, the cycle time can be obtained as follows.


$$T = T1 + T2 + T3 + T4 = 0.1 + 1.57 + 0.1 + 0.3 = 2.07 \text{ [s]}$$

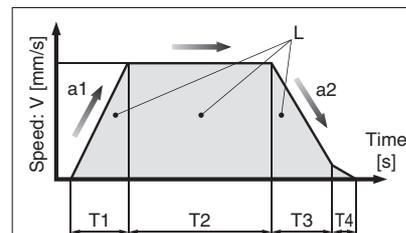


- L : Stroke [mm] ... (Operating condition)
- V : Speed [mm/s] ... (Operating condition)
- a1: Acceleration [mm/s²] ... (Operating condition)
- a2: Deceleration [mm/s²] ... (Operating condition)

- T1: Acceleration time [s] Time until reaching the set speed
- T2: Constant speed time [s] Time while the actuator is operating at a constant speed
- T3: Deceleration time [s] Time from the beginning of the constant speed operation to stop
- T4: Settling time [s] Time until in position is completed

Step 3 Check the guide moment.

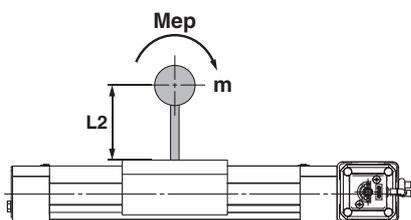

Based on the above calculation result, the **LEL25LT-500** is selected.

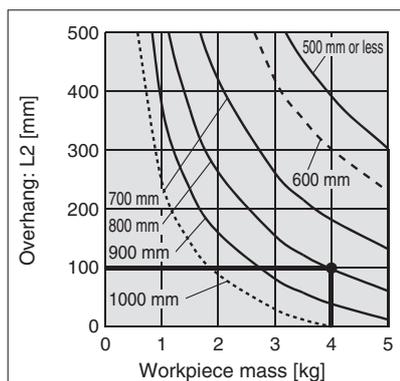

* This graph shows the amount of allowable overhang (guide unit) when the centre of gravity of the workpiece overhangs in one direction. When selecting the overhang, refer to "Calculation of Guide Load Factor" or the Electric Actuator Selection Software for confirmation, <http://www.smc.eu>

Dynamic Allowable Moment

Acceleration/Deceleration — 3000 mm/s²

Orientation	Load overhanging direction m: Work load [kg] L : Overhang to the work load centre of gravity [mm]	Model	
		LEL25M	LEL25L
Horizontal/Bottom mounting	<p>X</p>		
	<p>Y</p>		
	<p>Z</p>		
Wall mounting	<p>X</p>		
	<p>Y</p>		
	<p>Z</p>		

Calculation of Guide Load Factor

1. Decide operating conditions.

Model: LEL

Size: 25

Mounting orientation: Horizontal/Bottom/Wall

Acceleration [mm/s^2]: **a**

Work load [kg]: **m**

Work load centre position [mm]: **Xc/Yc/Zc**

2. Select the target graph with reference to the model, size and mounting orientation.

3. Based on the acceleration and work load, obtain the overhang [mm]: **Lx/Ly/Lz** from the graph.

4. Calculate the load factor for each direction.


$$\alpha_x = Xc/Lx, \alpha_y = Yc/Ly, \alpha_z = Zc/Lz$$

5. Confirm the total of α_x , α_y and α_z is 1 or less.

$$\alpha_x + \alpha_y + \alpha_z \leq 1$$

When 1 is exceeded, please consider a reduction of acceleration and work load, or a change of the work load centre position and series.

Mounting orientation

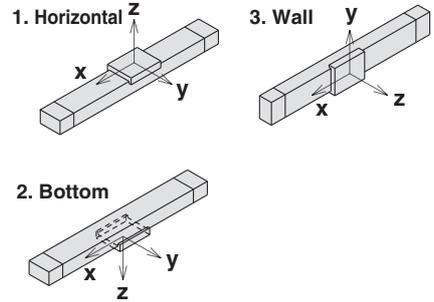

Example

1. Operating conditions

Model: LEL

Size: 25L

Stroke: 500

Mounting orientation: Horizontal

Acceleration [mm/s^2]: 3000

Work load [kg]: 4

Work load centre position [mm]: **Xc = 30, Yc = 20, Zc = 100**

3. **Lx = 120 mm, Ly = 65 mm, Lz = 390 mm**




4. The load factor for each direction can be obtained as follows.

$$\alpha_x = 30/120 = 0.25$$

$$\alpha_y = 20/65 = 0.31$$


$$\alpha_z = 100/390 = 0.26$$

5. $\alpha_x + \alpha_y + \alpha_z = 0.82 \leq 1$

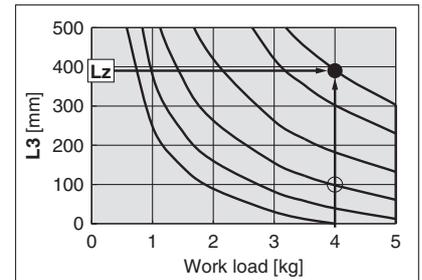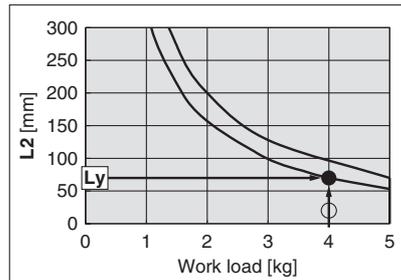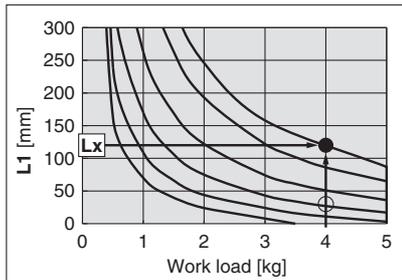

Speed-Work Load Graph (Guide)

LEL25M (Horizontal)

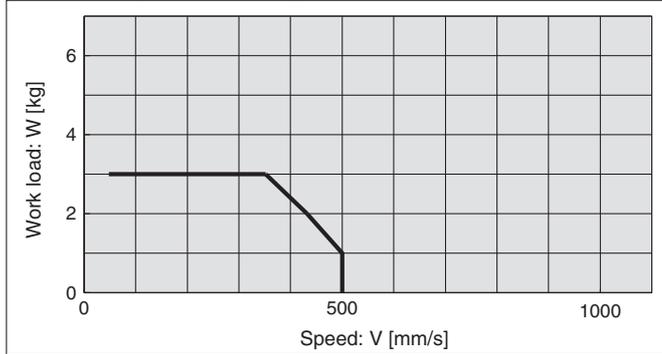

LEL25L (Horizontal)



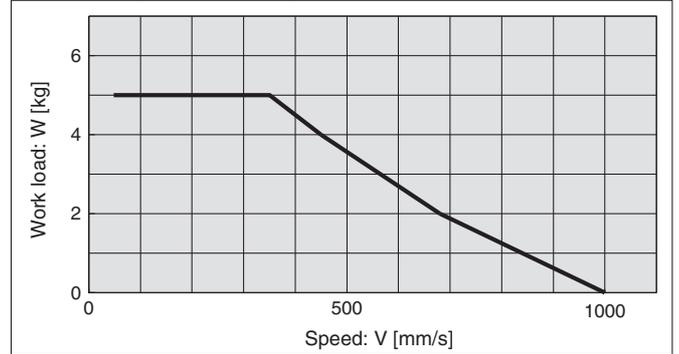


Table Displacement (Reference Value)

* Amount of displacement of the table when the load centre of gravity is located at the table centre in the middle of the stroke.

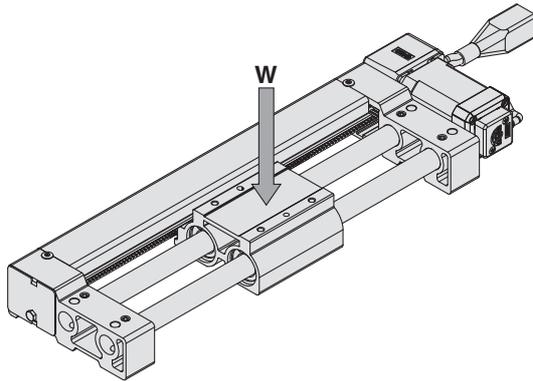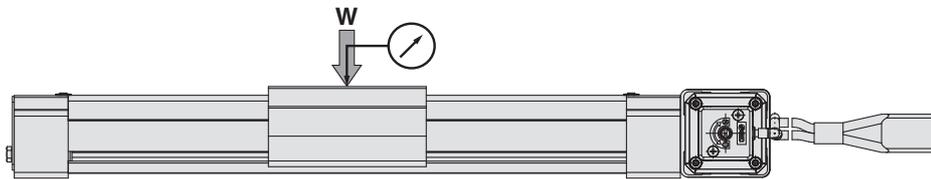

Load centre of gravity located at the centre of the table




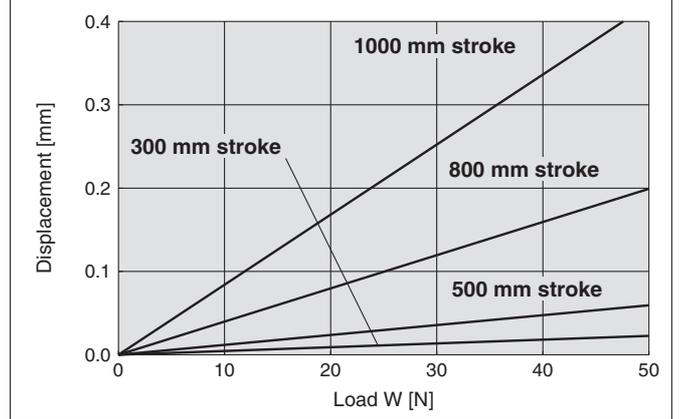


Table Displacement (Reference Value)

* Amount of displacement when the load is offset by "L" from the centre of the table.

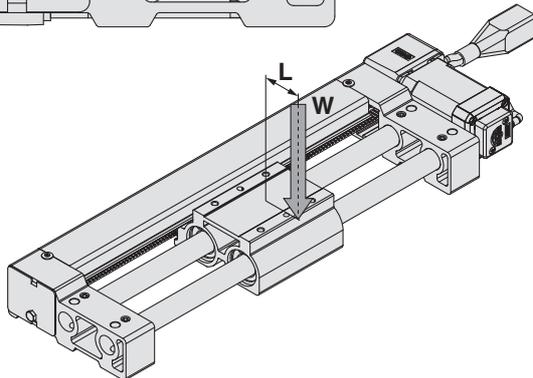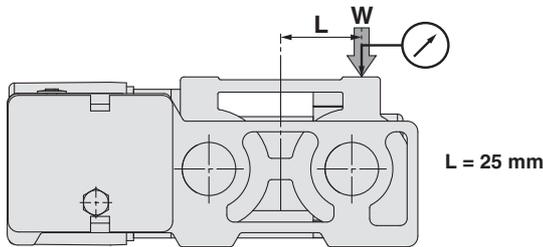

Load centre of gravity located at a position offset when L = 25 mm

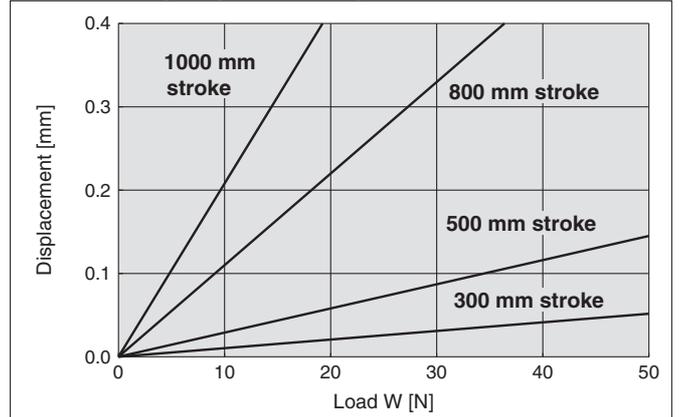

Electric Actuator/Guide Rod Slider Belt Drive Step Motor (Servo/24 VDC)

Series **LEL**

LEL25



EtherNet/IP IO-Link
DeviceNet EtherCAT Compatible ▶ Page 36

How to Order

LEL 25 M T - 100 - - - 1 6P 1 -

① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨ ⑩ ⑪

① Size

25

② Bearing type

M	Sliding bearing
L	Ball bushing bearing

③ Equivalent lead

T 48 mm

④ Stroke

100	100 mm
to	to
1000	1000 mm

* Refer to the applicable stroke table.

⑤ Motor option

-	Without option
B	With lock
C	With motor cover*

* When [With lock] is selected, [With motor cover] cannot be selected.

⑥ Switch rail option

-	Without option
R	With magnet/switch rail

* After purchasing "R" type, the magnet and switch rail cannot be attached afterwards.

⑦ Actuator cable type*1

-	Without cable
S	Standard cable
R	Robotic cable (Flexible cable)*2

*1) The standard cable should be used on fixed parts. For using on moving parts, select the robotic cable.

*2) Fix the motor cable protruding from the actuator to keep it unmovable. For details about fixing method, refer to Wiring/Cables in the Electric Actuators Precautions.

⑧ Actuator cable length [m]

-	Without cable	8	8*
1	1.5	A	10*
3	3	B	15*
5	5	C	20*

* Produced upon receipt of order (Robotic cable only). Refer to the specifications Note 2) on page 7.

⑩ I/O cable length [m]

-	Without cable
1	1.5*
3	3*
5	5*

* When "Without controller" is selected for controller types, I/O cable length cannot be selected.

⑨ Controller type*

-	Without controller	
6N	LECP6 (Step data input type)	NPN
6P		PNP
1N	LECP1 (Programless type)	NPN
1P		PNP

* For details about controllers and compatible motors, refer to the compatible controllers below.

⑪ Controller mounting

-	Screw mounting
D	DIN rail mounting*

* DIN rail is not included. Order it separately.

⚠ Caution

[CE-compliant products]

EMC compliance was tested by combining the electric actuator LEL series and the controller LEC series.

The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore conformity to the EMC directive cannot be certified for SMC components

incorporated into the customer's equipment under actual operating conditions. As a result it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.

[UL-compliant products]

When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Applicable Stroke Table

● Standard/○ Produced upon receipt of order

Model	Stroke	100	200	300	400	500	600	700	800	900	1000
LEL25		○	○	●	●	●	●	○	○	○	○


* Consult with SMC as all non-standard and non-made-to-order strokes are produced as special orders.

The actuator and controller are provided as a set.

Confirm that the combination of the controller and the actuator is correct.

<Check the following before use.>

- Check the actuator label for model number. This matches the controller.
- Check Parallel I/O configuration matches (NPN or PNP).

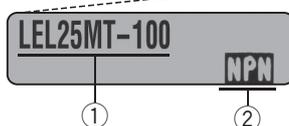

* Refer to the operation manual for using the products. Please download it via our website, <http://www.smc.eu>

Compatible Controllers

Type	Step data input type	Programless type
Series	LECP6	LECP1
Features	Value (Step data) input Standard controller	Capable of setting up operation (step data) without using a PC or teaching box
Compatible motor	Step motor (Servo/24 VDC)	
Maximum number of step data	64 points	14 points
Power supply voltage	24 VDC	
Reference page	Page 15	Page 29

Model Selection
LEL
Step Motor (Servo/24 VDC)
LEL
LECP6
LECP6
LECP6
LECP6
LECP1
LECP1
LECP1
JXC□1
Specific Product Precautions

Series LEL

Step Motor (Servo/24 VDC)

Specifications

Step Motor (Servo/24 VDC)

Model		LEL25M	LEL25L	
Actuator specifications	Stroke [mm] ^{Note 1)}	(100), (200), 300, 400, 500, 600 (700), (800), (900), (1000)		
	Work load [kg] ^{Note 2)}	Horizontal (Wall mounting)	3 (2.5)	5 (5)
	Speed [mm/s] ^{Note 2)}	48 to 500		48 to 1000
	Max. acceleration/deceleration [mm/s ²]	3000		
	Positioning repeatability [mm]	±0.08		
	Lost motion [mm] ^{Note 3)}	0.1 or less		
	Equivalent lead [mm]	48		
	Impact/Vibration resistance [m/s ²] ^{Note 4)}	50/20		
	Actuation type	Belt		
	Guide type	Sliding bearing	Ball bushing bearing	
	Allowable external force [N] ^{Note 5)}	5		
	Operating temperature range [°C]	5 to 40		
	Operating humidity range [%RH]	90 or less (No condensation)		
Electric specifications	Motor size	□42		
	Motor type	Step motor (Servo/24 VDC)		
	Encoder	Incremental A/B phase (800 pulse/rotation)		
	Rated voltage [V]	24 VDC ±10 %		
	Power consumption [W] ^{Note 6)}	32		
	Standby power consumption when operating [W] ^{Note 7)}	16		
	Max. instantaneous power consumption [W] ^{Note 8)}	60		
Lock specifications	Type ^{Note 9)}	Non-magnetizing lock		
	Holding force [N]	19		
	Power consumption [W] ^{Note 10)}	5		
	Rated voltage [V]	24 VDC ±10 %		

Note 1) Strokes shown in () are produced upon receipt of order. Consult with SMC as all non-standard and non-made-to-order strokes are produced as special orders.

Note 2) Speed changes according to the work load. Check "Speed-Work Load Graph (Guide)" on page 4. The work load changes according to the stroke and work load mounting condition.

Check "Dynamic Allowable Moment" graph on page 2. Furthermore, if the cable length exceeds 5 m, then it will decrease by up to 10 % for each 5 m.

Note 3) A reference value for correcting an error in reciprocal operation.

Note 4) Impact resistance: No malfunction occurred when the actuator was tested with a drop tester in both the stroke direction and a perpendicular direction to the stroke. (The test was performed with the actuator in the initial state.)

Vibration resistance: No malfunction occurred in a test ranging between 45 to 2000 Hz, when the actuator was tested in both stroke direction and a perpendicular direction to the stroke. (The test was performed with the actuator in the initial state.)

Note 5) Allowable external resistance is the allowable resistance when flexible moving tube or similar is used.

Note 6) The power consumption (including the controller) is for when the actuator is operating.

Note 7) The standby power consumption when operating (including the controller) is for when the actuator is stopped in the set position during operation.

Note 8) The maximum instantaneous power consumption (including the controller) is for when the actuator is operating. This value can be used for the selection of the power supply.


Note 9) With lock only

Note 10) For an actuator with lock, add the power consumption for the lock.


Actuator Product Weight

Stroke [mm]		(100)	(200)	300	400	500	600	(700)	(800)	(900)	(1000)
Product weight [kg]	LEL25M	2.13	2.47	2.82	3.17	3.52	3.87	4.21	4.56	4.91	5.26
	LEL25L	2.38	2.72	3.07	3.42	3.77	4.12	4.47	4.82	5.17	5.52
Additional weight with lock [kg]							0.26				
Additional weight with cover [kg]							0.04				


Construction

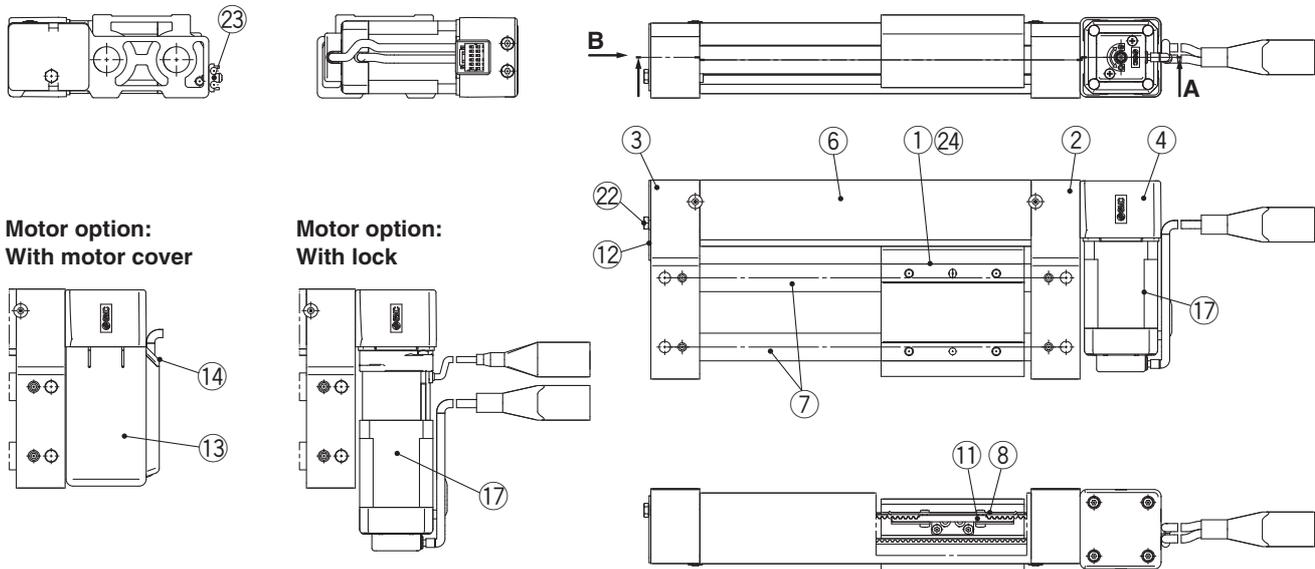

A-A (LEL25LT-□)

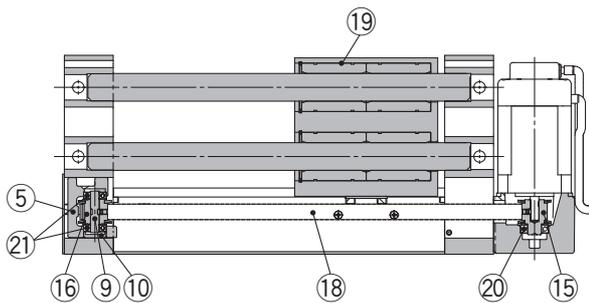

A-A (LEL25MT-□)

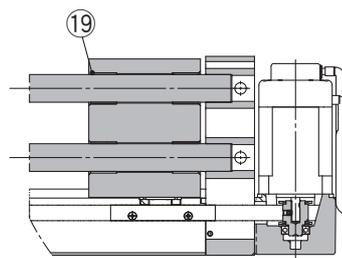


Component Parts

No.	Description	Material	Note
1	Table	Aluminium alloy	Anodised
2	Motor end plate	Aluminium alloy	Anodised
3	End plate	Aluminium alloy	Anodised
4	Motor mount	Aluminium die-cast	Painting
5	Pulley holder	Aluminium alloy	
6	Belt cover	Aluminium alloy	Anodised
7	Guide rod	Carbon steel	Hard chrome Anodised
8	Belt holder	Carbon steel	Chromating
9	Pulley shaft	Stainless steel	
10	Spacer	Aluminium alloy	
11	Belt stopper	Aluminium alloy	
12	Tension plate	Aluminium alloy	Anodised
13	Motor cover	Synthetic resin	"With motor cover" only
14	Grommet	Synthetic resin	"With motor cover" only
15	Motor pulley	Aluminium alloy	Anodised
16	End pulley	Aluminium alloy	Anodised
17	Motor	—	
18	Belt	—	
19	Bushing	—	
	Ball bushing bearing	—	
20	Bearing	—	
21	Bearing	—	
22	Hexagon bolt	Carbon steel	Chromating
23	Switch rail	Aluminium alloy	"With magnet/switch rail" only
24	Magnet	—	"With magnet/switch rail" only

Dimensions

LEL25^M_LT

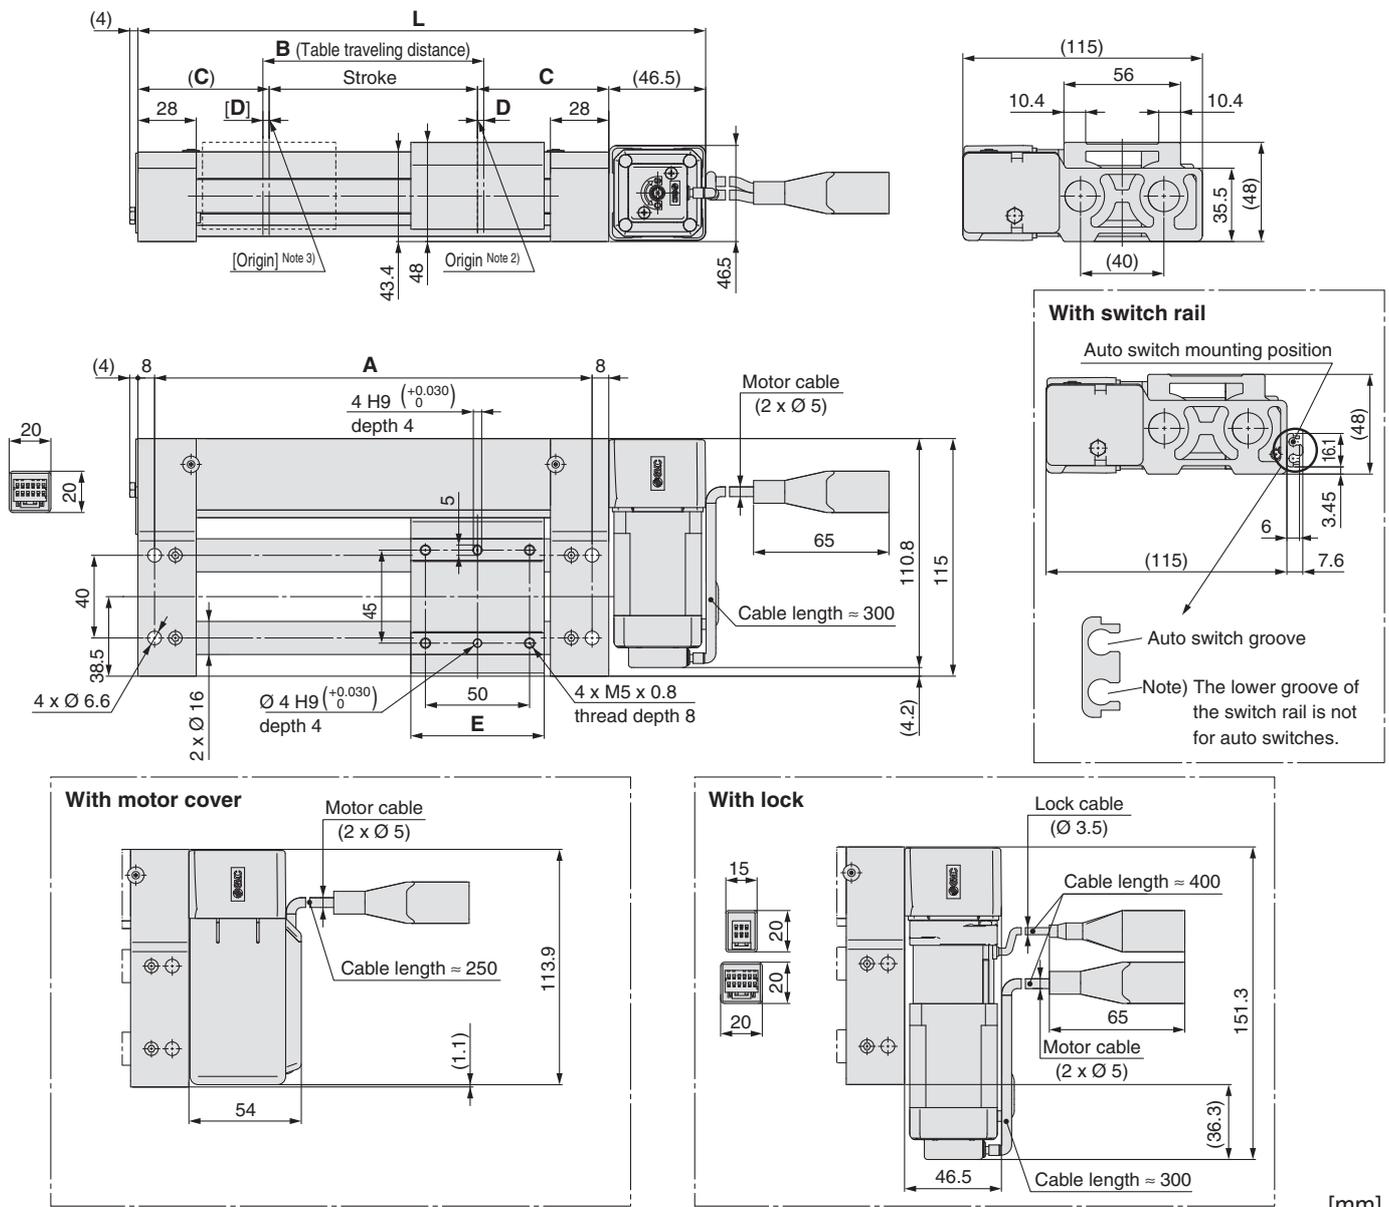

Note 1) Distance within which the table can move when it returns to origin. Make sure a workpiece mounted on the table does not interfere with the workpieces and facilities around the table.

Note 2) Position after return to origin.

Note 3) [] for when the direction of return to origin has changed.

Model	L	L*	A	B	C	D	E
LEL25MT-100□-□□□□□	272.5	280	210	106	63	3	64
LEL25MT-200□-□□□□□	372.5	380	310	206			
LEL25MT-300□-□□□□□	472.5	480	410	306			
LEL25MT-400□-□□□□□	572.5	580	510	406			
LEL25MT-500□-□□□□□	672.5	680	610	506			
LEL25MT-600□-□□□□□	772.5	780	710	606			
LEL25MT-700□-□□□□□	872.5	880	810	706			
LEL25MT-800□-□□□□□	972.5	980	910	806			
LEL25MT-900□-□□□□□	1072.5	1080	1010	906			
LEL25MT-1000□-□□□□□	1172.5	1180	1110	1006			
LEL25LT-100□-□□□□□	292.5	300	230	108	73	4	82
LEL25LT-200□-□□□□□	392.5	400	330	208			
LEL25LT-300□-□□□□□	492.5	500	430	308			
LEL25LT-400□-□□□□□	592.5	600	530	408			
LEL25LT-500□-□□□□□	692.5	700	630	508			
LEL25LT-600□-□□□□□	792.5	800	730	608			
LEL25LT-700□-□□□□□	892.5	900	830	708			
LEL25LT-800□-□□□□□	992.5	1000	930	808			
LEL25LT-900□-□□□□□	1092.5	1100	1030	908			
LEL25LT-1000□-□□□□□	1192.5	1200	1130	1008			

* With motor cover



Series LEL

Electric Actuator/Guide Rod Slider Specific Product Precautions 1

Be sure to read before handling. Refer to back cover for Safety Instructions and the Operation Manual for Electric Actuator Precautions.
Please download it via our website, <http://www.smc.eu>

Design

⚠ Caution

- 1. Do not apply a load in excess of the operating limit.**
Select a suitable actuator by work load and allowable moment. If the product is used outside of the operating limit, the eccentric load applied to the guide will be excessive and have adverse effects such as creating play on the guide, degrading accuracy and shortening the life of the product.
And also when "With magnet/switch rail" option is selected, Auto switch may not detect correctly by the deflection of the guide.
- 2. Do not use the product in applications where excessive external force or impact force is applied to it.**
This can cause failure.
- 3. Because of the guide mechanism type, vibration that comes from an external source may be introduced into the workpiece during operation. Do not use this product in a location where vibration is not allowed.**

Handling


⚠ Caution

- 1. Set the position determination width in the step data to at least 1.**
Otherwise, completion signal of in position may not be output.
- 2. INP output signal**
 - 1) Positioning operation
When the product comes within the set range by step data [In position], the INP output signal will turn on.
Initial value: Set to [1] or higher.

Handling

⚠ Caution

- 3. Never hit at the stroke end except during return to origin.**
When incorrect instructions are inputted, such as using the product outside of the specification limits or operation outside of actual stroke through changes in the controller/driver setting and/or origin position, the table may collide against the stroke end of the actuator. Check these points before use.
If the table collides against the stroke end of the actuator, the guide, belt or internal stopper can be broken. This may lead to abnormal operation.

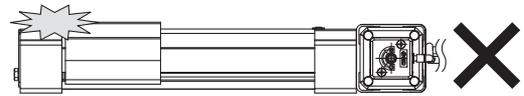

- 4. The moving force should be the initial value (100 %).**
If the moving force is set below the initial value, it may cause an alarm.
- 5. The actual speed of this actuator is affected by the work load.**
When selecting a product, check the catalogue for the instructions regarding selection.
- 6. Do not apply a load, impact or resistance in addition to the transferred load during return to origin.**
Additional force will cause the displacement of the origin position since it is based on detected motor torque.
- 7. Do not dent, scratch or cause other damage to the body and table mounting surfaces.**
This may cause unevenness in the mounting surface, play in the guide or an increase in the sliding resistance.
- 8. Do not apply strong impact or an excessive moment while mounting a workpiece.**
If an external force over the allowable moment is applied, it may cause play in the guide or an increase in the sliding resistance.
- 9. Keep the flatness of the mounting surface 0.2 mm or less.**
Unevenness of a workpiece or base mounted on the body of the product may cause play in the guide and an increase in the sliding resistance.
- 10. When mounting the product, keep a 40 mm or longer diameter for bends in the cable.**
- 11. Do not hit the table with the workpiece in the positioning operation and positioning range.**
- 12. Hold by the end plates when moving the body. Do not hold the belt cover.**



Series LEL

Electric Actuator/Guide Rod Slider Specific Product Precautions 2

Be sure to read before handling. Refer to back cover for Safety Instructions and the Operation Manual for Electric Actuator Precautions.
Please download it via our website, <http://www.smc.eu>


Handling

⚠ Caution

13. When mounting the product, use screws with adequate length and tighten them with adequate torque.


Tightening the screws with a higher torque than recommended may cause a malfunction, whilst the tightening with a lower torque can cause the displacement of the mounting position or in extreme conditions the actuator could become detached from its mounting position.

Body fixed

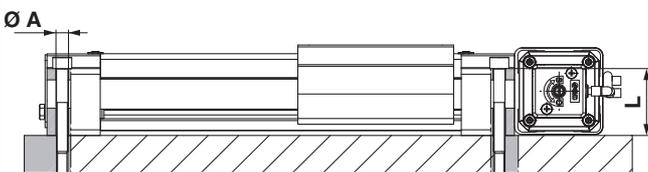

Model	Bolt	Max. tightening torque [N·m]	Ø A [mm]	L [mm]
LEL25	M6	5.2	6.6	35.5

Workpiece fixed

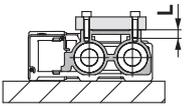

Model	Bolt	Max. tightening torque [N·m]	L (Max. screw-in depth) [mm]
LEL25	M5 x 0.8	3	8

To prevent the workpiece fixing bolts from touching the body, use bolts that are 0.5 mm or shorter than the maximum screw-in depth. If long bolts are used, they can touch the body and cause a malfunction, etc.

14. Do not operate by fixing the table and moving the actuator body.
15. The belt drive actuator cannot be used vertically for applications.
16. Check the specifications for the minimum speed of each actuator.
Otherwise, unexpected malfunctions, such as knocking, may occur.
17. In the case of the belt driven actuator, vibration may occur during operation at speeds within the actuator specifications, this could be caused by the operating conditions. Change the speed setting to a speed that does not cause vibration.

Maintenance

⚠ Warning

Maintenance frequency

Perform maintenance according to the table below.

Frequency	Appearance check	Internal check	Belt check
Inspection before daily operation	○	—	—
Inspection every 6 months/1000 km/5 million cycles*	○	○	○

* Select whichever comes first.

• Items for visual appearance check

1. Loose set screws, Abnormal dirt
2. Check of flaw and cable joint
3. Vibration, Noise

• Items for internal check

1. Lubricant condition on moving parts.
2. Loose or mechanical play in fixed parts or fixing screws.

• Items for belt check

Stop operation immediately and replace the belt when belt appear to be below. Further, ensure your operating environment and conditions satisfy the requirements specified for the product.

a. Tooth shape canvas is worn out.

Canvas fiber becomes fuzzy. Rubber is removed and the fiber becomes whitish. Lines of fibers become unclear.

b. Peeling off or wearing of the side of the belt

Belt corner becomes round and frayed thread sticks out.

c. Belt partially cut

Belt is partially cut. Foreign matter caught in teeth other than cut part causes flaw.

d. Vertical line of belt teeth

Flaw which is made when the belt runs on the flange.

e. Rubber back of the belt is softened and sticky.

f. Crack on the back of the belt

Controller/Driver

Step Data Input Type Page 15



Step Motor (Servo/24 VDC)
Series LEL

Gateway Unit Page 26



Series LEC-G

Programless Type Page 29



Step Motor (Servo/24 VDC)
Series LEC-P1

Model Selection

Step Motor (Servo/24 VDC)

LEL

LECP6

LEC-G

LECP1

JXC□1

Specific Product
Precautions

Step Data Input Type

Step Motor (Servo/24 VDC)

Series LEC P6




Series LEC P6



How to Order

⚠ Caution
[CE-compliant products]
 ① EMC compliance was tested by combining the electric actuator LE series and the controller LEC series. The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.
[UL-compliant products]
 When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

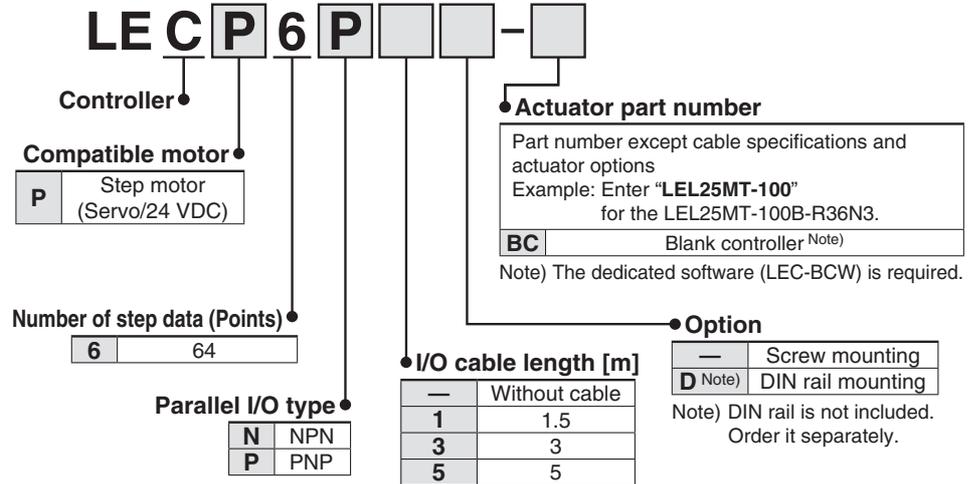


* When controller equipped type is selected when ordering the LE series, you do not need to order this controller.

The controller is sold as single unit after the compatible actuator is set.

Confirm that the combination of the controller and the actuator is correct.

<Check the following before use.>

- ① Check the actuator label for model number. This matches the controller.
- ② Check Parallel I/O configuration matches (NPN or PNP).

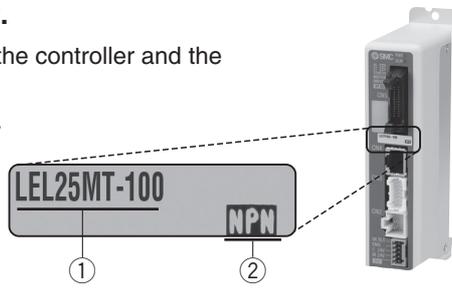

Precautions on blank controller (LECP6 [] [] -BC)

Blank controller is a controller to which the customer can write the data of the actuator to be combined and used. Use the dedicated software (LEC-BCW) for data writing.

- Please download the dedicated software (LEC-BCW) via our website.
- Order the controller setting kit (LEC-W2) separately to use this software.

SMC website
<http://www.smc.eu>

* Refer to the operation manual for using the products. Please download it via our website, <http://www.smc.eu>

Specifications

Basic Specifications

Item	LECP6
Compatible motor	Step motor (Servo/24 VDC)
Power supply ^{Note 1)}	Power voltage: 24 VDC ±10 % ^{Note 2)} [Including motor drive power, control power, stop, lock release]
Parallel input	11 inputs (Photo-coupler isolation)
Parallel output	13 outputs (Photo-coupler isolation)
Compatible encoder	Incremental A/B phase (800 pulse/rotation)
Serial communication	RS485 (Modbus protocol compliant)
Memory	EEPROM
LED indicator	LED (Green/Red) one of each
Lock control	Forced-lock release terminal ^{Note 3)}
Cable length [m]	I/O cable: 5 or less, Actuator cable: 20 or less
Cooling system	Natural air cooling
Operating temperature range [°C]	0 to 40 (No freezing)
Operating humidity range [%RH]	90 or less (No condensation)
Storage temperature range [°C]	-10 to 60 (No freezing)
Storage humidity range [%RH]	90 or less (No condensation)
Insulation resistance [MΩ]	Between the housing and SG terminal: 50 (500 VDC)
Weight [g]	150 (Screw mounting), 170 (DIN rail mounting)


Note 1) Do not use the power supply of "inrush current prevention type" for the controller power supply. When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Note 2) The power consumption changes depending on the actuator model. Refer to the specifications of actuator for more details.


Note 3) Applicable to non-magnetizing lock.

How to Mount

a) Screw mounting (LECP6□□-□)
(Installation with two M4 screws)

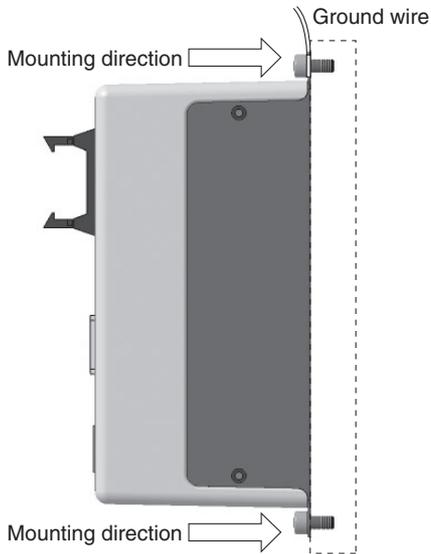

b) DIN rail mounting (LECP6□□D-□)
(Installation with the DIN rail)

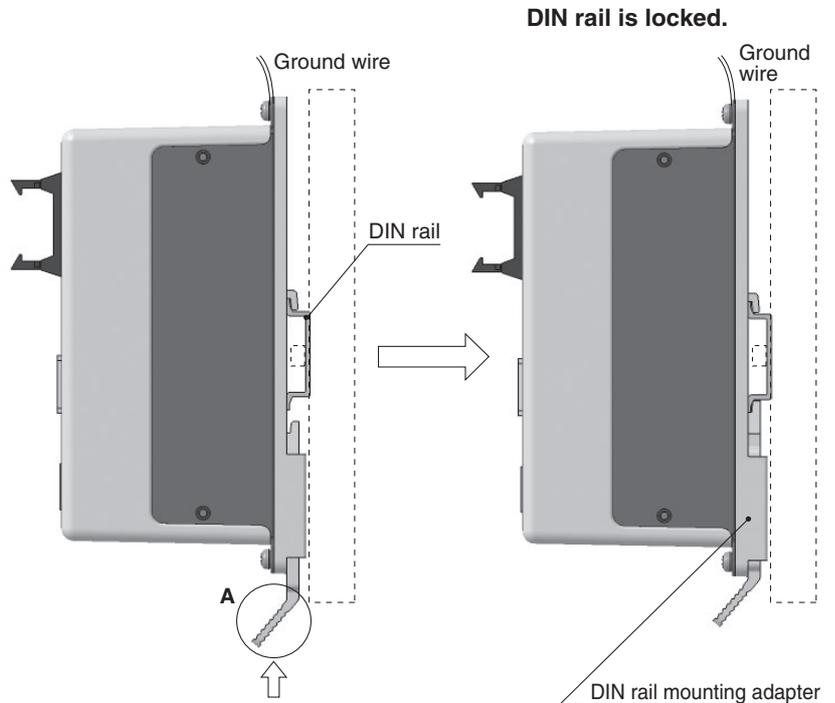


Hook the controller on the DIN rail and press the lever of section **A** in the arrow direction to lock it.

Note) When size 25 or more of the LE series are used, the space between the controllers should be 10 mm or more.

DIN rail
AXT100-DR-□

* For □, enter a number from the "No." line in the table below.
Refer to the dimensions on page 17 for the mounting dimensions.

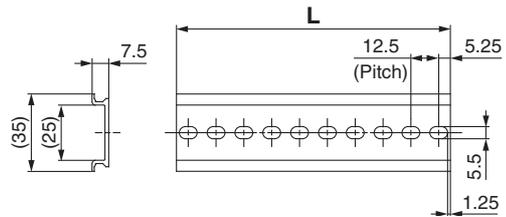

L Dimension [mm]

No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
L	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5


DIN rail mounting adapter
LEC-D0 (with 2 mounting screws)

This should be used when the DIN rail mounting adapter is mounted onto the screw mounting type controller afterward.


Series LECP6

Dimensions

a) Screw mounting (LECP6□□-□)

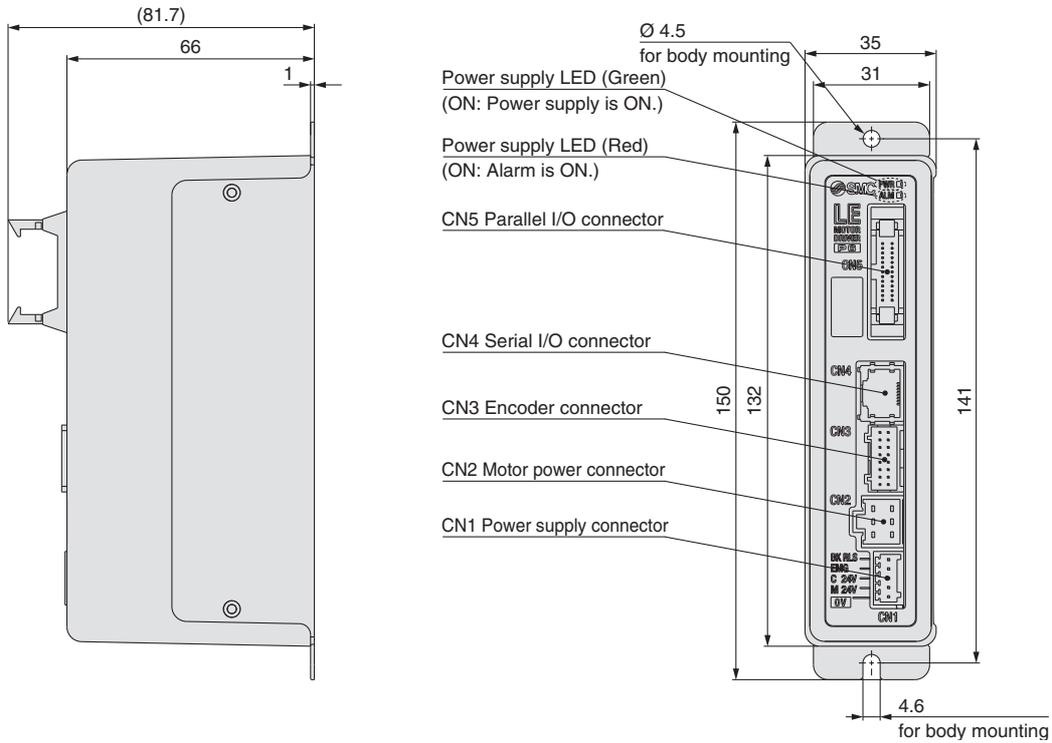


b) DIN rail mounting (LECP6□□D-□)

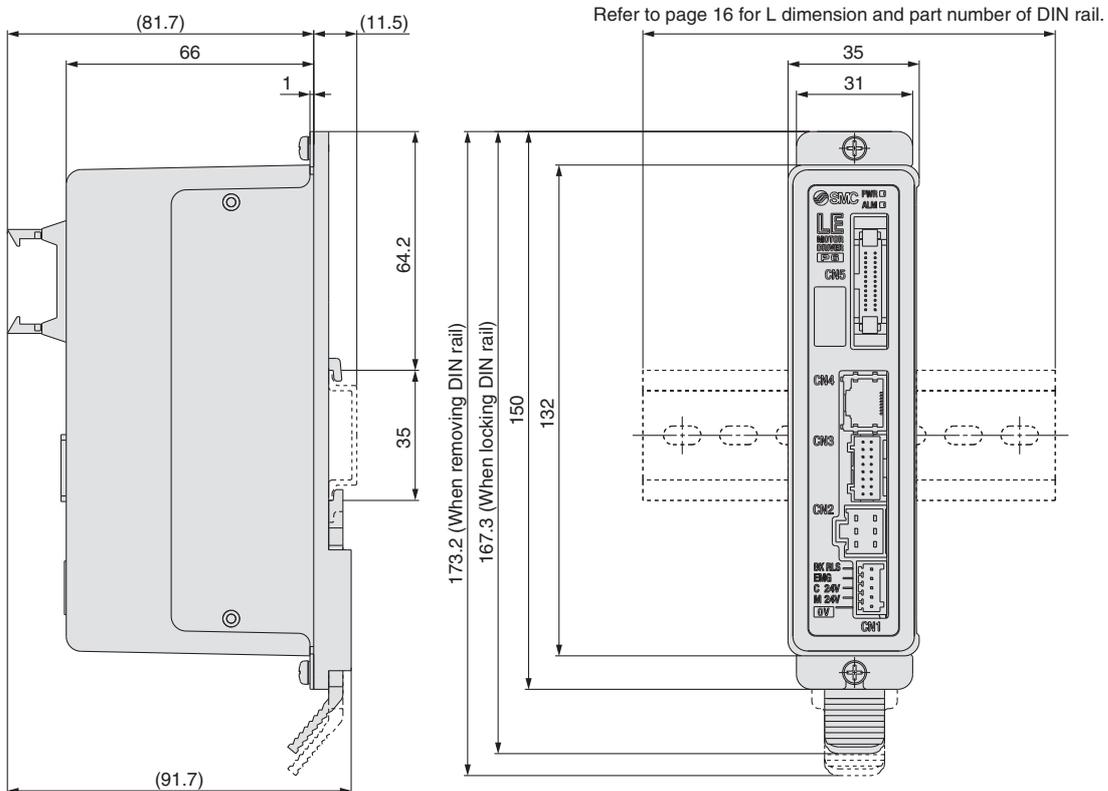

Wiring Example 1

Power Supply Connector: CN1 * Power supply plug is an accessory.

Power supply plug for LECP6

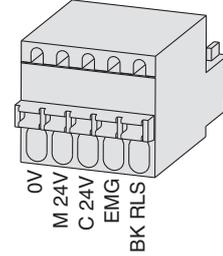

CN1 Power Supply Connector Terminal for LECP6 (PHOENIX CONTACT FK-MC0.5/5-ST-2.5)


Terminal name	Function	Details
0V	Common supply (-)	M 24V terminal/C 24V terminal/EMG terminal/BK RLS terminal are common (-).
M 24V	Motor power supply (+)	Motor power supply (+) supplied to the controller
C 24V	Control power supply (+)	Control power supply (+) supplied to the controller
EMG	Stop (+)	Input (+) for releasing the stop
BK RLS	Lock release (+)	Input (+) for releasing the lock

Wiring Example 2


Parallel I/O Connector: CN5 * When you connect a PLC etc., to the CN5 parallel I/O connector, use the I/O cable (LEC-CN5-□).
* The wiring should be changed depending on the type of the parallel I/O (NPN or PNP).

Wiring diagram

LECP6N□□-□ (NPN)

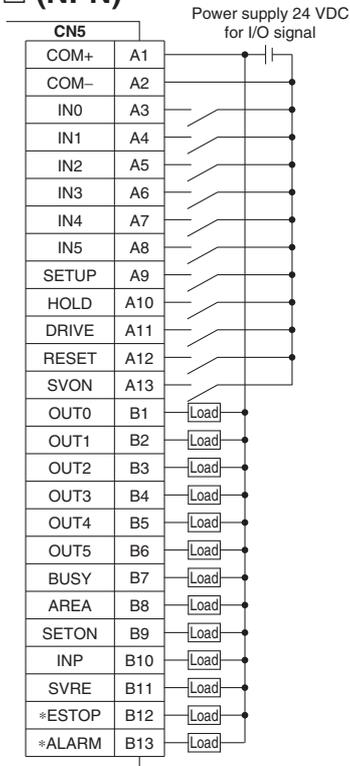

LECP6P□□-□ (PNP)

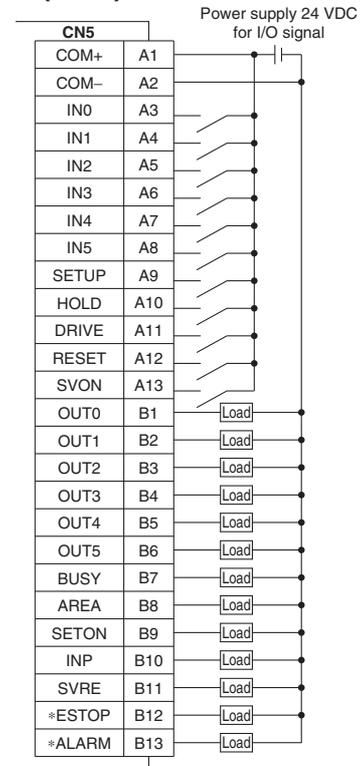

Input Signal

Name	Details
COM+	Connects the power supply 24 V for input/output signal
COM-	Connects the power supply 0 V for input/output signal
IN0 to IN5	Step data specified Bit No. (Input is instructed in the combination of IN0 to 5.)
SETUP	Instruction to return to origin
HOLD	Operation is temporarily stopped
DRIVE	Instruction to drive
RESET	Alarm reset and operation interruption
SVON	Servo ON instruction

Output Signal

Name	Details
OUT0 to OUT5	Outputs the step data no. during operation
BUSY	Outputs when the actuator is moving
AREA	Outputs within the step data area output setting range
SETON	Outputs when returning to origin
INP	Outputs when target position or target force is reached (Turns on when the positioning or pushing is completed.)
SVRE	Outputs when servo is on
*ESTOP ^{Note)}	Not output when EMG stop is instructed
*ALARM ^{Note)}	Not output when alarm is generated

(Note) Signal of negative-logic circuit (N.C.)


Series LECP6

Step Data Setting

Step data setting for positioning

In this setting, the actuator moves toward and stops at the target position.

The following diagram shows the setting items and operation. The setting items and set values for this operation are stated below.

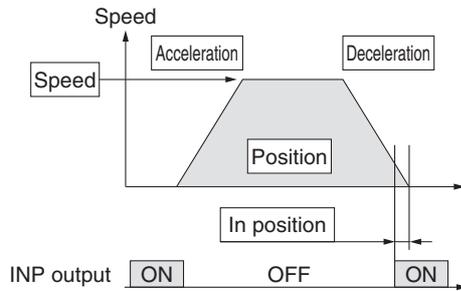


- ◎: Need to be set.
- : Need to be adjusted as required.
- : Setting is not required.

Step Data (Positioning)

Necessity	Item	Details
◎	Movement MOD	When the absolute position is required, set Absolute. When the relative position is required, set Relative.
◎	Speed	Transfer speed to the target position
◎	Position	Target position
○	Acceleration	Parameter which defines how rapidly the actuator reaches the speed set. The higher the set value, the faster it reaches the speed set.
○	Deceleration	Parameter which defines how rapidly the actuator comes to stop. The higher the set value, the quicker it stops.
◎	Pushing force	Set 0. (If values 1 to 100 are set, the operation will be changed to the pushing operation.)
—	Trigger LV	Setting is not required.
—	Pushing speed	Setting is not required.
○	Moving force	Max. torque during the positioning operation (No specific change is required.)
○	Area 1, Area 2	Condition that turns on the AREA output signal.
○	In position	Condition that turns on the INP output signal. When the actuator enters the range of [in position], the INP output signal turns on. (It is unnecessary to change this from the initial value.) When it is necessary to output the arrival signal before the operation is completed, make the value larger.


Signal Timing

Return to Origin

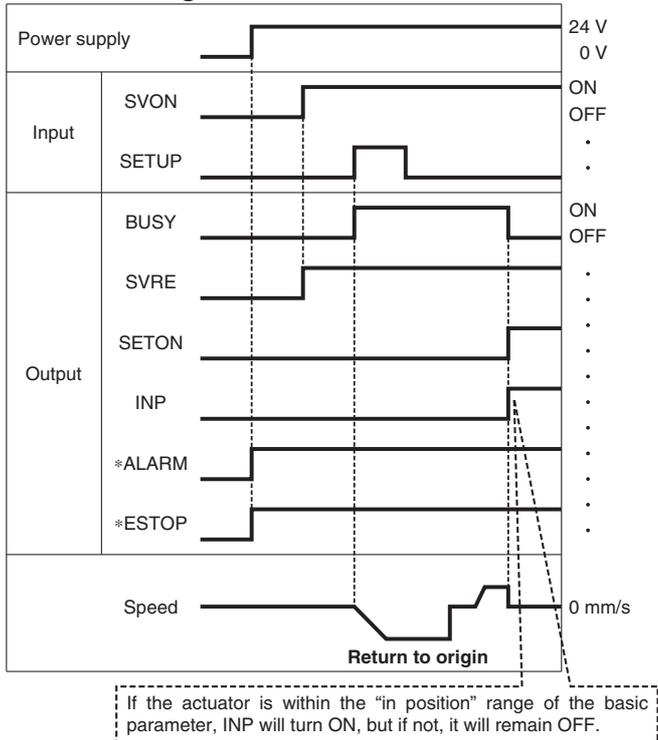


*"ALARM" and "*ESTOP" are expressed as negative-logic circuit.

Positioning Operation

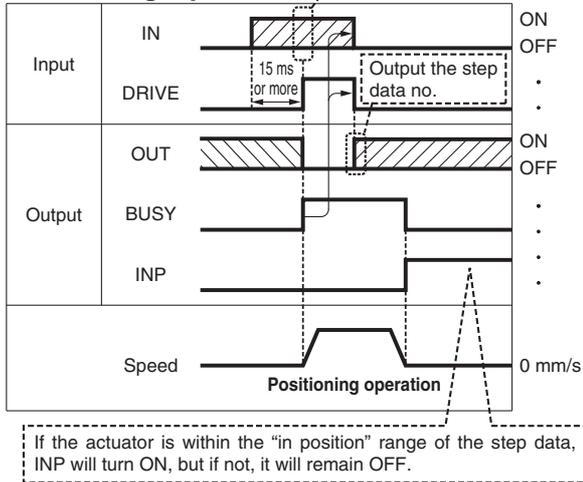


*"OUT" is output when "DRIVE" is changed from ON to OFF.
(When power supply is applied, "DRIVE" or "RESET" is turned ON or "*ESTOP" is turned OFF, all of the "OUT" outputs are OFF.)

HOLD

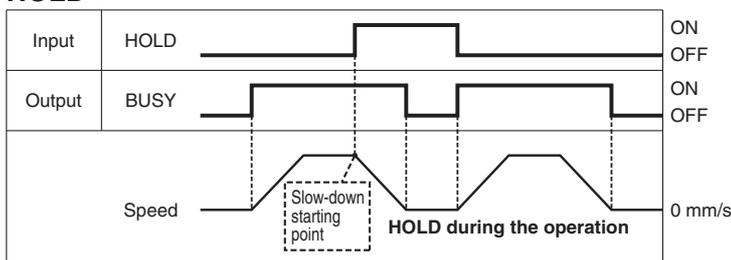

* When the actuator is in the positioning range in the pushing operation, it does not stop even if HOLD signal is input.

Reset

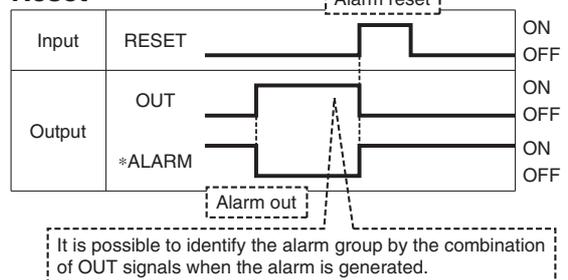

*"ALARM" is expressed as negative-logic circuit.

Series LECP6

Options: Actuator Cable

[Robotic cable, standard cable for step motor (Servo/24 VDC)]

LE-CP-1-□

Cable length (L) [m]


1	1.5
3	3
5	5
8	8*
A	10*
B	15*
C	20*

* Produced upon receipt of order (Robotic cable only)


Cable type

—	Robotic cable (Flexible cable)
S	Standard cable

LE-CP-¹/₅/Cable length: 1.5 m, 3 m, 5 m

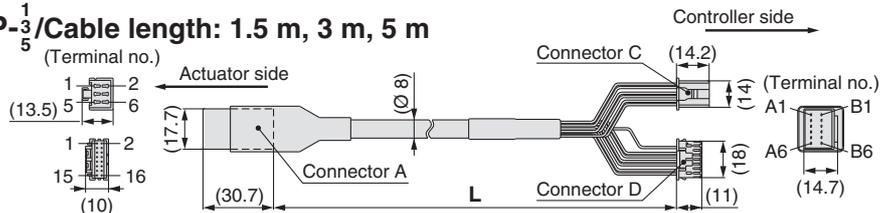

LE-CP-^{8 B}/_{A C}/Cable length: 8 m, 10 m, 15 m, 20 m
(* Produced upon receipt of order)

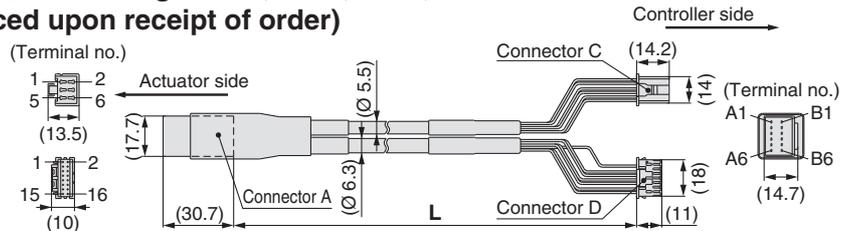

Signal	Connector A terminal no.	Connector B terminal no.	Cable colour	Connector C terminal no.
A	B-1	A-1	Brown	2
A	A-1	B-1	Red	1
B	B-2	A-2	Orange	6
B	A-2	B-2	Yellow	5
COM-A/COM	B-3	A-3	Green	3
COM-B/—	A-3	B-3	Blue	4
Shield				
Vcc	B-4	A-4	Brown	12
GND	A-4	B-4	Black	13
A	B-5	A-5	Red	7
A	A-5	B-5	Black	6
B	B-6	A-6	Orange	9
B	A-6	B-6	Black	8
—	—	—	—	3

[Robotic cable, standard cable with lock and sensor for step motor (Servo/24 VDC)]

LE-CP-1-B-□

Cable length (L) [m]

1	1.5
3	3
5	5
8	8*
A	10*
B	15*
C	20*


* Produced upon receipt of order (Robotic cable only)

With lock and sensor


Cable type

—	Robotic cable (Flexible cable)
S	Standard cable

LE-CP-¹/₅/Cable length: 1.5 m, 3 m, 5 m

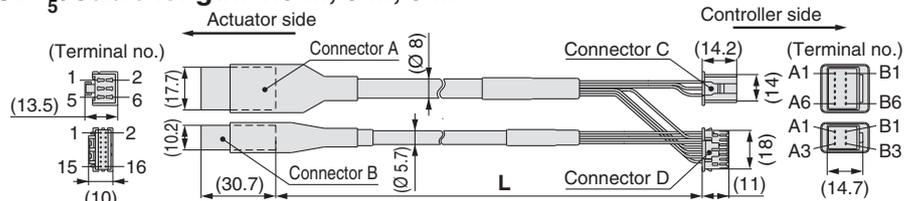

LE-CP-^{8 B}/_{A C}/Cable length: 8 m, 10 m, 15 m, 20 m
(* Produced upon receipt of order)

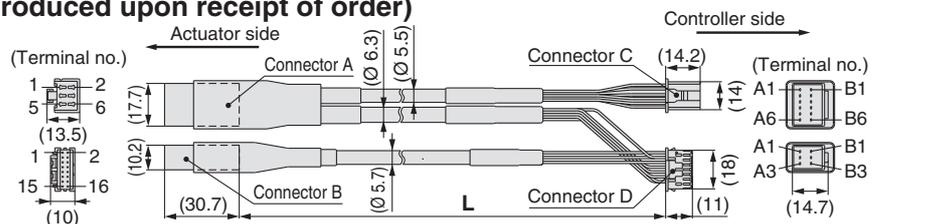


Signal	Connector A terminal no.	Connector B terminal no.	Cable colour	Connector C terminal no.
A	B-1	A-1	Brown	2
A	A-1	B-1	Red	1
B	B-2	A-2	Orange	6
B	A-2	B-2	Yellow	5
COM-A/COM	B-3	A-3	Green	3
COM-B/—	A-3	B-3	Blue	4
Shield				
Vcc	B-4	A-4	Brown	12
GND	A-4	B-4	Black	13
A	B-5	A-5	Red	7
A	A-5	B-5	Black	6
B	B-6	A-6	Orange	9
B	A-6	B-6	Black	8
—	—	—	—	3
Shield				
Signal	Connector B terminal no.	Connector C terminal no.	Cable colour	Connector D terminal no.
Lock (+)	B-1	4	Red	4
Lock (-)	A-1	5	Black	5
Sensor (+) (Note)	B-3	1	Brown	1
Sensor (-) (Note)	A-3	2	Blue	2

Option: I/O Cable

LEC – CN5 – 1

Cable length (L) [m]	
1	1.5
3	3
5	5

* Conductor size: AWG28

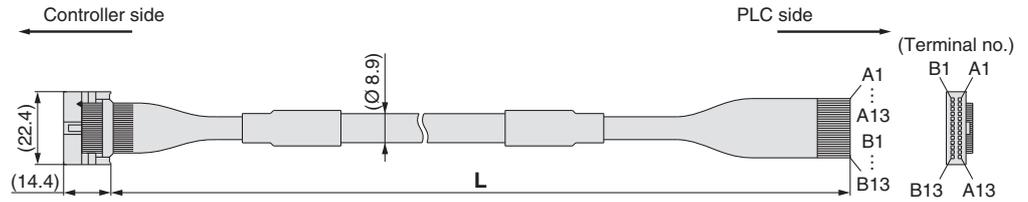

Connector pin no.	Insulation colour	Dot mark	Dot colour
A1	Light brown	■	Black
A2	Light brown	■	Red
A3	Yellow	■	Black
A4	Yellow	■	Red
A5	Light green	■	Black
A6	Light green	■	Red
A7	Grey	■	Black
A8	Grey	■	Red
A9	White	■	Black
A10	White	■	Red
A11	Light brown	■ ■	Black
A12	Light brown	■ ■	Red
A13	Yellow	■ ■	Black

Connector pin no.	Insulation colour	Dot mark	Dot colour
B1	Yellow	■ ■	Red
B2	Light green	■ ■	Black
B3	Light green	■ ■	Red
B4	Grey	■ ■	Black
B5	Grey	■ ■	Red
B6	White	■ ■	Black
B7	White	■ ■	Red
B8	Light brown	■ ■ ■	Black
B9	Light brown	■ ■ ■	Red
B10	Yellow	■ ■ ■	Black
B11	Yellow	■ ■ ■	Red
B12	Light green	■ ■ ■	Black
B13	Light green	■ ■ ■	Red
—			Shield

Series **LEC**

Windows®XP, Windows®7 compatible

Controller Setting Kit/LEC-W2

How to Order


LEC-W2

Controller setting kit
(Japanese and English are available.)

Contents

	Description	Model*
①	Controller setting software (CD-ROM)	LEC-W2-S
②	Communication cable	LEC-W2-C
③	USB cable (between the PC and the communication cable)	LEC-W2-U

* Can be ordered separately.

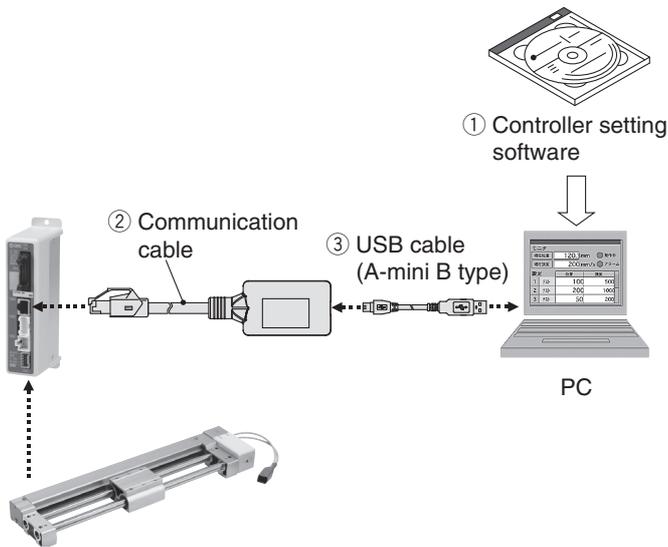

Compatible Controller/Driver

Step data input type

Series **LECP6**

Hardware Requirements


OS	IBM PC/AT compatible machine running Windows®XP (32-bit), Windows®7 (32-bit and 64-bit), Windows®8.1 (32-bit and 64-bit).
Communication interface	USB 1.1 or USB 2.0 ports
Display	XGA (1024 x 768) or more

* Windows®XP, Windows®7 and Windows®8.1 are registered trademarks of Microsoft Corporation in the United States.

* Refer to SMC website for version upgrade information, <http://www.smc.eu>

Screen Example


Easy mode screen example

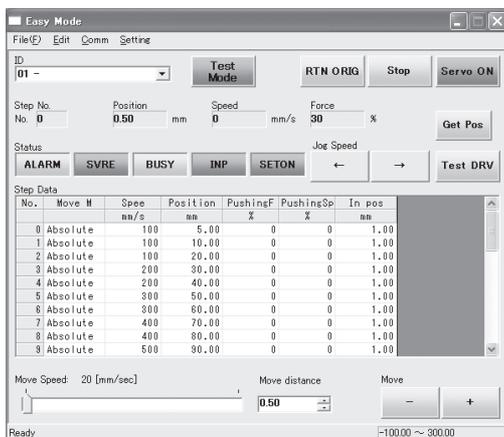

Easy operation and simple setting

- Allowing to set and display actuator step data such as position, speed, force, etc.
- Setting of step data and testing of the drive can be performed on the same page.
- Can be used to jog and move at a constant rate.

Normal mode screen example

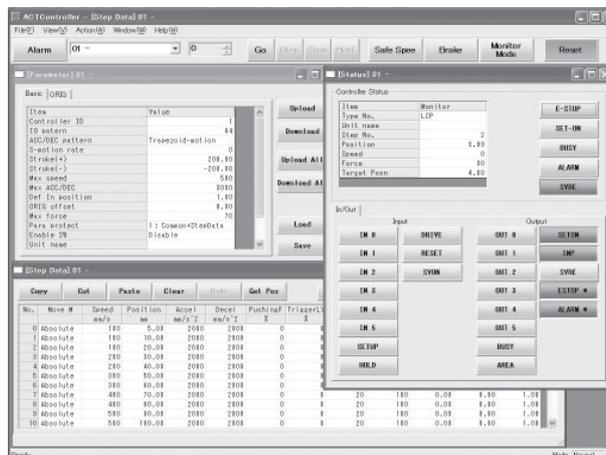

Detailed setting

- Step data can be set in detail.
- Signals and terminal status can be monitored.
- Parameters can be set.
- JOG and constant rate movement, return to origin, test operation and testing of forced output can be performed.

Series LEC Teaching Box/LEC-T1



Model Selection

Step Motor (Servo/24 VDC)

LEL

LECP6

LEC-G

LECP1

JXC□1

Specific Product
Precautions

How to Order

LEC-T1-3EG

Teaching box

Cable length [m]
3 3

Initial language

J	Japanese
E	English

Enable switch

—	None
S	Equipped with enable switch

* Interlock switch for jog and test function

Stop switch

G	Equipped with stop switch
---	---------------------------

* The displayed language can be changed to English or Japanese.



Standard functions

- Chinese character display
- Stop switch is provided.

Option

- Enable switch is provided.

Specifications

Item	Description
Switch	Stop switch, Enable switch (Option)
Cable length [m]	3
Enclosure	IP64 (Except connector)
Operating temperature range [°C]	5 to 50
Operating humidity range [%RH]	90 or less (No condensation)
Weight [g]	350 (Except cable)

[CE-compliant products]

The EMC compliance of the teaching box was tested with the LECP6 series step motor controller (servo/24 VDC) and an applicable actuator.


[UL-compliant products]

When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Easy Mode

Function	Details
Step data	• Setting of step data
Jog	• Jog operation • Return to origin
Test	• 1 step operation • Return to origin
Monitor	• Display of axis and step data no. • Display of two items selected from Position, Speed, Force.
ALM	• Active alarm display • Alarm reset
TB setting	• Reconnection of axis (Ver. 1.**) • Displayed language setting (Ver. 2.**) • Setting of easy/normal mode • Setting step data and selection of items from easy mode monitor


Menu Operations Flowchart

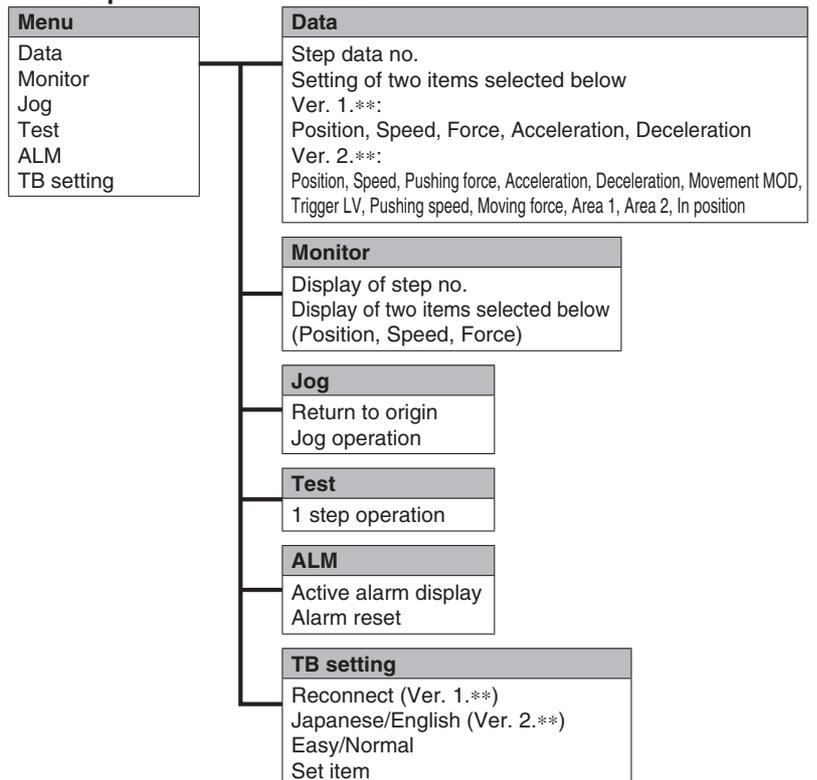


Normal Mode

Function	Details
Step data	• Step data setting
Parameter	• Parameters setting
Test	<ul style="list-style-type: none"> • Jog operation/Constant rate movement • Return to origin • Test drive (Specify a maximum of 5 step data and operate.) • Forced output (Forced signal output, Forced terminal output)
Monitor	<ul style="list-style-type: none"> • Drive monitor • Output signal monitor • Input signal monitor • Output terminal monitor • Input terminal monitor
ALM	<ul style="list-style-type: none"> • Active alarm display (Alarm reset) • Alarm log record display
File	<ul style="list-style-type: none"> • Data saving Save the step data and parameters of the controller which is being used for communication (it is possible to save four files, with one set of step data and parameters defined as one file). • Load to controller Loads the data which is saved in the teaching box to the controller which is being used for communication. • Delete the saved data. • File protection (Ver. 2.**)
TB setting	<ul style="list-style-type: none"> • Display setting (Easy/Normal mode) • Language setting (Japanese/English) • Backlight setting • LCD contrast setting • Beep sound setting • Max. connection axis • Distance unit (mm/inch)
Reconnect	• Reconnection of axis

Menu Operations Flowchart

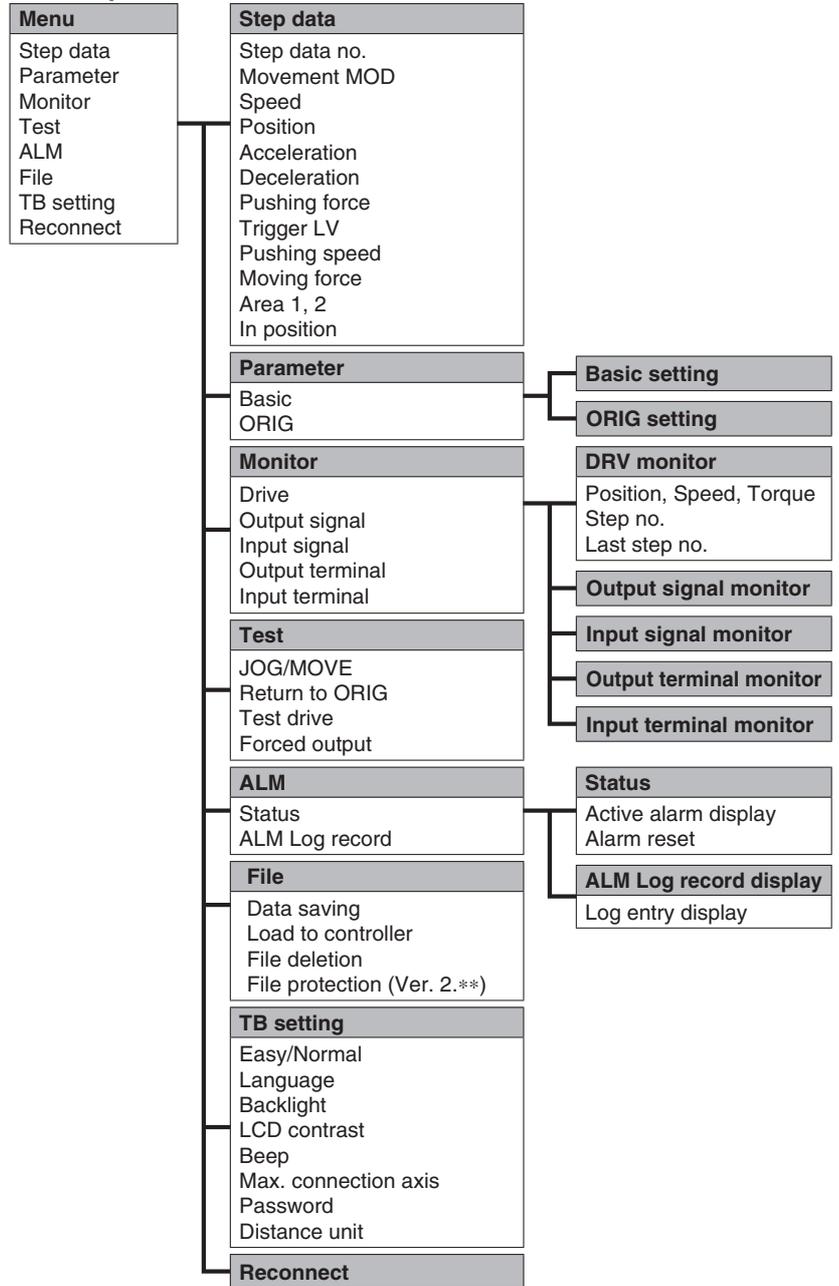

Dimensions

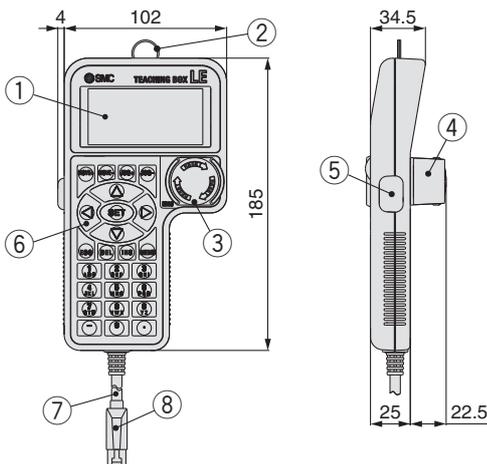

No.	Description	Function
1	LCD	A screen of liquid crystal display (with backlight)
2	Ring	A ring for hanging the teaching box
3	Stop switch	When switch is pushed in, the switch locks and stops. The lock is released when it is turned to the right.
4	Stop switch guard	A guard for the stop switch
5	Enable switch (Option)	Prevents unintentional operation (unexpected operation) of the jog test function. Other functions such as data change are not covered.
6	Key switch	Switch for each input
7	Cable	Length: 3 meters
8	Connector	A connector connected to CN4 of the controller

Gateway Unit Series LEC-G



Model Selection

How to Order

⚠ Caution

[CE-compliant products]
EMC compliance was tested by combining the electric actuator LE series and the controller LEC series. The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.

[UL-compliant products]
When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Gateway unit LEC-G MJ2

Applicable Fieldbus protocols

MJ2	CC-Link Ver. 2.0
DN1	DeviceNet™
PR1	PROFIBUS DP
EN1	EtherNet/IP™

Mounting

—	Screw mounting
D (Note)	DIN rail mounting

Note) DIN rail is not included.
Order it separately.



Cable


LEC-CG 1-L

Cable type

1	Communication cable
2	Cable between branches

Cable length

K	0.3 m
L	0.5 m
1	1 m

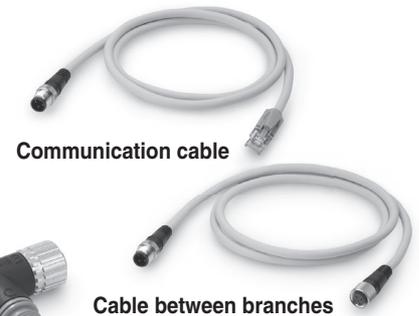

Branch connector LEC-CGD

Branch connector



Terminating resistor LEC-CGR

Specifications

Model		LEC-GMJ2□	LEC-GDN1□	LEC-GPR1□	LEC-GEN1□		
Communication specifications	Applicable system	Fieldbus	CC-Link	DeviceNet™	PROFIBUS DP		
		Version (Note 1)	Ver. 2.0	Release 2.0	V1		
	Communication speed [bps]		156 k/625 k/2.5 M /5 M/10 M	125 k/250 k/500 k	9.6 k/19.2 k/45.45 k/ 93.75 k/187.5 k/500 k/ 1.5 M/3 M/6 M/12 M	10 M/100 M	
	Configuration file (Note 2)		—	EDS file	GSD file	EDS file	
	I/O occupation area		4 stations occupied (8 times setting)	Input 896 points 108 words Output 896 points 108 words	Input 200 bytes Output 200 bytes	Input 57 words Output 57 words	Input 256 bytes Output 256 bytes
	Power supply for communication	Power supply voltage [V] (Note 5)	—	11 to 25 VDC	—	—	
		Internal current consumption [mA]	—	100	—	—	
	Communication connector specifications		Connector (Accessory)	Connector (Accessory)	D-sub	RJ45	
Terminating resistor		Not included	Not included	Not included	Not included		
Power supply voltage [V] (Note 6)		24 VDC ±10 %					
Current consumption [mA]	Not connected to teaching box	200					
	Connected to teaching box	300					
EMG output terminal		30 VDC 1 A					
Controller specifications	Applicable controllers	Series LEC-P6, Series LEC-A6					
	Communication speed [bps] (Note 3)	115.2 k/230.4 k					
	Max. number of connectable controllers (Note 4)	12	8 (Note 5)	5	12		
Accessories		Power supply connector, communication connector		Power supply connector			
Operating temperature range [°C]		0 to 40 (No freezing)					
Operating humidity range [%RH]		90 or less (No condensation)					
Storage temperature range [°C]		-10 to 60 (No freezing)					
Storage humidity range [%RH]		90 or less (No condensation)					
Weight [g]		200 (Screw mounting), 220 (DIN rail mounting)					

Note 1) Please note that the version is subject to change.

Note 2) Each file can be downloaded from the SMC website, <http://www.smc.eu>

Note 3) When using a teaching box (LEC-T1-□), set the communication speed to 115.2 kbps.

Note 4) A communication response time for 1 controller is approximately 30 ms.

Refer to "Communication Response Time Guideline" for response times when several controllers are connected.

Note 5) For step data input, up to 12 controllers connectable.

Note 6) When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Step Motor (Servo/24 VDC)

LEL

LECP6

LEC-G

LECP1


JXC□1

Specific Product Precautions

Series LEC-G

Communication Response Time Guideline

Response time between gateway unit and controllers depends on the number of controllers connected to the gateway unit. For response time, refer to the graph below.

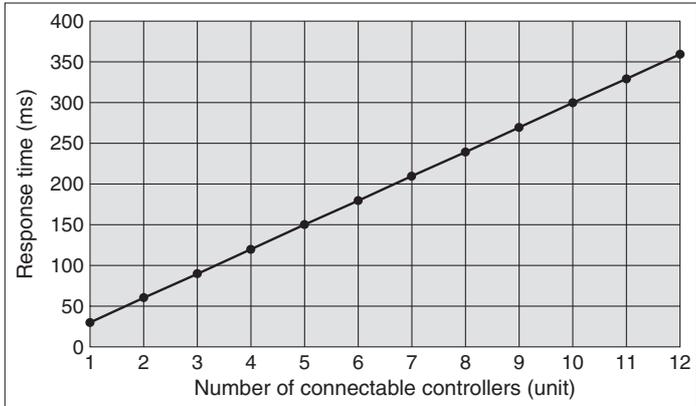


* This graph shows delay times between gateway unit and controllers. Fieldbus network delay time is not included.


Dimensions

Screw mounting (LEC-G□□□)


Applicable Fieldbus protocol: CC-Link Ver. 2.0

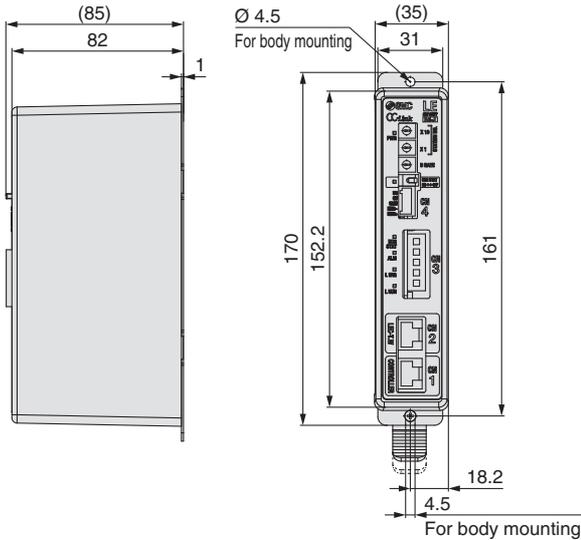


Applicable Fieldbus protocol: DeviceNet™

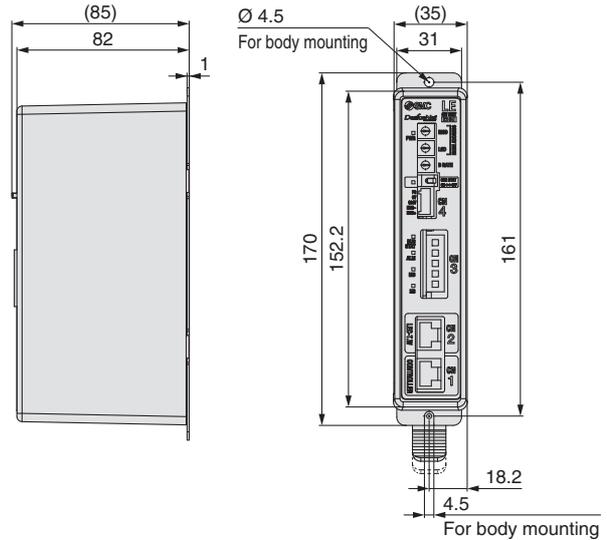

Applicable Fieldbus protocol: PROFIBUS DP

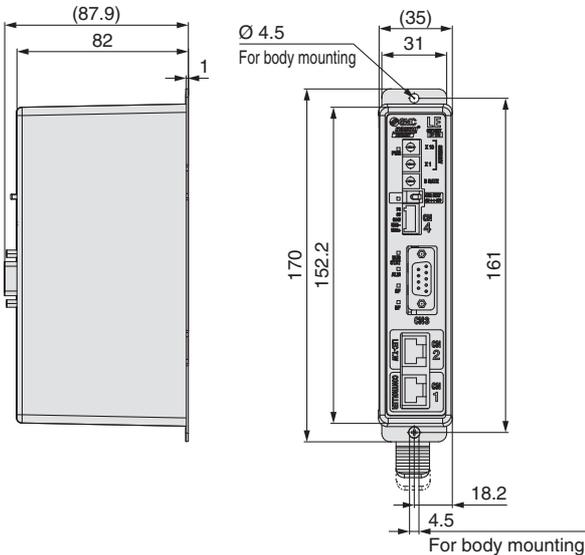

Applicable Fieldbus protocol: EtherNet/IP™

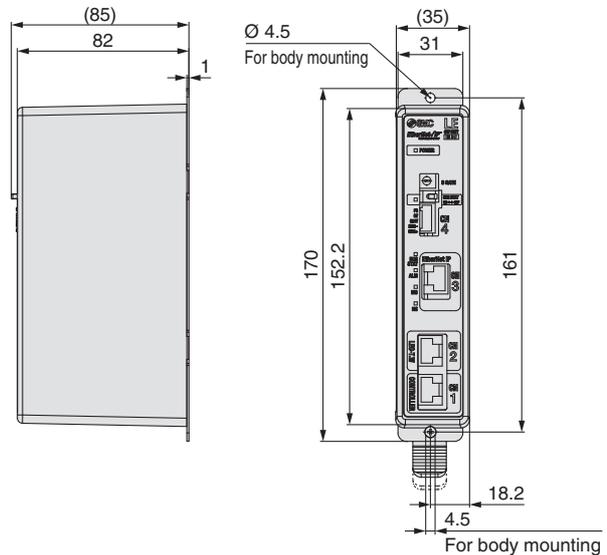


■ **Trademark** DeviceNet™ is a trademark of ODVA. EtherNet/IP™ is a trademark of ODVA.


Dimensions

DIN rail mounting (LEC-G□□□D)


Applicable Fieldbus protocol: CC-Link Ver. 2.0

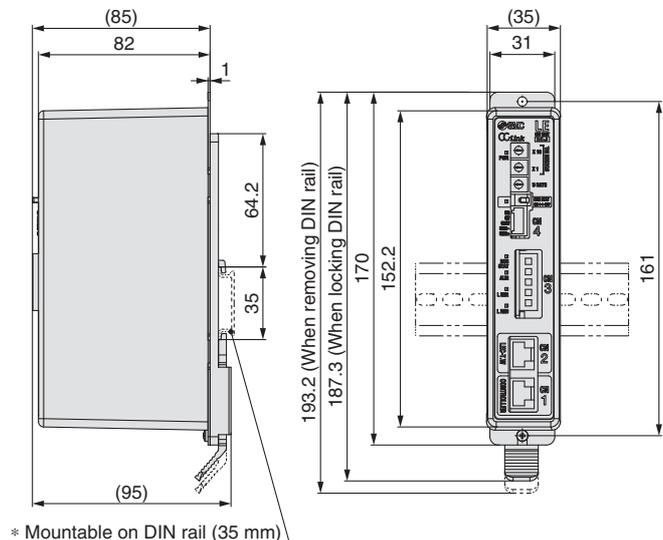


Applicable Fieldbus protocol: DeviceNet™

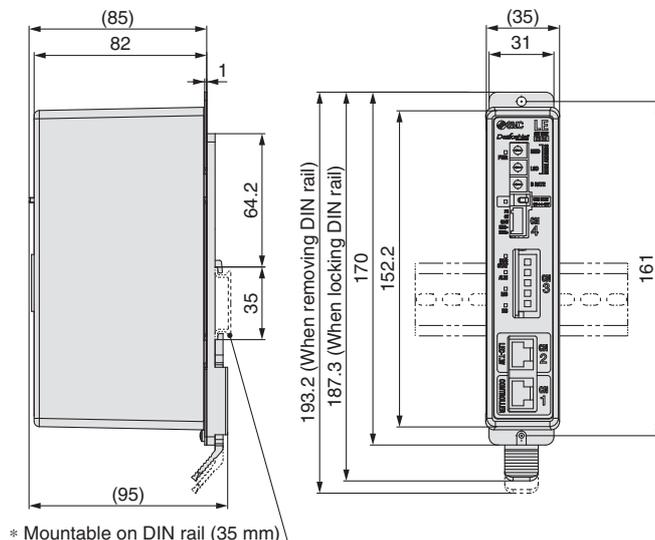

Applicable Fieldbus protocol: PROFIBUS DP

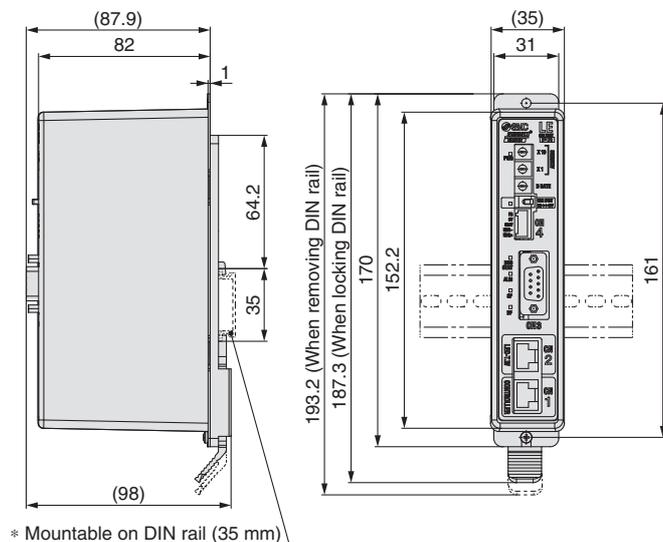


Applicable Fieldbus protocol: EtherNet/IP™

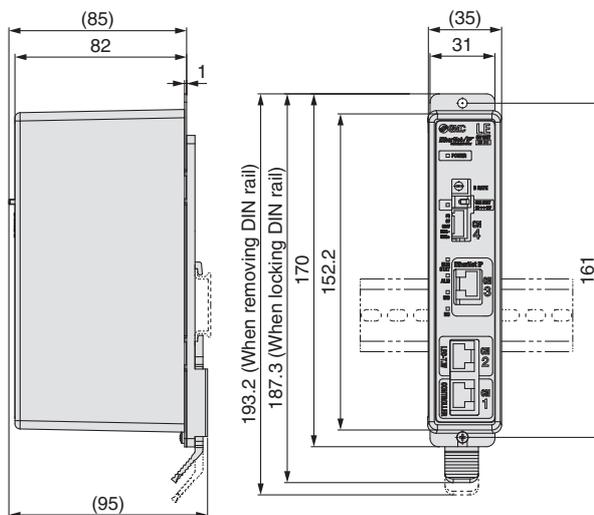

DIN rail AXT100-DR-□

* For □, enter a number from the "No." line in the table below. Refer to the dimensions above for the mounting dimensions.

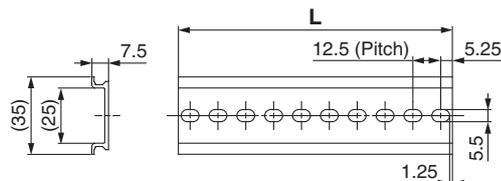

L Dimension [mm]

No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
L	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

■ **Trademark** DeviceNet™ is a trademark of ODVA. EtherNet/IP™ is a trademark of ODVA.

Model Selection

Step Motor (Servo/24 VDC)

LEL

LECP6

LEC-G

LECP1


JXC□1

Specific Product Precautions

Programless Controller Series **LECP1**



How to Order

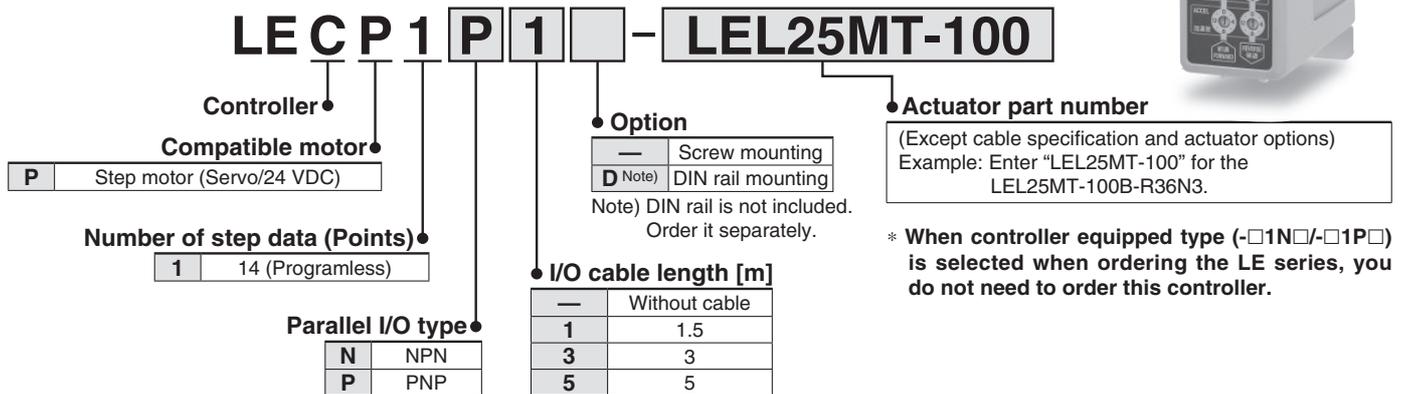

⚠ Caution
[CE-compliant products]
 EMC compliance was tested by combining the electric actuator LEF series and the controller LEC series. The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.
[UL-compliant products]
 When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

The controller is sold as single unit after the compatible actuator is set.
 Confirm that the combination of the controller and the actuator is correct.
 * Refer to the Operation Manual for using the products. Please download it via our website, <http://www.smc.eu>

Specifications

Basic Specifications

Item	LECP1
Compatible motor	Step motor (Servo/24 VDC)
Power supply ^{Note 1)}	Power supply voltage: 24 VDC ±10 %, Max. current consumption: 3A (Peak 5A) ^{Note 2)} [Including the motor drive power, control power supply, stop, lock release]
Parallel input	6 inputs (Photo-coupler isolation)
Parallel output	6 outputs (Photo-coupler isolation)
Stop points	14 points (Position number 1 to 14(E))
Compatible encoder	Incremental A/B phase (800 pulse/rotation)
Memory	EEPROM
LED indicator	LED (Green/Red) one of each
7-segment LED display ^{Note 3)}	1 digit, 7-segment display (Red) Figures are expressed in hexadecimal ("10" to "15" in decimal number are expressed as "A" to "F")
Lock control	Forced-lock release terminal ^{Note 4)}
Cable length [m]	I/O cable: 5 or less, Actuator cable: 20 or less
Cooling system	Natural air cooling
Operating temperature range [°C]	0 to 40 (No freezing)
Operating humidity range [%RH]	90 or less (No condensation)
Storage temperature range [°C]	-10 to 60 (No freezing)
Storage humidity range [%RH]	90 or less (No condensation)
Insulation resistance [MΩ]	Between the housing and SG terminal: 50 (500 VDC)
Weight [g]	130 (Screw mounting), 150 (DIN rail mounting)

Note 1) Do not use the power supply of "inrush current prevention type" for the controller input power supply. When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Note 2) The power consumption changes depending on the actuator model. Refer to the each actuator's operation manual etc. for details.


Note 3) "10" to "15" in decimal number are displayed as follows in the 7-segment LED.



Decimal display 10 11 12 13 14 15
 Hexadecimal display A b c d E F

Note 4) Applicable to non-magnetizing lock.

Controller Details

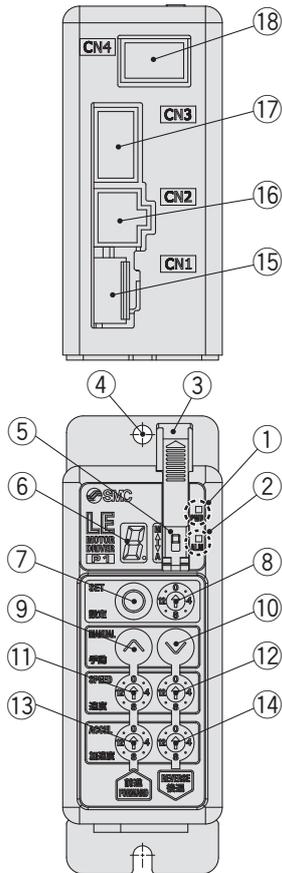


No.	Display	Description	Details
①	PWR	Power supply LED	Power supply ON/Servo ON : Green turns on Power supply ON/Servo OFF: Green flashes
②	ALM	Alarm LED	With alarm : Red turns on Parameter setting : Red flashes
③	—	Cover	Change and protection of the mode switch (Close the cover after changing switch)
④	—	FG	Frame ground (Tighten the bolt with the nut when mounting the controller. Connect the ground wire.)
⑤	—	Mode switch	Switch the mode between manual and auto.
⑥	—	7-segment LED	Stop position, the value set by ⑧ and alarm information are displayed.
⑦	SET	Set button	Decide the settings or drive operation in Manual mode.
⑧	—	Position selecting switch	Assign the position to drive (1 to 14), and the origin position (15).
⑨	MANUAL	Manual forward button	Perform forward jog and inching.
⑩		Manual reverse button	Perform reverse jog and inching.
⑪	SPEED	Forward speed switch	16 forward speeds are available.
⑫		Reverse speed switch	16 reverse speeds are available.
⑬	ACCEL	Forward acceleration switch	16 forward acceleration steps are available.
⑭		Reverse acceleration switch	16 reverse acceleration steps are available.
⑮	CN1	Power supply connector	Connect the power supply cable.
⑯	CN2	Motor connector	Connect the motor connector.
⑰	CN3	Encoder connector	Connect the encoder connector.
⑱	CN4	I/O connector	Connect I/O cable.

How to Mount

Controller mounting shown below.


1. Mounting screw (LECP1□□-□)

(Installation with two M4 screws)

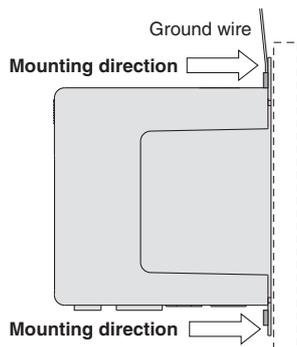

2. Grounding

Tighten the bolt with the nut when mounting the ground wire as shown below.

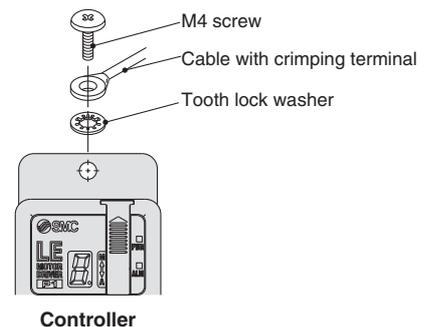


Note) When size 25 or more of the LE series are used, the space between the controllers should be 10 mm or more.

⚠ Caution


- M4 screws, cable with crimping terminal and tooth lock washer are not included. Be sure to carry out grounding earth in order to ensure the noise tolerance.
- Use a watchmaker's screwdriver of the size shown below when changing position switch ⑧ and the set value of the speed/acceleration switch ⑪ to ⑭.

Size

End width **L**: 2.0 to 2.4 [mm]
End thickness **W**: 0.5 to 0.6 [mm]

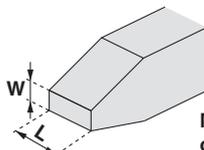


Magnified view of the end of the screwdriver

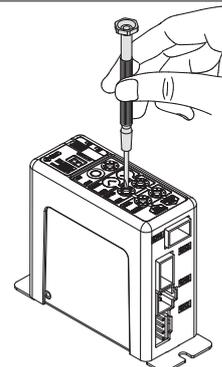

Series LECP1

Dimensions

DIN rail mounting (LEC□1□□D-□)

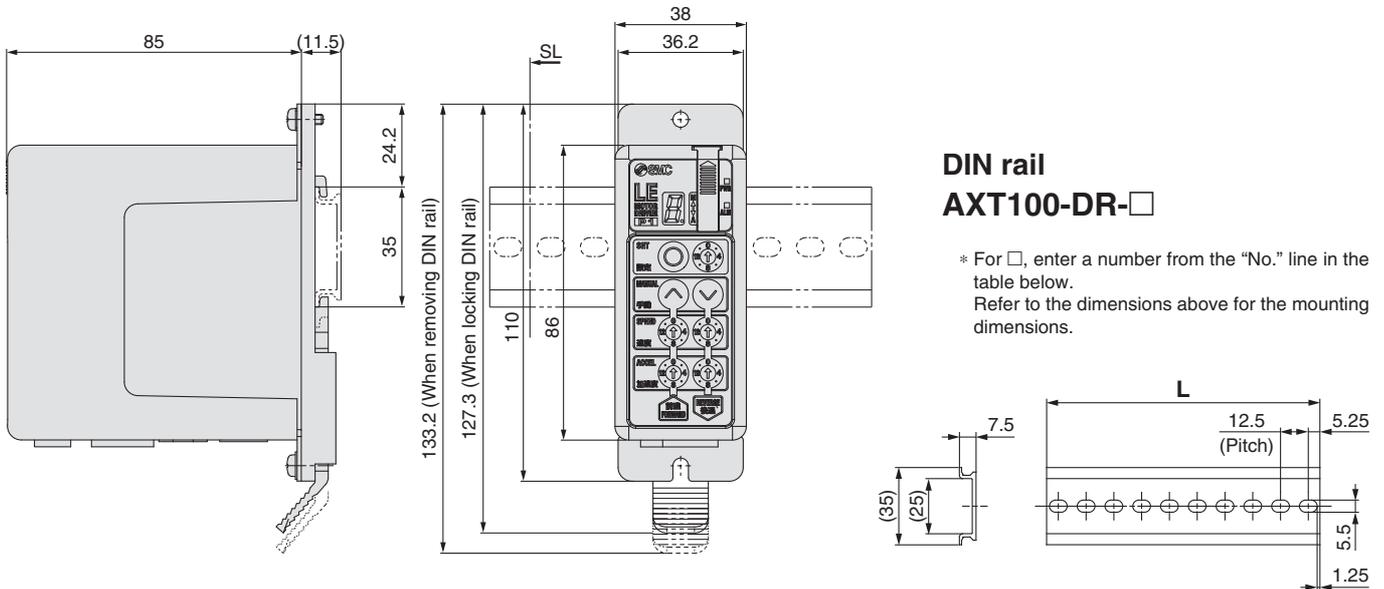

L Dimension [mm]


No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21
L	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273
No.	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40		
L	285.5	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5		

DIN rail mounting adapter

LEC-1-D0 (with 2 mounting screws)

This should be used when the DIN rail mounting adapter is mounted onto the screw mounting type controller afterwards.

Screw mounting (LEC□1□□-□)

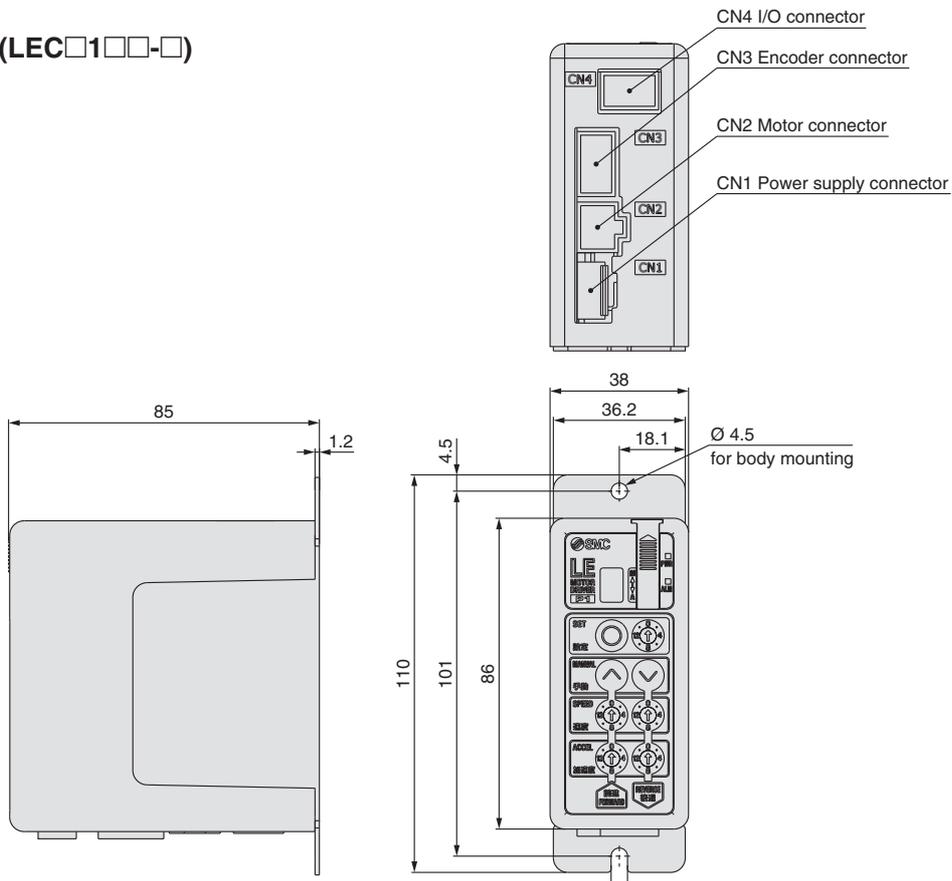

Wiring Example 1

Power Supply Connector: CN1

- * When you connect a CN1 power supply connector, use the power supply cable (LEC-CK1-1).
- * Power supply cable (LEC-CK1-1) is an accessory.

CN1 Power Supply Connector Terminal for LECP1

Terminal name	Cable colour	Function	Details
0V	Blue	Common supply (-)	M 24V terminal/C 24V terminal/BK RLS terminal are common (-).
M 24V	White	Motor power supply (+)	Motor power supply (+) supplied to the controller
C 24V	Brown	Control power supply (+)	Control power supply (+) supplied to the controller
BK RLS	Black	Lock release (+)	Input (+) for releasing the lock

Power supply cable for LECP1 (LEC-CK1-1)




Wiring Example 2


Parallel I/O Connector: CN4

- * When you connect a PLC etc., to the CN4 parallel I/O connector, use the I/O cable (LEC-CK4-□).
- * The wiring should be changed depending on the type of the parallel I/O (NPN or PNP).

■ NPN

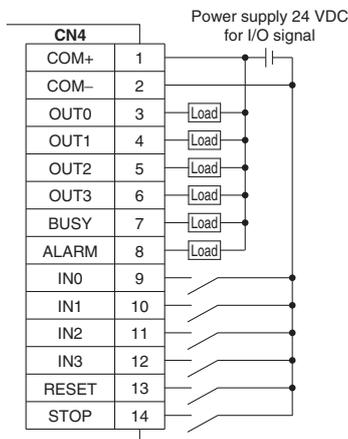

■ PNP

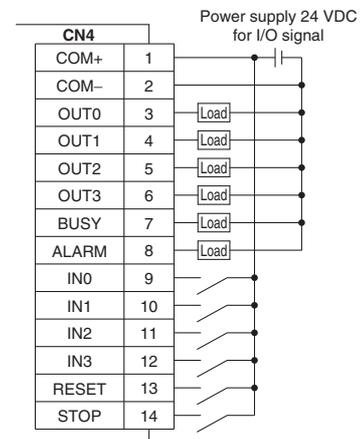

Input Signal

Name	Details								
COM+	Connects the power supply 24 V for input/output signal								
COM-	Connects the power supply 0 V for input/output signal								
IN0 to IN3	<ul style="list-style-type: none"> • Instruction to drive (input as a combination of IN0 to IN3) • Instruction to return to origin (IN0 to IN3 all ON simultaneously) Example - (instruction to drive for position no. 5) <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>IN3</th> <th>IN2</th> <th>IN1</th> <th>IN0</th> </tr> </thead> <tbody> <tr> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>ON</td> </tr> </tbody> </table>	IN3	IN2	IN1	IN0	OFF	ON	OFF	ON
IN3	IN2	IN1	IN0						
OFF	ON	OFF	ON						
RESET	Alarm reset and operation interruption During operation: deceleration stop from position at which signal is input (servo ON maintained) While alarm is active: alarm reset								
STOP	Instruction to stop (after maximum deceleration stop, servo OFF)								

Output Signal

Name	Details								
OUT0 to OUT3	Turns on when the positioning or pushing is completed. (Output is instructed in the combination of OUT0 to 3.) Example - (operation complete for position no. 3) <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>OUT3</th> <th>OUT2</th> <th>OUT1</th> <th>OUT0</th> </tr> </thead> <tbody> <tr> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> </tr> </tbody> </table>	OUT3	OUT2	OUT1	OUT0	OFF	OFF	ON	ON
OUT3	OUT2	OUT1	OUT0						
OFF	OFF	ON	ON						
BUSY	Outputs when the actuator is moving								
*ALARM (Note)	Not output when alarm is active or servo OFF								

Note) Signal of negative-logic circuit (N.C.)

Input Signal [IN0 - IN3] Position Number Chart ○: OFF ●: ON

Position number	IN3	IN2	IN1	IN0
1	○	○	○	●
2	○	○	●	○
3	○	○	●	●
4	○	●	○	○
5	○	●	○	●
6	○	●	●	○
7	○	●	●	●
8	●	○	○	○
9	●	○	○	●
10 (A)	●	○	●	○
11 (B)	●	○	●	●
12 (C)	●	●	○	○
13 (D)	●	●	○	●
14 (E)	●	●	●	○
Return to origin	●	●	●	●


Output Signal [OUT0 - OUT3] Position Number Chart ○: OFF ●: ON

Position number	OUT3	OUT2	OUT1	OUT0
1	○	○	○	●
2	○	○	●	○
3	○	○	●	●
4	○	●	○	○
5	○	●	○	●
6	○	●	●	○
7	○	●	●	●
8	●	○	○	○
9	●	○	○	●
10 (A)	●	○	●	○
11 (B)	●	○	●	●
12 (C)	●	●	○	○
13 (D)	●	●	○	●
14 (E)	●	●	●	○
Return to origin	●	●	●	●

Series LECP1


Signal Timing

(1) Return to Origin

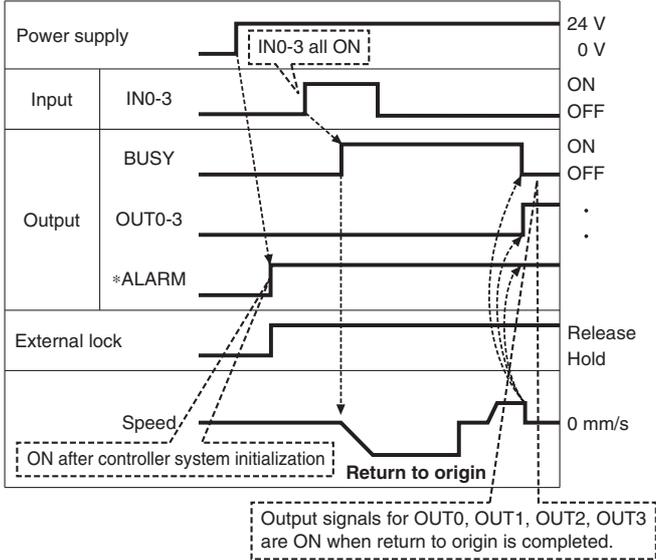


* *ALARM" is expressed as negative-logic circuit.


(2) Positioning Operation

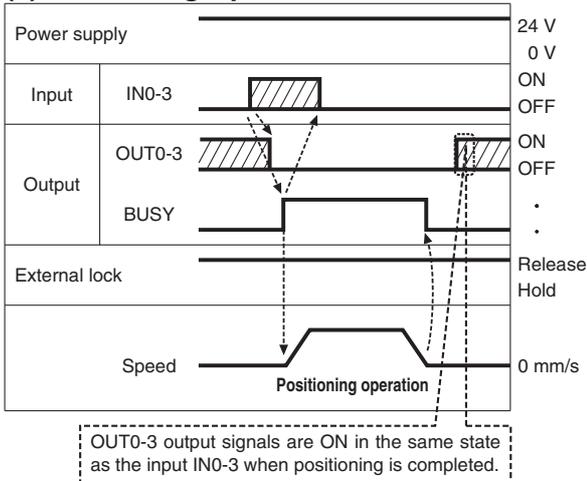


(4) Stop by the STOP Signal

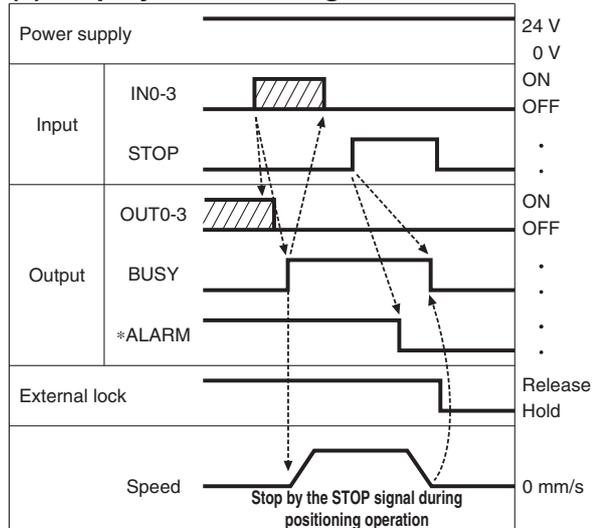

(3) Cut-off Stop (Reset Stop)

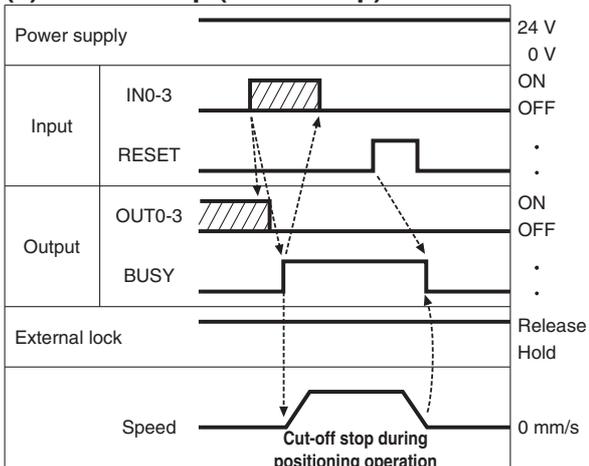

(5) Alarm Reset

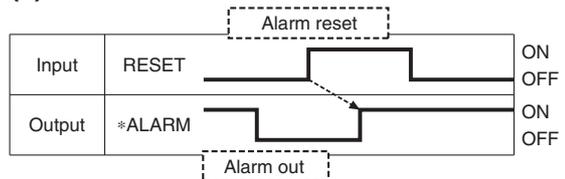

* *ALARM" is expressed as negative-logic circuit.

Options: Actuator Cable

[Robotic cable, standard cable for step motor (Servo/24 VDC)]

LE-CP-1 - []

Cable length (L) [m]


1	1.5
3	3
5	5
8	8*
A	10*
B	15*
C	20*

* Produced upon receipt of order (Robotic cable only)


Cable type

-	Robotic cable (Flexible cable)
S	Standard cable

LE-CP-¹/₃/Cable length: 1.5 m, 3 m, 5 m

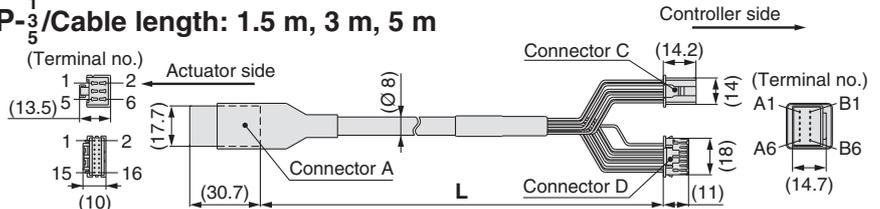

LE-CP-^{8B}/_{AC}/Cable length: 8 m, 10 m, 15 m, 20 m
(* Produced upon receipt of order)

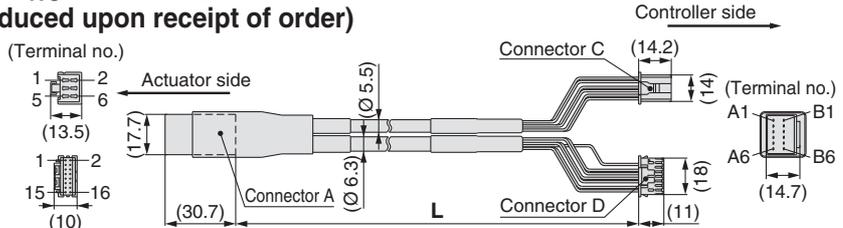

Signal	Connector A terminal no.	Cable colour	Connector C terminal no.
A	B-1	Brown	2
Ā	A-1	Red	1
B	B-2	Orange	6
B̄	A-2	Yellow	5
COM-A/COM	B-3	Green	3
COM-B/-	A-3	Blue	4
Shield			
Vcc	B-4	Brown	12
GND	A-4	Black	13
A	B-5	Red	7
Ā	A-5	Black	6
B	B-6	Orange	9
B̄	A-6	Black	8
			3

[Robotic cable, standard cable with lock and sensor for step motor (Servo/24 VDC)]

LE-CP-1-B - []

Cable length (L) [m]

1	1.5
3	3
5	5
8	8*
A	10*
B	15*
C	20*


* Produced upon receipt of order (Robotic cable only)

With lock and sensor


Cable type

-	Robotic cable (Flexible cable)
S	Standard cable

LE-CP-¹/₃/Cable length: 1.5 m, 3 m, 5 m

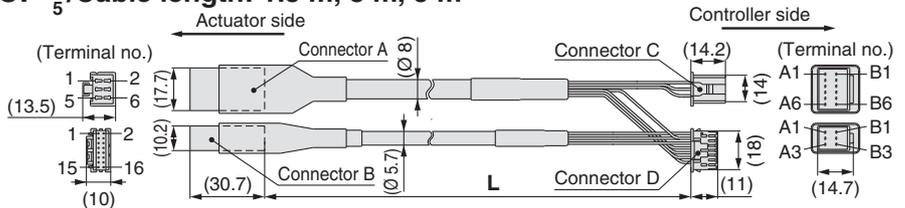

LE-CP-^{8B}/_{AC}/Cable length: 8 m, 10 m, 15 m, 20 m
(* Produced upon receipt of order)

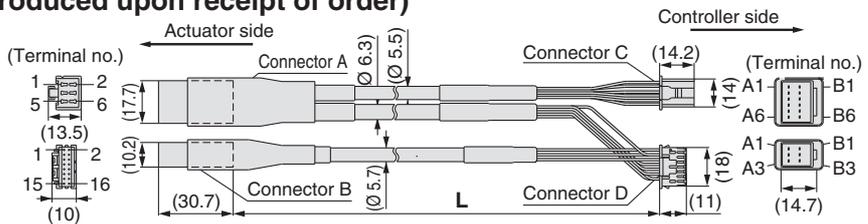

Signal	Connector A terminal no.	Cable colour	Connector C terminal no.
A	B-1	Brown	2
Ā	A-1	Red	1
B	B-2	Orange	6
B̄	A-2	Yellow	5
COM-A/COM	B-3	Green	3
COM-B/-	A-3	Blue	4
Shield			
Vcc	B-4	Brown	12
GND	A-4	Black	13
A	B-5	Red	7
Ā	A-5	Black	6
B	B-6	Orange	9
B̄	A-6	Black	8
			3


Signal	Connector B terminal no.	Cable colour	Connector D terminal no.
Lock (+)	B-1	Red	4
Lock (-)	A-1	Black	5
Sensor (+) (Note)	B-3	Brown	1
Sensor (-) (Note)	A-3	Blue	2

Series LECP1

Options

[Power supply cable]

LEC-CK1-1

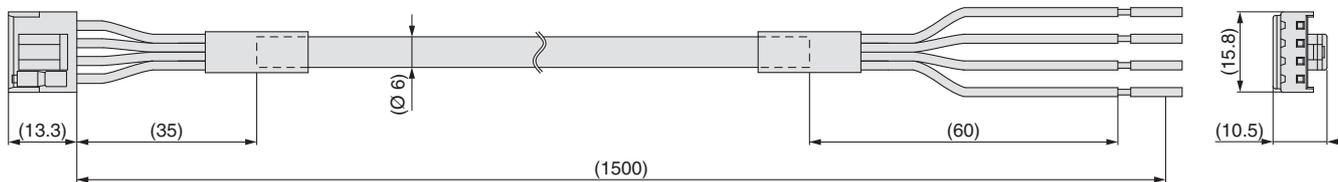

Terminal name	Covered colour	Function
0V	Blue	Common supply (-)
M 24V	White	Motor power supply (+)
C 24V	Brown	Control power supply (+)
BK RLS	Black	Lock release (+)


* Conductor size: AWG20

[I/O cable]

LEC-CK4-□

Cable length (L) [m]

1	1.5
3	3
5	5

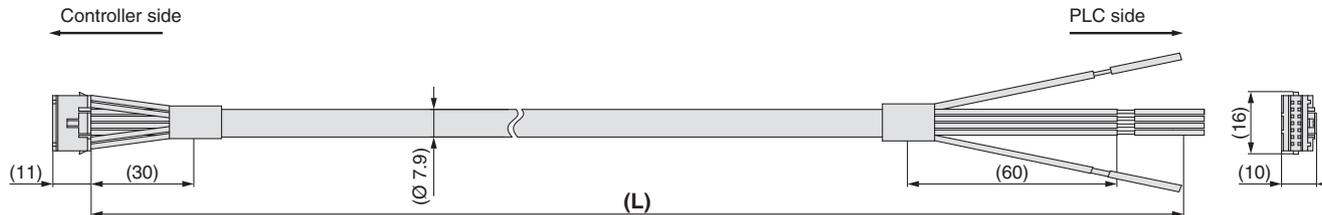

Terminal no.	Insulation colour	Dot mark	Dot colour	Function
1	Light brown	■	Black	COM+
2	Light brown	■	Red	COM-
3	Yellow	■	Black	OUT0
4	Yellow	■	Red	OUT1
5	Light green	■	Black	OUT2
6	Light green	■	Red	OUT3
7	Grey	■	Black	BUSY
8	Grey	■	Red	ALARM
9	White	■	Black	IN0
10	White	■	Red	IN1
11	Light brown	■ ■	Black	IN2
12	Light brown	■ ■	Red	IN3
13	Yellow	■ ■	Black	RESET
14	Yellow	■ ■	Red	STOP

* Conductor size: AWG26

* Parallel I/O signal is valid in auto mode. While the test function operates at manual mode, only the output is valid.

Step Motor Controller



5 types of communication protocols

New **IO-Link** **EtherCAT** **PROFINET** **DeviceNet** **EtherNet/IP**



Model Selection

Step Motor (Servo/24 VDC)

LEL

LECP6

LEC-G

LECP1

JXC□1

Specific Product Precautions

Application

Communication protocol: **EtherCAT** **EtherNet/IP** **PROFINET** **DeviceNet** **IO-Link**

PLC

Both air and electric systems can be established under the same protocol.

Electric Actuators

Air Cylinders

EX260

Can be additionally installed in an existing network

IO-Link Communication

IO-Link Master

<Applicable electric actuators>

Slider type
Series LEF

Low-profile slider type
Series LEM

Guide rod slider
Series LEL

Rod type
Series LEY/LEYG

Slide table
Series LES/LESH

Miniature type
Series LEPY/LEPS

Gripper
Series LEH

Rotary table
Series LER

Series JXCE1/91/P1/D1/L1



Two types of operation command

Step no. defined operation: Operate using the preset step data in the controller.

Numerical data defined operation: The actuator operates using values such as position and speed from the PLC.

Numerical monitoring available


Numerical information, such as the current speed, current position, and alarm codes, can be monitored on the PLC.

Transition wiring of communication cables

Two communication ports are provided.


* For the DeviceNet™ type, transition wiring is possible using a branch connector.

* 1 to 1 in the case of IO-Link

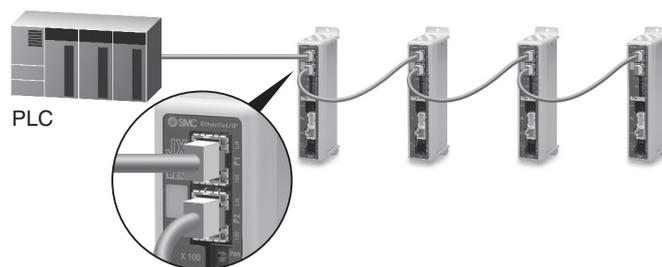


IO-Link communication can be performed.

The data storage function eliminates the need for troublesome resetting of step data and parameters when changing over the controller.

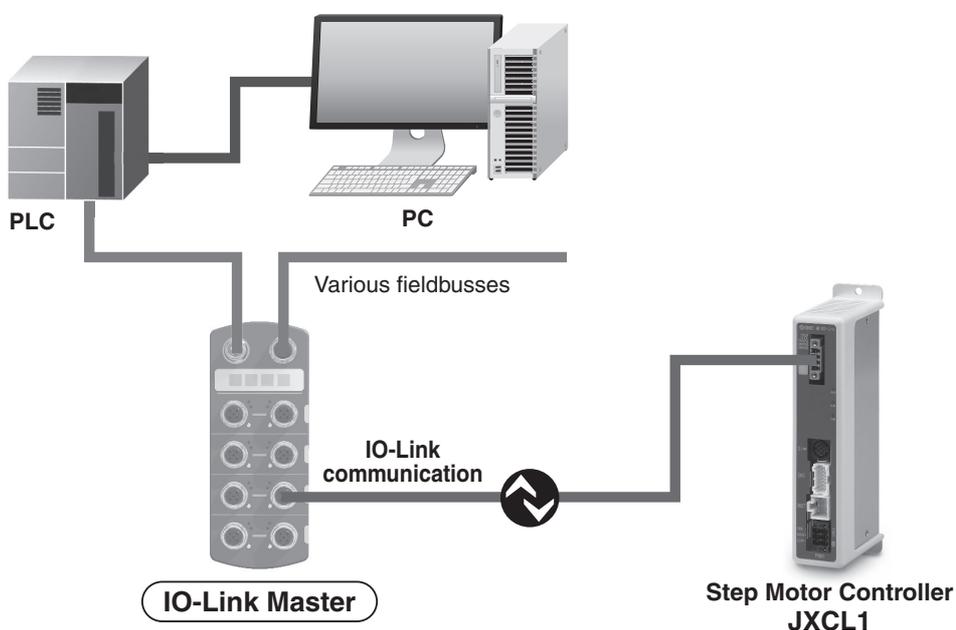

IO-Link

IO-Link is an open communication interface technology between the sensor/actuator and the I/O terminal that is an international standard, IEC61131-9.

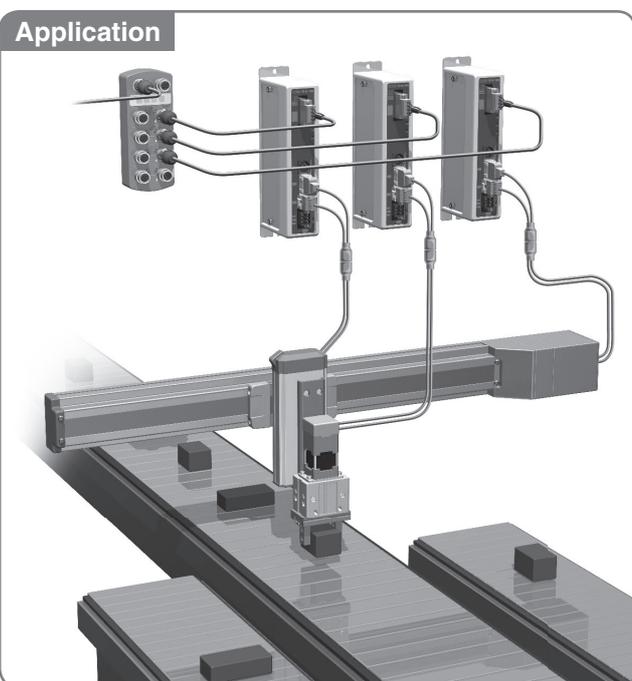

● Step data and parameters can be set from the master side.

Step data and parameters can be set or changed by means of IO-Link communication.


● Data storage function

When the controller is changed, the parameters and step data for the actuator are automatically set.*¹

● 4-wire unshielded cables can be used.

*¹ The "basic parameter" and the "return to origin parameter" are automatically set as the actuator parameters, and the 3 items of data consisting of No. 0 to 2 are automatically set as the step data.

System Construction

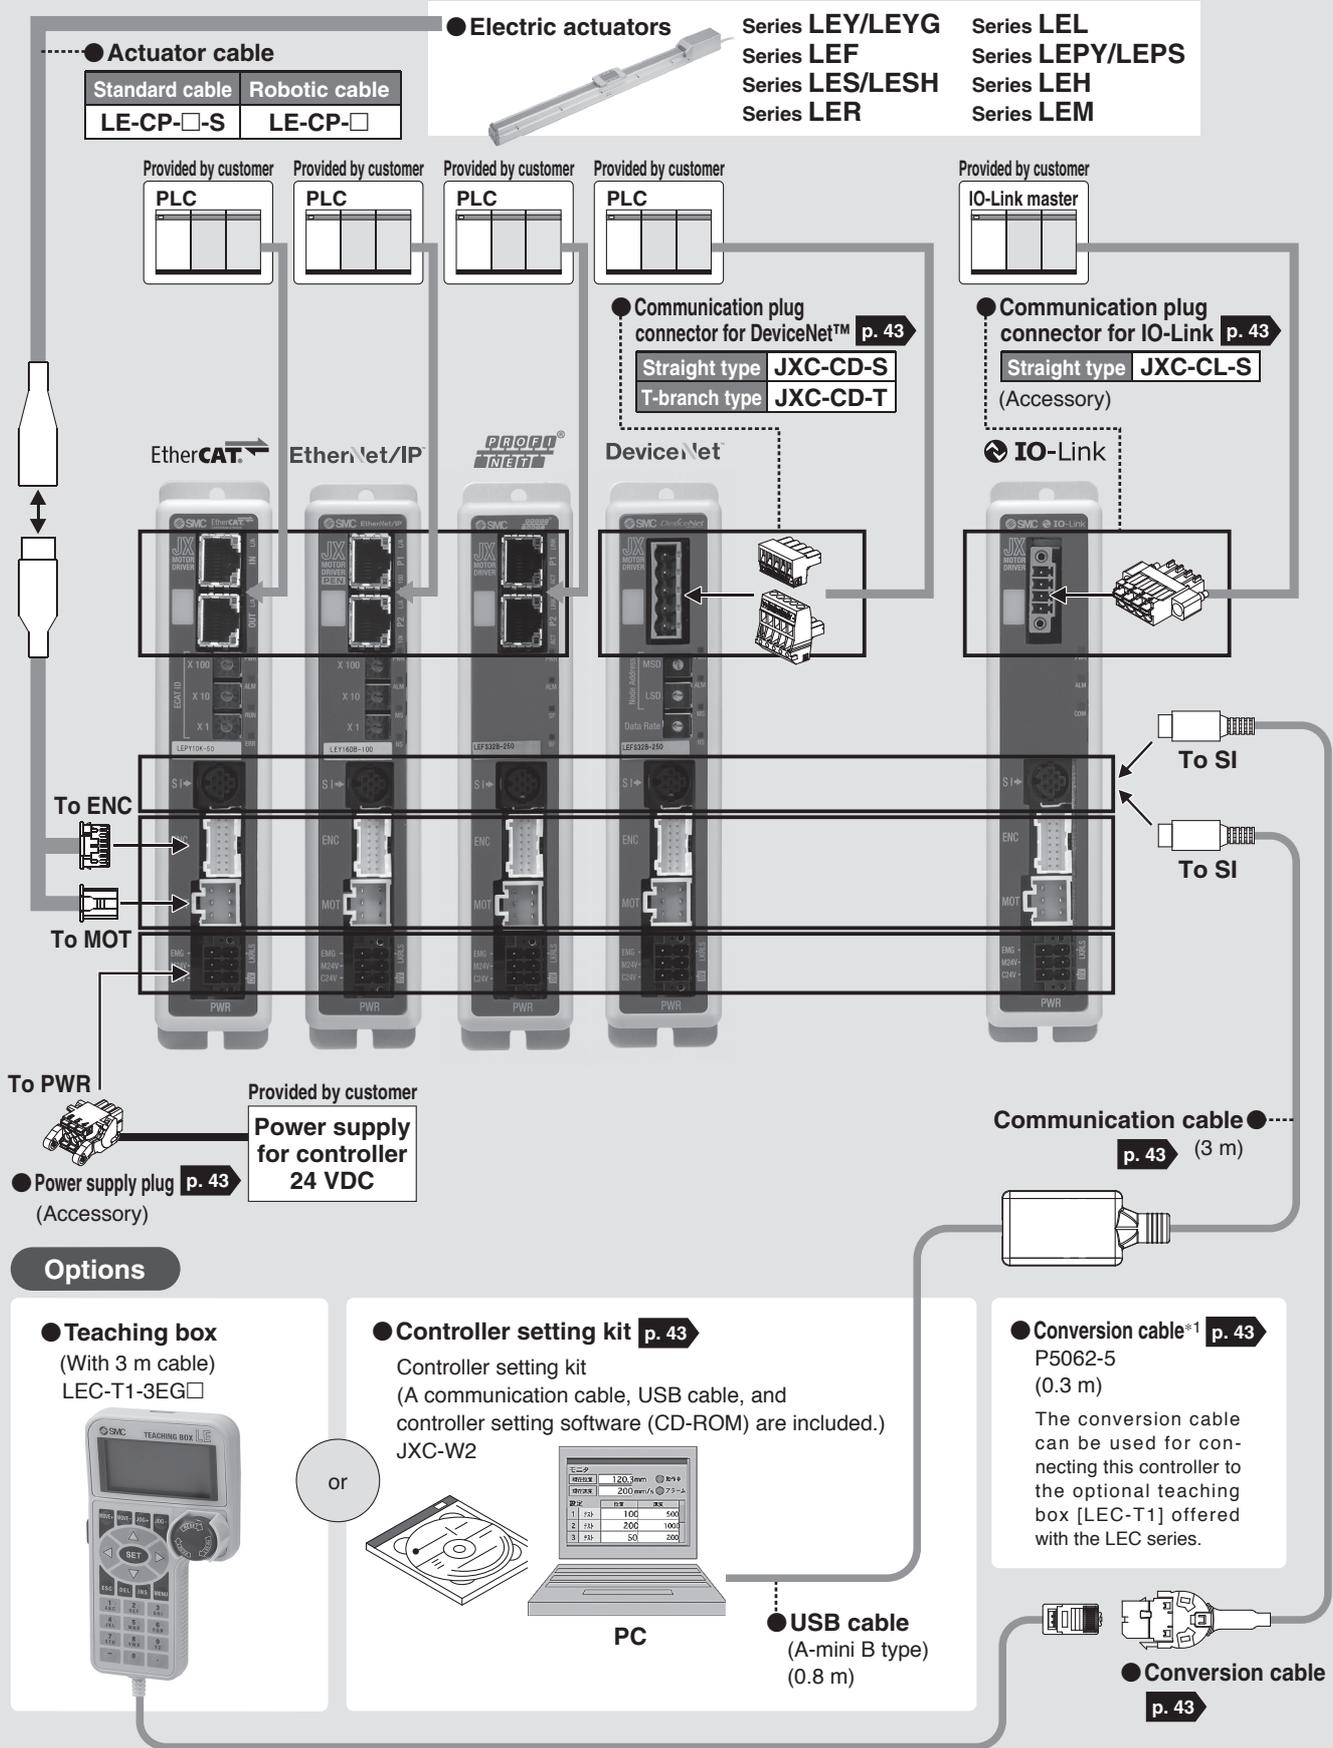

*1 A conversion cable is also required for connecting the controller to the LEC-W2. (A conversion cable is not required for the JXC-W2.)

Step Motor Controller

Series **JXCE1/91/P1/D1/L1**



How to Order



Actuator + Controller

LEL16B-100 - R1 CD17T

Actuator type

Refer to "How to Order" in the actuator catalogue available at www.smc.eu.
For compatible actuators, refer to the table below. Example: LEL16B-100B-R1C917

Compatible actuators	
Electric Actuator/Rod Series LEY	Refer to the Web Catalogue.
Electric Actuator/Guide Rod Series LEYG	
Electric Actuator/Slider Series LEF	
Electric Slide Table Series LES/LESH	
Electric Rotary Table Series LER	
Electric Actuator/Guide Rod Slider Series LEL	
Electric Actuator/Miniature Series LEPY/LEPS	
Electric Gripper Series LEH	
Electric Actuator/Low-Profile Slider Series LEM	

* Only the step motor type is applicable.

Controller

—	Without controller
C□1□□	With controller

CD17T

Communication protocol

E	EtherCAT®
9	EtherNet/IP™
P	PROFINET
D	DeviceNet™
L	IO-Link

Mounting

7	Screw mounting
8*1	DIN rail

*1 The DIN rail is not included. It must be ordered separately. (Refer to page 43.)

For single axis

Option

—	Without option
S	With straight type DeviceNet™ communication plug for JXCD1
T	With T-branch type DeviceNet™ communication plug for JXCD1

* Select "Nil" for anything other than JXCD1.

When selecting an electric actuator, refer to the model selection chart of each actuator. Also, for the "Speed-Work Load" graph of the actuator, refer to the LCEP6 section on the model selection page of the electric actuators **Web Catalogue**.

Caution

[CE-compliant products]

EMC compliance was tested by combining the electric actuator LE series and the JXCE1/91/P1/D1/L1 series.

The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, compliance with the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify compliance with the EMC directive for the machinery and equipment as a whole.

Actuator cable type/length

—	Without cable
S1	Standard cable 1.5 m
S3	Standard cable 3 m
S5	Standard cable 5 m
R1	Robotic cable 1.5 m
R3	Robotic cable 3 m
R5	Robotic cable 5 m
R8	Robotic cable 8 m*1
RA	Robotic cable 10 m*1
RB	Robotic cable 15 m*1
RC	Robotic cable 20 m*1

*1 Produced upon receipt of order (Robotic cable only)

* The standard cable should only be used on fixed parts. For use on moving parts, select the robotic cable.

Controller

JXC D17T - LEL16B-100

Precautions for blank controllers (JXC□1□□-BC)

A blank controller is a controller to which the customer can write the data of the actuator it is to be combined and used with. Use the dedicated software (JXC-BCW) for data writing.

- Please download the dedicated software (JXC-BCW) via our website.
- Order the controller setting kit (LEC-W 2) separately to use this software.

SMC website
<http://www.smc.eu>

Communication protocol

E	EtherCAT®
9	EtherNet/IP™
P	PROFINET
D	DeviceNet™
L	IO-Link

For single axis

Mounting

7	Screw mounting
8*1	DIN rail

*1 The DIN rail is not included. It must be ordered separately. (Refer to page 43.)

Actuator part number

Without cable specifications and actuator options
Example: Enter "**LEL16B-100**" for the LEL16B-100B-S1□□.

BC Blank controller*1

*1 Requires dedicated software (JXC-BCW)

Option

—	Without option
S	With straight type DeviceNet™ communication plug for JXCD1
T	With T-branch type DeviceNet™ communication plug for JXCD1

* Select "Nil" for anything other than JXCD1.

When selecting an electric actuator, refer to the model selection chart of each actuator. Also, for the "Speed-Work Load" graph of the actuator, refer to the LCEP6 section on the model selection page of the electric actuators **Web Catalogue**.

Specifications

Model		JXCE1	JXC91	JXCP1	JXCD1	JXCL1
Network		EtherCAT®	EtherNet/IP™	PROFINET	DeviceNet™	IO-Link
Compatible motor		Step motor (Servo/24 VDC)				
Power supply		Power voltage: 24 VDC ±10 %				
Current consumption (Controller)		200 mA or less	130 mA or less	200 mA or less	100 mA or less	100 mA or less
Compatible encoder		Incremental A/B phase (800 pulse/rotation)				
Communication specifications	Applicable system	EtherCAT®*2	EtherNet/IP™*2	PROFINET*2	DeviceNet™	IO-Link
	Protocol	EtherCAT®*2	EtherNet/IP™*2	PROFINET*2	DeviceNet™	IO-Link
	Version*1	Conformance Test Record V.1.2.6	Volume 1 (Edition 3.14) Volume 2 (Edition 1.15)	Specification Version 2.32	Volume 1 (Edition 3.14) Volume 3 (Edition 1.13)	Version 1.1 Port Class A
	Communication speed	100 Mbps*2	10/100 Mbps*2 (Automatic negotiation)	100 Mbps*2	125/250/500 kbps	230.4 kbps (COM3)
	Configuration file*3	ESI file	EDS file	GSDML file	EDS file	IODD file
	I/O occupation area	Input 20 bytes Output 36 bytes	Input 36 bytes Output 36 bytes	Input 36 bytes Output 36 bytes	Input 4, 10, 20 bytes Output 4, 12, 20, 36 bytes	Input 14 bytes Output 22 bytes
Terminating resistor		Not included				
Memory		EEPROM				
LED indicator		PWR, RUN, ALM, ERR	PWR, ALM, MS, NS	PWR, ALM, SF, BF	PWR, ALM, MS, NS	PWR, ALM, COM
Cable length [m]		Actuator cable: 20 or less				
Cooling system		Natural air cooling				
Operating temperature range [°C]		0 to 40 (No freezing)				
Operating humidity range [%RH]		90 or less (No condensation)				
Insulation resistance [MΩ]		Between all external terminals and the case 50 (500 VDC)				
Weight [g]		220 (Screw mounting) 240 (DIN rail mounting)	210 (Screw mounting) 230 (DIN rail mounting)	220 (Screw mounting) 240 (DIN rail mounting)	210 (Screw mounting) 230 (DIN rail mounting)	190 (Screw mounting) 210 (DIN rail mounting)

*1 Please note that versions are subject to change.

*2 Use a shielded communication cable with CAT5 or higher for the PROFINET, EtherNet/IP™, and EtherCAT®.

*3 The files can be downloaded from the SMC website: <http://www.smc.eu>

■Trademark

EtherNet/IP™ is a trademark of ODVA.

DeviceNet™ is a trademark of ODVA.

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

Example of Operation Command

In addition to the step data input of 64 points maximum in each communication protocol, the changing of each parameter can be performed in real time via numerical data defined operation.

* Numerical values other than "Moving force," "Area 1," and "Area 2" can be used to perform operation under numerical instructions from JXCL1.

<Application example> Movement between 2 points

No.	Movement mode	Speed	Position	Acceleration	Deceleration	Pushing force	Trigger LV	Pushing speed	Moving force	Area 1	Area 2	In position
0	1: Absolute	100	10	3000	3000	0	0	0	100	0	0	0.50
1	1: Absolute	100	100	3000	3000	0	0	0	100	0	0	0.50

<Step no. defined operation>

Sequence 1: Servo ON instruction

Sequence 2: Instruction to return to origin

Sequence 3: Specify step data No. 0 to input the DRIVE signal.

Sequence 4: Specify step data No. 1 after the DRIVE signal has been temporarily turned OFF to input the DRIVE signal.

<Numerical data defined operation>


Sequence 1: Servo ON instruction

Sequence 2: Instruction to return to origin

Sequence 3: Specify step data No. 0 and turn ON the input instruction flag (position). Input 10 in the target position. Subsequently the start flag turns ON.

Sequence 4: Turn ON step data No. 0 and the input instruction flag (position) to change the target position to 100 while the start flag is ON.

The same operation can be performed with any operation command.

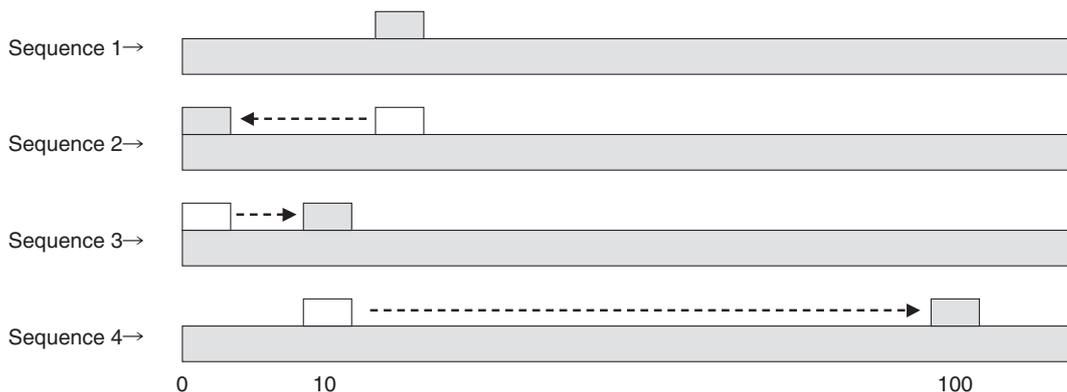


Series JXCE1/91/P1/D1/L1


Dimensions




JXCE1/JXC91

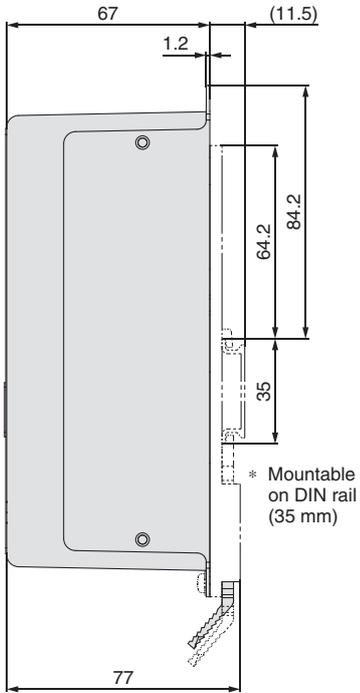


JXCE1

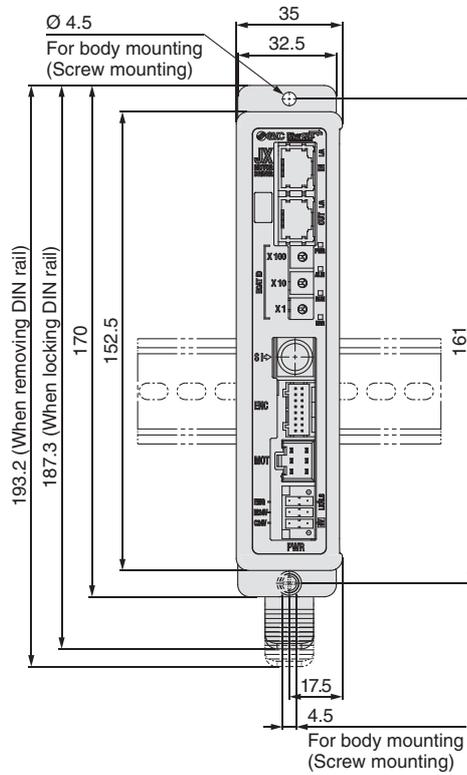


JXC91

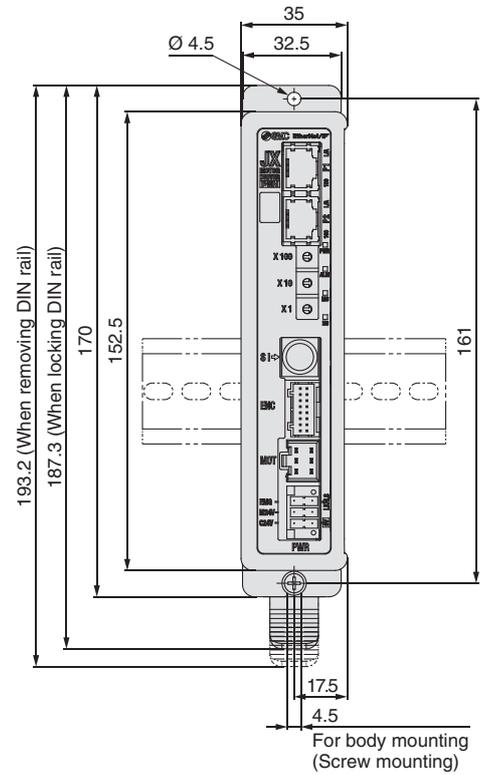


JXCP1/JXCD1

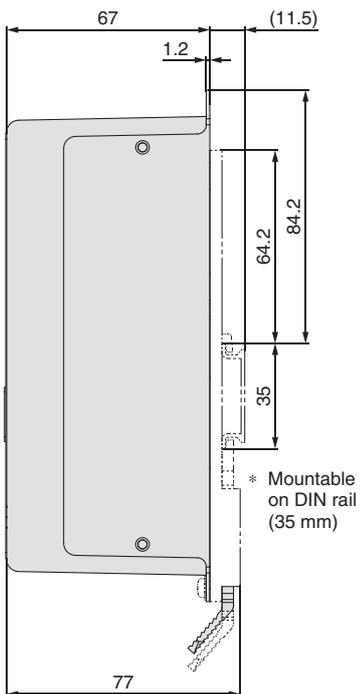


JXCP1

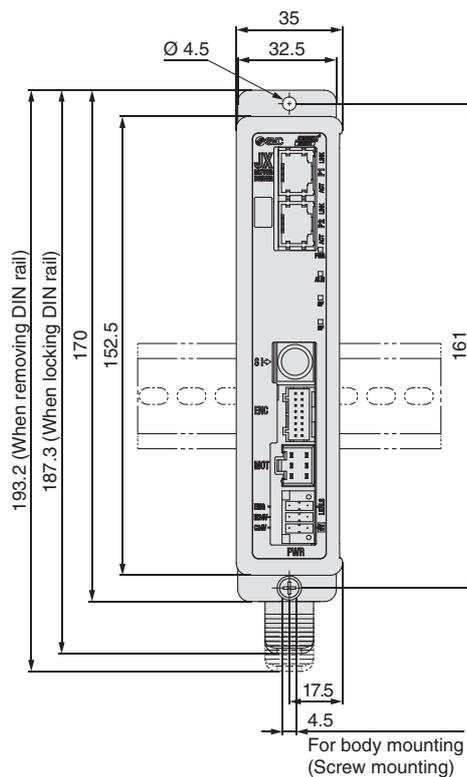

JXCD1

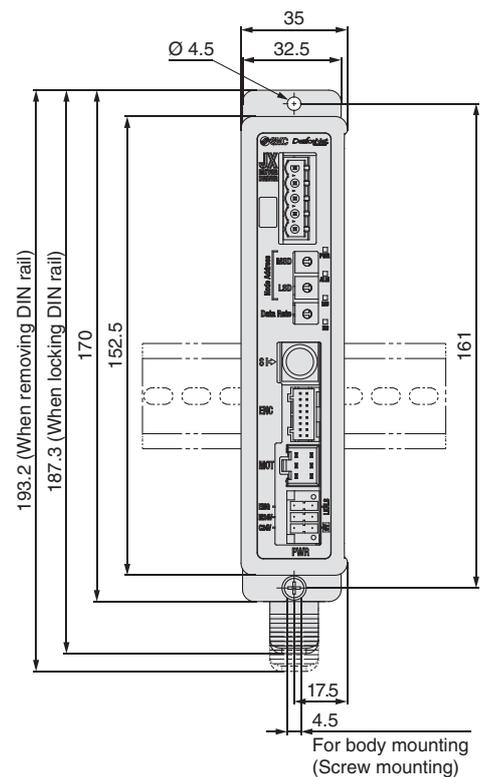


Dimensions

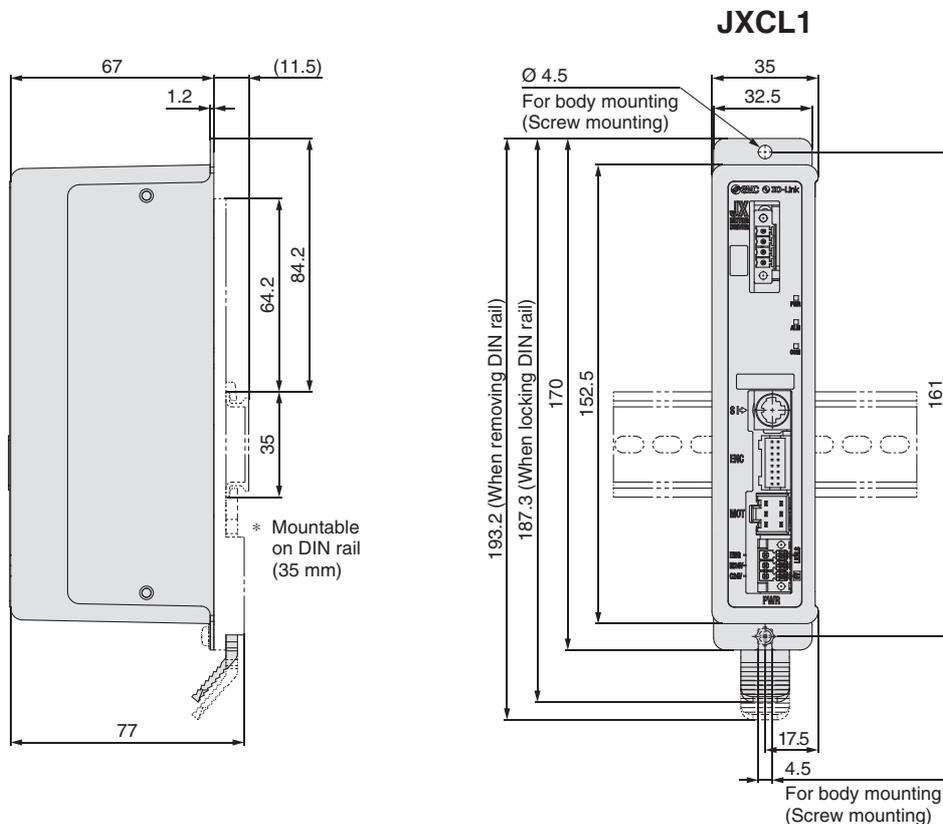

DIN rail AXT100-DR-□

* For □, enter a number from the "No." line in the table below.

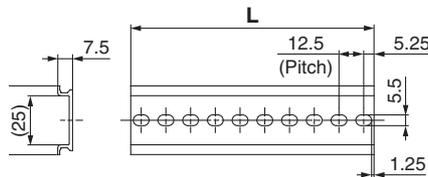

L Dimensions [mm]

No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
L	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

Model Selection

Step Motor (Servo/24 VDC)

LEL

LECP6

LEC-G

LECP1

JXC□1

Specific Product
Precautions

Series JXCE1/91/P1/D1/L1

Options

■ Controller setting kit JXC-W2

[Contents]


- ① Communication cable
- ② USB cable
- ③ Controller setting software
- * A conversion cable (P5062-5) is not required.

JXC-W2-□

● Contents

—	A kit includes: Communication cable, USB cable, Controller setting software
C	Communication cable
U	USB cable
S	Controller setting software (CD-ROM)

① Communication cable JXC-W2-C

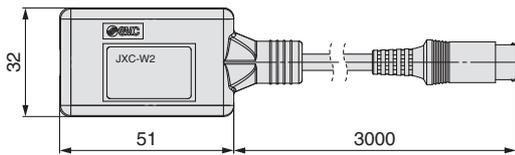


* It can be connected to the controller directly.

② USB cable JXC-W2-U

③ Controller setting software JXC-W2-S

* CD-ROM

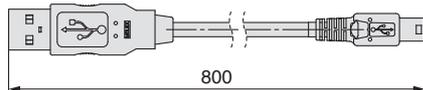

■ DIN rail mounting adapter LEC-3-D0

* With 2 mounting screws


This should be used when a DIN rail mounting adapter is mounted onto a screw mounting type controller afterwards.

■ DIN rail AXT100-DR-□

* For □, enter a number from the No. line in the table on page 104. Refer to the dimension drawings on page 42 for the mounting dimensions.

■ Power supply plug JXC-CPW

* The power supply plug is an accessory.

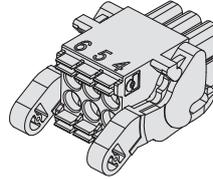

- ① C24V
- ② M24V
- ③ EMG
- ④ 0V
- ⑤ N.C.
- ⑥ LK RLS

Power supply plug



Terminal name	Function	Details
0V	Common supply (-)	M24V terminal/C24V terminal/EMG terminal/LK RLS terminal are common (-).
M24V	Motor power supply (+)	Motor power supply (+) of the controller
C24V	Control power supply (+)	Control power supply (+) of the controller
EMG	Stop (+)	Connection terminal of the external stop circuit
LK RLS	Lock release (+)	Connection terminal of the lock release switch

■ Communication plug connector

For DeviceNet™

Straight type
JXC-CD-S

T-branch type
JXC-CD-T

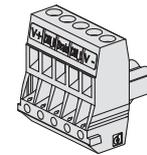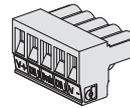


Communication plug connector for DeviceNet™

Terminal name	Details
V+	Power supply (+) for DeviceNet™
CAN_H	Communication wire (High)
Drain	Grounding wire/Shielded wire
CAN_L	Communication wire (Low)
V-	Power supply (-) for DeviceNet™

For IO-Link

Straight type
JXC-CL-S

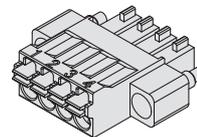

Communication plug connector for IO-Link

Terminal no.	Terminal name	Details
1	L+	+24 V
2	NC	N/A
3	L-	0 V
4	C/Q	IO-Link signal

■ Conversion cable P5062-5 (Cable length: 300 mm)



* To connect the teaching box (LEC-T1-3□□□) or controller setting kit (LEC-W2) to the controller, a conversion cable is required.




Series JXCE1/91/P1/D1 Precautions Related to Differences in Controller Versions

As the controller version of the JXC series differs, the internal parameters are not compatible.

- Do not use a version V2.0 or S2.0 or higher controller with parameters lower than version V2.0 or S2.0.
Do not use a version V2.0 or S2.0 or lower controller with parameters higher than version V2.0 or S2.0.
- Please use the latest version of the JXC-BCW (parameter writing tool).
* The latest version is Ver. 2.0 (as of December 2017).

Identifying Version Symbols

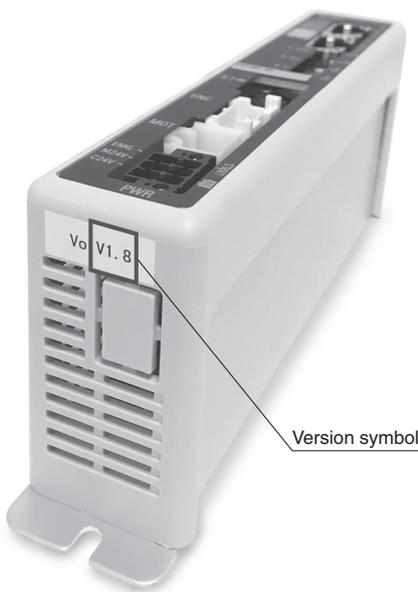

Version symbol

For versions lower than V2.0 and S2.0:

Do not use with controller parameters higher than V2.0 or S2.0.

VZ V1.8

Applicable models

Series JXC91□

VZ S1.3T1.0

Applicable models

Series JXCD1□
Series JXCP1□
Series JXCE1□

For versions higher than V2.0 and S2.0:

Do not use with controller parameters lower than V2.0 or S2.0.

VZ V2.0

Applicable models

Series JXC91□

VZ S2.0T1.0

Applicable models

Series JXCD1□
Series JXCP1□
Series JXCE1□

Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “Caution,” “Warning” or “Danger.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

-  **Caution:** Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
-  **Warning:** Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
-  **Danger:** Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

- *1) ISO 4414: Pneumatic fluid power – General rules relating to systems.
 ISO 4413: Hydraulic fluid power – General rules relating to systems.
 IEC 60204-1: Safety of machinery – Electrical equipment of machines.
 (Part 1: General requirements)
 ISO 10218-1: Manipulating industrial robots - Safety.
 etc.

Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”.
 Read and accept them before using the product.

Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.

*2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Safety Instructions

Be sure to read “Handling Precautions for SMC Products” (M-E03-3) before using.

SMC Corporation (Europe)

Austria	+43 (0)2262622800	www.smc.at	office@smc.at	Lithuania	+370 5 2308118	www.smc.lt	info@smc.lt
Belgium	+32 (0)33551464	www.smc-pneumatics.be	info@smc-pneumatics.be	Netherlands	+31 (0)205318888	www.smc-pneumatics.nl	info@smc-pneumatics.nl
Bulgaria	+359 (0)2807670	www.smc.bg	office@smc.bg	Norway	+47 67129020	www.smc-norge.no	post@smc-norge.no
Croatia	+385 (0)13707288	www.smc.hr	office@smc.hr	Poland	+48 222119600	www.smc.pl	office@smc.pl
Czech Republic	+420 541424611	www.smc.cz	office@smc.cz	Portugal	+351 226166570	www.smc.eu	postpt@smc.smces.es
Denmark	+45 70252900	www.smc-dk.com	smc@smc-dk.com	Romania	+40 213205111	www.smcromania.ro	smcromania@smcromania.ro
Estonia	+372 6510370	www.smc-pneumatics.ee	smc@smc-pneumatics.ee	Russia	+7 8127185445	www.smc-pneumatik.ru	info@smc-pneumatik.ru
Finland	+358 207513513	www.smc.fi	smc-fi@smc.fi	Slovakia	+421 (0)413213212	www.smc.sk	office@smc.sk
France	+33 (0)164761000	www.smc-france.fr	info@smc-france.fr	Slovenia	+386 (0)73885412	www.smc.si	office@smc.si
Germany	+49 (0)61034020	www.smc.de	info@smc.de	Spain	+34 902184100	www.smc.es	post@smc.smces.es
Greece	+30 210 2717265	www.smc-hellas.gr	sales@smc-hellas.gr	Sweden	+46 (0)86031200	www.smc.se	post@smc.se
Hungary	+36 23513000	www.smc.hu	office@smc.hu	Switzerland	+41 (0)523963131	www.smc.ch	info@smc.ch
Ireland	+353 (0)14039000	www.smc-pneumatics.ie	sales@smc-pneumatics.ie	Turkey	+90 212 489 0 440	www.smc-pneumatik.com.tr	info@smc-pneumatik.com.tr
Italy	+39 0292711	www.smc-italia.it	mailbox@smc-italia.it	UK	+44 (0)845 121 5122	www.smc-pneumatics.co.uk	sales@smc-pneumatics.co.uk
Latvia	+371 67817700	www.smc-lv.lv	info@smc-lv.lv				