
Mechanically Jointed Rodless Cylinder

MY2 Series

Ø 16, Ø 25, Ø 40



Compact and low profile design

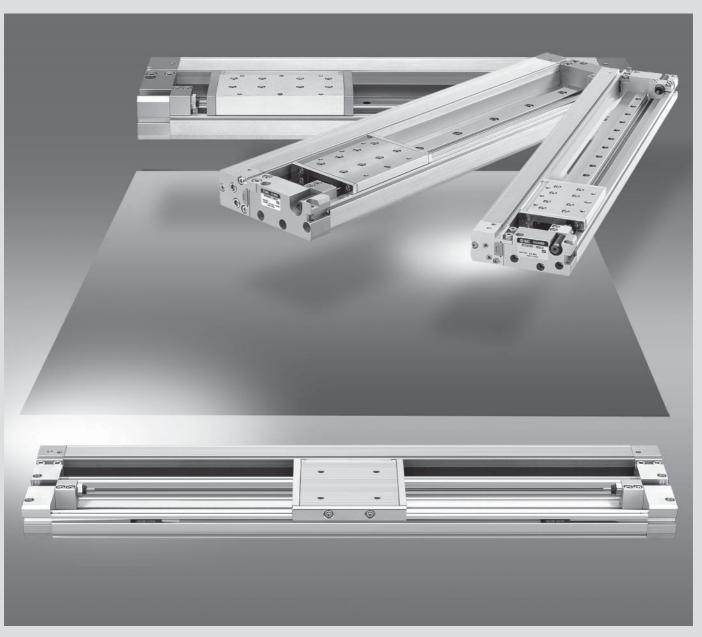

Mechanically Jointed Rodless Cylinder


MY2 Series

Compact and low profile design

A complete reduction in height of the cylinder allows mounting in a narrow space. The low profile design of the cylinder built with a high precision single or double axis guide, provides same load capacity as the earlier MY1 series.

Three types of guide options to suit a variety of applications.



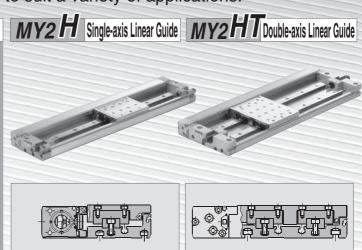


All 3 types have the same cylinder height and actuator (cylinder).


Increased load capacity


The dynamic load mass has been increased with improved guide performance. (Compared to previous MY1 series.)


Cam Follower Guide


Linear Guide

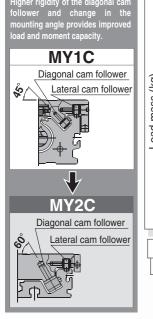

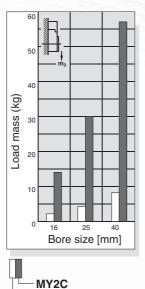

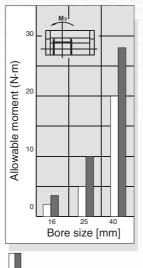

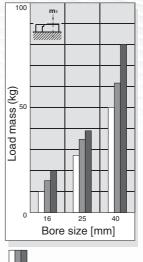

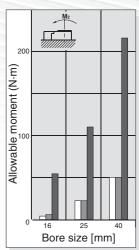







Height reduction by 30 % (Compared to previous MY1 series.)

Low profile achieved by placing the guide unit and cylinder body next to one another. (dimension reduced by 12 mm to 26 mm)


			[[[[[[]]]
Series	Ø 16	Ø 25	Ø 40
MY2C			
MY2H (Single axis)	28	37	58
MY2HT (Double axis)			
MY1C, MY1H	40	54	84

Ø 16 / 28mm Ø 25	/ 37mm	Ø 40 / 58	nm

Easy replacement of cylinder body


removing the workpiece

The cylinder can be detached by simply removing the four mounting bolts, and pulling it off in the direction of the arrows.

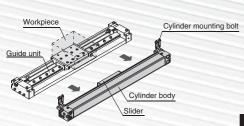

Improved mounting flexibility

The cylinder can be replaced without The low profile design allows mounting of heavy-loaded shock absorber (H unit) without interfering with the workpiece.

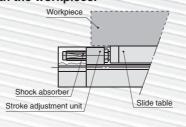


Option

Optional side support is available (MY2C series)

A side support prevents guide deflection for the long stroke application.

Two mounting types

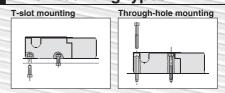

Auto switch mounting on two sides



Standard with air cushion and centralised piping

Sorios Variations

Series Varia	eries variations																							
Model	Bore size									S	tanda	ard sti	roke [r	nm]									Max. available	Made to order
Model	[mm]	50	100	150	200	250	300	350	400	450	500	550	600	700	800	900	1000	1200	1400	1600	1800	2000	stroke [mm]	iviade to order
MY2C Cam follower guide	16	0	•							-						0	0	-			—	þ	5000 (3000 for Ø 16)	Intermediate strokes Long strokes
MY2H Linear guide/Single axis	25	•	-	-	-	-	-	-	-			-			-	-						ł	1500	Helical insert threads
MY2HT Linear guide/Double axis	40		-	-	-	-	-	-	-	-	-	-		-	+	+		-		+		ł	(1000 for Ø 16)	 Shock absorber soft type RJ series mounted

Note) Availability for Made-to-Order differs, depending on the size and the model.




MY2 Series

Model Selection 1


The following are the steps for selection of the MY2 series best suited to your application.

Standards for Tentative Model Selection


Cylinder model	Guide type	Standards for guide selection	Graphs for related allowable values
MY2C	Cam follower guide	Slide table accuracy approx. ±0.05 mm Note 2)	Refer to page 7.
MY2H	Linear guide type (Single axis)	Slide table accuracy ±0.05 mm or less Note 2)	Refer to page 8.
MY2HT	Linear guide type (Double axis)	Slide table accuracy ±0.05 mm or less Note 2)	Refer to page 9.

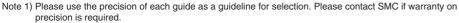

Note 2) Accuracy indicates displacement of the table (at stroke end) when 50% of the allowable moment shown in the catalog is applied. (Reference value)

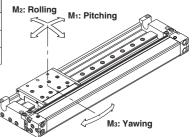



Selection Flow Chart

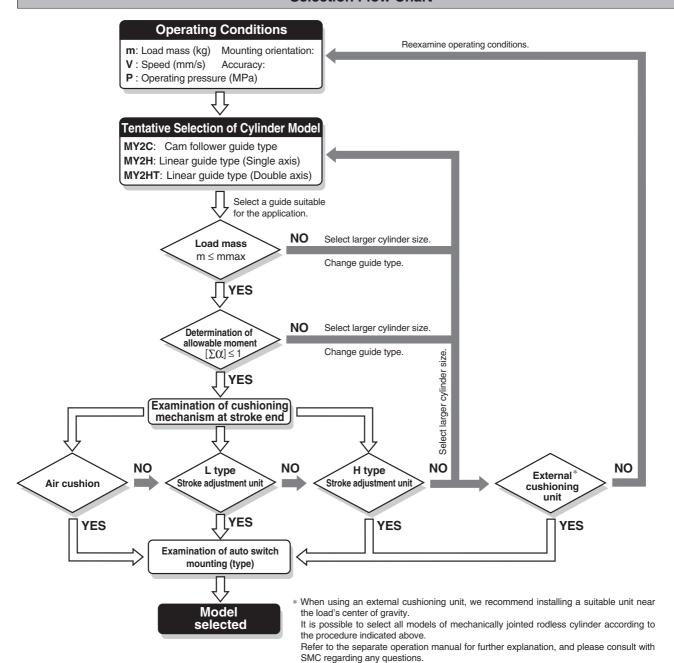


Types of Moment Applied on Rodless Cylinders

Multiple moments may be generated depending on the mounting orientation, load, and position of the center of gravity.

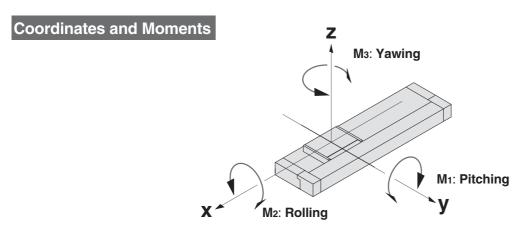

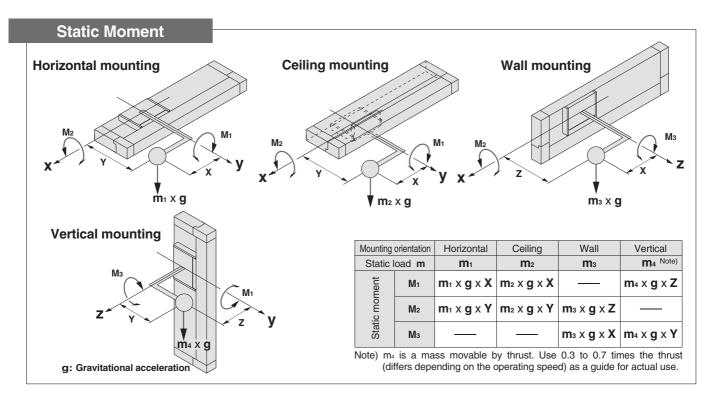

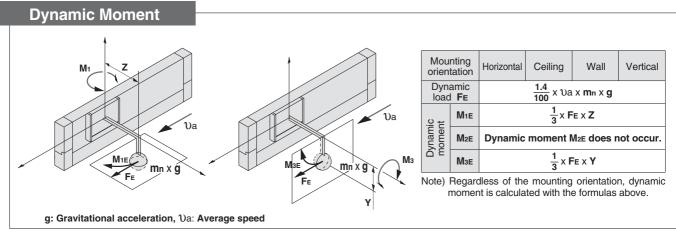

Maximum Allowable Moment/Maximum Load Mass

Model	Bore size	Maximum a	allowable mo	ment (N·m)	Maximum load mass (kg)			
Model	(mm)		M1 M2 M3		m 1	m ₂	тз	
	16	5	4	3.5	18	16	14	
MY2C	25	13	14	10	35	35	30	
	40	45	33	28	68	66	57	
	16	7	6	7	15	13	13	
MY2H	25	28	26	26	32	30	30	
	40	60	50	60	62	62	62	
	16	46	55	46	20	18	18	
MY2HT	25	100	120	100	38	35	35	
	40	200	220	200	80	80	80	

The above values are the maximum allowable values for moment and load. Refer to each graph regarding the maximum allowable moment and maximum load mass for a particular piston speed.

Maximum Allowable Moment

Select the moment from within the range of operating limits shown in the graphs. Note that the maximum load mass value may sometimes be exceeded even within the operating limits shown in the graphs. Therefore, also check the allowable load for the selected conditions.


Load mass (kg)









Moment (N·m)

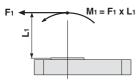

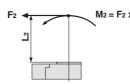

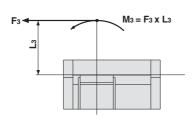

<Calculation of guide load factor>

- 1. Maximum load mass (1), static moment (2), and dynamic moment (3) (at the time of impact with stopper) must be examined for the selection calculations.
- * To evaluate, use Va (average speed) for (1) and (2), and Va (impact speed Va = 1.4Va) for (3). Calculate m max for (1) from the maximum load mass graph (m1, m2, m3) and Mmax for (2) and (3) from the maximum allowable moment graph (M1, M2, M3).



Note 1) Moment caused by the load, etc., with cylinder in resting condition

Note 2) Moment caused by the impact load equivalent at the stroke end (at the time of impact with stopper).

Note 3) Depending on the shape of the workpiece, multiple moments may occur. When this happens, the sum of the load factors ($\Sigma \alpha$) is the total of all such moments.

2. Reference formulas [Dynamic moment at impact]

Use the following formulas to calculate dynamic moment when taking stopper impact into consideration.

m : Load mass (kg)

F: Load (N)

FE: Load equivalent to impact (at impact with stopper) (N)

Va: Average speed (mm/s) M: Static moment (N-m)

V = 1.4Va (mm/s) FE = $\frac{1.4}{100} Va \cdot g \cdot m^{\text{Note 4}}$

 $\therefore ME = \frac{1}{3} \cdot FE \cdot L_1 = 0.05 \text{ } \text{0 a m L}_1 \text{ } \text{ } (\text{N} \cdot \text{m}) \text{ } \text{Note 5})$

Note 4) $\frac{1.4}{100}$ θ is a dimensionless coefficient for calculating impact force.

Note 5) Average load coefficient (= $\frac{1}{3}$): This coefficient is for averaging the maximum load moment at

the time of stopper impact according to service life calculations.

3. Refer to pages 9 and 10 for detailed selection procedures.

Maximum Load Mass

Select the load mass from within the range of limits shown in the graphs. Note that the maximum allowable moment value may sometimes be exceeded even within the operating limits shown in the graphs. Therefore, also check the allowable moment for the selected conditions.




U: Impact speed (mm/s)


ME: Dynamic moment (N·m)


L1: Distance to the load's center of gravity (m)

g : Gravitational acceleration (9.8 m/s2)


Moment/MY2C

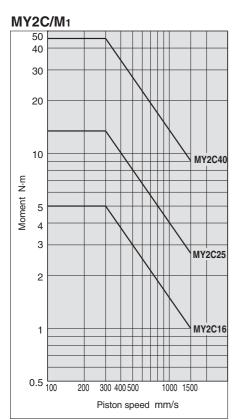


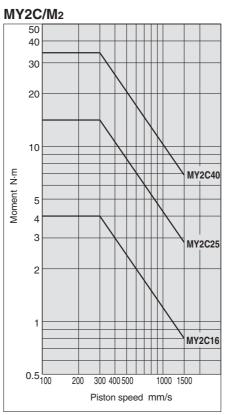


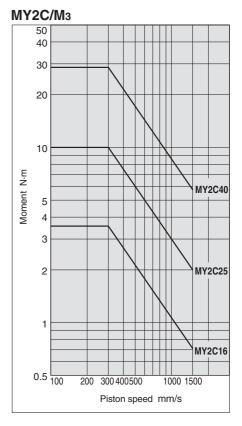

Load Mass/MY2C

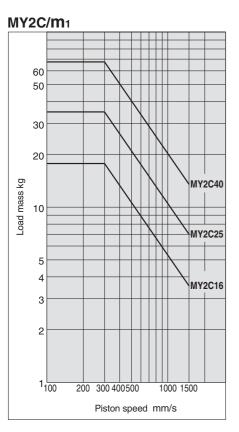

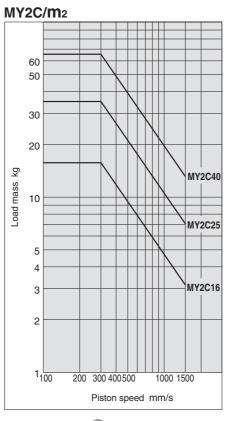

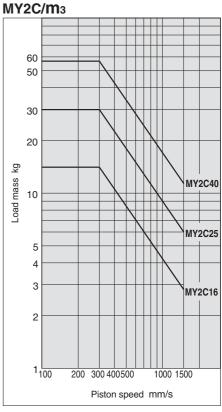





Maximum Allowable Moment/Maximum Load Mass


Moment/MY2H (Single axis)


MY2H/M1 60 50 30 20 MY2H40 10 54 3 2 MY2H16 100 200 300 400500 Piston speed mm/s

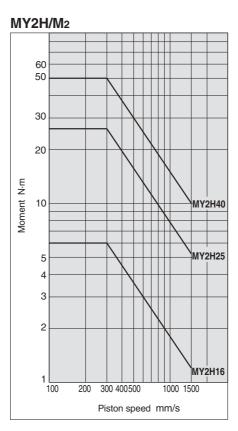


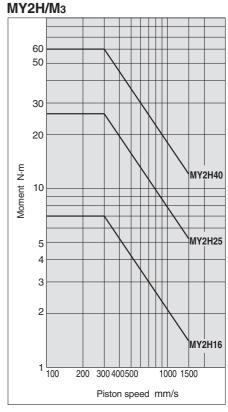

Load Mass/MY2H (Single axis)

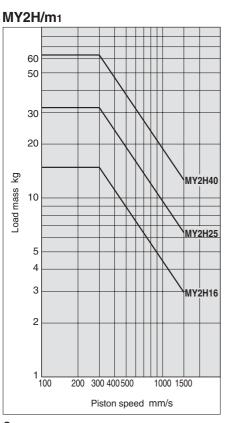

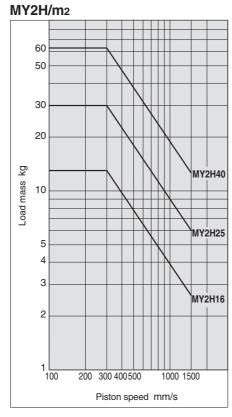


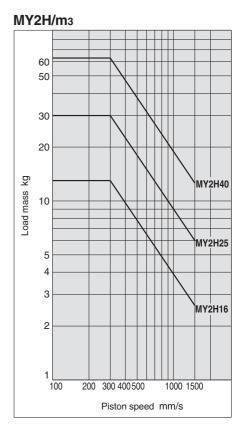




Moment/MY2HT (Double axis)


MY2HT/M₁

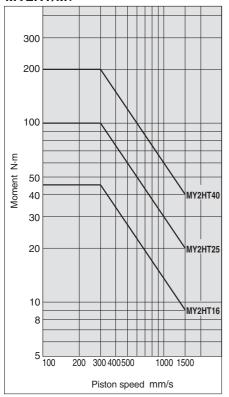

MY2HT/M₂

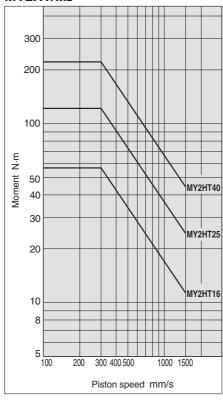


MY2HT/M₃

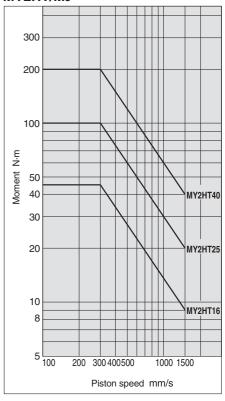


Load Mass/MY2HT (Double axis)


MY2HT/m₁

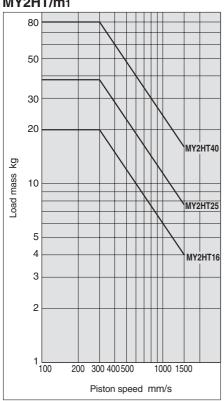

MY2HT/m₂

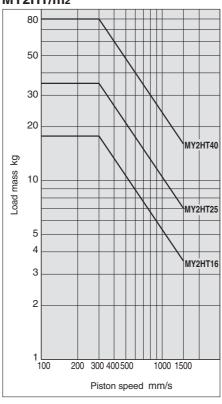

MY2HT/m₃

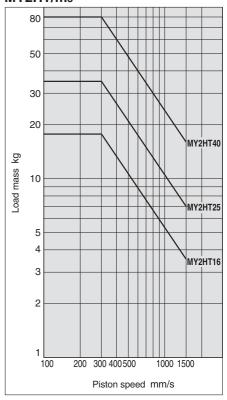

Cushion Capacity

Cushion Selection

<Air cushion>

Air cushions are a standard feature on mechanically jointed rodless cylinders.

The air cushion mechanism is installed to avoid excessive impact of the piston at the stroke end during high speed operation. The air cushion does not act to decelerate the piston near the stroke end.

The ranges of load and speed that air cushions can absorb are within the air cushion limit lines shown in the graphs.

<Stroke adjustment unit with shock absorber> Use this unit when operating with a load or speed exceeding the air cushion limit line, or when cushioning is necessary because the cylinder stroke is outside of the effective air cushion stroke range due to stroke adjustment.

L unit

Use this unit when cushioning is necessary outside of the effective air cushion range even if the load and speed are within the air cushion limit line, or when the cylinder is operated in a load and speed range above the air cushion limit line and below the L unit limit line.

H unit

Use this unit when the cylinder is operated in a load and speed range above the L unit limit line and below the H unit limit line.

⚠ Caution


Do not use a shock absorber and air cushion together.

Air Cushion Stroke [mm] Bore size [mm] Cushion stroke 16 12 25 15 40 24

Stroke Adjustment Unit Holding Bolt Tightening Torque (N-n

	- \ /
Bore size [mm]	Tightening torque
16	0.7
25	1.8
40	5.8


Calculation of Absorbed Energy for Stroke Adjustment Unit with Shock Absorber (N·m)

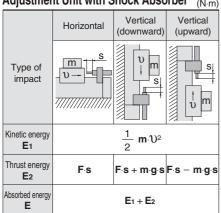



Symbols


- υ : Speed of impacting object (m/s) $\,$ m: Mass of impacting object (kg)
- F: Cylinder thrust (N) g: Gravitational acceleration (9.8 m/s²)
- s: Shock absorber stroke (m)
- Note) The speed of the impacting object is measured at the time of impact with the shock absorber.


Absorption Capacity of Air Cushion and Stroke Adjustment Units

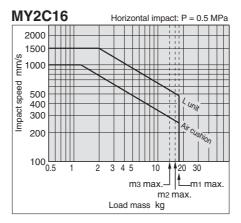


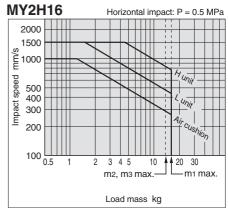


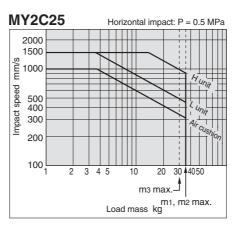


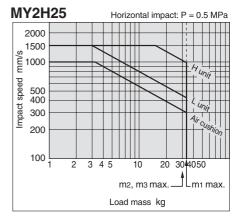


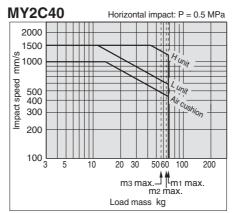

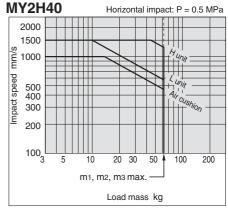

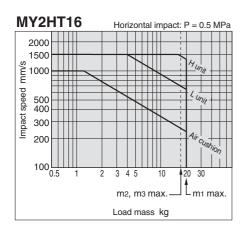

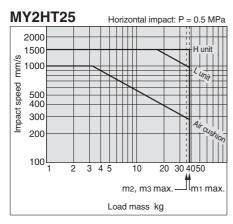

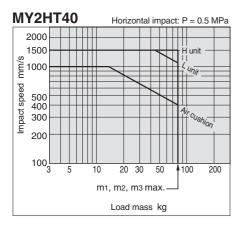

△ Specific Product Precautions

Be sure to read this before handling the products. Refer to back page for Safety Instructions.

Handling

1. Do not get your hands caught during cylinder operation.

For the cylinder with a stroke adjustment unit, the space between the slide table and stroke adjustment unit is very small, and your hands may get caught. When operating without a protective cover, be careful not to get your hands caught.

2. Do not operate with the stroke adjustment unit fixed in an intermediate position.

When the stroke adjustment unit is fixed in an intermediate position, slippage can occur depending on the amount of energy released at the time of an impact. In such cases, as a stroke adjustment unit with the spacer for intermediate securing is available, it is recommended to use it.

For other lengths, please consult with SMC.


<Securing the unit body>

The unit body is secured by equally tightening the two stroke adjustment unit holding bolts. (See drawings below.)

<Stroke adjustment of shock absorber>


For MY2C and MY2H

Loosen the shock absorber lock nut (shock absorber holding bolts for MY2H16, H unit), and adjust the stroke by rotating the shock absorber. After the adjustment, tighten the lock nut (holding bolts) to secure the shock absorber.

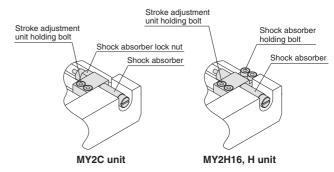

For MY2HT

Loosen the two unit holding bolts on the shock absorber side, rotate the shock absorber and adjust the stroke. After the adjustment, secure the shock absorber by tightening the unit holding bolts equally.

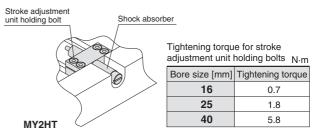



MY2 Series


Model Selection 2


The following are the steps for selection of the MY2 series best suited to your application.

Calculation of Guide Load Factor

1 Operating Conditions -


Cylinder MY2H40G-500 Average operating speed va ... 300 mm/s Mounting orientation Wall mounting

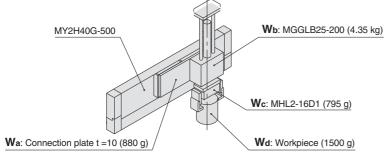

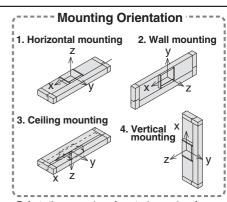

Refer to the pages above for actual examples of calculation for each orientation.

2 Load Blocking

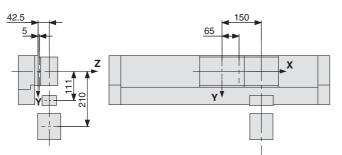

Workpiece Mass and Center of Gravity

Workpiece	Mass	Center of gravity								
no. W n	mn	X-axis X n	Y-axis Y n	Z-axis Z n						
Wa	0.88 kg	65 mm	0 mm	5 mm						
Wb	4.35 kg	150 mm	0 mm	42.5 mm						
Wc	0.795 kg	150 mm	111 mm	42.5 mm						
Wd	1.5 kg	150 mm	210 mm	42.5 mm						

n = a, b, c, d

3 Composite Center of Gravity Calculation

$$m_3 = \Sigma m_n$$

= 0.88 + 4.35 + 0.795 + 1.5 = **7.525 kg**

$$\mathbf{X} = \frac{1}{m_3} \times \Sigma \ (\mathbf{m}_n \times \mathbf{x}_n)$$
$$= \frac{1}{7.525} \ (0.88 \times 65 + 4.35 \times 150 + 0.795 \times 150 + 1.5 \times 150) = \mathbf{140.1} \ \mathbf{mm}$$

$$Y = \frac{1}{m_3} \times \Sigma (m_n \times y_n)$$

=
$$\frac{1}{7.525}$$
 (0.88 x 0 + 4.35 x 0 + 0.795 x 111 + 1.5 x 210) = **53.6 mm**

$$Z = \frac{1}{m_3} \times \Sigma (m_n \times z_n)$$

=
$$\frac{1}{7.525}$$
 (0.88 x 5 + 4.35 x 42.5 + 0.795 x 42.5 + 1.5 x 42.5) = **38.1 mm**

4 Calculation of Load Factor for Static Load -

m₃: Mass

m₃ **max** (from 1 of graph MY2H/**m**₃) = 62 (kg)


Load factor $\alpha_1 = m_3 / m_3 max = 7.525/62 = 0.12$

M2: Moment

M₂ max (from 2 of graph MY2H/M₂) = 50 (N·m)

 $M_2 = m_3 \times g \times Z = 7.525 \times 9.8 \times 38.1 \times 10^{-3} = 2.81 \text{ (N·m)}$

Load factor $C(2) = M_2/M_2$ max = 2.81/50 = 0.06

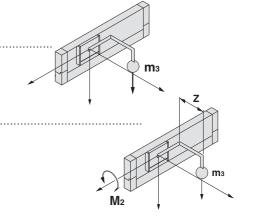


Calculation of Guide Load Factor

M₃: Moment

 M_3 max (from 3 of graph MY2H/ M_3) = 60 (N·m)

$$M_3 = m_3 \times q \times X = 7.525 \times 9.8 \times 140.1 \times 10^{-3} = 10.33 \text{ (N·m)}$$

Load factor $O(3) = M_3/M_3 \text{ max} = 10.33/60 = 0.17$

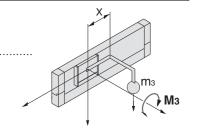

5 Calculation of Load Factor for Dynamic Moment

Equivalent load FE at impact

$$Fe = \frac{1.4}{100} \times \upsilon a \times g \times m = \frac{1.4}{100} \times 300 \times 9.8 \times 7.525 = 309.7 \text{ (N)}$$

M₁E: Moment

M₁E max (from 4 of graph MY2H/M₁ where 1.4va = 420 mm/s) = 42.9 (N·m)

$$M_{1E} = \frac{1}{3} \times Fe \times Z = \frac{1}{3} \times 309.7 \times 38.1 \times 10^{-3} = 3.93 \text{ (N·m)}$$


Load factor $\alpha_4 = M_1 E/M_1 E max = 3.93/42.9 = 0.09$



 $M_3E \text{ max}$ (from 5 of graph MY2H/M3 where 1.4valpha = 420 mm/s) = 42.9 (N·m)

$$M_3E = \frac{1}{3} \times FE \times Y = \frac{1}{3} \times 309.7 \times 53.6 \times 10^{-3} = 5.53 \text{ (N·m)}$$

Load factor $\alpha_5 = M_3 E/M_3 E max = 5.53/42.9 = 0.13$

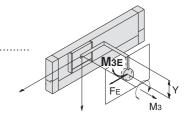

6 Sum and Examination of Guide Load Factors -

 $\Sigma \alpha = \alpha_1 + \alpha_2 + \alpha_3 + \alpha_4 + \alpha_5 = 0.57 \le 1$

The above calculation is within the allowable value and the selected model can be used.

Select a separate shock absorber.


In an actual calculation, when the sum of guide load factors $\Sigma\alpha$ in the formula above is more than 1, consider decreasing the speed, increasing the bore size, or changing the product series. Also, this calculation can be performed easily with the "SMC Pneumatics CAD System".


Load Mass


MY2H/m3

Allowable Moment

Piston speed mm/s

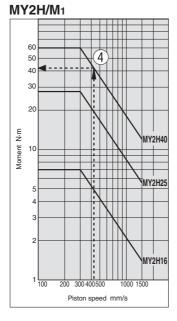

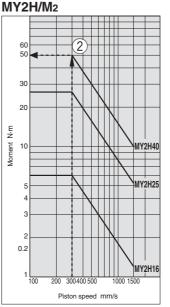

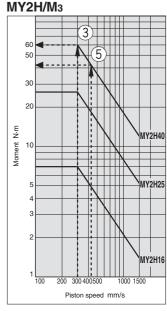


Mechanically Jointed Rodless Cylinder Cam Follower Guide Type

MY2C Series

Ø 16, Ø 25, Ø 40

How to Order

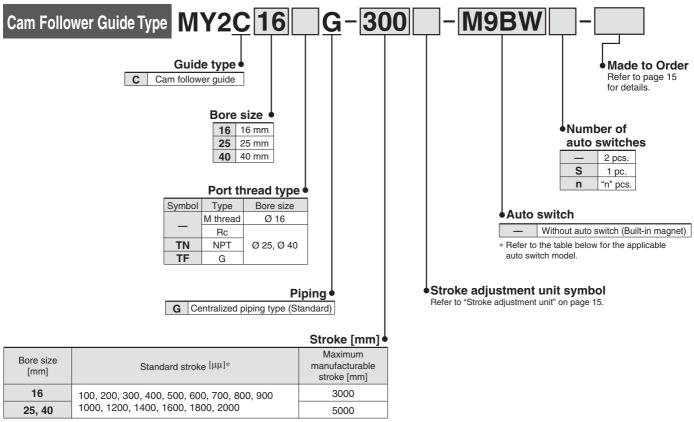

Strokes are manufacturable in 1 mm increments, up to the maximum stroke. However, please be advised that with stroke 49 or less, there are cases where auto switch mounting is not possible and the performance of the air cushion may decline

Also when exceeding a 2000 mm stroke, specify "-XB11" at the end of the model number

Refer to the Made to Order Specifications.

Applicable Auto Switches/Refer to pages 28 to 32 for further information on auto switches.

		Flootwicel	light)	L	oad voltag	ge	Auto switc	h model	Lead	wire I	ength	(m)	Pre-wired									
Туре	Special function	Electrical entry	Indicator light	Wiring (Output)	ı	OC .	AC	Perpendicular	In-line	0.5 (—)	1 (M)	3 (L)	5 (Z)	connector	Applica	ble load							
			=	3-wire (NPN)		5 V 40 V		M9NV	M9N	•	•	•	0	0	IC								
				3-wire (PNP)	2-wire (NPN)	5 V, 12 V		M9PV	M9P	•	•	•	0	0	circuit								
ے ہ				2-wire		12 V]	M9BV	M9B	•	•	•	0	0									
d state switch	D:			3-wire (NPN)		5 V 12 V	5 V 12 V	5 V, 12 V	5 V 12 V	5 \/ 10 \/	5 V 12 V	5 V 12 V		5 V 12 V		M9NWV	M9NW	•	•	•	0	0	IC
S S	Diagnostic indication Grommet Y	Grommer Yes	Yes	3-wire (PNP)	24 V		_	M9PWV	M9PW	•	•		0	0	circuit	Relay, PLC							
Solid auto s	(2-color indicator)			2-wire					12 V		M9BWV	M9BW	•	•		0	0	_	FLC				
a s	Water resistant			3-wire (NPN)		5 V, 12 V	5 V 10 V	M9NAV*1	M9NA*1	0	0	•	0	0	IC								
	(2-color indicator)			3-wire (PNP)				M9PAV*1	M9PA*1	0	0		0	0	circuit								
	(2-color indicator)			2-wire		12 V		M9BAV*1	M9BA*1	0	0	•	0	0									
Reed auto switch		Grommet	Yes	3-wire (NPN equivalent)	_	5 V	_	A96V	A96	•	_	•	_	_	IC circuit	_							
Re to s		Gioilinet		2-wire	24 V	12 V	100 V	A93V*2	A93	•	•	•	•	_		Relay,							
auf			No	Z-wire	24 V	24 V 12 V	100 V or less	A90V	A90	•	_	•	_	_	IC circuit	PLC							

^{*1} Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance.

Consult with SMC regarding water resistant types with the above model numbers. *2 1 m type lead wire is only applicable to D-A93.

1 m M (Example) M9NWM (Example) M9NWL 3 m L



^{*} Lead wire length symbols: 0.5 m -(Example) M9NW

⁽Example) M9NWZ

^{*} Solid state auto switches marked with "O" are produced upon receipt of order.

^{*} There are other applicable auto switches than listed above. For details, refer to page 32.

For details about auto switches with pre-wired connector.

^{*} Auto switches are shipped together (not assembled).

Mechanically Jointed Rodless Cylinder Cam Follower Guide Type MY2C Series





Made to Order: Individual Specifications (For details, refer to page 38)

Symbol	Specifications
-X168	Helical insert thread

Made to Order Specifications (Refer to pages 38 to 44 for details.)

Symbol Specifications						
-XB11 Long stroke type						
-XB22	Shock absorber soft type RJ series type					

Specifications

Bore size [mm]	16	25	40			
Fluid	Air					
Action	Double acting					
Operating pressure range	0.15 to 0.8 MPa	0.1 to 0.8 MPa				
Proof pressure	1.2 MPa					
Ambient and fluid temperature	5 to 60 °C					
Cushion	Air	cushion, Shock absor	ber			
Lubrication	N	lot required (Non-lube	e)			
Stroke length tolerance	1000 or less +1.8 1001 to 3000 +2.8	2700 or less ^{+1.8} ₀ , 2701 to 5000 ⁺¹				
Port size	M5 x 0.8	Rc 1/8	Rc 1/4			

Piston Speed

Bore size [ı	mm]	16	25	40			
Without stroke adjustme	nt unit	100 to 1000 mm/s ⁽¹⁾					
Stroke adjustment unit	L unit and H unit	100 to 1500 mm/s					

Note 1) When exceeding the air cushion stroke ranges on page 10, the **piston speed** should be **100 to 200** mm/s.

Stroke Adjustment Unit Specifications

Bore size [m	m]	16	2	5	40			
Unit symbol		L	L	Н	L	Н		
Shock absorber model		RB0806	RB1007	RB1412	RB1412 RB2015			
Stroke adjustment range	Without spacer	0 to -5.6	0 to -11.5		0 to -16			
by intermediate fixing With short spacer		-5.6 to -11.2	-11.5	to -23	-16 t	o -32		
spacer [mm]	With long spacer	-11.2 to -16.8	-23 to	-34.5	-32 to -48			


^{*} Stroke adjustment range is applicable for one side when mounted on a cylinder.


Stroke Adjustment Unit Symbol

				Rig	ght side s	troke adj	ustment เ	unit			
			Without	L: With I absorbe	low load s	shock	H: With high load shock absorber				
			unit		With short spacer	With long spacer		With short spacer			
	Wit	hout unit	Nil	SL	SL6	SL7	SH	SH6	SH7		
nit Se		w load shock	LS	L	LL6	LL7	LH	LH6	LH7		
stroke nt unit	absorber	With short spacer	L6S	L6L	L6	L6L7	L6H	L6H6	L6H7		
		With long spacer	L7S	L7L	L7L6	L7	L7H	L7H6	L7H7		
Left side adjustme		gh load shock	HS	HL	HL6	HL7	Н	HH6	HH7		
Left	absorber With short space		H6S	H6L	H6L6	H6L7	Н6Н	H6	Н6Н7		
		With long spacer	H7S	H7L	H7L6	H7L7	Н7Н	H7H6	H7		

^{*} Spacers are used to fix the stroke adjustment unit at an intermediate stroke position.

Stroke adjustment unit mounting diagram

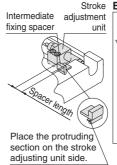

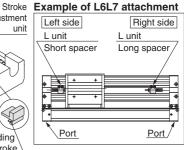

Shock Absorbers for L and H Units

Type	Stroke adjustment	В	ore size [mn	n]
туре	unit	16	25	40
Standard	L	RB0806	RB1007	RB1412
(Shock absorber/RB series)	Н	_	RB1412	RB2015
Shock absorber/soft type	L	RJ0806H	RJ1007H	RJ1412H
RJ series mounted (-XB22)	Н	_	RJ1412H	_

^{*} The shock absorber service life is different from that of the MY2C cylinder depending on operating conditions. Refer to the RB Series Specific Product Precautions for the replacement period.

Shock Absorber Specifications

Mod	lel	RB 0806	RB 1007	RB 1412	RB 2015		
Max. energy al	osorption (J)	2.9	5.9	19.6	58.8		
Stroke absor	ption [mm]	6	7	12	15		
Max. collision s	speed (mm/s)	1500	1500	1500	1500		
Max. operating frequ	uency (cycle/min)	80	70	45	25		
Spring	Extended	1.96	4.22	6.86	8.34		
force (N)	Retracted	4.22	6.86	15.98	20.50		
Operating tempera	ature range (°C)	5 to 60					

^{*} The shock absorber service life is different from that of the MY2C cylinder depending on operating conditions. Refer to the RB Series Specific Product Precautions for the replacement period.



Note 2) Use at a piston speed within the absorption capacity range. Refer to page 10.

Mounted shock absorber soft type RJ series (-XB22) is made to order specifications. For details, refer to page 1752.

MY2C Series

Theoretical Output

								(N)					
Bore	Piston		Operating pressure (MPa)										
size [mm]	area (mm²)	0.2	0.3	0.4	0.5	0.6	0.7	0.8					
16	200	40	60	80	100	120	140	160					
25	490	98	147	196	245	294	343	392					
40	1256	251	377	502	628	754	879	1005					

Note) Theoretical output (N) = Pressure (MPa) x Piston area (mm²)

Replacement Parts

Drive Unit (Cylinder) Replacement Part No.

Model Bore size [mm]	MY2C
16	MY2BH16G- Stroke
25	MY2BH25□G- Stroke
40	MY2BH40□G- Stroke

Enter a symbol for port thread type inside \Box . Note) Order auto switches separately.

Weight


						(kg)
Bore size	Basic	Additional weight per each	Weight of	Side support bracket	Stroke adju weight (
[mm]	weight	50 mm of stroke	mm moving we		L unit weight	H unit weight
16	1.05	0.13	0.34	0.01	0.03	_
25	2.59	0.29	0.97	0.02	0.06	0.09
40	8.78	0.67	3.09	0.04	0.17	0.23

Calculation: (Example) MY2C25G-300L

- Additional weight ----- 0.29/50 stroke
- $2.59 + 0.29 \times 300/50 + 0.06 \times 2 \cong 4.45 \text{ kg}$
- Weight of L unit 0.06 kg

Option

Stroke Adjustment Unit Part No.

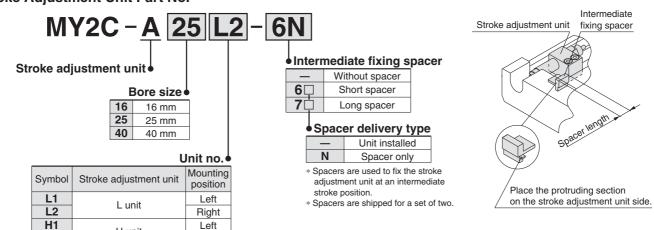

Note 1) Refer to page 15 for details about adjustment range.

H unit


Right

Note 2) L unit only for Ø 16

* When ordering the intermediate fixing spacer for the stroke adjustment unit, the intermediate fixing spacer is shipped together.

Component Parts

H₂

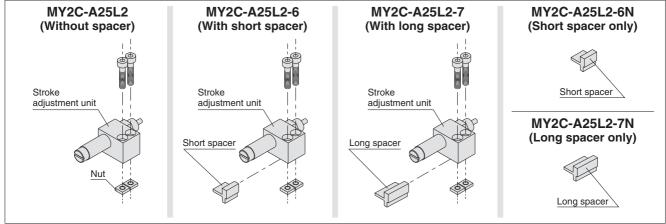


^{*} Nuts are equipped on the cylinder body

Mechanically Jointed Rodless Cylinder Cam Follower Guide Type MY2C Series

Construction

MY2C

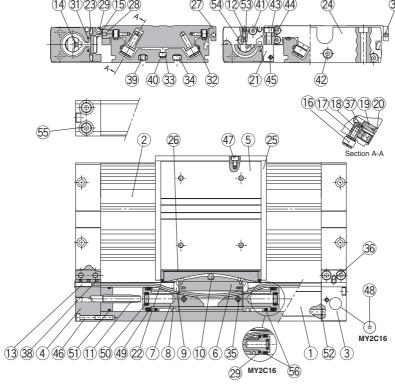

Component Parts

Description	Material	Note
Cylinder tube	Aluminium alloy	Hard anodised
Body	Aluminium alloy	Hard anodised
Head cover WR	Aluminium alloy	Hard anodised
Head cover WL	Aluminium alloy	Hard anodised
Slide table	Aluminium alloy	Hard anodised
Piston yoke	Aluminium alloy	Hard anodised
Piston	Aluminium alloy	Chromated
Wear ring	Special resin	
Belt separator	Special resin	
Parallel pin	Stainless steel	
Cushion ring	Aluminum alloy	Anodized
Cushion needle	Rolled steel	Nickel plated
Belt clamp	Special resin	
Cam follower	_	
Eccentric gear	Stainless steel	
Gear fixture	Stainless steel	
Adjustment gear	Stainless steel	
Retaining ring	Stainless steel	
End cover	Aluminium alloy	Hard anodised
Bearing	Special resin	
End plate	Aluminium alloy	Hard anodised
Stopper	Carbon steel	Nickel plated after quenching
Top cover	Stainless steel	
Side cover	Aluminium alloy	Hard anodised
	Cylinder tube Body Head cover WR Head cover WL Slide table Piston yoke Piston Wear ring Belt separator Parallel pin Cushion ring Cushion needle Belt clamp Cam follower Eccentric gear Gear fixture Adjustment gear Retaining ring End cover Bearing End plate Stopper Top cover	Cylinder tube Body Aluminium alloy Head cover WR Aluminium alloy Head cover WL Aluminium alloy Slide table Piston yoke Aluminium alloy Wear ring Belt separator Parallel pin Cushion ring Cushion needle Belt clamp Cam follower Eccentric gear Adjustment gear Adjustment gear Retaining ring Special resin Special resin Aluminium alloy Cushion needle Belt clamp Special resin Cam follower Eccentric gear Adjustment gear Stainless steel Retaining ring Stainless steel End cover Aluminium alloy Bearing Special resin Stainless steel Adjustment gear Aluminium alloy Stainless steel Aluminium alloy Bearing Special resin Carbon steel Top cover Stainless steel

No.	Description	Material	Note
28	Cam follower cap	Aluminium alloy	Hard anodised
29	Magnet	_	
30	Magnet	_	
31	Seal magnet	Rubber magnet	
32	Rail	Hard steel wire material	
33	Square nut	Carbon steel	Chromated
34	Square nut	Carbon steel	Chromated
35	Spring pin	Carbon tool steel	
36	Parallel pin	Stainless steel	
37	Hexagon socket set screw	Chrome molybdenum steel	Black zinc chromated
38	Hexagon socket set screw	Chrome molybdenum steel	Black zinc chromated
39	Hexagon socket set screw	Chrome molybdenum steel	Chromated
40	Hexagon socket set screw	Chrome molybdenum steel	Chromated
41	Hexagon socket head cap screw	Chrome molybdenum steel	Chromated
42	Hexagon socket head cap screw	Chrome molybdenum steel	Chromated
43	Hexagon socket head cap screw	Chrome molybdenum steel	Chromated
44	Hexagon socket head cap screw	Chrome molybdenum steel	Chromated
45	Hexagon socket head cap screw	Chrome molybdenum steel	Chromated
46	Hexagon socket head cap screw	Chrome molybdenum steel	Chromated
47	Hexagon socket head cap screw	Chrome molybdenum steel	Chromated
48	Steel ball	Spring steel	Nickel plated
54	Hexagon socket head (taper) plug	Carbon steel	Chromated
55	Hexagon socket head (taper) plug	Carbon steel	Chromated
56	Lube retainer	Special resin	

Replacement Parts: Seal Kit

No.	Description	Qty.	MY2C16G	MY2C25G	MY2C40G			
14	Seal belt	1	MY16-16C-Stroke	MY25-16C-Stroke	MY40-16C-Stroke			
15	Dust seal band	1	MY2H16-16B-Stroke	MY2H25-16B-Stroke	MY2H40-16B-Stroke			
	O minum	2	KA00309	KA00309	KA00320			
53	53 O-ring		(Ø 4 x Ø 1.8 x Ø 1.1)	(Ø 4 x Ø 1.8 x Ø 1.1)	(Ø 7.15 x Ø 3.75 x Ø 1.7)			
22	Scraper	2						
49	Piston seal	2						
50	Cushion seal	2	MY2B16-PS	MY2B25-PS	MY2B40-PS			
51	51 Tube gasket							
52	O-ring	4						

^{*} Seal kit includes ②, ④, ⑤, ⑤ and ⑤. Order the seal kit based on each bore size.

Seal kit includes a grease pack (10 g).

When (4) and (5) are shipped as single units, a grease pack (10 g per 1000 strokes) is included.

Order with the following part number when only the grease pack is needed.


Grease pack part number:GR-S-010 (10 g), GR-S-020 (20 g)



MY2C Series

Ø 16, Ø 25, Ø 40

MY2C Bore size G - Stroke

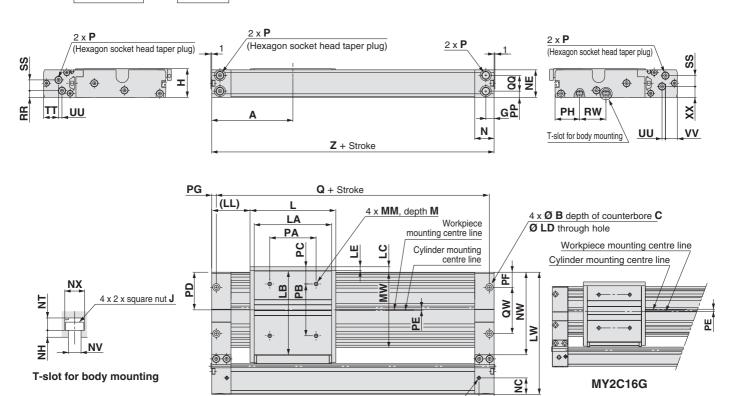

																									[mm]
Model	Α	В	С	G	GB	Н	L	,	J	LA	LB	LC	LD	LE	(LL)	LW	M	M	M	MW	N	NC	NE	NH	NT
MY2C16G	80	6.5	3.3	8.5	17	28	80	M3 x	¢ 0.5	70	72.4	6	3.4	5	40	104	7	M4 >	(0.7	64.6	20	14	27	2	3.5
MY2C25G	105	9.5	5.4	10.7	19.5	37	110.8	M5 x	8.0 x	100	108.7	7	5.5	5	49.6	158	9	M5 x	0.8	97.5	25	21.3	35.5	3	5.3
MY2C40G	165	14	8.6	15.5	31.5	58	180	M6 x	< 1	158	135.3	7	9	5	75	214	13	M6 >	(1	121.5	40	32.4	56.5	4	6.5
Model	NV	NW	NX		-	PA	РВ	РС	PD	PE	PF	PG	PH	PP	Q	QQ	QW	RR	RW	SS	TT	UU	VV	XX	7
IVIOUCI	144	1444	ш			17	1 0		יםיו						G.	G G	GII	1111	1144	00		00	V V	^^	
MY2C16G	3.4	69.2	5.8	M5 x	8.0 x	40	43	16.5	32	2.2	9.8	4	21.3	5.3	152	16.4	40	5.3	22	9.7	12.5	3	10.5	12	160
MY2C25G	5.5	106.8	8.5	1,	/8	60	67	22.2	48.7	0.8	19.5	6	31.8	8	198	20.4	60	8.5	34	14	19.3	4.4	15.3	14	210
MY2C40G	6.6	135.1	10.5	1,	/4	100	77	29	60.5	8.5	40.5	9	38	16	312	25.5	57	11	45	21.5	35.4	2	29	23	330

"P" indicates cylinder supply ports. * The plug for "P" MY2C16G is a hexagon socket head plug.


GB

Cushion needle

Stroke adjustment unit

Low load shock absorber


MY2C Bore size G - Stroke L

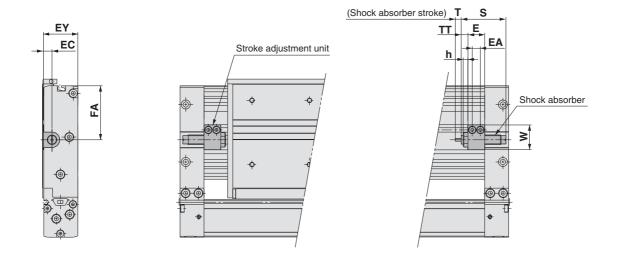

Applicable cylinder	Е	EA	EC	EY	FA	h	S	Т	TT	W	Shock absorber model
MY2C16	14.4	7	6	27	38.5	4	40.8	6	5.6 (Max. 11.2)	16.5	RB0806
MY2C25	17.5	8.5	9	36	56.4	5	46.7	7	7.1 (Max. 18.6)	25.8	RB1007
MY2C40	25	13	13.5	56.5	67.8	6	67.3	12	10 (Max. 26)	38	RB1412

High load shock absorber

MY2C Bore size G - Stroke H

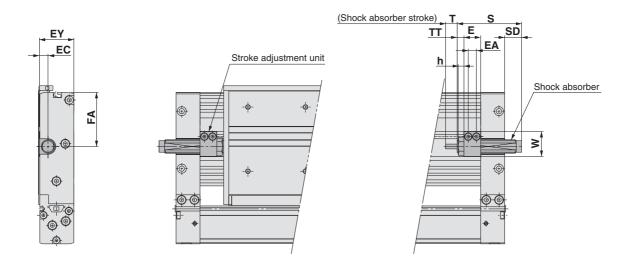


Applicable cylinder	E	EA	EC	EY	FA	h	S	SD	Т	TT	W	Shock absorber model
MY2H25	17.5	8.5	9	36	56.4	6	67.3	17.7	12	7.1 (Max. 18.6)	25.8	RB1412
MY2H40	25	13	13.5	56.5	67.8	6	73.2	_	15	10 (Max. 26)	38	RB2015




MY2C Series

Side Support

Side support MYC-S□A

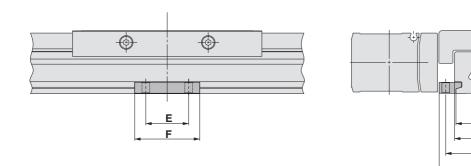

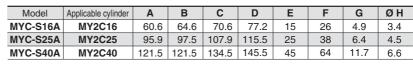


B C


Guide for Using Side Support

For long stroke operation, the cylinder tube may deflect due to its own weight and/or load mass. In such cases, install a side support at the intermediate stroke position. The spacing (L) of the side support must be no more than the values shown in the graph at right.



- 1 If the cylinder mounting surfaces are not measured accurately, using a side support may cause poor operation. Make sure to level the cylinder tube when mounting the cylinder. For long stroke operation involving vibration and impact, the use of side supports is recommended even if the support spacing is within the allowable limits shown in the graph.
- ② Support brackets are not for mounting. They should be used only to provide support.

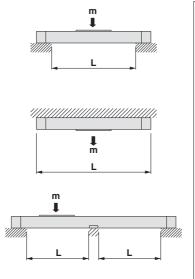

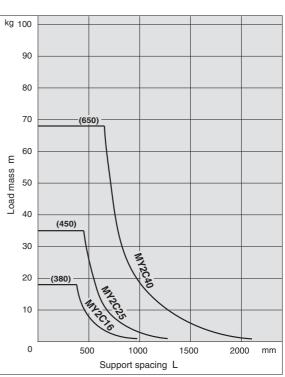

2 x Ø H

A set of side supports consists of a left support and a right support.




Mechanically Jointed Rodless Cylinder Linear Guide Type

MY2H/HT Series

Ø 16, Ø 25, Ø 40

How to Order

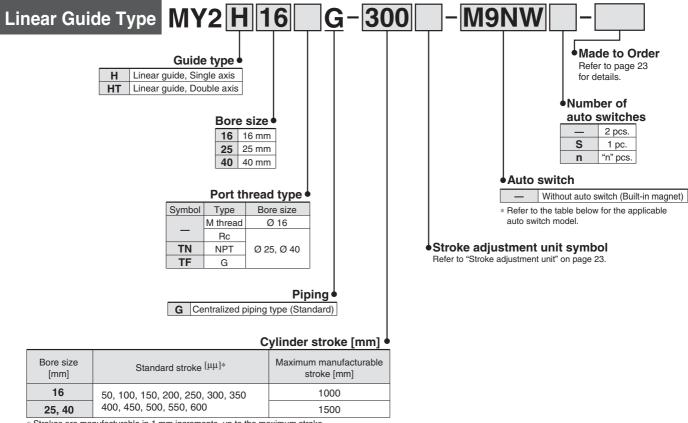

^{*} Strokes are manufacturable in 1 mm increments, up to the maximum stroke. However, add "-XB10" to the end of the part number for non-standard strokes from 51 to 599 Also when exceeding a 600 mm stroke, specify "-XB11" at the end of the model number.

Applicable Auto Switches/Refer to pages 28 to 32 for further information on auto switches.

		Electrical		NA/inim m	L	oad voltag	je	Auto switc	h model	Lead	wire I	length	n (m)	Due sudan d					
Type	/pe Special function		Indicator light	Wiring (Output)	DC A		AC	Perpendicular	In-line	0.5 (—)	1 (M)	3 (L)	5 (Z)	Pre-wired connector	Applical	ble load			
				3-wire (NPN)		5 V, 12 V	M9NV	M9N	•	•	•	0	0	IC					
				3-wire (PNP) 2-wire	J V, 12 V		M9PV	M9P				0	0	circuit					
اج ہ ا					12 V		M9BV	M9B	•	•	•	0	0	_					
switch switch	Dia anno antio in alto antio a		Grommet	Grommet	Grommet		3-wire (NPN)		5 V, 12 V		M9NWV	M9NW	•	•		0	0	IC	Relay,
d s	Diagnostic indication					Yes	3-wire (PNP)	24 V		_	M9PWV	M9PW	•	•	•	0	0	circuit	PLC
Solid auto s	(2-colour indicator)			2-wire		12 V		M9BWV	M9BW	•	•	•	0	0	_] [[
a 0	Matau vasiatant			3-wire (NPN)		E V 10 V		M9NAV*1	M9NA*1	0	0	•	0	0	IC				
	Water resistant (2-colour indicator)			3-wire (PNP)	5 V, 12 V		M9PAV*1	M9PA*1	0	0	•	0	0	circuit					
	(2-colour indicator)			2-wire		12 V		M9BAV*1	M9BA*1	0	0	•	0	0	_				
Reed auto switch			Yes	3-wire (NPN equivalent)	_	5 V	_	A96V	A96	•	_	•	_	_	IC circuit	_			
Re		Grommet		0.00	10.1/	100 V	A93V*2	A93	•	•	•	•	_	_	Relay,				
aut			No	2-wire	24 V	12 V	100 V or less		A90	•	_	•	_	_	IC circuit	PLC			

^{*1} Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance. Consult with SMC regarding water resistant types with the above model numbers.

* Lead wire length symbols: 0.5 m (Example) M9NW

1 m M (Example) M9NWM 3 m L (Example) M9NWL 5 m Z (Example) M9NWZ



^{*2 1} m type lead wire is only applicable to D-A93.

 $[\]ast$ Solid state auto switches marked with "O" are produced upon receipt of order.

st There are other applicable auto switches than listed above. For details, refer to page 32.

^{*} For details about auto switches with pre-wired connector.

^{*} Auto switches are shipped together (not assembled).

Mechanically Jointed Rodless Cylinder Linear Guide Type MY2H/HT Series



Symbol	Specifications
-X168	Helical insert thread

Made to Order Specifications

Symbol	Specifications
-XB10	Intermediate stroke (Using exclusive body)
-XB11	Long stroke type
-XB20	Stroke adjusting unit with adjusting bolt
-XB22	Shock absorber soft type RJ series type
-XC56	With knock pin holes

Specifications

Bore size [mm]	16	25	40				
Fluid	Air						
Action	Double acting						
Operating pressure range	0.15 to 0.8 MPa						
Proof pressure	1.2 MPa						
Ambient and fluid temperature		5 to 60 °C					
Cushion	Air	cushion, Shock absor	ber				
Lubrication	N	ot required (Non-lube	e)				
Stroke length tolerance	+1.8						
Port size	M5 x 0.8	Rc 1/4					

Piston Speed

Bore size [n	nm]	16	25 40				
Without stroke adjustmen	nt unit	100 to 1000 mm/s Note 1)					
Stroke adjustment unit	100 to 1500 mm/s						

Note 1) When exceeding the air cushion stroke ranges on page 10, the **piston speed** should be **100 to 200** mm/s.

Note 2) Use at a piston speed within the absorption capacity range. Refer to page 10.

Stroke Adjustment Unit Specifications


Bore size [mm]		1	6	2	5	4	0	
Unit symbol			L	Н	L	Н	L	Н
Chook abaarbar m	o dol	MY2H	RB0806	RB1007	RB1007	RB1412	RB1412	RB2015
Shock absorber in	Shock absorber model MY2HT		RB1007	RB1412	RB1412	RB2015	RB2015	RB2725
	Without	spacer	0 to	-5.6	0 to -	-11.5	0 to	-16
range by intermediate With short spacer		-5.6 to	-11.2	-11.5	to -23	-16 t	o -32	
	With Ion	g spacer	-11.2 t	o -16.8	-23 to	-34.5	-32 t	o -48

^{*} Stroke adjustment range is applicable for one side when mounted on a cylinder.

Stroke Adjustment Unit Symbol

				Riç	ght side s	troke adj	ustment ı	unit	
			Without	L: With absorbe	low load s	shock	H: With high load shock absorber		
		unit		With short spacer	With long spacer		With short spacer	With long spacer	
	Without unit			SL	SL6	SL7	SH	SH6	SH7
nit se	L: With lo	w load shock	LS	L	LL6	LL7	LH	LH6	LH7
stroke nt unit	absorber	With short spacer	L6S	L6L	L6	L6L7	L6H	L6H6	L6H7
side		With long spacer	L7S	L7L	L7L6	L7	L7H	L7H6	L7H7
+ 3 ··· ··· ··· ··· ··· ··· ···		HS	HL	HL6	HL7	Н	HH6	HH7	
Left	absorber With short spacer		H6S	H6L	H6L6	H6L7	Н6Н	Н6	Н6Н7
		With long spacer	H7S	H7L	H7L6	H7L7	H7H	H7H6	H7

Stroke adjustment unit mounting diagram

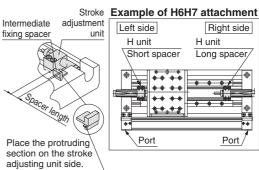

Shock Absorbers for L and H Units

Model	Time	Stroke adjustment	Во	ore size [m	m]
Model	Туре	unit	16	25	40
	Standard	L	RB0806	RB1007	RB1412
MY2H	(Shock absorber/RB series)	Н	RB1007	RB1412	RB2015
IVITZIT	Shock absorber/soft type	L	RJ0806H	RJ1007H	RJ1412H
	RJ series mounted (-XB22)	Н	RJ1007H	RJ1412H	_
	Standard	L	RB1007	RB1412	RB2015
MY2HT	(Shock absorber/RB series)	Н	RB1412	RB2015	RB2725
IVI T Z 🗆 I	Shock absorber/soft type	L	RJ1007H	RJ1412H	_
	RJ series mounted (-XB22)	Н	RJ1412H	_	_

^{*} The shock absorber service life is different from that of the MY2H/HT cylinder depending on operating conditions. Refer to the RB Series Specific Product Precautions for the replacement period.

Shock Absorber Specifications

Mod	del	RB 0806	RB 1007	RB 1412	RB 2015	RB 2725	
Max. energy al	2.9	5.9	19.6	58.8	147		
Stroke absor	6	7	12	15	25		
Max. collision s	1500	1500	1500	1500	1500		
Max. operating frequ	uency (cycle/min)	80	70	45	25	10	
Spring	Extended	1.96	4.22	6.86	8.34	8.83	
force (N)	Retracted	4.22	6.86	15.98	20.50	20.01	
Operating tempera	ature range (°C)	5 to 60					

^{*} The shock absorber service life is different from that of the MY2H/HT cylinder depending on operating conditions. Refer to the RB Series Specific Product Precautions for the replacement period.



^{*} Spacers are used to fix the stroke adjustment unit at an intermediate stroke position.

^{*} Mounted shock absorber soft type RJ series (-XB22) is made to order specifications. For details, refer to page 43.

MY2H/HT Series

Theoretical Output

								(N)			
Bore size	Piston area	Operating pressure (MPa)									
(mm)	(mm ²)	0.2	0.3	0.4	0.5	0.6	0.7	0.8			
16	200	40	60	80	100	120	140	160			
25	490	98	147	196	245	294	343	392			
40	1256	251	377	502	628	754	879	1005			

Note) Theoretical output (N) = Pressure (MPa) x Piston area (mm²)

Replacement Parts

Drive Unit (Cylinder) Replacement Part No.

Model Bore size (mm)	MY2H	MY2HT			
16	MY2BH16G-Stroke				
25	MY2BH25□G	- Stroke			
40	MY2BH40□G	- Stroke			

Enter a symbol for port thread type inside \square . Note) Order auto switches separately.

Weight


						(kg)
Model	Bore	Basic	Additional weight per each	Weight of	Stroke adju weight (
Woder	size (mm)	weight	50 mm of stroke	moving parts	L unit weight	H unit weight
	16	0.86	0.22	0.21	0.03	0.04
MY2H	25	2.35	0.42	0.64	0.06	0.09
	40	6.79	0.76	2.20	0.16	0.22
	16	1.27	0.31	0.33	0.04	0.08
MY2HT	25	3.70	0.61	1.20	0.10	0.18
	40	10.05	1.13	3.35	0.27	0.46

Calculation: (Example) MY2H25G-300L


- Weight of L unit ----- 0.06 kg

Option

Stroke Adjustment Unit Part No.

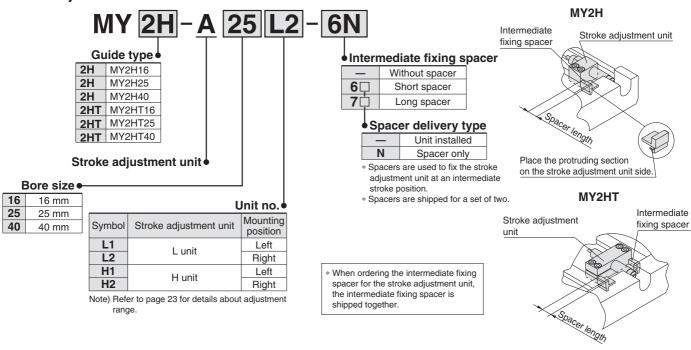



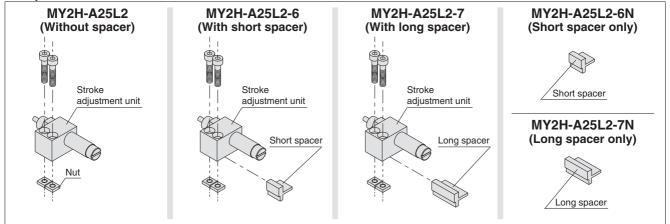


^{*} Nuts are equipped on the cylinder body.



MY2H/HT Series

Construction

Single axis type: MY2H

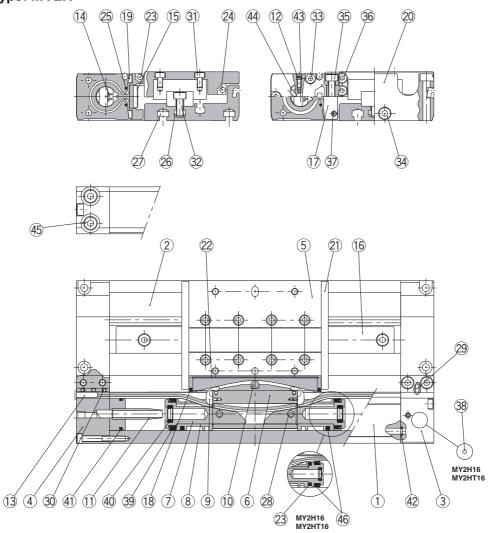

Component Parts


No.	Description	Material	Note
_ 1	Cylinder tube	Aluminium alloy	Hard anodised
2	Body	Aluminium alloy	Anodized
3	Head cover WR	Aluminium alloy	Hard anodised
4	Head cover WL	Aluminium alloy	Hard anodised
5	Slide table	Aluminium alloy	Hard anodised
6	Piston yoke	Aluminium alloy	Hard anodised
7	Piston	Aluminium alloy	Chromated
8	Wear ring	Special resin	
9	Belt separator	Special resin	
10	Parallel pin	Stainless steel	
11	Cushion ring	Aluminium alloy	Anodized
12	Cushion needle	Rolled steel	Nickel plated
13	Belt clamp	Special resin	
16	Guide	_	
17	End cover	Aluminium alloy	Hard anodised
19	Bearing	Special resin	
20	End plate	Aluminium alloy	Hard anodised
21	Stopper	Carbon steel	Nickel plated after quenching
22	Top cover	Stainless steel	

No.	Description	Material	Note
23	Magnet	_	
24	Magnet	_	
25	Seal magnet	Rubber magnet	
26	Square nut	Carbon steel	Chromated
27	Square nut	Carbon steel	Chromated
28	Spring pin	Carbon tool steel	
29	Parallel pin	Stainless steel	
30	Hexagon socket set screw	Chrome molybdenum steel	Black zinc chromated
31	Hexagon socket head cap screw	Chrome molybdenum steel	Chromated
32	Hexagon socket head cap screw	Chrome molybdenum steel	Chromated
33	Hexagon socket head cap screw	Chrome molybdenum steel	Chromated
34	Hexagon socket head cap screw	Chrome molybdenum steel	Chromated
35	Hexagon socket head cap screw	Chrome molybdenum steel	Chromated
36	Hexagon socket head cap screw	Chrome molybdenum steel	Chromated
37	Hexagon socket head cap screw	Chrome molybdenum steel	Chromated
38	Steel ball	Spring steel	Nickel plated
44	Hexagon socket head (taper) plug	Carbon steel	Chromated
45	Hexagon socket head (taper) plug	Carbon steel	Chromated
46	Lubretainer	Special resin	





Double axis type: MY2HT

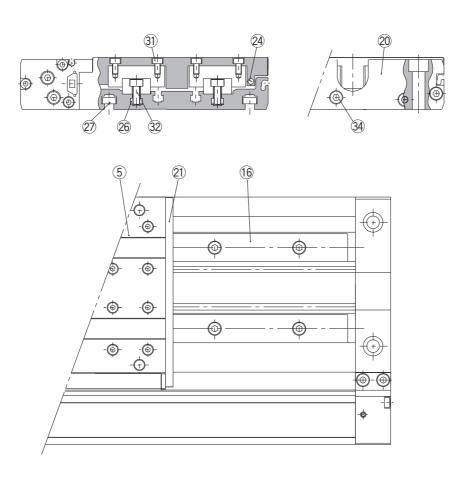

Replacement Parts: Seal Kit

Hick	accincint i arts.	ocai ixii	•		
No.	Description	Qty.	MY2H16G/MY2HT16G	MY2H25G/MY2HT25G	MY2H40G/MY2HT40G
14	Seal belt	1	MY16-16C-Stroke	MY25-16C-Stroke	MY40-16C-Stroke
15	Dust seal band	1	MY2H16-16B-Stroke	MY2H25-16B-Stroke	MY2H40-16B-Stroke
43	O-ring	0	KA00309	KA00309	KA00320
43	O-ring	2	(ø4 x ø1.8 x ø1.1)	(ø4 x ø1.8 x ø1.1)	(ø7.15 x ø3.75 x ø1.7)
18	Scraper	2			
39	Piston seal	2			
40	Cushion seal	2	MY2B16-PS	MY2B25-PS	MY2B40-PS
41	Tube gasket	2			
42	O-ring	4			

^{*} Seal kit includes $(\!(\$)\!),\, (\!(\$)\!),\, (\!(\$)\!),\, (\!(\$)\!)$ and $(\!(\&)\!).$ Order the seal kit based on each bore size.



size.

* Seal kit includes a grease pack (10 g).

When (4) and (5) are shipped as single units, a grease pack (20 g) is included.


Order with the following part number when only the grease pack is needed.


Grease pack part number:GR-S-010 (10 g), GR-S-020 (20 g)

MY2H/HT Series

Single Axis Type: Ø 16, Ø 25, Ø 40

MY2H Bore size G - Stroke

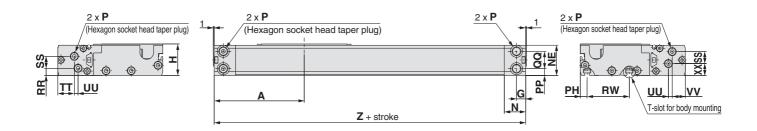

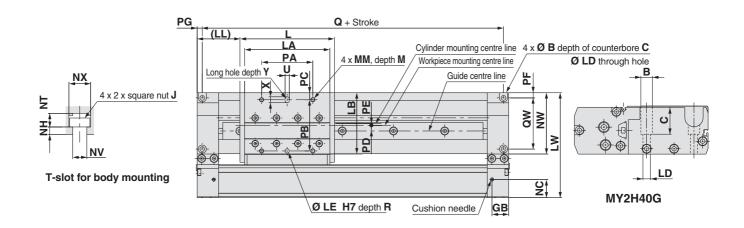


																											[mm]
Model	Α	В	С	G	GB	Н	L	Ţ	J	LA	LB	LD	LE	(LL)	LW	M	MM	N	NC	NE	NH	NT	NV	NW	NX		P
MY2H16G	80	6.5	3.3	8.5	17	28	80	M3 >	0.5	70	50.4	3.4	4	40	83	7 1	M4 x 0.7	20	14	27	2	3.5	3.4	48.2	5.8	M5	x 0.8
MY2H25G	105	9.5	5.4	10.7	19.5	37	110.8	M5 >	0.8	100	71.7	5.5	5	49.6	123	9 1	M5 x 0.8	25	21.3	35.5	3	5.3	5.5	71.8	8.5	1	/8
MY2H40G	165	14	32.5	15.5	31.5	58	180	M6 >	(1	158	80.3	9	6	75	161	13 I	M6 x 1	40	32.4	56.5	4	6.5	6.6	82.1	10.5	1	/4
Model	PA	PE	3 PC	ЭР	D PI	E PI	FPG	РН	PP	Q	QC) (w	R	RR	RW	SS	TI	ΓIυ	JU	JU	V۱	<i>,</i>	Х	хх	Υ	Z
MY2H16G	40	40	7.2	2 2.	8 3.	7 3.	5 4	5.1	5.3	152	16.4	4 4	40	5	5.3	40	9.7	12.	5 4	4 3	3	10.	5 (6	12	5	160
MY2H25G	60	60	8.2	2 6.	6 2.	7 5.	5 6	7.5	8	198	20.4	4 (60	5	8.5	50	14	19.	.3 !	5 4	1.4	15.	3	7.5	14	5	210
MY2H40G	100	70	5.5	5 8.	.5 5	17	9	9.5	16	312	25.	5 !	57	8	11	53.5	21.5	35.	4 (6 2	2	29	,	9	23	8	330

"P" indicates cylinder supply ports. * The plug for "P" MY2H16G is a hexagon socket head plug.

Stroke adjustment unit

Low load shock absorber


MY2H Bore size G - Stroke L

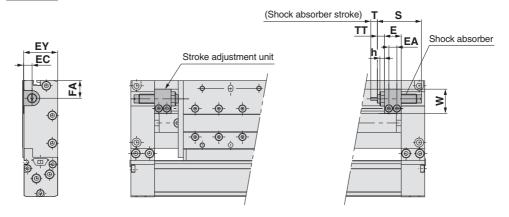

Applicable cylinder	Е	EA	EC	EY	FA	h	S	Т	TT	W	Shock absorber model
MY2H16	14.4	7	6	27	12.5	4	40.8	6	5.6 (Max. 11.2)	16.5	RB0806
MY2H25	17.5	8.5	9	36	19.3	5	46.7	7	7.1 (Max. 18.6)	25.8	RB1007
MY2H40	25	13	13	57	17	6	67.3	12	10 (Max. 26)	38	RB1412

High load shock absorber

MY2H Bore size G - Stroke H

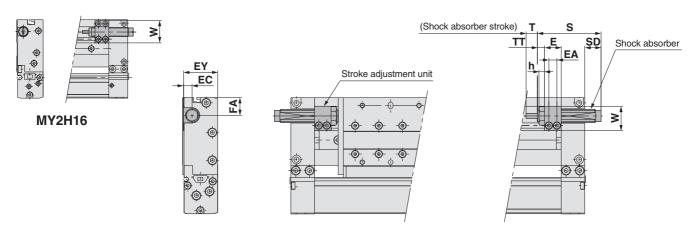


Applicable cylinder	Е	EA	EC	EY	FA	h	S	SD	Т	TT	W	Shock absorber model
MY2H16	14.4	7	6	27	12.5	_	46.7	6.7	7	5.6 (Max. 11.2)	23.5	RB1007
MY2H25	17.5	8.5	9	36	19.3	6	67.3	17.7	12	7.1 (Max. 18.6)	25.8	RB1412
MY2H40	25	13	13	57	17	6	73.2	_	15	10 (Max. 26)	38	RB2015




MY2H/HT Series


Double Axis Type: Ø 16, Ø 25, Ø 40

MY2HT Bore size G - Stroke

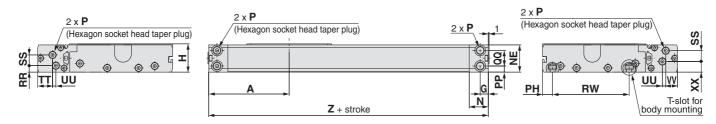


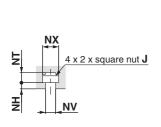

T-slot for body mounting

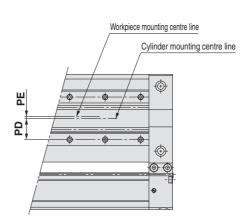

MY2HT40G

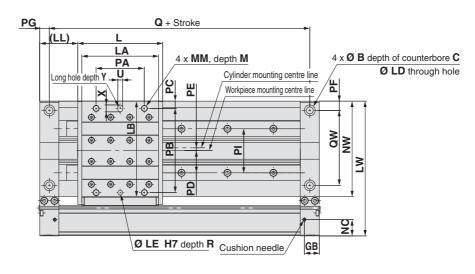

Model	Α	В	С	G	GB	Н	L	,	J	LA	LB	LD	LE	(LL)	LW	M	MI	VI	N	NC	NE	NH	NT
MY2HT16G	80	9.5	5.4	8.5	17	28	80	M4 x	0.7	70	87.4	5.5	5	40	120	9	M5 >	k 0.8	20	14	27	3	4.7
MY2HT25G	105	14	8.6	10.7	19.5	37	110.8	M6 x	: 1	100	124.7	9	6	49.6	176	12	M8 x	x 1.25	25	21.3	35.5	4	6.5
MY2HT40G	165	17.5	10.8	15.5	31.5	58	180	M8 x	1.25	158	148.3	11	8	75	229	16	M10 x	x 1.5	40	32.4	56.5	5	9
Model	NV	NW	NX	F)	PA	РВ	PC	PD	PE	PF	PG	PH	PI	PP	Q	QQ	QW	R	RR	RW	SS	TT
Model MY2HT16G	NV 4.5	NW 85.2		-	o x 0.8	PA 44	PB 80	PC 4	PD 23	PE 1	PF 10	PG 10	PH 10.2		PP 5.3	Q 140	QQ 16.4	QW 66	R 5	RR 5.3	RW 69		TT 12.5
	4.5		7.3	M5 x						1			10.2		5.3		5, 5,	9, 11				9.7	

Model	U	UU	VV	X	XX	Υ	Z
MY2HT16G	5	3	10.5	7	12	5	160
MY2HT25G	6	4.4	15.3	9	14	8	210
MY2HT40G	8	2	29	12	23	12	330


[&]quot;P" indicates cylinder supply ports. * The plug for "P" MY2HT16G is a hexagon socket head plug.





Stroke adjustment unit

Low load shock absorber

MY2HT Bore size G - Stroke L

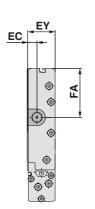

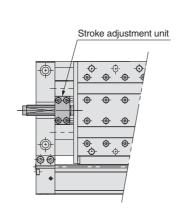


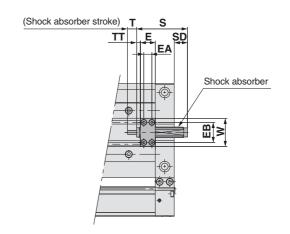



Applicable cylinder	Е	EA	EB	EC	EY	FA	S	SD	Т	TT	W	Shock absorber model
MY2HT16	14.4	7	21	8	27	46.5	46.7	6.7	7	5.6 (Max. 11.2)	28.6	RB1007
MY2HT25	19.7	10.7	26.6	11.2	36	64.8	67.3	17.7	12	4.9 (Max. 16.4)	37.2	RB1412
MY2HT40	29.1	15.1	37	17.2	57	74.5	73.2	_	15	5.9 (Max. 21.9)	51.6	RB2015

High load shock absorber

MY2HT Bore size G - Stroke H

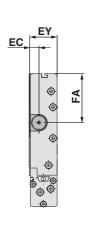

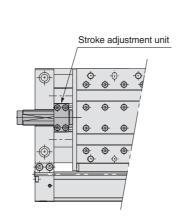

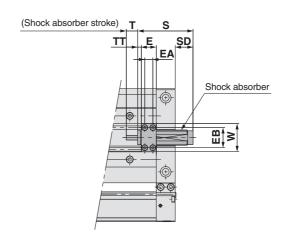


Applicable cylinder	Е	EA	EB	EC	EY	FA	S	SD	Т	TT	W	Shock absorber model
MY2HT16	14.4	7	21	8	27	46.5	67.3	27.3	12	5.6 (Max. 11.2)	28.6	RB1412
MY2HT25	19.7	10.7	26.6	11.2	36	64.8	73.2	23.6	15	4.9 (Max. 16.4)	37.2	RB2015
MY2HT40	29.1	15.1	37	17.2	57	74.5	99	24	25	5.9 (Max. 21.9)	51.6	RB2725

SMC

MY2 Series

Auto Switch Mounting

Proper Auto Switch Mounting Position (Detection at stroke end) Note) The operating range is a standard including hysteresis, and is not guaranteed. There may be large variations depending on the surrounding environment (variations on the order of ± 30 %).

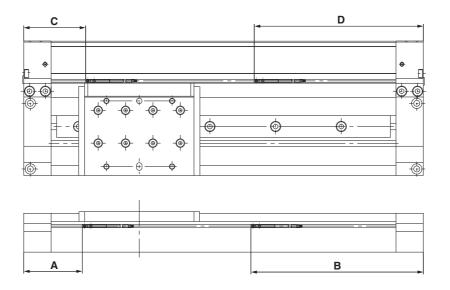

D-A9□, **D-A9**□**V**

Series model	Α	В	Operating range
MY2C16	44	116	
MY2H16	46	114	
MY2HT16	70	90	11
MY2C/H/HT25	54	156	
MY2C/H/HT40	85	245	

Series model	C D		Operating range	
MY2C/H/HT16	27.6	132.4	6.5	
MY2C/H/HT25	69	141	44	
MY2C/H/HT40	90.2	239.8	11	

$D-M9\Box$, $D-M9\Box$ V, $D-M9\Box$ W, $D-M9\Box$ WV, $D-M9\Box$ A, $D-M9\Box$ AV

Series model	Α	В	Operating range
MY2C16	48	112	
MY2H16	50	110	
MY2HT16	74	86	8.5
MY2C/H/HT25	58	152	
MY2C/H/HT40	89	241	

Series model	С	D	Operating range
MY2C/H/HT16	31.6	128.4	4
MY2C/H/HT25	73	137	0.5
MY2C/H/HT40	94.2	235.8	8.5

^{*} Adjust the auto switch after confirming the operating conditions in the actual setting.

Besides the models listed in How to Order, the following auto switches are applicable.

- \ast For solid state auto switches, auto switches with a pre-wired connector are also available.
- * Normally closed (NC = b contact) solid state auto switches (D-F9G/F9H types) are also available.




Prior to Use Auto Switch Connections and Examples

Sink Input Specifications


Source Input Specifications

3-wire, NPN

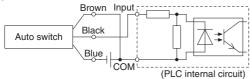


3-wire, PNP Brown Input Auto switch Black Blue COM (PLC internal circuit)

2-wire

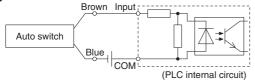



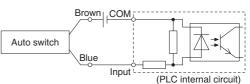


Connect according to the applicable PLC input specifications, as the connection method will vary depending on the PLC input specifications.


Examples of AND (Series) and OR (Parallel) Connections

st When using solid state auto switches, ensure the application is set up so the signals for the first 50 ms are invalid.


3-wire AND connection for NPN output (Using relays)

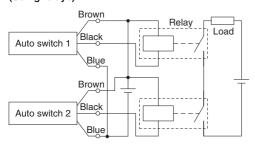


(Performed with auto switches only)

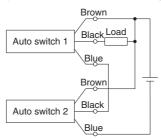


3-wire OR connection for NPN output

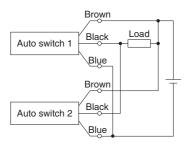


3-wire AND connection for PNP output (Using relays)

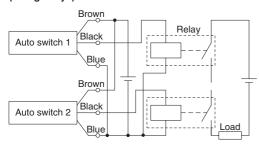

(Performed with auto switches only)

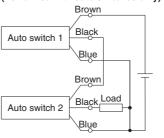


3-wire OR connection for PNP output

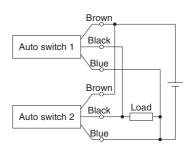

(Reed)

2-wire AND connection

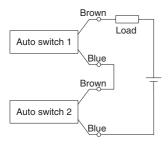


When two auto switches are connected in series, a load may malfunction because the load voltage will decline when in the ON state.

The indicator lights will light up when both of the auto switches are in the ON state. Auto switches with a load voltage less than 2 0 V cannot be used.

Load voltage at ON = Power supply voltage -Residual voltage x 2 pcs. = 24 V - 4 V x 2 pcs. = 16 V

Example: Power supply is 24 VDC Internal voltage drop in auto switch is 4 V.

2-wire OR connection

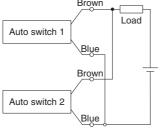

(Solid state)
When two auto
switches are
connected in parallel,
malfunction may occur
because the load
voltage will increase
when in the OFF state.

Blue Load voltage at OFF = Leakage current x 2 pcs. x
Load impedance
= 1 mA x 2 pcs. x 3 kΩ

= 6 V Example: Load impedance is 3 k Ω . Leakage current from auto switch is 1 mA.

Because there is no current leakage, the load voltage will not increase when turned OFF. However, depending on the number of auto switches in the ON state, the indicator lights may sometimes grow dim or not light up, due to the dispersion and reduction of the current flowing to

the auto switches.



Solid State Auto Switch Direct Mounting Type D-M9N(V)/D-M9P(V)/D-M9B(V) ← €



Grommet

- 2-wire load current is reduced (2.5 to 40 mA).
- Using flexible cable as standard spec.



△Caution

Precautions

Fix the auto switch with the existing screw installed on the auto switch body. The auto switch may be damaged if a screw other than the one supplied is used.

Auto Switch Specifications

Refer to SMC website for the details of the products conforming to the international standards.

PLC: Programmable Logic Controller

D-M9□, D-M9□V (With indicator light)							
Auto switch model	D-M9N	D-M9NV	D-M9P	D-M9PV	D-M9B	D-M9BV	
Electrical entry direction	In-line	Perpendicular	In-line	Perpendicular	In-line	Perpendicular	
Wiring type		3-w	rire		2-v	vire	
Output type	N	PN	PI	NΡ	-	_	
Applicable load		IC circuit, Relay, PLC 24 VDC relay, F				elay, PLC	
Power supply voltage	5	5, 12, 24 VDC (4.5 to 28 V) —			_		
Current consumption		10 mA	or less		-	_	
Load voltage	28 VDC	or less	-	_	24 VDC (10 to 28 VDC)		
Load current		40 mA	or less		2.5 to	40 mA	
Internal voltage drop	0.8 V or le	ess at 10 mA	(2 V or less	at 40 mA)	4 V or less		
Leakage current	100 μA or less at 24 VDC			0.8 mA	or less		
Indicator light		Red L	ED illuminate	s when turne	ed ON.	·	
Standard		•	CE marki	ng, RoHS	•	·	

Oilproof Heavy-duty Lead Wire Specifications


and the character of th						
Auto swi	tch model	D-M9N(V)		D-M9B(V)		
Sheath	Outside diameter [mm]	2.6				
la sulatan	Number of cores	3 cores (Brow	2 cores (Brown/Blue)			
Insulator	Outside diameter [mm]	0.88				
0	Effective area [mm²]	0.15				
Conductor	Strand diameter [mm]	0.05				
Minimum bending radius	s [mm] (Reference values)	17				


Weight

(g)

Auto switch model		D-M9N(V)	D-M9P(V)	D-M9B(V)
	0.5 m ()	8		7
Lead wire length	1 m (M)	1	13	
	3 m (L)	4	38	
	5 m (Z)	6	63	

Dimensions [mm]

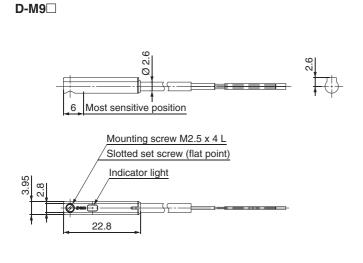

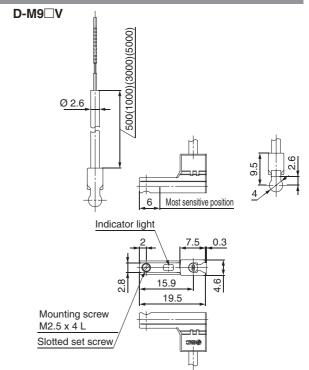

2-Colour Indicator Solid State Auto Switch Direct Mounting Type D_MON(W/V)/D_MOD(W/V)/D_MOD(W/V)/ C C COLORS





Grommet

- 2-wire load current is reduced (2.5 to 40 mA).
- Using flexible cable as standard spec.
- The proper operating range can be determined by the color of the light. (Red → Green ← Red)



∆ Caution

Precautions Eiv the auto switch with the evis

Fix the auto switch with the existing screw installed on the auto switch body. The auto switch may be damaged if a screw other than the one supplied is used.

Auto Switch Specifications

Refer to SMC website for the details of the products conforming to the international standards.

PLC: Programmable Logic Controller

D-M9□W, D-M9□WV (With indicator light)							
Auto switch model	D-M9NW	D-M9NWV	D-M9PW	D-M9PWV	D-M9BW	D-M9BWV	
Electrical entry direction	In-line	Perpendicular	In-line	Perpendicular	In-line	Perpendicular	
Wiring type		3-w	/ire		2-1	vire	
Output type	N	PN	PI	NΡ		_	
Applicable load		IC circuit, F	Relay, PLC		24 VDC relay, PLC		
Power supply voltage	5, 12, 24 VDC (4.5 to 28 V)			V) —			
Current consumption		10 mA	or less			_	
Load voltage	28 VD0	or less	_		24 VDC (10	to 28 VDC)	
Load current	40 mA or less			2.5 to	40 mA		
Internal voltage drop	0.8 V or l	ess at 10 mA	(2 V or less	at 40 mA)	4 V o	r less	
Leakage current		100 μA or les	ss at 24 VDC	;	0.8 mA	or less	
Indicator light	Operating range Red LED illuminates. Proper operating range Green LED illuminates.						
	F	roper operati			iliuminate	S.	
Standard			CE marki	ng, RoHS			

Oilproof Flexible Heavy-duty Lead Wire Specifications


Auto sw	Auto switch model D		D-M9PW(V)	D-M9BW(V)		
Sheath	Outside diameter [mm]	2.6				
la sulstan	Number of cores	3 cores (Brow	/n/Blue/Black)	2 cores (Brown/Blue)		
Insulator	Outside diameter [mm]	0.88				
0	Effective area [mm²]		0.15			
Conductor	Strand diameter [mm]	0.05				
Minimum bending radiu	is [mm] (Reference values)	17				

Weight (g)

Auto swit	ch model	D-M9NW(V)	D-M9PW(V)	D-M9BW(V)
	0.5 m ()		8	7
Lood wire length	1 m (M)	1	13	
Lead wire length —	3 m (L)	41		38
	5 m (Z)	6	68	63


Dimensions [mm]



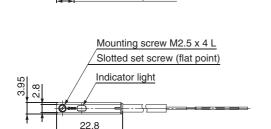

Ø 2.6

Most sensitive position

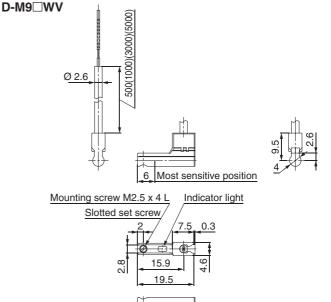



Water Resistant 2-Colour Indicator Solid State Auto Switch: Direct Mounting Type D-M9NA(V)/D-M9PA(V)/D-M9BA(V) (RoHS)

Grommet

- Water (coolant) resistant type
- 2-wire load current is reduced (2.5 to 40 mA).
- The proper operating range can be determined by the colour of the light. (Red \rightarrow Green \leftarrow Red)
- Using flexible cable as standard



. Caution

Precautions

Fix the auto switch with the existing screw installed on the auto switch body. The auto switch may be damaged if a screw other than the one supplied is used.

Please consult with SMC if using coolant liquid other than water based solution.

Weight

(g)

Auto switch model		D-M9NA(V) D-M9PA(V)	D-M9BA(V)
	0.5 m (Nil)	8	7
Lead	1 m (M)	14	13
length	3 m (L)	41	38
lengui	5 m (Z)	68	63

Auto Switch Specifications


PLC: Programmable Logic Controller


D-M9□A, D-M9□AV (With indicator light)							
Auto switch model	D-M9NA	D-M9NAV	D-M9PA	D-M9PAV	D-M9BA	D-M9BAV	
Electrical entry direction	In-line	Perpendicular	In-line	Perpendicular	In-line	Perpendicular	
Wiring type		3-w	/ire		2-v	vire	
Output type	N	PN	PI	NΡ	_	_	
Applicable load		IC circuit, F	Relay, PLC		24 VDC relay, PLC		
Power supply voltage	5, 12, 24 VDC (4.5 to 28 V)			_			
Current consumption	10 mA or less —			_			
Load voltage	28 VD0	C or less	_		24 VDC (10 to 28 VDC		
Load current	40 mA or less			2.5 to	40 mA		
Internal voltage drop	0.8 V or l	ess at 10 mA	(2 V or less	at 40 mA)	4 V c	r less	
Leakage current		100 μA or les	ss at 24 VDC	;	0.8 mA	or less	
Indicator light			,	d LED illumin ····· Green LE		s.	
Standard			CE marki	ng, RoHS			

Oilproof Flexible Heavy-duty Lead Wire Specifications

Auto swi	tch model	D-M9NA D-M9NAV D-M9PA D-M9PAV D-M9BA D-M9			D-M9BAV□		
Sheath	Outside diameter [mm]	2.6	2.7 x 3.2 (ellipse)	2.6	2.7 x 3.2 (ellipse)	2.6	2.6
la sulata a	Number of cores	3 0	3 cores (Brown/Blue/Black)			2 cores (B	rown/Blue)
Insulator	Outside diameter [mm]	0.88	0.9	0.88	0.9	0.88	
0	Effective area [mm²]	0.15					
Conductor	Strand diameter [mm]	0.05					
Minimum bending radius [mm] (Reference values) 17 20 17 20			1	7			

Dimensions [mm]

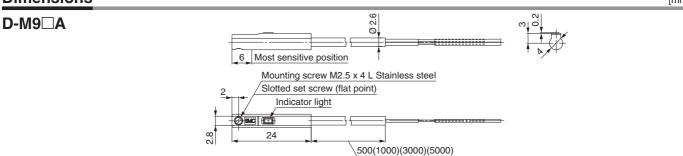

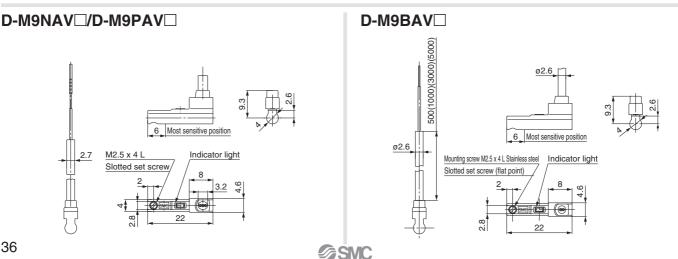

Reed Auto Switch Direct Mounting Style D-A90(V)/D-A93(V)/D-A96(V) (€

Grommet



⚠Caution

Precautions

Fix the auto switch with the existing screw installed on the auto switch body. The auto switch may be damaged if a screw other than the one supplied is used.

Auto Switch Specifications

Refer to SMC website for the details of the products conforming to the international standards.

PLC: Programmable Logic Controller

D-A90, D-A90V (Without indicator light)											
Auto switch model		D-A90, D-A90V									
Applicable load		IC circuit, Relay, PLC									
Load voltage	24 V AC or less	48 V AC or less	100 V AC or less								
Maximum load current	50 mA 40 mA 20 mA										
Circuit diagram*		4									
Contact protection circuit		None									
Internal resistance	1 Ω or less (Including lead wire length of 3 m)										
Standard	CE marking										
D-A93, D-A93V, D-A96, D-A96V (With indicator light)											
Auto switch model	D-A93,	D-A93V	D-A96, D-A96V								
Applicable load	Relay	, PLC	IC circuit								
Load voltage	24 VDC ⁽⁴⁾	100 VAC	4 to 8 VDC								
Load current range and Maximum load current (3)	5 to 40 mA	5 to 20 mA	20 mA								
Circuit diagram*		3)	5								
Contact protection circuit		None									
Internal voltage drop	D-A93: 2.4 V or less (up to 20	0.8 V or less									
	D-A93V: 2.7 V or less										
Indicator light	Red LED illuminates when turned ON.										
Standard	CE marking										

Oilproof Heavy-duty Lead Wire Specifications

Auto swi	tch model	D-A90(V)	D-A93(V)	D-A96(V)		
Sheath	Outside diameter [mm]		Ø 2.7			
Inquilator	Number of cores	2 cores (E	3 cores (Brown/Blue/Black)			
Insulator	Outside diameter [mm]	Ø	Ø 0.91			
Conductor	Effective area [mm²]	0	.18	0.15		
Conductor	Strand diameter [mm]					
Lead wire minimum bending	radius [mm] (Reference values)	17				

Note 1) Under 5 mA, the strength of the indicator light is poor. In some cases, visibility of the indicator light will not be possible where the output signal is less than 2.5 mA. However, there is no problem in terms of contact output, when an output signal exceeds 1 mA or more.

problem in terms of contact output, when an output signal exceeds 1 mA or more.


Note 2) The auto switches can operate at 12 VDC, but consider the internal voltage drop of the auto switch described in Reed Auto Switch Precautions.

Weight


Mo	del	D-A90	D-A90V	D-A93	D-A93V	D-A96	D-A96V
	0.5 m (—)	6	6	6	6	8	8
Lead wire length	3 m (L)	30	30	30	30	41	41
-	5 m (7)	_	_	47	47	_	_

Dimensions [mm]

D-A90/D-A93/D-A96

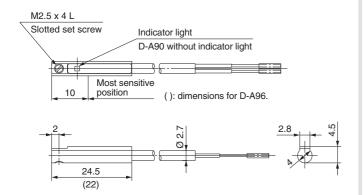

D-A90V/D-A93V/D-A96V

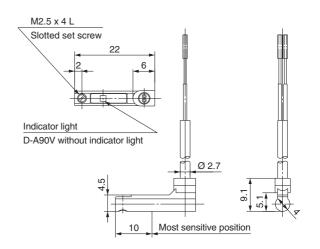



(g)

MY2 Series Made to Order Specifications




Please contact SMC for detailed dimensions, specifications and lead times.



Intermediate strokes are available within the standard stroke range. The stroke can be set in 1 mm increments.


■Stroke range: 51 to 599 mm

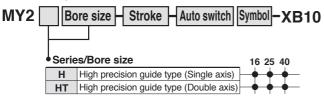

Example) MY2H40G-599L-A93-XB10

Helical Insert Thread Specification -X168

The mounting threads of the slider are changed to helical insert threads. The thread size is the same as standard.

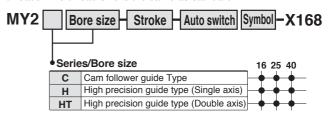


Example) MY2H40G-300L-A93-X168

2 Long Stroke -XB11


Available with long strokes exceeding the standard strokes. The stroke can be set in 1mm increments.

■Stroke range: 2001 to 5000 mm (2001 to 3000 mm for Ø 16)

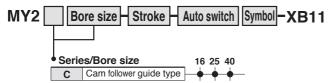

Example) MY2C40G-4999L-A93-XB11

■Stroke range: 601 to 1500 mm (601 to 1000 mm for Ø 16)

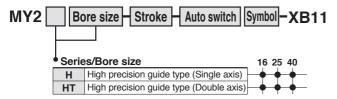

Example) MY2H40G-999L-A93-XB11

4 Stroke Adjustment Unit with Adjustment Bolt

-XB20

Stroke adjustment unit with an adjustment bolt.

Applicable Series


	Series	Description	Model	Action	Vol. no. (for std model)
	MY2	Mechanically jointed	MY2H	Linear guide (Single axis)	6 From D 1075
		rodless cylinder	MY2HT	Linear guide (Double axes)	9 FIOIII F. 13/5

How to Order

MY2HT

Standard model no. -XB20


Stroke adjustment unit mounting diagram

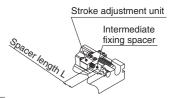

Stroke Adjustment Unit Specifications

Bore size	e (mm)	1	6	2	5	40			
Unit symbol		L	Н	L	Н	L	Н		
Shock absorber	MY2H	RB0806	RB1007	RB1007	RB1412	RB1412	RB2015		
model	MY2HT	RB1007	RB1412	RB1412	RB2015	RB2015	RB2725		
Stroke adjustment	Without spacer	0 to	-5.6	0 to -	-11.5	0 to	-16		
range by intermediate fixing	With short spacer	−5.6 to	-11.2	-11.5	to –23	-16 to	o - 32		
spacer (mm)	With long spacer	-11.2 to	o –16.8	–23 to	-34.5	−32 to −48			
Representation and used to fix the stroke adjustment unit at an intermediate stroke position									


- cers are used to fix the stroke adjustment unit at an intermediate stroke position.
- * Stroke adjustment range is applicable for one side when mounted on a cylinder.

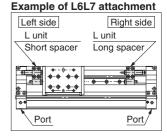

MY2H (-XB20)

Stroke Adjustment Unit Model

Note) Stroke adjustment unit with adjusting bolt (-XB20) cannot be mounted on the standard cylinder.

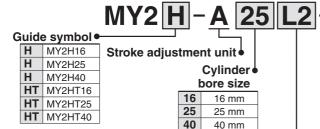


Unit part no. Symbol Stroke adjustment unit Mounting position L1 For left L unit L2 For right H1 For left H unit H2 For right

L unit only for ø16

Stroke adjustment unit Holder mounting bracket With adjustment bolt Intermediate fixing spacer Place the protruding section on the stroke adjustment unit side Without spacer 6□ Short spacer **MY2HT (-XB20)** 7[Long spacer Stroke adjustment unit Holder Spacer shipping method mounting bracket Assembled as a unit N Spacer only

Spacers for MY2HT are shipped in 2 piece sets

* Intermediate fixing spacers are shipped together.

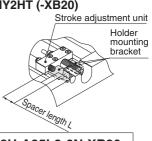


Components Parts

MY2H-A25L2-XB20 (Without spacer) Stroke adjustment unit


(With short spacer) Stroke adjustment unit Nut Holder mounting bracket

MY2H-A25L2-6-XB20

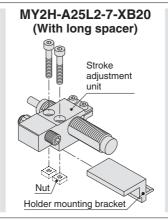

MY2H-A25L2-6N-XB20 (Short spacer only) Short spacer

MY2H-A25L2-7N-XB20 (Long spacer only)

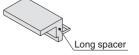




^{*} Nuts are installed onto the cylinder body.

4 Stroke Adjustment Unit with Adjustment Bolt

-XB20


Dimensions (Dimensions other than below are the same as standard type.)

MY2H L unit

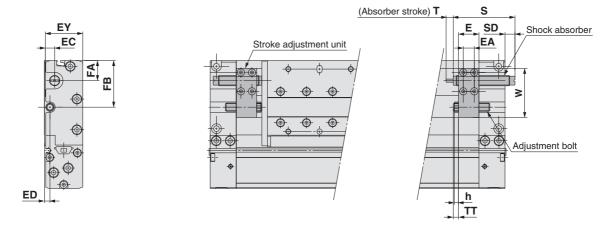


Applicable cylinder	Е	EA	EC	ED	EY	FA	FB	h	S	Т	SD	TT	W	Shock absorber model	Adjusting bolt	Adjustment range
MY2H16	15.8	8.4	6.2	5	28	12.4	30	3.2	40.8	6	1.3	4.2 (Max. 9.8)	34.5	RB0806	M5 x 0.8 x 25L	5.6
MY2H25	19.6	10.6	10	5.5	37	19.3	44.8	4	46.7	7	_	5 (Max. 16.5)	47.3	RB1007	M8 x 1.0 x 35L	11.5
MY2H40	29	16	13	8	57	17	49	5	67.3	12	_	6 (Max. 22)	59	RB1412	M10 x 1.0 x 50L	16

MY2H H unit

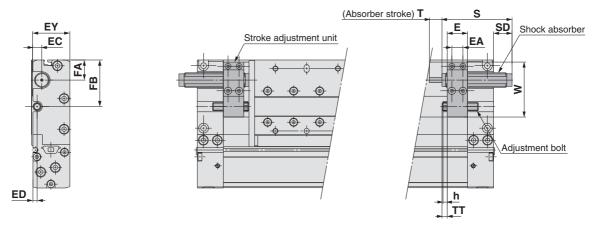

Applicable cylinder	Е	EA	EC	ED	EY	FA	FB	h	S	SD	Т	TT	W	Shock absorber model	Adjustment bolt	Adjustment range
MY2H16	15.8	8.4	6.2	5	28	12.4	30	3.2	46.7	7.2	7	4.2 (Max. 9.8)	35.5	RB1007	M5 x 0.8 x 25L	5.6
MY2H25	19.6	10.6	10	5.5	37	19.3	44.8	4	67.3	18.2	12	5 (Max. 16.5)	52.8	RB1412	M8 x 1.0 x 35L	11.5
MY2H40	29	16	13	8	57	17	49	5	73.2	_	15	6 (Max. 22)	59	RB2015	M10 x 1.0 x 50L	16

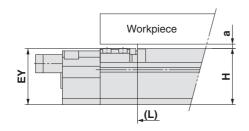

⚠ Caution

Since the dimension \mathbf{EY} of the unit is greater than the table top height (dimension \mathbf{H}), when a workpiece is loaded that is larger than the full length (dimension \mathbf{L}) of the slide table, allow a clearance of size " \mathbf{a} " or larger at the workpiece side.


Applicable cylinder	а	EY	Н
MY2H16 L/H Unit	1	28	28
MY2H25 L/H Unit	1	37	37
MY2H40 L/H Unit	0	57	58



4 Stroke Adjustment Unit with Adjustment Bolt


-XB20

Dimensions (Dimensions other than below are the same as standard type.)

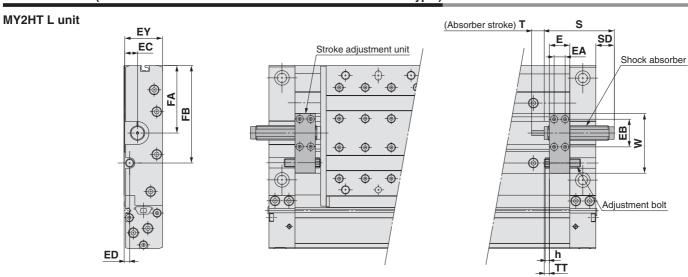


Applicable cylinder	Е	EA	EB	EC	ED	EY	FA	FB	h	S	SD	Т	TT	W	Shock absorber model	Adjustment bolt	Adjustment range
MY2HT16	15.8	8.4	21	9	5	28	46.5	67	3.2	46.7	7.2	7	4.2 (Max. 9.8)	40.6	RB1007	M5 x 0.8 x 25L	5.6
MY2HT25	19.6	10.6	26.6	12.2	5.5	37	64.8	93.6	4	67.3	18.2	12	5 (Max. 16.5)	57.2	RB1412	M8 x 1.0 x 35L	11.5
MY2HT40	29	16	37	18.2	8	58	74.5	110.5	5	73.2	_	15	6 (Max. 22)	71.6	RB2015	M10 x 1.0 x 50L	16

MY2HT H unit

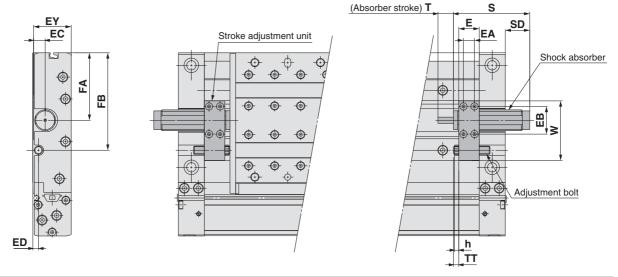

Applicable cylinder	Е	EA	EB	EC	ED	EY	FA	FB	h	S	SD	Т	TT	W	Shock absorber model	Adjustment bolt	Adjustment range
MY2HT16	15.8	8.4	21	9	5	28	46.5	67	3.2	67.3	27.8	12	4.2 (Max. 9.8)	40.6	RB1412	M5 x 0.8 x 25L	5.6
MY2HT25	19.6	10.6	26.6	12.2	5.5	37	64.8	93.6	4	73.2	24.1	15	5 (Max. 16.5)	57.2	RB2015	M8 x 1.0 x 35L	11.5
MY2HT40	29	16	37	18.2	8	58	74.5	110.5	5	99	24.5	25	6 (Max .22)	71.6	RB2725	M10 x 1.0 x 50L	16

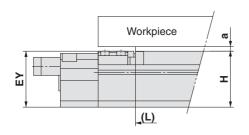

⚠ Caution

Since the dimension **EY** of the unit is greater than the table top height (dimension **H**), when a workpiece is loaded that is larger than the full length (dimension **L**) of the slide table, allow a clearance of size "a" or larger at the workpiece side.

Applicable cylinder	а	EY	Н
MY2HT16 L/H Unit	1	28	28
MY2HT25 L/H Unit	1	37	37
MY2HT40 L/H Unit	1	58	58

XB20 (Stroke Adjustment Unit with Adjustment Bolt)


<Stroke adjustment with adjusting bolt>


1. Loosen the lock nut for the adjustment bolt and adjust a stroke by rotating the adjustment bolt.

After adjusting the stroke, secure the adjustment bolt by tightening the lock nut.

If the effective stroke of the shock absorber is shortened by the stroke adjustment, its absorption capacity will be drastically reduced. Therefore, the adjustment bolt should be secured at a position where it projects about 0.5 mm farther than the shock absorber.

Tighten shock absorber holding bolts equally with the specified tightening torque.

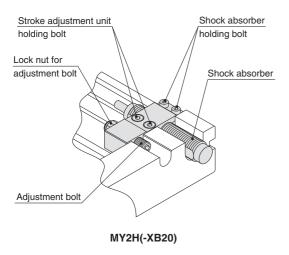

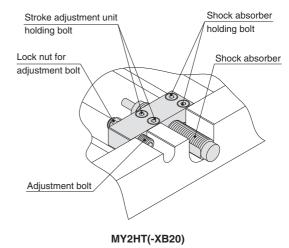


Tightening Torque for Stroke Adjustment Unit Holding Bolt

	Fightening Torque for Stroke Adjustment Unit Holding Bolt (N·n													
ſ	Bore size	MY	2HT											
ı	(mm)	L unit	L unit H unit L unit											
	16		0.6											
	25		1.	.5										
40 5.0														

Tightening Torque for Shock Absorber Holding Bolt (N·m)

				(,	
Bore size	MY	'2H	MY2HT		
(mm)	L unit	H unit	L unit	H unit	
16	0.6				
25	1.5	0.6	1.5		
40	5.0	1.5	5	.0	

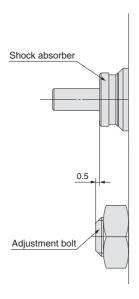

2. Do not use the shock absorber and air cushion together.

5 Shock Absorber Soft Type Series RJ Type

-XB22

- The standard cylinder has been equipped with shock absorber soft type Series RJ type to enable soft stopping at the stroke end.
- Two different shock absorbers are available in accordance with the operating conditions.

Applicable Series

Series	Description	Model	Bearing type	Applicable bore size
		MY1B-Z	Basic type	Ø 25, Ø 32, Ø 40
		MY1H-Z	Single-axis linear guide type	Ø 25, Ø 32, Ø 40
		MY1B	Basic type	Ø 10 to Ø 40 (except Ø 16)
		MY1M	Slide bearing type	Ø 16 to Ø 40
		MY1C	Cam follower type	Ø 16 to Ø 40
MY	Mechanically jointed	MY1H	Single-axis linear guide type	Ø 10 to Ø 40
IVI T	rodless cylinder	MY1□W	With protective cover	Ø 16 to Ø 40
		MY2C	Cam follower type	Ø 16, Ø 25, Ø 40
		MY2H	Single-axis linear guide type	Ø 16, Ø 25, Ø 40
		MY2HT	Double-axis linear guide type	Ø 16, Ø 25
		MY3B	Basic type	Ø 16 to Ø 50
		MY3M	Slide bearing type	Ø 16, Ø 25, Ø 40
		CY1S	Slide bearing type	Ø 6 to Ø 25
CY	Magnetically coupled	CY1L	Ball bushing bearing type	Ø 6 to Ø 25
Ci	rodless cylinder	CY1H	Single-axis linear guide type	Ø 10 to Ø 25
		CY1HT	Double-axis linear guide type	Ø 25
MGP	Compact guide cylinder	MGP	Slide bearing type, Ball bushing bearing type	Ø 12 to Ø 40
MGG	Guide cylinder	MGG	Slide bearing type, Ball bushing bearing type	Ø 20 to Ø 32
CX2	Slide unit	CX2N	Slide bearing type	Ø 10, Ø 15, Ø 25
CXT	Platform cylinder	CXT	Slide bearing type, Ball bushing bearing type	Ø 12 to Ø 25

How to Order

Standard model no. -XB22

♦ Shock absorber soft type Series RJ type

How to Order a Stroke Adjustment Unit for MY Itself

Stroke adjustment unit model -XB22

Specifications

opoomoationo	
Performance, absorbed energy	Refer to the table below and the maximum impact weight graph.
Dimensions	Shock absorber overall length: 0 to -1.4 mm shorter than the standard type
Specifications other than above	Same as standard type

Model		Short stroke type	RJ/H type					
		RJ0805	RJ0806H	RJ1007H	RJ1412H			
Max. energy absorption (J) Note)		0.5	1	3	10			
O.D. thread size (m	m)	8	8	10	14			
Stroke (mm)		5	6	7	12			
Collision speed (m/s)		0.05 to 1	0.05 to 2					
Max. operating frequency (cycle/min) Note)		80	80	70	45			
Coving force (N)	Extended	2.8	2.8	5.4	6.4			
Spring force (N)	Retracted	4.9	5.4	8.4	17.4			
Max. allowable thrust (N) Ambient temperature (°C) Weight (g) Basic		245	245 422 814					
		-10 to 60 °C (No freezing)						
		15	15	23	65			

Note) At ordinary temperature (20 to 25 $^{\circ}\text{C})$



^{*} The shock absorber service life is different from that of each cylinder. Refer to the "Specific Product Precautions" of Series RJ for the replacement period.

6 With Knock Pin Holes

-XC56

Cylinder with knock positioning pin hole.



With knock pin holes


-XC56

Specifications: Same as standard type.

Dimensions (Dimensions other than below are the same as standard type.)

MY2H series Ø 16, Ø 25, Ø 40 MY2HT series Ø 16, Ø 25, Ø 40

* The workpiece mounting surface of the slide table supports knock pin holes as standard.

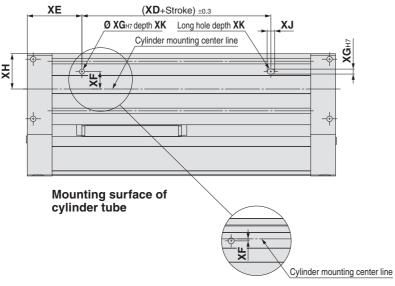

MY2HT16, 25

MY2H series [m								
Bore size [mm]	XD	XE	XF	XG	хн	XJ	хк	
16	80	40	11.5	4	23.5	6	5	
25	100	55	17.5	5	35.5	7.5	5	
40	170	80	25.5	6	45.5	9	8	

MY2HT series							[mm]	
Bore size [mm]	XD	XE	XF	XG	хн	XJ	ХК	
16	80	40	3.5	5	43	7.5	5	
25	100	55	2	6	61	9	8	
40	170	80	3	8	75	12	12	



MY2 Series Specific Product Precautions 1

Be sure to read this before handling the products.

Selection

⚠ Caution

1. When using a cylinder with long strokes, implement an intermediate support.

When using a cylinder with long strokes, implement an intermediate support to prevent the tube from sagging and being deflected by vibration or an external load.

Refer to the Guide for Side Support Application (MY2C series) on page 20.

2. For intermediate stops, use a dual-side pressure control circuit.

Since the mechanically jointed rodless cylinders have a unique seal structure, slight external leakage may occur. Controlling intermediate stops with a 3 position valve cannot hold the stopping position of the slide table (slider). The speed at the restarting state also may not be controllable. Use the dual-side pressure control circuit with a PAB-connected 3 position valve for intermediate stops.

3. Constant speed

Since the mechanically jointed rodless cylinders have a unique seal structure, a slight speed change may occur. For applications that require constant speed, select an applicable equipment for the level of demand.

4. Load factor of 0.5 or less

When the load factor is high against the cylinder output, it may adversely affect the cylinder (condensation, etc.) and cause malfunctions. Select a cylinder to make the load factor less than 0.5. (Mainly when using an external guide)

5. Cautions on less frequent operation

When the cylinder is used extremely infrequently, operation may be interrupted in order for anchoring and a change lubrication to be performed or service life may be reduced.

6. Consider uncalculated loads such as piping, cableveyor, etc., when selecting a load moment

Calculation does not include the external acting force of piping, cableveyor, etc. Select load factors taking into account the external acting force of piping, cableveyor, etc.

7. Accuracy

The mechanical jointed rodless cylinder does not guarantee travelling parallelism. When accuracy in travelling parallelism and a middle position of stroke is required, please consult with SMC.

Mounting

⚠ Caution

1. Do not apply a strong impact or moment on the slide table (slider).


Since the slide table (slider) is supported by precision bearings, do not subject it to strong impact or excessive moment when mounting workpieces.

2. When connecting to a load which has an external guide mechanism, use a discrepancy absorption mechanism.

A mechanically jointed rodless cylinder can be used with a direct load within the allowable range for each guide type, however, align carefully when connecting to a load with an external guide mechanism.

3. Attaching and detaching the actuator unit (cylinder)

When detaching the actuator unit, remove the four cylinder holding bolts and take the actuator unit off the guide unit. When attaching the actuator unit, insert the slider into the slide table on the guide unit, and tighten the four holding bolts equally. Since loosened holding bolts may cause damage or malfunction, be sure to secure them tightly.

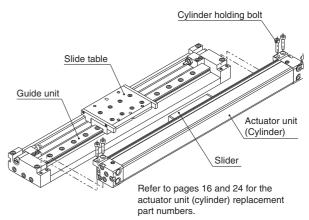



MY2 Series Specific Product Precautions 2

Be sure to read this before handling the products.

Mounting


4. Auto Switch Mounting

The MY2 series can be equipped with auto switches on the top of the actuator unit (cylinder) and on the side of the guide unit, but use caution in the following cases.

<Mounting an auto switch on the top of the actuator unit (cylinder)>


For auto switches with perpendicular electrical entry, the lead wire may interfere with the workpiece depending on the workpiece mounting type and shape.

Be sure to allow a clearance in order to keep the lead wire from interfering with the workpiece.

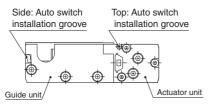


5. Workpiece Mounting

When mounting a magnetic workpiece, the auto switch may stop working due to a loss of magnetic force in the cylinder depending on the mounting position. Allow a clearance of 5 mm or more between the auto switch and workpiece.

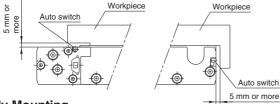

6. Body Mounting

When mounting MY2H40G with stroke adjustment unit from the top, move the stroke adjustment unit and secure the body with the end plate mounting holes. After mounting, return the stroke adjustment unit to the stroke end and secure it again.

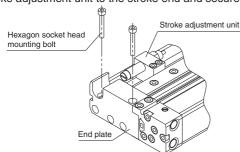

7. Do not generate negative pressure in the cylinder tube.


Take precautions under operating conditions in which negative pressure is generated inside the cylinder by external forces or inertial forces. Air leakage may occur due to separation of the seal belt. Do not generate negative pressure in the cylinder by forcibly moving it with an external force during the trial operation or dropping it with self-weight under the non-pressure state, etc. When the negative pressure is generated, slowly move the cylinder by hand and move the stroke back and forth. After doing so, if air leakage still occurs, please consult with SMC.

8. Do not mount cylinders as they are twisted.

When mounting, be sure for a cylinder tube not to be twisted. The flatness of the mounting surface is not appropriate, the cylinder tube is twisted, which may cause air leakage due to the detachment of a seal belt, damage a dust seal band, and cause malfunctions.


Do not mount a slide table on the fixed equipment surface.

It may cause damage or malfunctions since an excessive load is applied to the bearing.

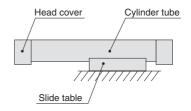


Mounting with a slide table (slider)

10.Consult with SMC when mounting in a cantilevered way.

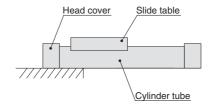

Mounting in a cantilevered way

11. Fixed parts of the cylinder on both ends must have at least 5 mm of contact between where the bottom of the cylinder tube and the equipment surface.

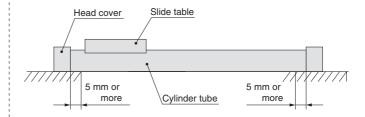

12.Consider uncalculated loads such as piping, cableveyor, etc., when selecting a load moment

Calculation does not include the external acting force of piping, cableveyor, etc. Select load factors taking into account the external acting force of piping, cableveyor, etc.





MY2 Series Specific Product Precautions 3

Be sure to read this before handling the products.

Operating Environment

⚠ Warning

1. Do not use in environments where the cylinder will come in contact with coolants, cutting oil, water drops, adhesive foreign particles, dust, etc., and do not operate the cylinder with compressed air that contains drainage and foreign matter.

Foreign matter or liquids on the cylinder interior or exterior can wash away the lubricating grease, which can lead to deterioration and damage of the dust seal band and seal materials, causing a danger of malfunction.

When operating in locations with exposure to water, oil drops, or dust, provide protection such as a cover to prevent direct contact with the cylinder, or mount the dust seal band surface downwards, and operate it with clean compressed air.

2. Carry out cleaning and grease application suitable for the operating environment.

Carry out cleaning regularly when using in an operating environment in which the product is likely to get dirty. After cleaning, be sure to apply grease to the top side of the cylinder tube and the rotating part of the dust seal band. Apply grease to these parts regularly even if not after cleaning. Please consult with SMC for the cleaning of the slide table (slider) interior and grease application.

Service Life and Replacement Period of Shock Absorber

⚠ Caution

1. Allowable operating cycle under the specifications set in this catalogue is shown below.

1.2 million times RB08□□


2 million times RB10□□ to RB2725

Note) Specified service life (suitable replacement period) is the value at room temperature (20 to 25 °C). The period may vary depending on the temperature and other conditions. In some cases the absorber may need to be replaced before the allowable operating cycle above.

Centralised Piping Port Variations

↑ Caution

Head cover piping connection can be freely selected to best suit different piping conditions.

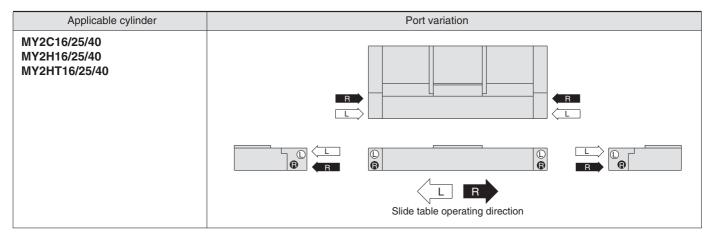



⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

Caution indicates a hazard with a low level of risk **⚠** Caution: which, if not avoided, could result in minor or moderate

Warning indicates a hazard with a medium level of risk **⚠** Warning: which, if not avoided, could result in death or serious

injury.

Danger indicates a hazard with a high level of risk Danger: which, if not avoided, will result in death or serious injury.

*1) ISO 4414: Pneumatic fluid power - General rules relating to systems. ISO 4413: Hydraulic fluid power - General rules relating to systems. IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

⚠ Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- not service or attempt to remove product and machinery/equipment until safety is confirmed.
 - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.
 - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
 - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
 - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" "Compliance Requirements". and Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years the product is delivered, wichever is first.*2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular
 - pads are excluded from this 1 year A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited

Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibit-
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

∕∴Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary

If anything is unclear, contact your nearest sales branch.

∕∴Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Be sure to read "Handling Precautions for SMC Products" (M-E03-3) before using.

SMC Corporation (Europe)

Austria 2 +43 (0)2262622800 www.smc.at office@smc.at Lithuania **3**+370 5 2308118 info@smclt It www.smclt.lt Belgium ***** +32 (0)33551464 www.smcpneumatics.be info@smcpneumatics.be Netherlands *****+31 (0)205318888 www.smcpneumatics.nl info@smcpneumatics.nl **2** +359 (0)2807670 ***** +47 67129020 Bulgaria www.smc.bg office@smc.bg Norway www.smc-norge.no post@smc-norge.no ***** +385 (0)13707288 office@smc.hr Poland *****+48 222119600 Croatia office@smc.pl www.smc.hr www.smc.pl **2**+420 541424611 postpt@smc.smces.es Czech Republic www.smc.cz office@smc.cz **Portugal ***+351 226166570 www.smc.eu Denmark **2** +45 70252900 smc@smcdk.com Romania **2** +40 213205111 www.smcdk.com www.smcromania.ro smcromania@smcromania.ro Estonia *****+372 6510370 www.smcpneumatics.ee smc@smcpneumatics.ee Russia *****+7 8127185445 info@smc-pneumatik.ru www.smc-pneumatik.ru **2**+358 207513513 Finland smcfi@smc fi Slovakia *****+421 (0)413213212 office@smc.sk www.smc.fi www.smc.sk France *****+33 (0)164761000 www.smc-france.fr info@smc-france.fr Slovenia *****+386 (0)73885412 www.smc.si office@smc.si Germany **2** +49 (0)61034020 www.smc.de info@smc.de Spain *****+34 902184100 www.smc.eu post@smc.smces.es Greece ***** +30 210 2717265 www.smchellas.gr sales@smchellas.gr Sweden **2** +46 (0)86031200 post@smc.nu www.smc.nu Switzerland Hungary ***** +36 23513000 www.smc.hu office@smc.hu *****+41 (0)523963131 www.smc.ch info@smc.ch Ireland **2** +353 (0)14039000 www.smcpneumatics.ie sales@smcpneumatics.ie Turkey **2** +90 212 489 0 440 www.smcpnomatik.com.tr info@smcpnomatik.com.tr *****+39 0292711 Italy www.smcitalia.it mailbox@smcitalia.it UK ### +44 (0)845 121 5122 www.smcpneumatics.co.uk sales@smcpneumatics.co.uk ★+371 67817700 info@smclv.lv Latvia www.smclv.lv

SMC CORPORATION Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 FAX: 03-5298-5362