

# Vacuum Unit

Vacuum Ejector

Vacuum Pump System



## Energy saving ejector

Digital pressure switch for vacuum with energy saving function cuts supply air when the pressure reached the desired vacuum.

Air consumption

**90**

**% reduction\***

\*Based on SMC's measuring conditions

## More efficient ejector

Suction flow

**50**

**% increase**


Air consumption

**30**

**% reduction**

(Compared to other SMC single stage ejectors)

### Two-stage ejector

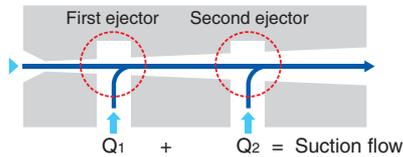

## Compact / Lightweight

Volume **88 cm<sup>3</sup>**

**28**

**% reduction**

Weight **81g**

**59**

**% reduction**



## Reduced-wiring

D-sub connector/Flat ribbon cable/Individual wiring

### High-noise reduction silencer added

Low noise: **46 dB<sup>\*1</sup>(A)**

Suction flow rate:

Improved by up to approx. **20 %<sup>\*2</sup>**

\*1 Nozzle size:  $\varnothing$  0.7

\*2 Nozzle size:  $\varnothing$  1.5

(Based on SMC's measuring conditions)

**High-noise reduction silencer**



**ZK2 Series**



CAT.EUS100-102Cc-UK



# Energy saving ejector

Digital pressure switch **with energy saving function** reduces air consumption by **90 %\***.

While the suction signal is ON, the ON/OFF operation of the supply valve is also performed automatically within the set value.

\*Based on SMC's measuring conditions

Digital pressure switch for vacuum with energy saving function

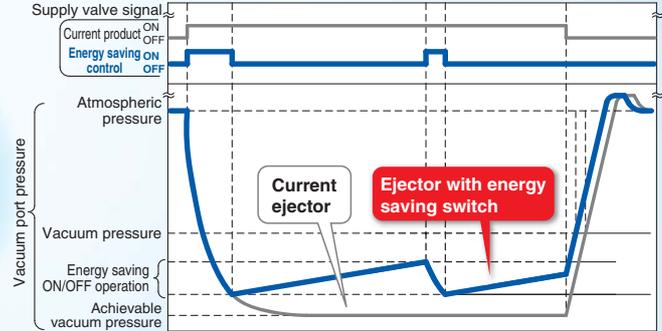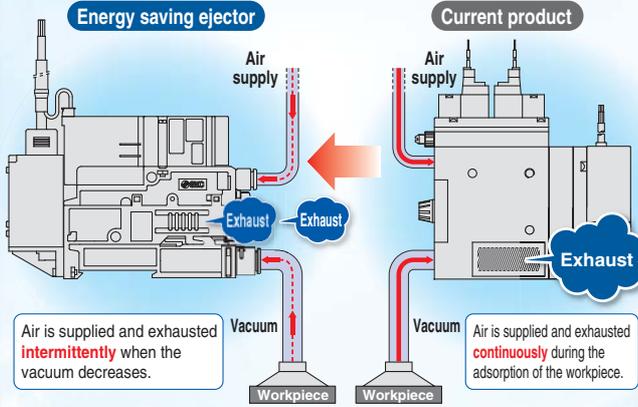

**Energy saving efficiency**

Power consumption cost per year reduced by **565 €/year**

The energy saving function shortens the exhaust time, which reduces the annual power consumption cost.

	Power consumption cost per year	Energising time per year	Exhaust time	Compressor's consumption per unit time
ZK2/With energy saving function	42.75 €/year	1875 h/year	<b>0.6 s</b>	0.19 kWh
Current product	607.5 €/year	18750 h/year	6 s	0.27 kWh

Cost conditions


- Electric power charge: 0.12 €/kWh, Operating hours: 10 hours/day, Operating days: 250 days/year, When 10 units are used
- Power consumption of the compressor is the theoretical value from the air consumption of each product at 0.35 MPa.

# Improved low noise and suction flow by adoption of a high-noise reduction silencer

**Low noise**


**46 dB\*(A)**

\*Nozzle size: Ø 0.7

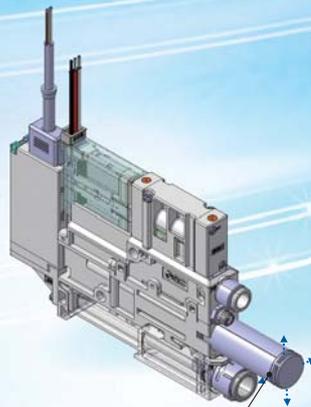

High-noise reduction silencer

The exhaust is discharged directly to atmosphere, cutting off the unpleasant frequency while exhibiting the maximum possible vacuum performance.

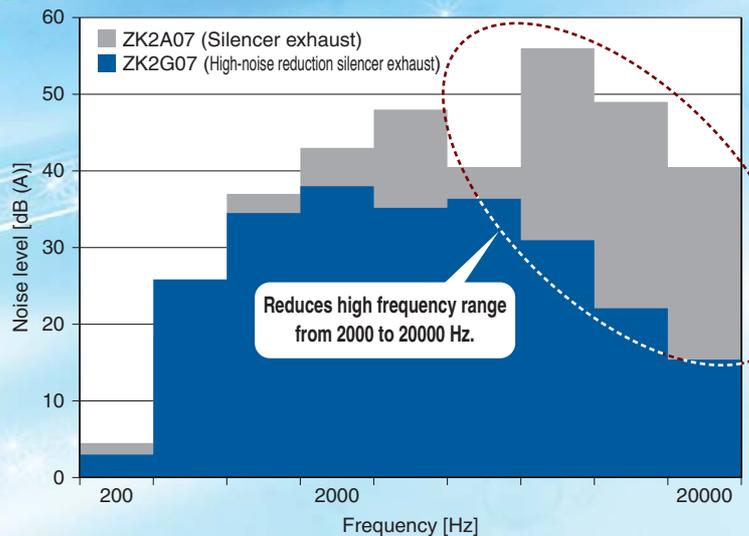

**Suction flow rate**

Improved by up to approx. **20 %**

Nozzle size	Exhaust type	Maximum suction flow rate [l/min (ANR)]	
		40	80
Ø 1.5	High-noise reduction silencer exhaust	67	<b>83</b>
	Silencer exhaust	67	80

**All in One** Piping Wiring Installation time reduced!!

**Dual 2 port valve (Release valve/Supply valve)**

**Supply valve: Self-holding**

- Even if there is a power cut, the vacuum is maintained as long as there is supply air.
- ① The vacuum is maintained during power failure as long as air is supplied. This can prevent the workpiece from being dropped.
- ② The unit turns on by instantaneous energising (minimum 20 ms.). Continuous energising is not necessary. This can reduce the power consumption.

**Linked supply and release valves operation**


The self-holding type supply valve will be turned off by turning on the release valve. It is not necessary to send a signal to stop the vacuum, which simplifies the wiring and programming. (Conventional double solenoid and latching type require a signal to stop the vacuum.)

**Power saving pilot valve (0.35 W)**


Supply and release valve are low power consumption type.

**Pressure sensor/switch**


**Variations**

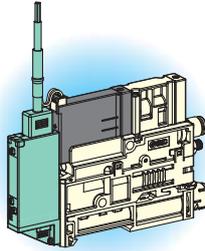


With digital pressure switch for vacuum with energy saving function

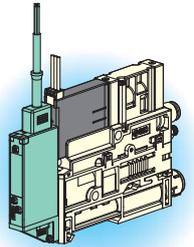


Digital pressure switch for vacuum

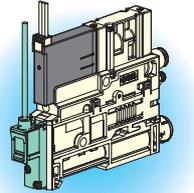

Pressure sensor

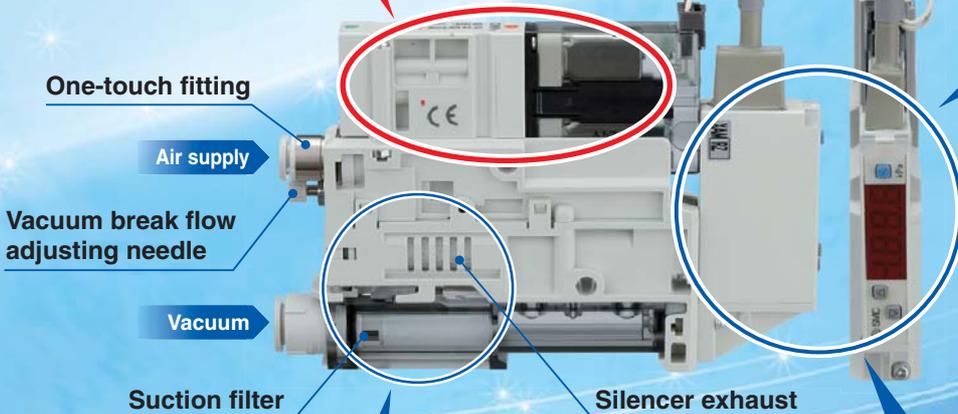

**Easier maintenance**

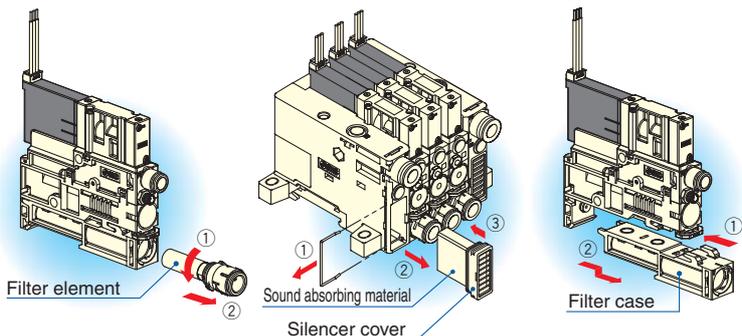


- Transparent filter case allows visual check of the contamination.
- Filter element and the sound absorbing material can be installed/removed without using screws.
- If there is dirt inside the case, it is possible to remove the case and clean it.

**Digital pressure switch for vacuum\***

**Set value copy function:**


Reduction in setting work/Prevention of mistakes in setting

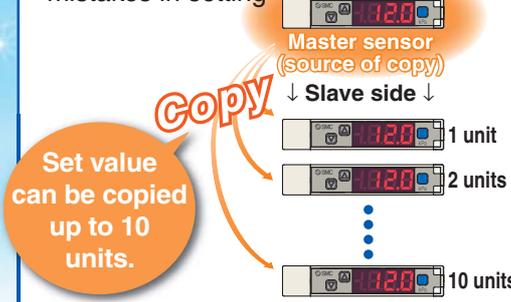


\*Cannot be selected with the energy saving function.

**Mounting**


**Options**  
**Single unit bracket mounting**

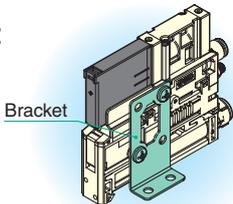

**Single unit DIN rail mounting**

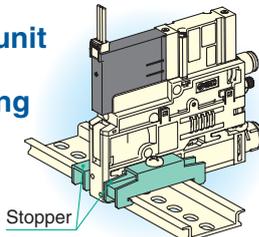

**Manifold DIN rail mounting**

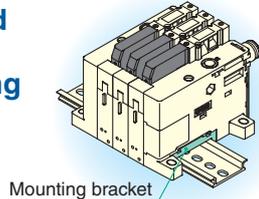

# Vacuum Unit Variations

## Single Unit Variations

### Vacuum Ejector

#### Nozzle size

Ø 0.7, Ø 1.0, Ø 1.2, Ø 1.5


#### Air pressure supply (PV) port

Ø 6, Ø 1/4" One-touch fittings

#### Vacuum break flow adjusting needle

Round lock nut type (Option)

Screwdriver operation type (Option)



#### Vacuum (V) port

Ø 6, Ø 8 One-touch fittings  
Ø 1/4", Ø 5/16" One-touch fittings

#### Vacuum switch

- Pressure sensor
- Pressure switch for vacuum
- Pressure switch for vacuum with energy saving function
- Without vacuum switch

#### Combination of supply valve and release valve

Supply valve	Release valve
N.C	N.C
N.C	None
Self-holding release valve linked	N.C
None	None


#### Supply valve/Release valve: Rated voltage

12, 24 VDC

#### With individual release pressure supply (PD) port\*

PD port (M3)


\*Option

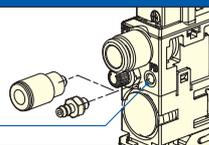

### Vacuum Pump System

#### Vacuum pressure supply (PV) port

Ø 6, Ø 1/4" One-touch fittings

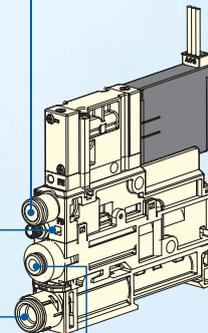

#### Pilot pressure supply (PS) port

Ø 4, Ø 5/16" One-touch fittings

#### Vacuum (V) port

Ø 6, Ø 8 One-touch fittings  
Ø 1/4", Ø 5/16" One-touch fittings

## Manifold Variations

#### Manifold stations

1 to 10 stations

#### Wiring type

- D-sub connector
- Flat ribbon cable
- Individual wiring

#### Exhaust type

- Complex exhaust (Note)
- Port exhaust
- High-noise reduction silencer exhaust


#### Air pressure supply (PV) port Ø 8, Ø 5/16"

- Common supply
- Individual supply (Option)


#### Vacuum pressure (PV) port Ø 8, Ø 5/16"

- Common supply

#### Individual wiring

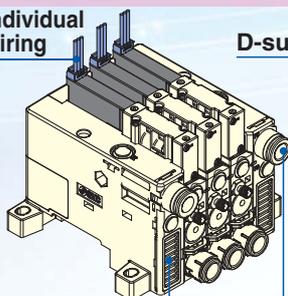

#### D-sub connector

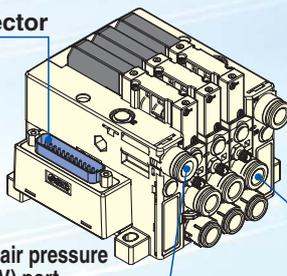


Individual port exhaust


Common air pressure supply (PV) port

Complex exhaust (Note)

Note) The complex exhaust is a combined exhaust method of the common exhaust from the end plate and the direct exhaust from each station.

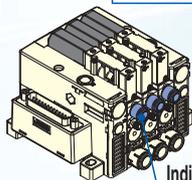


Individual air pressure supply (PV) port (Option)

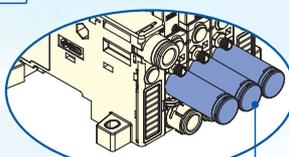

High-noise reduction silencer exhaust

#### Common pilot pressure supply (PS) port

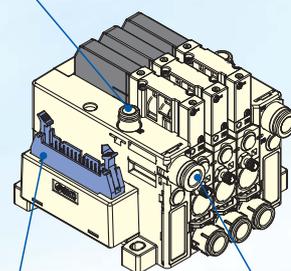

Flat ribbon cable connector

Common vacuum pressure supply (PV) port



D-sub connector




Flat ribbon cable



Individual wiring



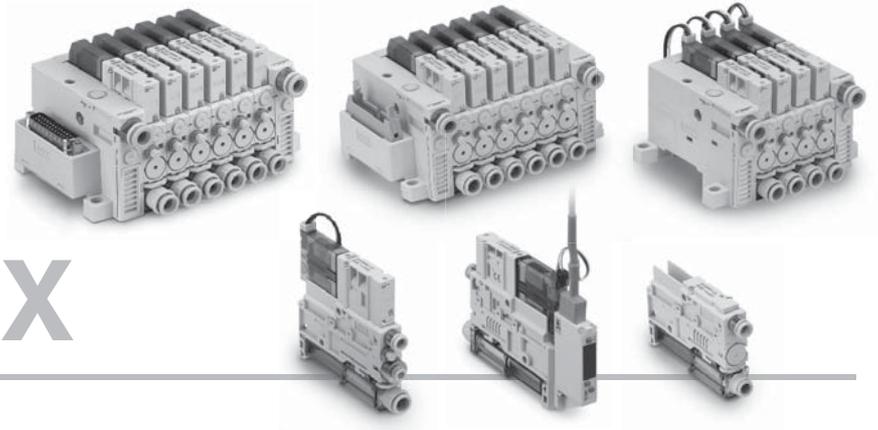

# INDEX

## How to Order

How to Order Single Unit .....	5, 7
How to Order Manifold .....	9

## Specifications/Flow Rate Characteristics

Specifications, Weight .....	12
Exhaust Characteristics, Flow Rate Characteristics .....	13
Vacuum Pump System Flow Rate Characteristics, Vacuum Release Flow Rate Characteristics, How to Read Flow Rate Characteristics Graph .....	15
Pressure Sensor/Digital Pressure Switch for Vacuum Specifications .....	16
Digital Pressure Switch for Vacuum Specifications, Description, Internal Circuit and Wiring Example .....	17

## Port Layout

Standard Products .....	18
Option -D .....	20
Option -L .....	23

## Construction

Construction .....	25
Replacement Parts/How to Order .....	26

## Exploded View of Manifold .....

## Dimensions .....

Electrical Wiring Specifications, Optional Specifications/Functions/Applications .....	36
Cable Assembly .....	37

## Specific Product Precautions .....

How to Order

Specifications/  
Flow Rate Characteristics

Port Layout

Construction

Exploded View of Manifold

Dimensions

Specific Product Precautions

# Vacuum Unit


# ZK2 Series



## Ejector System

Refer to page 9 for How to Order Manifold.

### How to Order Single Unit

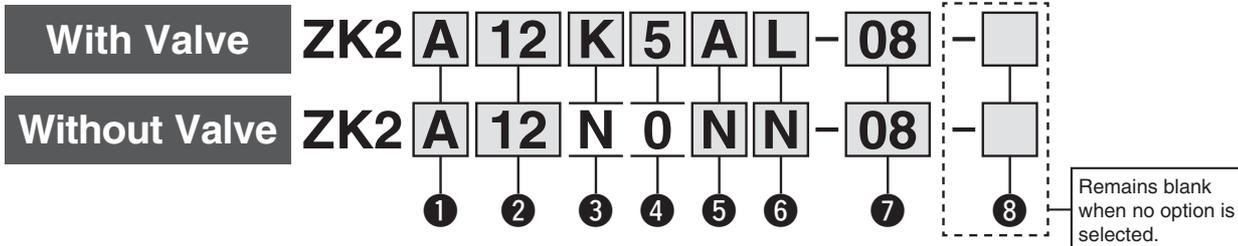

#### 1 System/Body Type

Symbol	System	Body type	Exhaust type	Image
A	Ejector system	Single unit	Silencer exhaust	
			Port exhaust	
			High-noise reduction silencer exhaust	
C	For manifold	Complex exhaust	Complex exhaust	
F			Individual port exhaust	
H			High-noise reduction silencer exhaust	

Note 1) Port size of exhaust port: mm:  $\varnothing 8$   
inch:  $\varnothing 5/16$ "

Note 2) The complex exhaust is a combined exhaust method of the common exhaust from the end plate and the direct exhaust from each station.

#### 2 Nominal Nozzle Size

Symbol	System	Nominal size
07	Ejector system	$\varnothing 0.7$
10		$\varnothing 1.0$
12		$\varnothing 1.2$
15		$\varnothing 1.5$

Note 3) Standard supply pressure for nozzle size 07 to 12 is 0.35 MPa, 15 is 0.4 MPa

#### 4 Rated Voltage

Symbol	Voltage
5	24 VDC
6	12 VDC
0	When 3 is "N"

Note 7) Rated voltage for the supply and release valve

#### 3 Combination of Supply Valve and Release Valve

Symbol	Supply valve	Release valve	Image
K	N.C.	N.C.	
J	N.C.	None	
R	Self-holding release valve linked	N.C.	
N	None	None	

Note 4) Only non-locking type is available for the manual override for "K, J, R".

Note 5) Self-holding type maintains vacuum by instantaneous energisation (20 ms or more). Stopping the vacuum turns on the release valve. (signal to stop vacuum not needed)

Note 6) When the digital pressure switch for vacuum with energy saving function is selected, select "K" for 5 Pressure Sensor/Digital Pressure Switch for Vacuum Specifications.

#### 5 Pressure Sensor/Digital Pressure Switch for Vacuum Specifications

Symbol	Type	Pressure range [kPa]	Specifications	Image	
P	Pressure sensor	0 to -101	Analogue output 1 to 5 V		
T		-100 to 100	Analogue output 1 to 5 V		
A	Digital pressure switch for vacuum	0 to -101	NPN 2 outputs	Unit selection function	
B			SI unit only		
C			PNP 2 outputs	Unit selection function	
D			SI unit only		
E		-100 to 100	NPN 2 outputs	Unit selection function	
F			SI unit only		
H			PNP 2 outputs	Unit selection function	
J			SI unit only		
K	Digital pressure switch for vacuum with energy saving function	-100 to 100	NPN 1 output	Unit selection function	
Q			SI unit only		
S			PNP 1 output	Unit selection function	
N	Without pressure sensor/digital pressure switch for vacuum				

Note 8) Fixed unit: kPa

Note 9) When "K, Q, R, S" is selected, select "K" for 3 Combination of Supply Valve and Release Valve. Select "W" or "L3" for 6.

- PV: Air pressure supply port/Port for vacuum source (Vacuum pump)
  - PS: Pilot pressure supply port
  - PD: Individual release pressure supply port
  - V: Vacuum port
  - EXH: Exhaust port
  - PE: Pilot pressure exhaust port
- For details ⇒ Page 24

**6 Supply Valve/Release Valve/Digital Pressure Switch for Vacuum Connector Specifications**

Symbol	③ For supply valve/release valve <sup>Note 10)</sup>		⑤ Lead wire with connector for pressure switch/sensor <sup>Note 13)</sup>	Image
	Connector type	Lead wire with connector		
C	Common wiring (Plug-in) (For manifold)	×	○ Note 14)	
C1			× Note 15)	
L	L-type plug connector	○ Note 11)	○ Note 14)	
L1			× Note 12)	
L2			○ Note 11)	
L3			× Note 12)	
W			With lead wire for switch with energy saving function	
Y	Non-valve (without supply/release valve) When "N" is selected for ③	○ Note 14)	○ Note 14)	
Y1			×	
N	When "N" is selected for both ③ (Combination of Supply Valve and Release Valve) and ⑤ (Pressure Sensor/Digital Pressure Switch for Vacuum Specifications) (without supply/release valve, without switch, pressure sensor)			

**7 Vacuum (V) Port <sup>Note 16)</sup>**

Symbol	Type	Port size	
06	Metric size	Ø 6	
08		Ø 8	
07	Inch size	Ø 1/4"	
09		Ø 5/16"	

Note 16) Supply port (PV) size of single unit:  
Ø 6 (mm), Ø 1/4" (inch)

- Note 10) Solenoid valve with light/surge voltage suppressor  
 Note 11) Standard lead wire length for solenoid valve is 300 mm.  
 Note 12) For lead wire lengths other than standard, select "L1 or L3", and order the connector assembly with desired length. (Refer to page 26.)  
 Note 13) Standard lead wire length for pressure sensor is 3 m. Standard lead wire length with connector for pressure switch for vacuum and the lead wire length for switch with energy saving function is 2 m.  
 Note 14) Select "C, L, L1, Y" when the pressure sensor (P, T) is selected for ⑤ Pressure Sensor/Digital Pressure Switch for Vacuum Specifications.  
 Since only grommet type is available for the pressure sensor, sensor without lead wire cannot be selected.  
 Note 15) Select when no pressure switch for vacuum, pressure sensor, or pressure switch for vacuum with connector without lead wire is used.

**8 Optional Specifications <sup>Note 17)</sup>**

Symbol	Type	Symbol	Type
—	Without option	L	Manifold individual supply specification <sup>Note 19)</sup>
B	With one bracket for mounting a single unit (Mounting screw is attached.)	P	Manifold common release pressure supply specification <sup>Note 20)</sup>
D	With individual release pressure supply (PD) port <sup>Note 18)</sup>	W	With exhaust interference prevention valve <sup>Note 21, 23, 24, 25)</sup>
J	Vacuum break flow adjusting needle Round lock nut type		
K	Vacuum break flow adjusting needle Screwdriver operation type		

- Note 17) When more than one option is selected, list the option symbols in an alphabetical order.  
 Example) -BJ  
 Refer to page 36 for Function/Application.  
 Note 18) Only M3 is available for PD port size. Use One-touch fitting (M-3AU-4) or barb fitting for piping. (O.D.: within Ø 6.2)  
 Note 19) Select body for manifold. Select "L" for manifold type. When the common supply and individual supply are mixed, please contact SMC.  
 Note 20) When "D" is selected for manifold option, select "P" option for the single unit model number.  
 Note 21) To prevent backflow of the manifold common exhaust, not for holding vacuum. This option does not completely stop the backflow of the exhaust air. Select port exhaust type depending on purpose.  
 Note 22) When "J" is selected for ③ Combination of Supply Valve and Release Valve and "W" (with exhaust interference prevention valve) is selected for ⑧ Optional Specifications, install a release valve or vacuum breaker.  
 Note 23) When "K, Q, R, S" is selected for ⑤ Pressure Sensor/Digital Pressure Switch for Vacuum Specifications, models with exhaust interference prevention valve is provided. So, it is not necessary to select "W".  
 Note 24) For high-noise reduction silencer exhaust, "W" (With exhaust interference prevention valve) cannot be selected.  
 Note 25) For ① System/Body type "F" or "H," when "L" is selected for ⑧ Option, the vacuum break flow-adjusting needle option "K" or "JK" can be additionally selected for increased workability.

**Single Unit and Options <sup>Note 26)</sup>**

① System/Body type	② Nominal nozzle size	③ Combination of supply valve and release valve	④ Rated voltage	⑤ Pressure sensor/digital pressure switch for vacuum specifications	⑥ Supply valve/release valve/digital pressure switch for vacuum connector specifications	⑦ Vacuum (V) port	⑧ Optional specifications		
A/B/G	07 10 12 15	K	5 6	P/T	L/L1	06 08 07 09	B/D/J/K/W		
				A/B/C/D/E/F/H/J	L/L1/L2/L3				
				N	L2/L3				
		K/Q/R/S		L3/W					
		P/T		L/L1					
		A/B/C/D/E/F/H/J		L/L1/L2/L3					
	C/F/H	07 10 12 15	R	5 6	N	L2/L3	06 08 07 09	B/D/J/K/W	
					P/T	L/L1			
					A/B/C/D/E/F/H/J	L/L1/L2/L3			
			J		N	L2/L3			B/W
					P/T	Y			
					A/B/C/D/E/F/H/J	Y/Y1			
C/F/H	07 10 12 15	K	5 6	N	N	06 08 07 09	B/W		
				P/T	C/L/L1				
				A/B/C/D/E/F/H/J	C/C1/L/L1/L2/L3				
		R		N	C1/L2/L3			J/K/L/P/W	
				K/Q/R/S	L3/W				
				P/T	C/L/L1				
	C/F/H	07 10 12 15	R	5 6	A/B/C/D/E/F/H/J	C/C1/L/L1/L2/L3	06 08 07 09	J/K/L/P/W	
					N	C1/L2/L3			
					P/T	C/L/L1			
			J		A/B/C/D/E/F/H/J	C/C1/L/L1/L2/L3			L/W
					N	C1/L2/L3			
					P/T	Y			
C/F/H	07 10 12 15	N	0	A/B/C/D/E/F/H/J	Y/Y1	06 08 07 09	L/W		
				N	N				
				P/T	Y				

Note 26) When "J" is selected for ③ Combination of Supply Valve and Release Valve, "J or K" cannot be selected for ⑧ Optional Specifications.  
 For options not in the table, please contact SMC.  
 \*Refer to page 42 when mounting a single unit onto the DIN rail.

# Vacuum Unit

# ZK2 Series



## Vacuum Pump System

### How to Order Single Unit

Refer to page 9 for How to Order Manifold.

## Vacuum Pump System

ZK2 **P** 00 **K** **5** **A** **L** - **08** -   

1

2

3

4

5


6

7

Remains blank when no option is selected.

### 1 System/Body Type


Symbol	System	Body type	Exhaust type
P	Vacuum pump system	Single unit	—
Q		For manifold	—

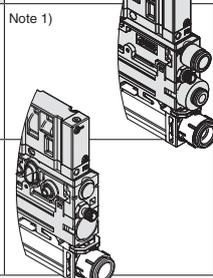

Note 1) PS port size of pump system: mm:  $\varnothing$  4  
inch:  $\varnothing$  5/32"

### 2 Combination of Supply Valve and Release Valve

Symbol	Supply valve	Release valve
K	N.C.	N.C.
J	N.C. <sup>Note 3)</sup>	None
R	Self-holding release valve linked <sup>Note 4)</sup>	N.C.

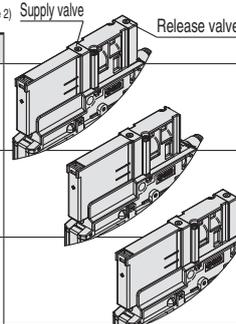

Note 2) Only non-locking type is available for the manual override for "K, J, R".  
Note 3) When "J" is selected for vacuum pump system, install a release valve or vacuum breaker.  
Note 4) Self-holding type maintains vacuum by instantaneous energisation (20 ms or more). Stopping the vacuum turns on the release valve. (signal to stop vacuum not needed)


### 3 Rated Voltage

Symbol	Voltage
5	24 VDC
6	12 VDC

Note 5) Rated voltage for the supply and release valve

### 4 Pressure Sensor/Digital Pressure Switch for Vacuum Specifications

Symbol	Type	Pressure range [kPa]	Specifications	
P	Pressure sensor	0 to -101	Analogue output 1 to 5 V	
T		-100 to 100	Analogue output 1 to 5 V	
A	Digital pressure switch for vacuum	0 to -101	NPN 2 outputs Unit selection function SI unit only <sup>Note 6)</sup>	
B			-100 to 100	PNP 2 outputs Unit selection function SI unit only <sup>Note 6)</sup>
C				Without pressure sensor/ Digital pressure switch for vacuum
D		Without pressure sensor/ Digital pressure switch for vacuum		
E			Without pressure sensor/ Digital pressure switch for vacuum	
F				Without pressure sensor/ Digital pressure switch for vacuum
H	Without pressure sensor/ Digital pressure switch for vacuum	NPN 2 outputs Unit selection function SI unit only <sup>Note 6)</sup>		
J		Without pressure sensor/ Digital pressure switch for vacuum	PNP 2 outputs Unit selection function SI unit only <sup>Note 6)</sup>	
N			Without pressure sensor/ Digital pressure switch for vacuum	Without pressure sensor/ Digital pressure switch for vacuum

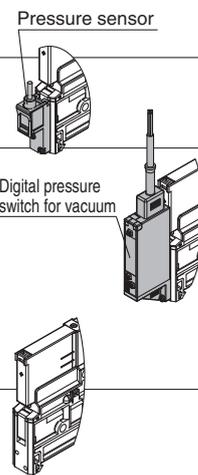

Note 6) Fixed unit: kPa

- PV: Air pressure supply port/Port for vacuum source (Vacuum pump)
  - PS: Pilot pressure supply port
  - PD: Individual release pressure supply port
  - V: Vacuum port
  - EXH: Exhaust port
  - PE: Pilot pressure exhaust port
- For details ⇒ Page 24

**5 Supply Valve/Release Valve/Digital Pressure Switch for Vacuum Connector Specifications**

Symbol	2 For supply valve/release valve <sup>Note 7)</sup>		4 Lead wire with connector for pressure switch/sensor <sup>Note 10)</sup>	Image
	Connector type	Lead wire with connector		
C	Common wiring (Plug-in) (For manifold)	×	○ Note 11)	
C1			× Note 12)	
L	L-type plug connector	○ Note 8)	○ Note 11)	
L1			× Note 9)	
L2			○ Note 8)	
L3			× Note 9)	

- Note 7) Solenoid valve with light/surge voltage suppressor  
 Note 8) Standard lead wire length for solenoid valve is 300 mm.  
 Note 9) For lead wire lengths other than standard, select "L1 or L3", and order the connector assembly with desired length. (Refer to page 26.)  
 Note 10) Standard lead wire length for pressure sensor is 3 m. Standard lead wire length with connector for switch for vacuum and the lead wire length for switch with energy saving function is 2 m.  
 Note 11) Select "C, L, L1" when the pressure sensor (P, T) is selected for 4 Pressure Sensor/Digital Pressure Switch for Vacuum Specifications. Since only grommet type is available for the pressure sensor, sensor without lead wire cannot be selected.  
 Note 12) Select when no pressure switch for vacuum, pressure sensor, or pressure switch for vacuum with connector without lead wire is used.

**6 Vacuum (V) Port <sup>Note 13)</sup>**

Symbol	Type	Port size	
06	Metric size	Ø 6	
08		Ø 8	
07	Inch size	Ø 1/4"	
09		Ø 5/16"	

Note 13) Supply port (PV) size of single unit: Ø 6 (mm), Ø 1/4" (inch)

**7 Optional Specifications <sup>Note 14, 17)</sup>**

Symbol	Type	Symbol	Type
—	Without option	J	Vacuum break flow adjusting needle Round lock nut type
B	With one bracket for mounting a single unit (Mounting screw is attached.)	K	Vacuum break flow adjusting needle Screwdriver operation type
C	Pump system PE port female thread specification <sup>Note 18)</sup>	P	Manifold common release pressure supply specification <sup>Note 16)</sup>
D	With individual release pressure supply (PD) port <sup>Note 15)</sup>		

- Note 14) When more than one option is selected, list the option symbols in an alphabetical order. Example) -BJ  
 Note 15) Only M3 is available for PD port size. Use One-touch fitting (M-3AU-4) or barb fitting for piping. (O.D.: within Ø 6.2)  
 Note 16) When "D" is selected for manifold option, select "P" option for the single unit model number.  
 Note 17) Refer to page 36 for Function/Application.  
 Note 18) Use One-touch fitting (M-3AU-4) or barb fitting for piping. (O.D.: within Ø 5.8)

**Single Unit and Options <sup>Note 18)</sup>**

1 System/Body type	Vacuum pump system part number	2 Combination of supply valve and release valve	3 Rated voltage	4 Pressure sensor/digital pressure switch for vacuum specifications	5 Supply valve/release valve/digital pressure switch for vacuum connector specifications	6 Vacuum (V) port	7 Optional specifications	
P	00	K/R	5 6	P/T	L/L1	06 08 07 09	B/C/D/J/K	
				A/B/C/D/E/F/H/J	L/L1/L2/L3			
		N		L2/L3				
		P/T		L/L1				
Q		J		K/R	A/B/C/D/E/F/H/J		L/L1/L2/L3	B/C
					N		L2/L3	
				J	P/T		C/L/L1	C/J/K/P
					A/B/C/D/E/F/H/J		C/C1/L/L1/L2/L3	
			N	C1/L2/L3	C			
			P/T	C/L/L1				
			A/B/C/D/E/F/H/J	C/C1/L/L1/L2/L3				
			N	C1/L2/L3				

- Note 18) When "J" is selected for 2 Combination of Supply Valve and Release Valve, "J or K" cannot be selected for 7 Optional Specifications.  
 For options not in the table, please contact SMC.  
 \*Refer to page 42 when mounting a single unit onto the DIN rail.

How to Order

Specifications/Flow Rate Characteristics

Port Layout


Construction

Exploded View of Manifold

Dimensions

Specific Product Precautions

## How to Order Manifold




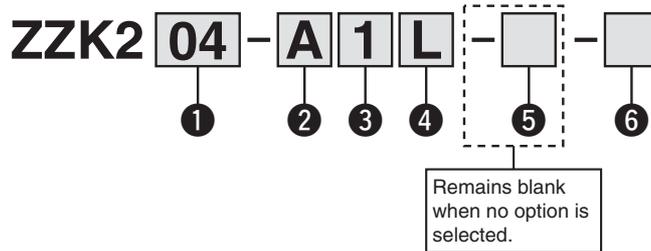


### 1 Stations Note 1)

Symbol	Stations
01	1 station
02	2 stations
⋮	⋮
10	10 stations

Note 1) In the case of an ejector, for an adequate performance, the number of stations when operated simultaneously depends on the nozzle diameter. (Refer to Maximum Number of Manifold Stations that Can Operate Simultaneously on page 12.)

### 2 System (Port combination) Note 2)

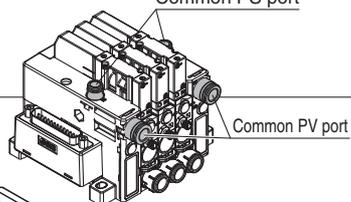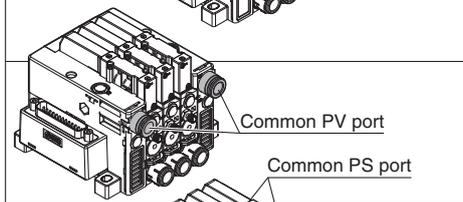
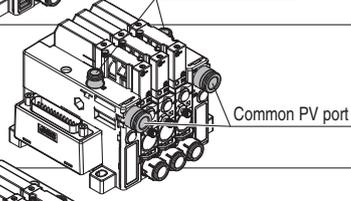
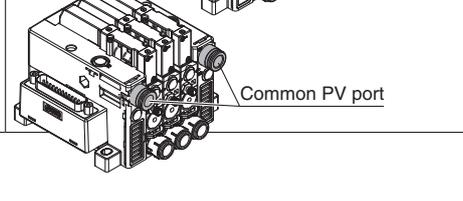
Symbol	System	Port	Standard	
P	Vacuum pump system	Common PV: $\varnothing$ 8, Common PS: $\varnothing$ 6 <small>Note 3)</small>	Metric size	
A	Ejector system	Common PV: $\varnothing$ 8 <small>Note 4)</small>		
PN	Vacuum pump system	Common PV: $\varnothing$ 5/16", Common PS: $\varnothing$ 1/4" <small>Note 3)</small>	Inch size	
AN	Ejector system	Common PV: $\varnothing$ 5/16" <small>Note 4)</small>		

Note 2) Refer to pages 18 to 24 for the port layout of standard port combinations and options.

Note 3) Common PS port and common PD port are connected inside. Connect One-touch fitting to one of ports so that piping becomes easier. (Connected to PS port initially)

Note 4) Common PV = Common PS = Common PD. Pressure is equal.

### 3 Exhaust

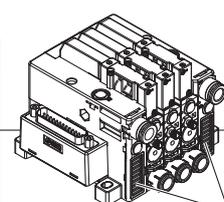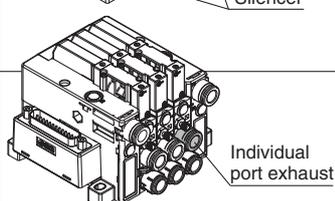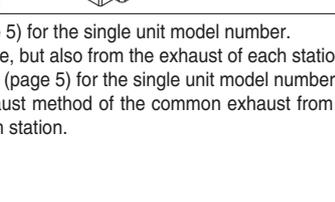Symbol	Exhaust type		
2	Vacuum pump system	Without silencer	
1	Ejector system	Complex exhaust <small>Note 7)</small> (End plate on both sides) <small>Note 5)</small>	
		Individual exhaust (Individual port exhaust, High-noise reduction silencer exhaust) <small>Note 6)</small>	




Note 5) Select "C" for 1 System/Body Type (page 5) for the single unit model number.

Air is exhausted not only from the end plate, but also from the exhaust of each station.

Note 6) Select "F" or "H" for 1 System/Body Type (page 5) for the single unit model number.

Note 7) The complex exhaust is a combined exhaust method of the common exhaust from the end plate and the direct exhaust from each station.

### 4 Wiring Note 8)

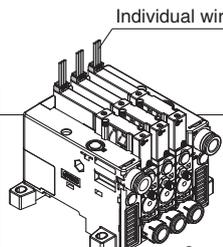
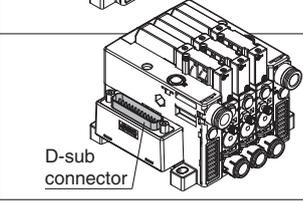
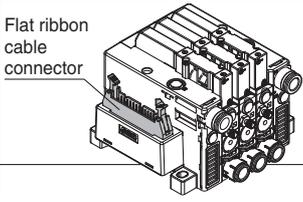
Symbol	Type	
L	Individual wiring specification <small>Note 9)</small>	
F	D-sub connector <small>Note 10)</small> (25 pins)	
P	Flat ribbon cable <small>Note 10)</small> (26 pins)	
N	No wiring (No valve)	

Note 8) Common wiring is available only for solenoid valve wiring. Individual wiring is specified for vacuum switches and sensors.

Note 9) Select "L, L□, or W" for 6 Supply Valve/Release Valve/Digital Pressure Switch for Connector Specifications for the single unit model number.

Note 10) Select "C, C1" for 6 Supply Valve/Release Valve/Digital Pressure Switch for Connector Specifications for the single unit model number.

## 5 Option Note 11)

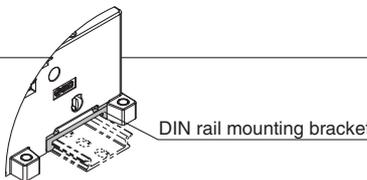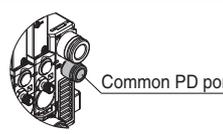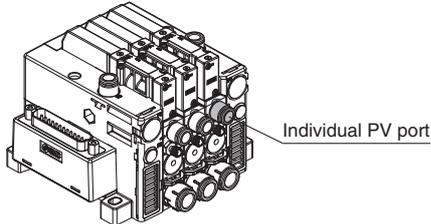Symbol	Type	
—	Without option	
<b>B</b>	With DIN rail mounting bracket <small>Note 12)</small>	
<b>D</b>	With common release pressure supply (PD) port <small>Note 13)</small>	
<b>L</b>	Manifold individual supply specification <small>Note 14)</small>	

Note 11) When more than one option is selected, list the option symbols in an alphabetical order.  
Example) -BD


Note 12) DIN rail should be ordered separately. (Refer to page 27.)

Note 13) When “-D” is selected for the manifold model number, select “-P” for 8 Optional Specifications for the single unit model number. Refer to pages 18 to 24 for port layout.

Note 14) When “-L (individual supply)” is selected for 8 Optional Specifications for the single unit model number, specify “-L” for manifold, too.

## How to Order Valve Manifold Assembly

### Example

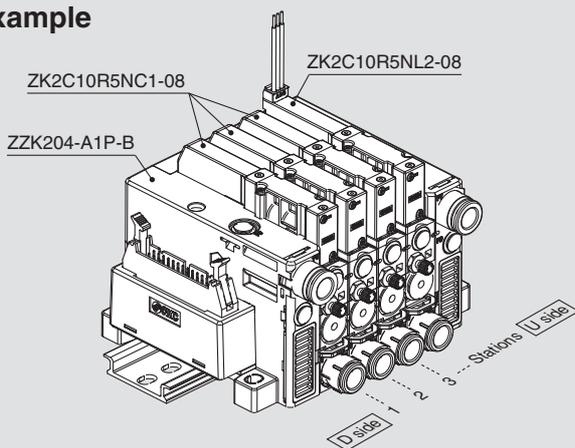

**ZZK204-A1P-B** .....1 set (Manifold part number)  
 \* **ZK2C10R5NC1-08** .....3 sets (Common wiring specification)  
 \* **ZK2C10R5NL2-08** .....1 set (Individual wiring specification)

↳ \* The asterisk denotes the symbol for assembly.  
 \* Prefix to the single unit part number.


- When the manifold is viewed from V port, the first station starts from the left (D side).
- After the manifold part number, specify the installed single unit from the first station.
- Complex exhaust and individual port exhaust cannot be mixed in the ejector system manifold.
- DIN rail should be ordered separately. (Page 27)

## 6 Manifold Assembly (Delivery condition)

Symbol	Type
—	Individual units assembled delivered as a manifold
<b>A</b>	Delivered as individual parts (not assembled) <small>Note 15)</small>

Note 15) Kit consists of end plates for both ends and tension bolts.

### Manifold parts when not assembled

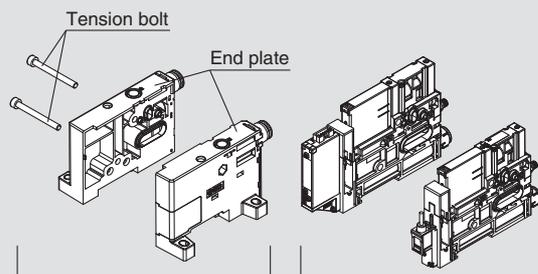

Manifold parts

Ejector: Single unit

**ZZK202-A1L-A** .....1 set (Manifold part number)  
**ZK2C10K5BL3-08** .....1 set (Single unit part number)  
**ZK2C10K5PL1-08** .....1 set (Single unit part number)

↳ Do not add “\*”

### Manifold Type and Options

	1	2	3	4	5			6
					B	D	L	
ZZK2	01	P PN	2	L FP	●	●		— A
	10	A AN	1 2	L FP N	●	●	●	



## Specifications

### General Specifications

Operating temperature range		-5 to 50 °C (with no condensation)
Fluid		Air
Vibration resistance <sup>Note 1)</sup>	30 m/s <sup>2</sup>	Without pressure sensor/switch for vacuum With pressure sensor
	20 m/s <sup>2</sup>	With switch for vacuum
Impact resistance <sup>Note 2)</sup>	150 m/s <sup>2</sup>	Without pressure sensor/switch for vacuum With pressure sensor
	100 m/s <sup>2</sup>	With switch for vacuum

Note 1) The characteristics are satisfied when tested for 2 hours in each of the X, Y and Z directions at 10 to 500 Hz without energisation. (Initial value)

Note 2) The characteristics are satisfied when tested one time in each of the X, Y and Z directions without energisation. (Initial value)

### Valve Common Specifications

Valve model <sup>Note 3)</sup>	ZK2-VA□R	ZK2-VA□K	ZK2-VA□J
Type of actuation <sup>Note 4)</sup>	Self-holding supply valve Release valve N.C. (Linked)	Supply valve N.C. Release valve N.C.	Supply valve N.C. Without release valve
Valve configuration	Pilot operated dual 2 port		Pilot operated 2 port
Operating pressure range	0.3 to 0.6 MPa		
Valve construction	Poppet seal		
Manual override	Push type		
Rated voltage	24 VDC, 12 VDC		
Power consumption	0.35 W		
Lead wire (ZK2-LV**-A)	Cross section: 0.2 mm <sup>2</sup> (AWG24)		
	Insulator O.D.: 1.4 mm		

Note 3) Refer to ⑥ Valve assembly on page 26 for the valve model number.

Note 4) ZK2-VA□R: After instantaneous energisation of the supply valve (20 ms or more), ON state is maintained without energisation. Supply valve turns off simultaneously when the release valve turns on.

ZK2-VA□K: Supply valve turns off when it is not energised. Select this type when energy saving switch is used.

### Ejector Specifications

Item		Model	ZK2□07	ZK2□10	ZK2□12	ZK2□15
Nozzle diameter		[mm]	0.7	1.0	1.2	1.5
Max. suction flow <sup>Note 5)</sup>	Port exhaust	[l/min (ANR)]	34	56	74	89
	Silencer exhaust/Complex exhaust	[l/min (ANR)]	29	44	61	67
	High-noise reduction silencer exhaust	[l/min (ANR)]	34	56	72	83
Air consumption <sup>Note 5)</sup>		[l/min (ANR)]	24	40	58	90
Maximum vacuum pressure <sup>Note 5)</sup>		[kPa]	-91			
Supply pressure range		[MPa]	0.3 to 0.6			
Standard supply pressure <sup>Note 6)</sup>		[MPa]	0.35		0.4 (0.37)	

Note 5) Values are based on standard of SMC measurements. They depend on atmospheric pressure (weather, altitude, etc.) and measurement method.

Note 6) The value in ( ) is for without valve. For nozzle size 07 to 12, the value is common to the ejectors with valve and without valve.

### Maximum Number of Manifold Stations that Can Operate Simultaneously<sup>Note 7)</sup>

Item		Model (Nozzle size)	ZK2□07	ZK2□10	ZK2□12	ZK2□15
Air pressure supply (PV) port ∅ 8, ∅ 5/16"	Complex exhaust	Supply from one side	8	5	4	3
		Supply from both sides	10	7	5	5
	Individual port exhaust, High-noise reduction silencer exhaust	Supply from one side	8	6	6	3
		Supply from both sides	10	9	9	6

Note 7) As long as the number of stations operated simultaneously is the value on the table or less, then the manifold is available up to 10 stations.

### Noise level (Reference values)

Item		Model	ZK2□07	ZK2□10	ZK2□12	ZK2□15
Noise level [dB(A)]	ZK2G (High-noise reduction silencer exhaust)		46	55	63	69
	ZK2A (Silencer exhaust)		59	66	75	76

Actual values based on SMC's measurement conditions (Not guaranteed values)

## Weight

### Single Unit

Single unit model	Weight [g]
ZK2P00K□□ (Vacuum pump system, Single unit, Without pressure sensor/switch for vacuum)	83
ZK2A□□K□□ (Ejector system, Single unit, Without pressure sensor/switch for vacuum)	81
ZK2A□□N0NN (Ejector system, Single unit, Without valve)	54
ZK2 (One station for manifold, Without pressure sensor/switch for vacuum)	85

### Pressure Sensor/Pressure Switch for Vacuum

Pressure sensor/Pressure switch for vacuum model	Weight [g]
ZK2-PS□-A (Except cable portion)	5
ZK2-ZS□-A (Except lead wire assembly with connector)	14
ZK2-ZSV□-A (Except special lead wire assembly with connector)	

### Manifold Base

	1 station	2 stations	3 stations	4 stations	5 stations	6 stations	7 stations	8 stations	9 stations	10 stations
Weight [g]	129	132	135	138	141	144	147	149	152	155

### ● Calculation of Weight for the Manifold Type

(Single unit weight x Number of stations) + (Pressure sensor/Pressure switch for vacuum weight x Number of stations) + Manifold base

Example) 5-station manifold with pressure sensors 85 g x 5 pcs. + 5 g x 5 pcs. + 141 g = 591 g


# ZK2 Series

## Ejector Exhaust Characteristics/Flow Rate Characteristics


\*The flow rate characteristics correspond to the standard supply pressure.

### ZK2□07


#### Exhaust Characteristics

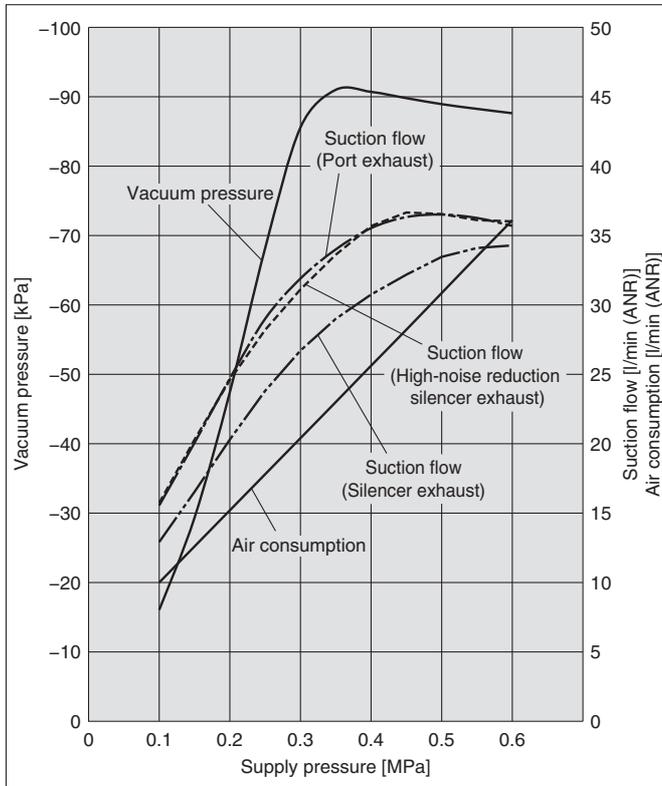

#### Flow Rate Characteristics

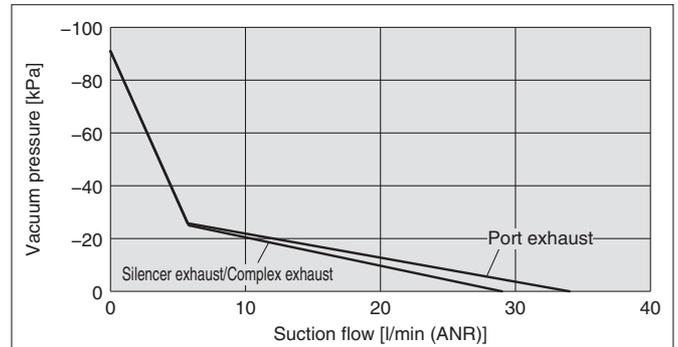


#### Flow Rate Characteristics

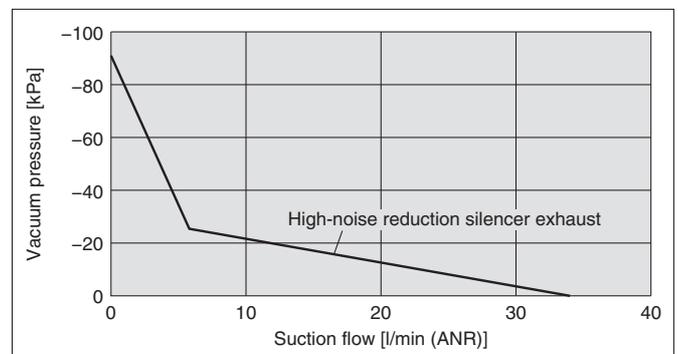


### ZK2□10


#### Exhaust Characteristics

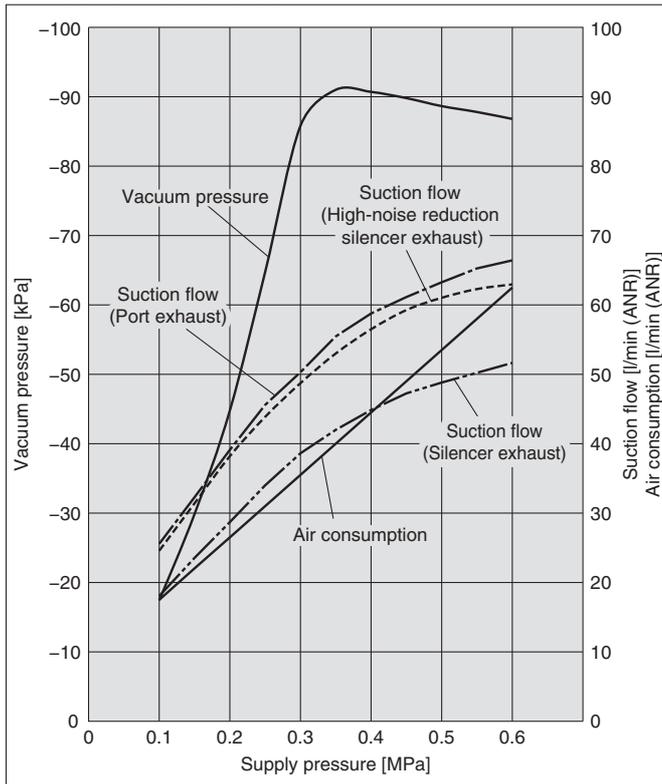

#### Flow Rate Characteristics

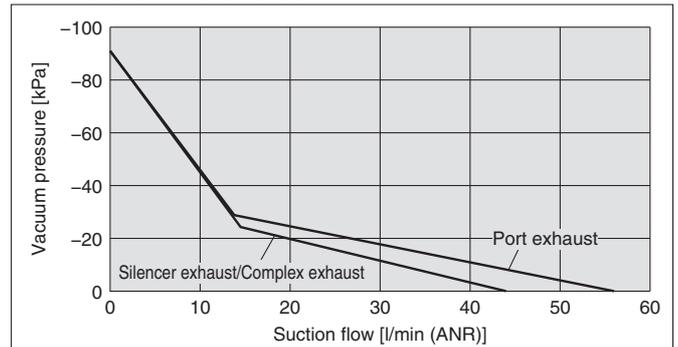

#### Flow Rate Characteristics

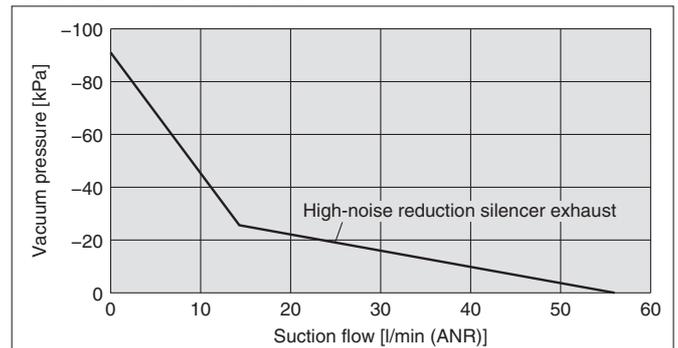


## Ejector Exhaust Characteristics/Flow Rate Characteristics


\*The flow rate characteristics correspond to the standard supply pressure.

### ZK2□12


#### Exhaust Characteristics

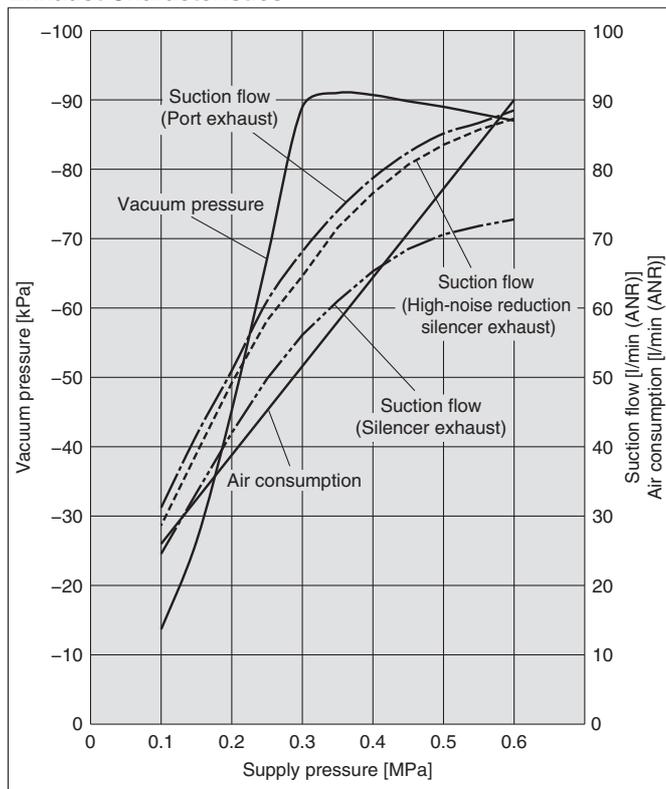

#### Flow Rate Characteristics

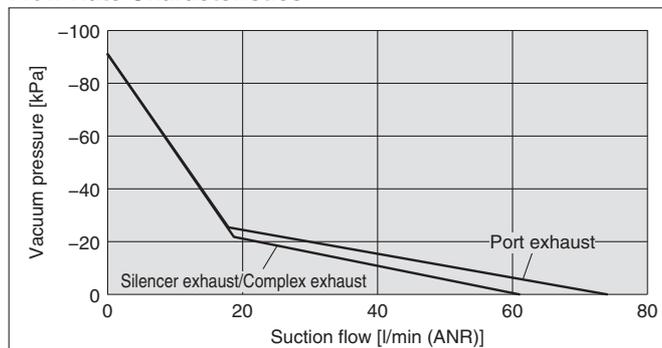


#### Flow Rate Characteristics

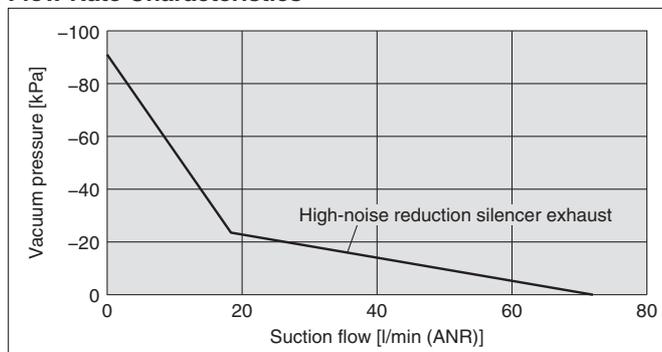


**ZK2□15** Note 8) The following graphs show the characteristics of the ejector with valve. (Please contact SMC for models without valve.)


#### Exhaust Characteristics

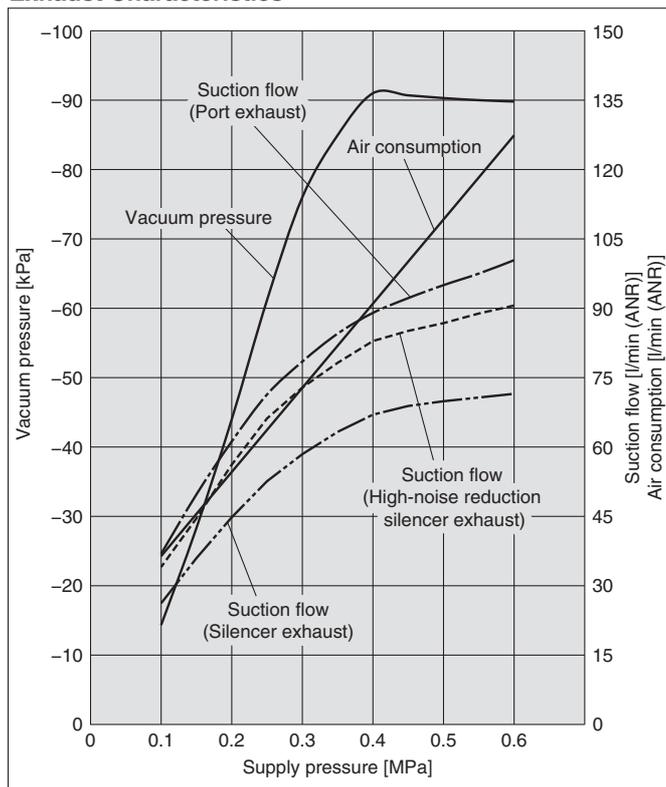

#### Flow Rate Characteristics

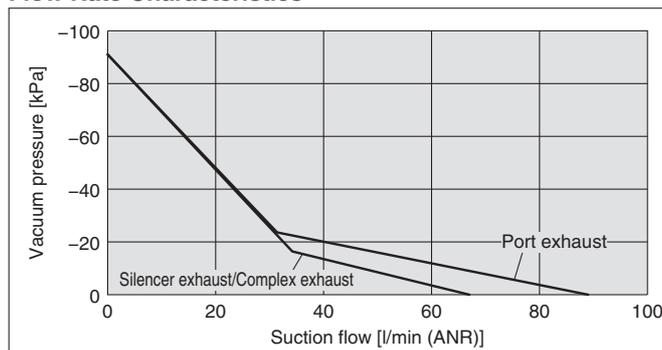

#### Flow Rate Characteristics

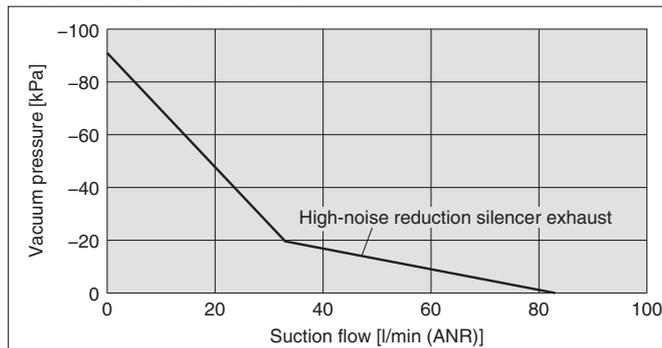


- How to Order
- Specifications/  
Flow Rate Characteristics
- Port Layout
- Construction
- Exploded View of Manifold
- Dimensions
- Specific Product Precautions

# ZK2 Series

## Vacuum Pump System Flow Rate Characteristics/ZK2P00

The graph shows the suction flow rate characteristics of the vacuum pump system at different vacuum pressures.

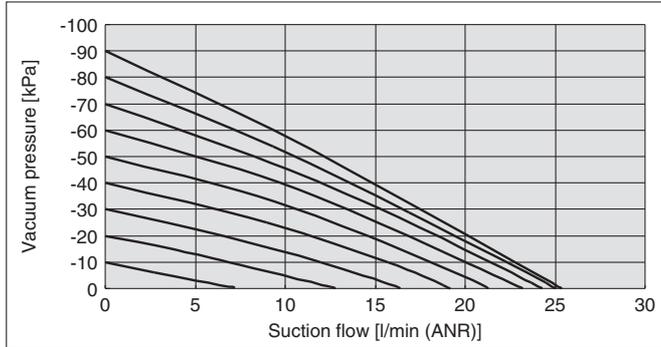


The actual suction flow at the point of suction varies depending on the piping conditions to the vacuum port. (The above graph shows the value when V port is Ø 8.)

## Vacuum Release Flow Rate Characteristics


The graph shows the flow rate characteristics at different supply pressures when the vacuum break flow adjusting needle is open from the fully closed state.

### ZK2□□□(Ejector System)

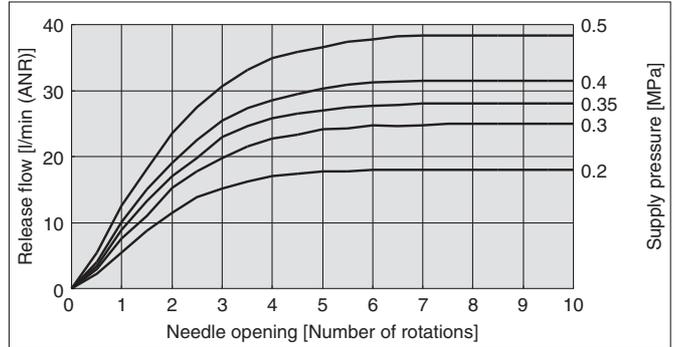

The actual suction flow at the point of suction varies depending on the piping conditions to the vacuum port. (The above graph shows the value of the ZK2B07.)

### ZK2□□□(Pump System)

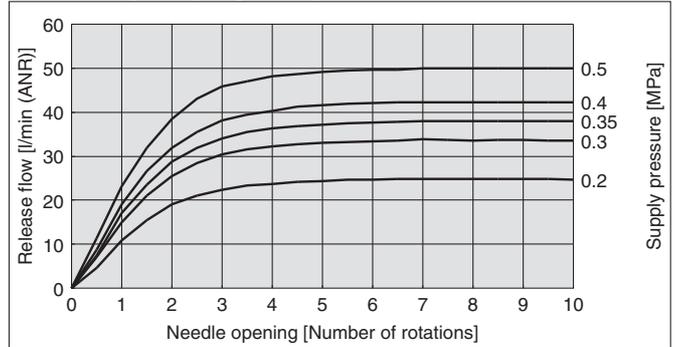


The actual suction flow at the point of suction varies depending on the piping conditions to the vacuum port.

## Vacuum Pump System Flow Rate Characteristics of Flow Path and Vacuum Release

Port size		Flow rate characteristics of V → PV (Vacuum side)			Flow rate characteristics of PS → V (Vacuum release side) <sup>(*)</sup>		
PV port	V port	C[dm <sup>3</sup> /(s·bar)]	b	Cv	C[dm <sup>3</sup> /(s·bar)]	b	Cv
Ø 6	Ø 8	0.39	0.14	0.09	0.20	0.06	0.04

(\*) When needle is fully open

## How to Read Flow Rate Characteristics Graph

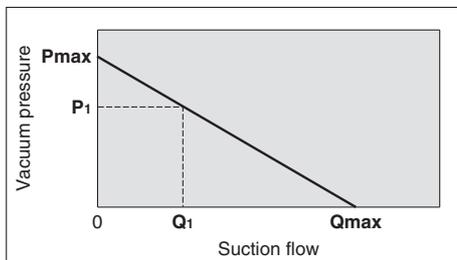


Flow rate characteristics are expressed in ejector vacuum pressure and suction flow. If suction flow changes, the vacuum pressure will also be changed. Normally this relationship is expressed in ejector standard operating pressure use. In graph, **Pmax** is maximum vacuum pressure and **Qmax** is maximum suction flow. The values are specified according to catalogue use. Changes in vacuum pressure are expressed in the below order.

1. When ejector suction port is covered and made airtight, suction flow becomes zero and vacuum pressure is at maximum value (**Pmax**).
2. When suction port is opened gradually, air can flow through, (air leakage), suction flow increases, but vacuum pressure decreases. (condition **P1** and **Q1**)
3. When suction port is opened further and fully opened, suction flow moves to maximum value (**Qmax**), but vacuum pressure is near zero (atmospheric pressure).

As described above, the vacuum pressure changes when the suction flow changes. In other words, when there is no leakage from the vacuum (V) port, the vacuum pressure can reach its maximum, but as the amount of leakage increases, the vacuum pressure decreases. When the amount of leakage and the maximum suction flow become equal, the vacuum pressure becomes almost zero. In the case when ventilative or leaky work should be adsorbed, take note that vacuum pressure will not rise.

## Pressure Sensor/Digital Pressure Switch for Vacuum Specifications

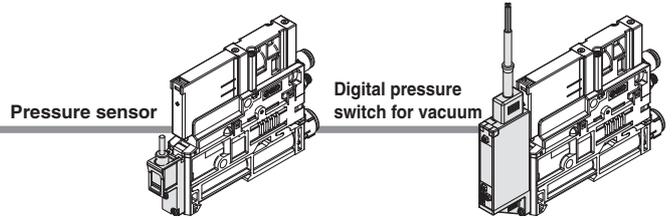

### Pressure Sensor/ZK2-PS□-A (For details, refer to the PSE series in our website [www.smc.eu](http://www.smc.eu) and the Operation Manual.)

Model (Sensor unit: Standard model number)	ZK2-PS1-A (PSE541)	ZK2-PS3-A (PSE543)
Rated pressure range	0 to -101 kPa	-100 to 100 kPa
Proof pressure	500 kPa	
Applicable fluid	Air/Non-corrosive gas/Incombustible gas	
Output voltage	1 to 5 VDC	
Output impedance	Approx. 1 kΩ	
Power supply voltage	10 to 24 VDC ±10 %, Ripple (P-P) 10 % or less	
Current consumption	15 mA or less	
Accuracy	±2 % F.S. (Ambient temperature at 25 °C)	
Linearity	±0.4 % F.S. or less	
Repeatability	±0.2 % F.S. or less	
Effect of power supply voltage	±0.8 % F.S. or less	
Temperature characteristics	±2 % F.S. or less (Ambient temperature: 25 °C reference)	
Material	Case	Resin case
	Pressure sensing section	Sensor pressure receiving area: Silicon, O-ring: HNBR
Lead wire	Oilproof heavy-duty cable 2.7 x 3.2 mm (Elliptic), 0.15 mm <sup>2</sup> 3 cores 3 m	

### Digital Pressure Switch for Vacuum/ZK2-ZS□□□□-A

(For details, refer to the ZSE/ISE10 series in our website [www.smc.eu](http://www.smc.eu) and the Operation Manual.)

Model (Switch unit: Standard model number)	ZK2-ZSE□□□□-A (ZSE10)	ZK2-ZSF□□□□-A (ZSE10F)
Rated pressure range	0 to -101 kPa	-100 to 100 kPa
Set pressure range/Pressure display range	10 to -105 kPa	-105 to 105 kPa
Proof pressure	500 kPa	
Smallest settable increment	0.1 kPa	
Applicable fluid	Air/Non-corrosive gas/Incombustible gas	
Power supply voltage	12 to 24 VDC ±10 %, Ripple (p-p) 10 % or less (Protected against reverse connection)	
Current consumption	40 mA or less	
Switch output	NPN or PNP open collector 2 outputs (selectable)	
	Maximum load current	80 mA
	Maximum applied voltage	28 V (with NPN output)
	Residual voltage	2 V or less (with load current at 80 mA)
	Response time	2.5 ms or less (Anti-chattering function working: 20, 100, 500, 1000 or 2000 ms selected)
	Short circuit protection	Yes
Repeatability	±0.2 % F.S. ±1 digit	
Hysteresis	Hysteresis mode	Variable (0 or above) <sup>Note)</sup>
	Window comparator mode	
Display	3 1/2 digit, 7-segment LED, 1-colour display (Red)	
Display accuracy	±2 % F.S. ±1 digit (Ambient temperature at 25 ±3 °C)	
Indicator light	Lights up when output is turned ON. OUT1: Green, OUT2: Red	
Environmental resistance	Enclosure	IP40
	Operating temperature range	Operating: -5 to 50 °C, Storage: -10 to 60 °C (with no freezing or condensation)
	Operating humidity range	Operating/Storage: 35 to 85 % RH (with no condensation)
	Withstand voltage	1000 V AC for 1 minute between terminals and housing
Insulation resistance	50 MΩ or more (500 VDC measured via megohmmeter) between terminals and housing	
Temperature characteristics	±2 % F.S. (at 25 °C in an operating temperature range of -5 and 50 °C)	
Lead wire	Oilproof heavy-duty vinyl cable 5 cores, Cross section: 0.15 mm <sup>2</sup> (AWG26), Insulator O.D.: 1.0 mm	
Standards	Compliant with CE marking, RoHS	

Note) If the applied voltage fluctuates around the set value, the hysteresis must be set to a value more than the fluctuating width, otherwise, chattering will occur.

How to Order

Specifications/  
Flow Rate Characteristics

Port Layout


Construction

Exploded View of Manifold

Dimensions

Specific Product Precautions

# ZK2 Series

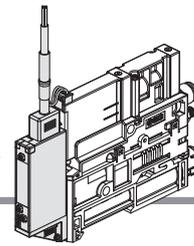

Digital pressure switch for vacuum with energy saving function

## Digital Pressure Switch for Vacuum Specifications


### Digital Pressure Switch for Vacuum Ejector with Energy Saving Function

Model		Specifications
Rated pressure range		-100 to 100 kPa
Set pressure range		-105 to 105 kPa
Proof pressure		500 kPa
Smallest settable increment		0.1 kPa
Applicable fluid		Air/Non-corrosive gas/Incombustible gas
Power supply voltage		12 to 24 VDC $\pm 10\%$ Ripple (P-P) 10% or less (Protected against reverse connection)
Current consumption		40 mA or less
Switch output		NPN or PNP open collector OUT1: General purpose, OUT2: Valve control
Maximum load current		80 mA
Maximum applied voltage		26.4 VDC
Residual voltage		2 V or less (with load current at 80 mA)
Response time		2.5 ms or less (Anti-chattering function working: 20, 100, 500, 1000 or 2000 ms selected)
Short circuit protection		Yes
Repeatability		$\pm 0.2\%$ F.S. $\pm 1$ digit
Hysteresis	Hysteresis mode	Variable (0 or above) <sup>Note</sup>
Display		3 1/2 digit, 7-segment LED, 1-colour display (Red)
Display accuracy		$\pm 2\%$ F.S. $\pm 1$ digit (Ambient temperature at $25 \pm 3^\circ\text{C}$ )
Indicator light		Lights up when output is turned ON. OUT1: Green, OUT2: Red
Enclosure		IP40
Environmental resistance	Operating humidity range	5 to $50^\circ\text{C}$
	Withstand voltage	1000 V AC for 1 minute between terminals and housing
	Insulation resistance	50 M $\Omega$ or more (500 VDC measured via megohmmeter) between terminals and housing
Temperature characteristics		$\pm 2\%$ F.S. (at $25^\circ\text{C}$ in an operating temperature range of 5 and $50^\circ\text{C}$ )
Lead wire		Cable: 5 cores $\varnothing 3.5$ , 2 m Cross section: 0.15 mm <sup>2</sup> (AWG26) Insulator O.D.: 1.0 mm
Standards		CE marking, RoHS

Note) If the applied voltage fluctuates around the set value, the hysteresis must be set to a value more than the fluctuating width, otherwise, chattering will occur.


## Description (Pressure Switch for Vacuum)

Output (OUT1) display (Green)	Lights up when OUT1 is turned ON.
Output (OUT2) display (Red)	Lights up when OUT2 is turned ON.
LED display	Displays the current pressure, set mode and error code. Selects the mode or increases the ON/OFF set-value.
button (UP)	Use for switching to the peak display mode.
button (DOWN)	Selects the mode or decreases the ON/OFF set-value. Use for switching to the bottom display mode.
button (SET)	Use for changing the mode or setting the set-value.

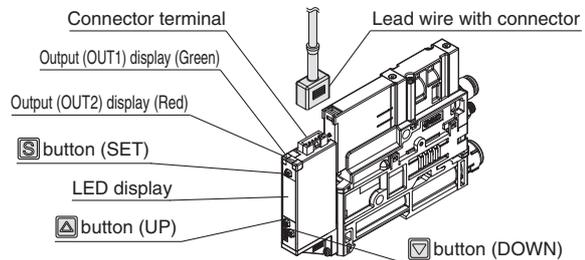


## Internal Circuit and Wiring Example

### Pressure Sensor ZK2-PS□-A

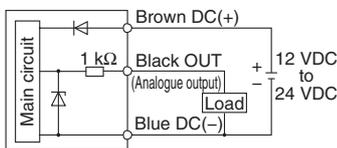

Voltage output type: 1 to 5 V  
Output impedance: Approx. 1 k $\Omega$


### Pressure Switch for Vacuum ZK2-ZS□A□□-A NPN (2 Outputs)

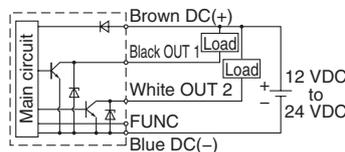

Max. 28 V, 80 mA  
Residual voltage: 2 V or less


\*The FUNC terminal is connected when using the copy function. (Refer to the Operation Manual.)

### ZK2-ZS□B□□-A PNP (2 Outputs)

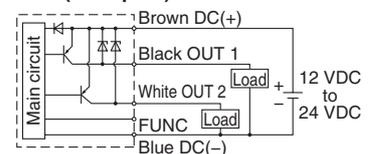


Max. 80 mA  
Residual voltage: 2 V or less

### Pressure Switch for Vacuum with Energy Saving Function ZK2-ZSVA□□-A NPN (Output)

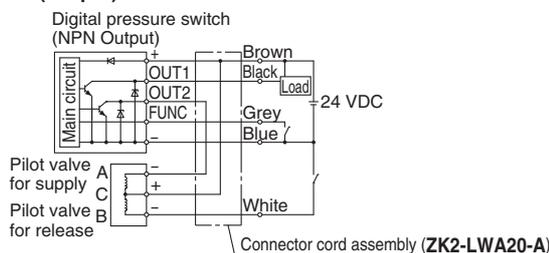

### ZK2-ZSVB□□-A PNP (Output)

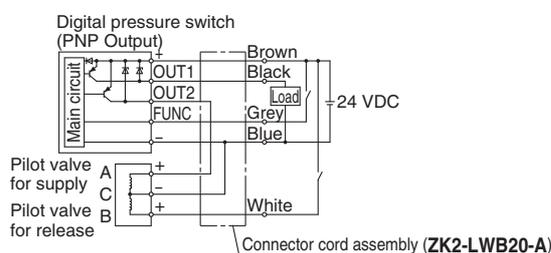


## Port Layout

\*System depends on vacuum source (vacuum pump/vacuum ejector).

### Standard Products

Port layout No. **1**


Single unit: ZK2P00□□□□-□

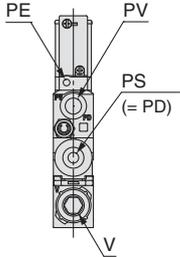

System	Vacuum pump	
Body type	Single unit	
Exhaust type	Without silencer	
Application and purpose	Vacuum pressure	—
	Exhaust	—
	Release pressure	Same pressure as PS

Port combination: PV ≠ PS = PD


Circuit example

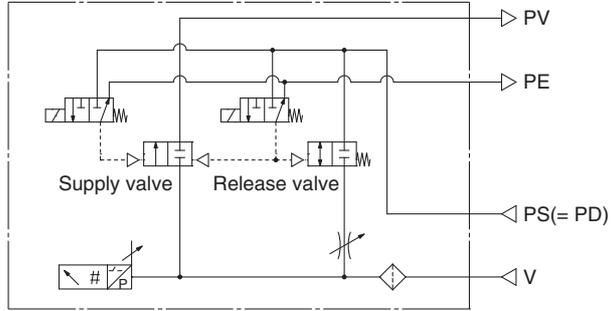

Supply valve: Self-holding type Release valve: N.C. (R type)

Port layout No. **2**


Single unit: ZK2Q00□□□□-□  
Manifold: ZZK2□□-P2□

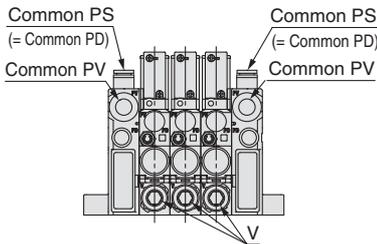

System	Vacuum pump	
Body type	Manifold	
Exhaust type	Without silencer	
Application and purpose	Vacuum pressure	Common for each station
	Exhaust	—
	Release pressure	Same pressure as common PS

Port combination: Common PV ≠ Common PS = Common PD

Circuit example

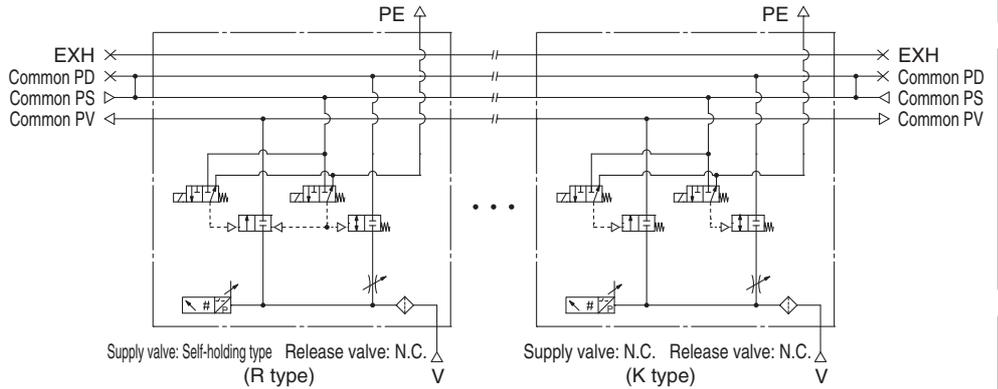


Supply valve: Self-holding type Release valve: N.C. (R type)

Supply valve: N.C. Release valve: N.C. (K type)

Port layout No. **3**


Single unit: ZK2A□□□□□□-□

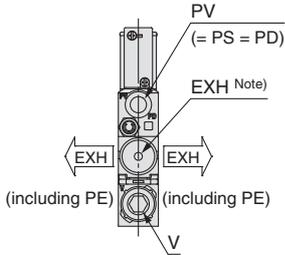

System	Ejector	
Body type	Single unit	
Exhaust type	Silencer exhaust	
Application and purpose	Vacuum pressure	—
	Exhaust	Released in operating environment
	Release pressure	Same pressure as PV

Port combination: PV = PS = PD

Circuit example

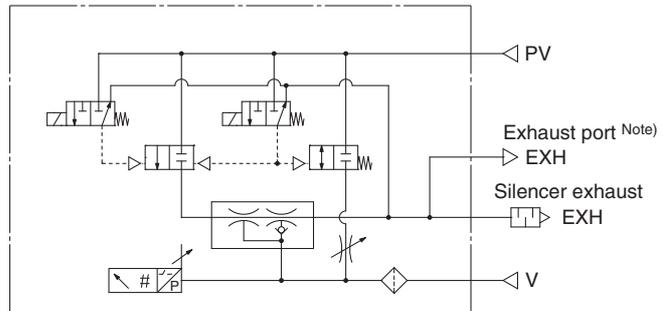

Supply valve: Self-holding type Release valve: N.C. (R type)

Note) Nozzle size: 12, 15

How to Order

Specifications/  
Flow Rate Characteristics

Port Layout

Construction

Exploded View of Manifold

Dimensions

Specific Product Precautions

Refer to page 24 for the purpose of port and the operating pressure range.


## Port Layout

\*System depends on vacuum source (vacuum pump/vacuum ejector).

### Standard Products

Port layout No. **4**


Single unit: ZK2B□□□□□□-□

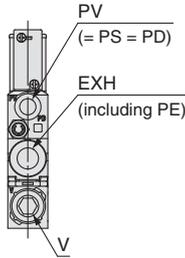

System	Ejector	
Body type	Single unit	
Exhaust type	Port exhaust	
Application and purpose	Vacuum pressure	—
	Exhaust	After piping, individual exhaust is necessary.
	Release pressure	Same pressure as PV

Port combination: PV = PS = PD


Circuit example

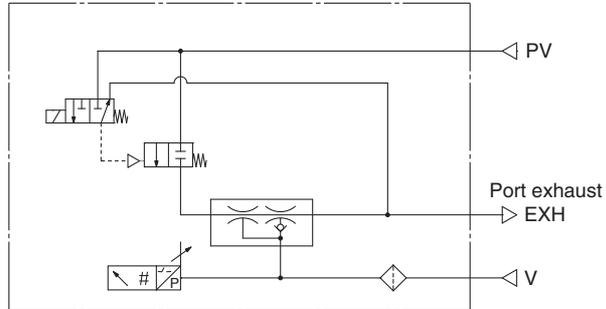

Supply valve: N.C. Release valve: Without release valve (J type)

Port layout No. **5**


Single unit: ZK2G□□□□□□-□

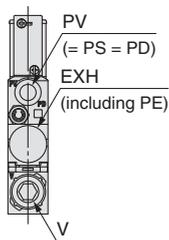

System	Ejector	
Body type	Single unit	
Exhaust type	High-noise reduction silencer exhaust	
Application and purpose	Vacuum pressure	—
	Exhaust	Released in operating environment
	Release pressure	Same pressure as PV

Port combination: PV (= PS = PD)


Circuit example

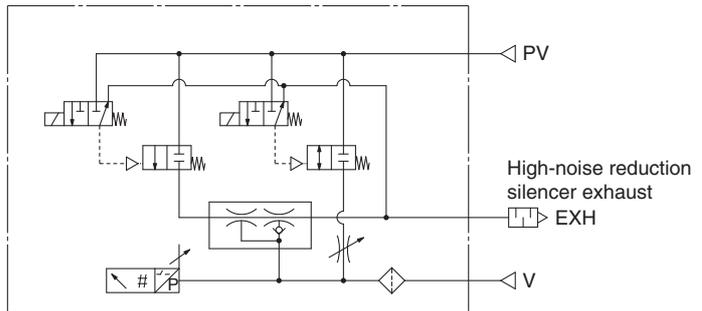

Supply valve: N.C. Release valve: N.C. (K type)

Port layout No. **6**

Single unit: ZK2C□□□□□□-□  
Manifold: ZZK2□□-A1□

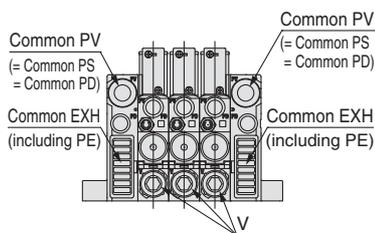


Note) The complex exhaust is a combined exhaust method of the common exhaust from the end plate and the direct exhaust from each station.

System	Ejector	
Body type	Manifold	
Exhaust type	Complex exhaust (Note)	
Application and purpose	Vacuum pressure	Common for each station
	Exhaust	Released in operating environment
	Release pressure	Same pressure as common PV

Port combination: Common PV = Common PS = Common PD

Circuit example

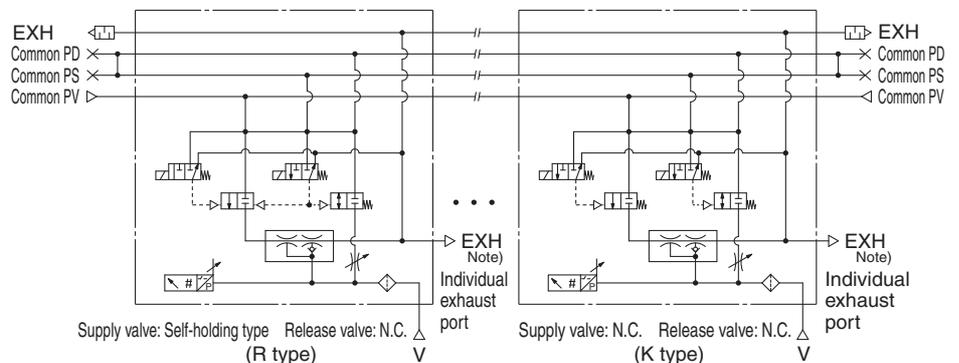

Note) For complex exhaust type, individual exhaust port is provided to each station.

Refer to page 24 for the purpose of port and the operating pressure range.


## Port Layout

\*System depends on vacuum source (vacuum pump/vacuum ejector).

### Standard Products

#### Port layout No. **7**


Single unit: ZK2F□□□□□-□  
 Manifold: ZZK2□□-A2□

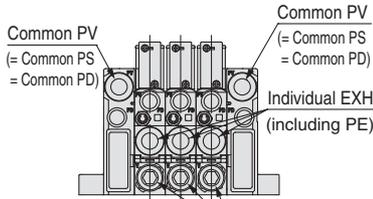

System	Ejector	
Body type	Manifold	
Exhaust type	Individual port exhaust	
Application and purpose	Vacuum pressure	Common for each station
	Exhaust	After piping, individual exhaust is necessary.
	Release pressure	Same pressure as common PV

#### Port layout No. **8**


Single unit: ZK2H□□□□□□□-□  
 Manifold: ZZK2□□-A2□

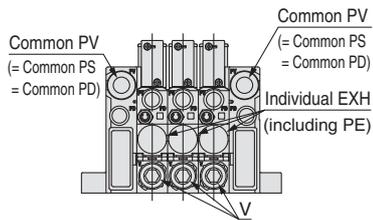

System	Ejector	
Body type	Manifold	
Exhaust type	High-noise reduction silencer exhaust	
Application and purpose	Vacuum pressure	Common for each station
	Exhaust	Released in operating environment
	Release pressure	Same pressure as common PV


Port combination: Common PV = Common PS = Common PD

Circuit example

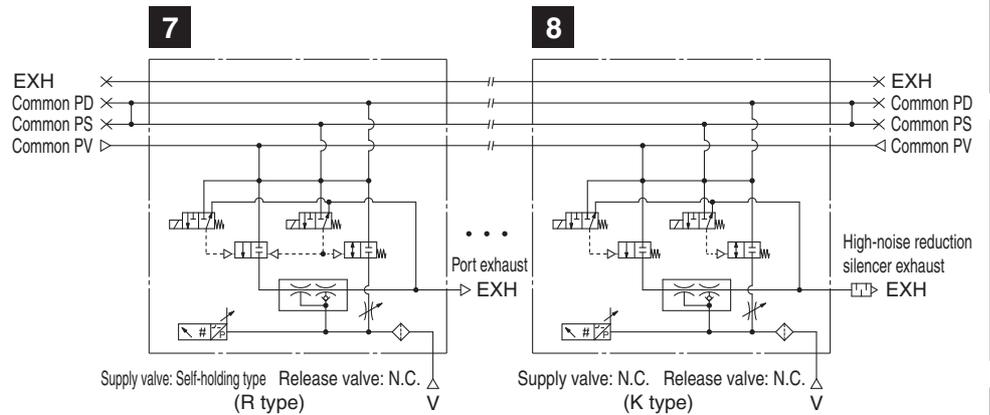

#### Port layout No. **9**


Single unit: ZK2P00□□□□□-□-**D**

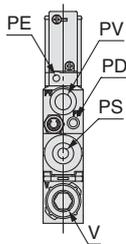

System	Vacuum pump	
Body type	Single unit	
Exhaust type	Without silencer	
Application and purpose	Vacuum pressure	—
	Exhaust	—
	Release pressure	PD pressure has to be supplied with PS pressure.

Port combination: PV ≠ PS ≠ PD

Circuit example

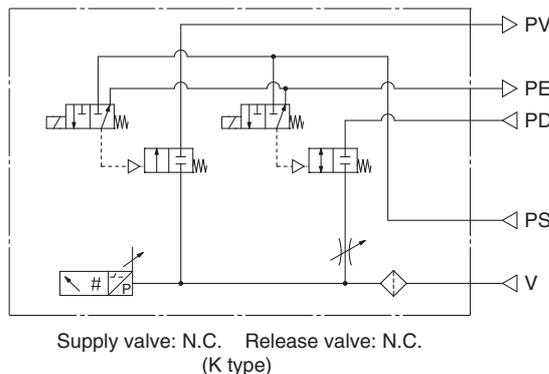

Refer to page 24 for the purpose of port and the operating pressure range.



## Port Layout

\*System depends on vacuum source (vacuum pump/vacuum ejector).

**Port layout No. 13**

**Single unit: ZK2G□□□□□□-□-D**

System	Ejector
Body type	Single unit
Exhaust type	High-noise reduction silencer exhaust
Vacuum pressure	—
Application and purpose	Exhaust
Release pressure	Released in operating environment
	Release pressure
	PD pressure has to be supplied with PV pressure.

**Option -D**

**Port combination: PV = PS ≠ PD**

**Circuit example**

Supply valve: Self-holding type Release valve: N.C. (R type)

**Port layout No. 14**

**Single unit: ZK2C□□□□□□□□-□-P**  
**Manifold: ZZK2□□□-A1□-D**

Note) The complex exhaust is a combined exhaust method of the common exhaust from the end plate and the direct exhaust from each station.

System	Ejector
Body type	Manifold
Exhaust type	Complex exhaust (Note)
Vacuum pressure	Common for each station
Application and purpose	Exhaust
Release pressure	Released in operating environment
	Release pressure
	Common PD pressure has to be supplied with common PV.

**Port combination: Common PV = Common PS ≠ Common PD**

**Circuit example**

Supply valve: Self-holding type Release valve: N.C. (R type)

Supply valve: N.C. Release valve: N.C. (K type)

Note) For complex exhaust type, individual exhaust port is provided to each station.

**Port layout No. 15**

**Single unit: ZK2F□□□□□□□□-□-P**  
**Manifold: ZZK2□□□-A2□-D**

System	Ejector
Body type	Manifold
Exhaust type	Individual port exhaust
Vacuum pressure	Common for each station
Application and purpose	Exhaust
Release pressure	After piping, individual exhaust is necessary.
	Release pressure
	Common PD pressure has to be supplied with common PV.

**Port combination: Common PV = Common PS ≠ Common PD**

**Circuit example**

Supply valve: Self-holding type Release valve: N.C. (R type)

Supply valve: N.C. Release valve: N.C. (K type)

Refer to page 24 for the purpose of port and the operating pressure range.

# ZK2 Series


## Port Layout

\*System depends on vacuum source (vacuum pump/vacuum ejector).

### Option -D

Port layout No. **16**


Single unit: ZK2H□□□□□□-□-**P**  
Manifold: ZK2□□-A2□-**D**

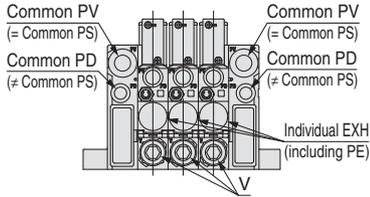

System	Ejector
Body type	Manifold
Exhaust type	High-noise reduction silencer exhaust
Application and purpose	Vacuum pressure: Common for each station
	Exhaust: Released in operating environment
	Release pressure: PD pressure has to be supplied with PV pressure.

Port combination: Common PV = Common PS ≠ Common PD


Circuit example

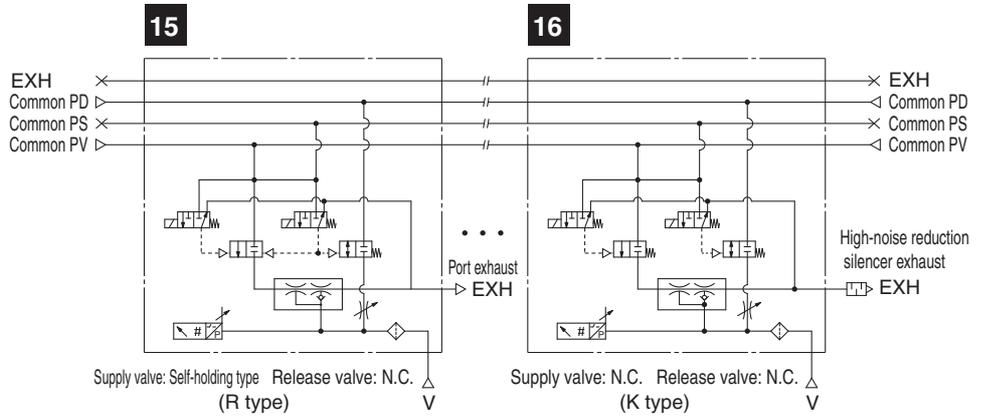

### Option -L

Port layout No. **17**

Single unit: ZK2C□□□□□□□□-□-**L**  
Manifold: ZK2□□-A1□-**L**

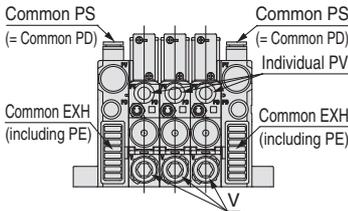


Note) The complex exhaust is a combined exhaust method of the common exhaust from the end plate and the direct exhaust from each station.

System	Ejector
Body type	Manifold
Exhaust type	Complex exhaust <sup>Note)</sup>
Application and purpose	Vacuum pressure: PV pressure can be changed per station.
	Exhaust: Released in operating environment
	Release pressure: Same pressure for common PS and common PD


Port combination: Individual PV ≠ Common PS = Common PD

Circuit example

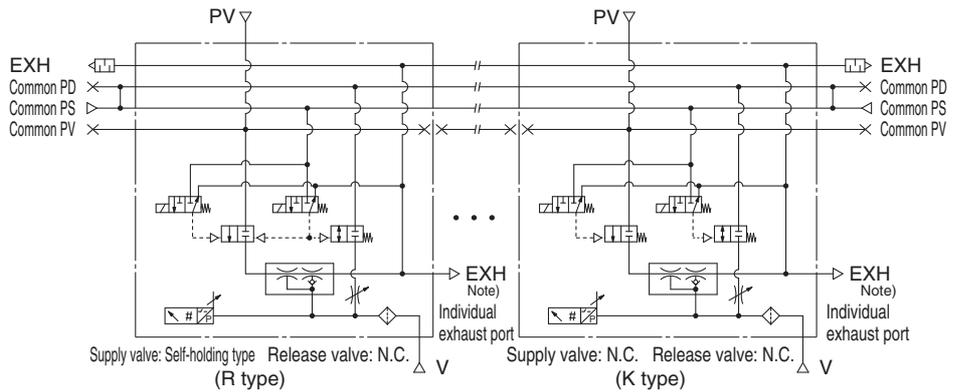

Port layout No. **18**


Single unit: ZK2F□□□□□□□□-□-**L**  
Manifold: ZK2□□-A2□-**L**

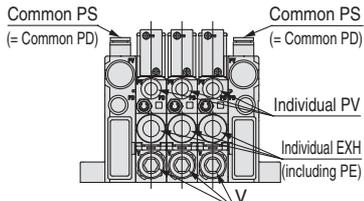

System	Ejector
Body type	Manifold
Exhaust type	Individual port exhaust
Application and purpose	Vacuum pressure: PV pressure can be changed per station.
	Exhaust: After piping, individual exhaust is necessary.
	Release pressure: Same pressure for common PS and common PD

Port combination: Individual PV ≠ Common PS = Common PD

Circuit example

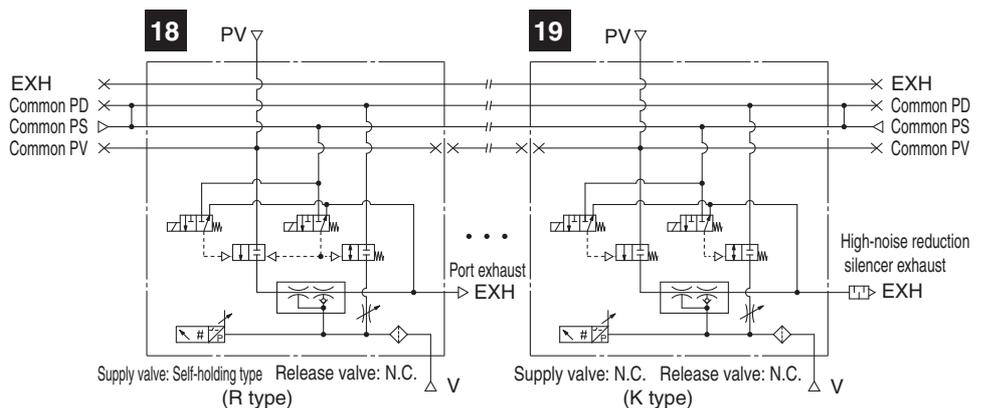


Refer to page 24 for the purpose of port and the operating pressure range.

## Port Layout

\*System depends on vacuum source (vacuum pump/vacuum ejector).

Port layout No. **19**

Single unit: ZK2H□□□□□□-□-**L**  
 Manifold: ZZK2□□-A2□-**L**

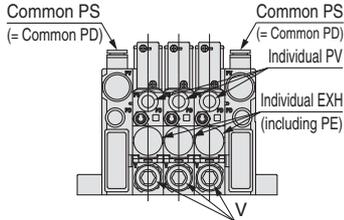


System	Ejector	
Body type	Manifold	
Exhaust type	High-noise reduction silencer exhaust	
Application and purpose	Vacuum pressure	PV pressure can be changed per station.
	Exhaust	Released in operating environment
	Release pressure	Same pressure for common PS and common PD

### Option -L

Port combination: Individual PV ≠ Common PS = Common PD

Circuit example

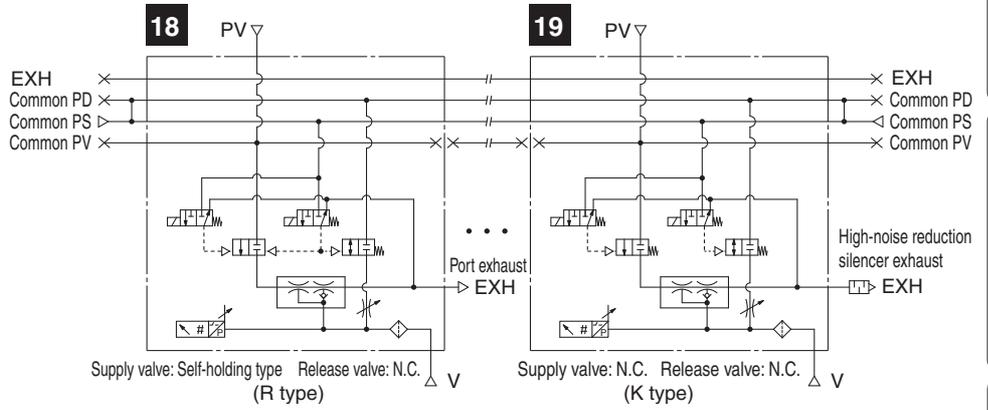

How to Order

Specifications/  
Flow Rate Characteristics

Port Layout

Construction


Exploded View of Manifold

Dimensions

Specific Product Precautions

### Application and Operating Pressure Range of Each Port

Port	Description	Vacuum Ejector System	Vacuum Pump System
PV	Air pressure supply port (Operating pressure range)	Compressed air supply for operating ejector 0.3 to 0.6 MPa*1)	—
	Vacuum pressure supply port (Operating pressure range)	—	Vacuum source (Vacuum pump) 0 to -101 kPa
PS	Pilot pressure supply port (Operating pressure range)	—	Compressed air supply for pilot valve 0.3 to 0.6 MPa
PD	Individual release pressure supply port (Operating pressure range)	Release pressure Compressed air supply for individual setting (Option) 0 to 0.6 MPa (PD ≤ PV)	0 to 0.6 MPa (PD ≤ PS)
V	Vacuum port	For connecting adsorption equipment including pad	
EXH	Exhaust port	Exhaust when ejector operates*2)	—
PE	Pilot pressure exhaust port	Exhaust when valve operates*3)	

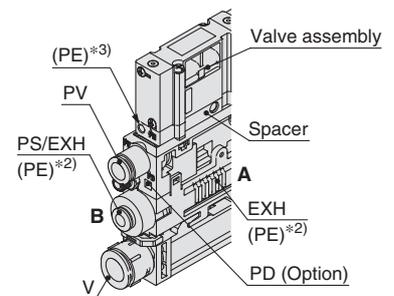


\*1) For models without valve, pressure can be 0.3 MPa or less.

\*2) For ejectors with silencer, air exhausts from A (slit on both sides). For port exhaust type, air exhausts from B.

\*3) Pilot pressure for ejectors is exhausted from the ejector and the common exhaust. Pump system exhausts air from PE port on the spacer. (Female thread type (M3) is available by option (-C) for PE port of the pump system.)


# ZK2 Series

## Construction

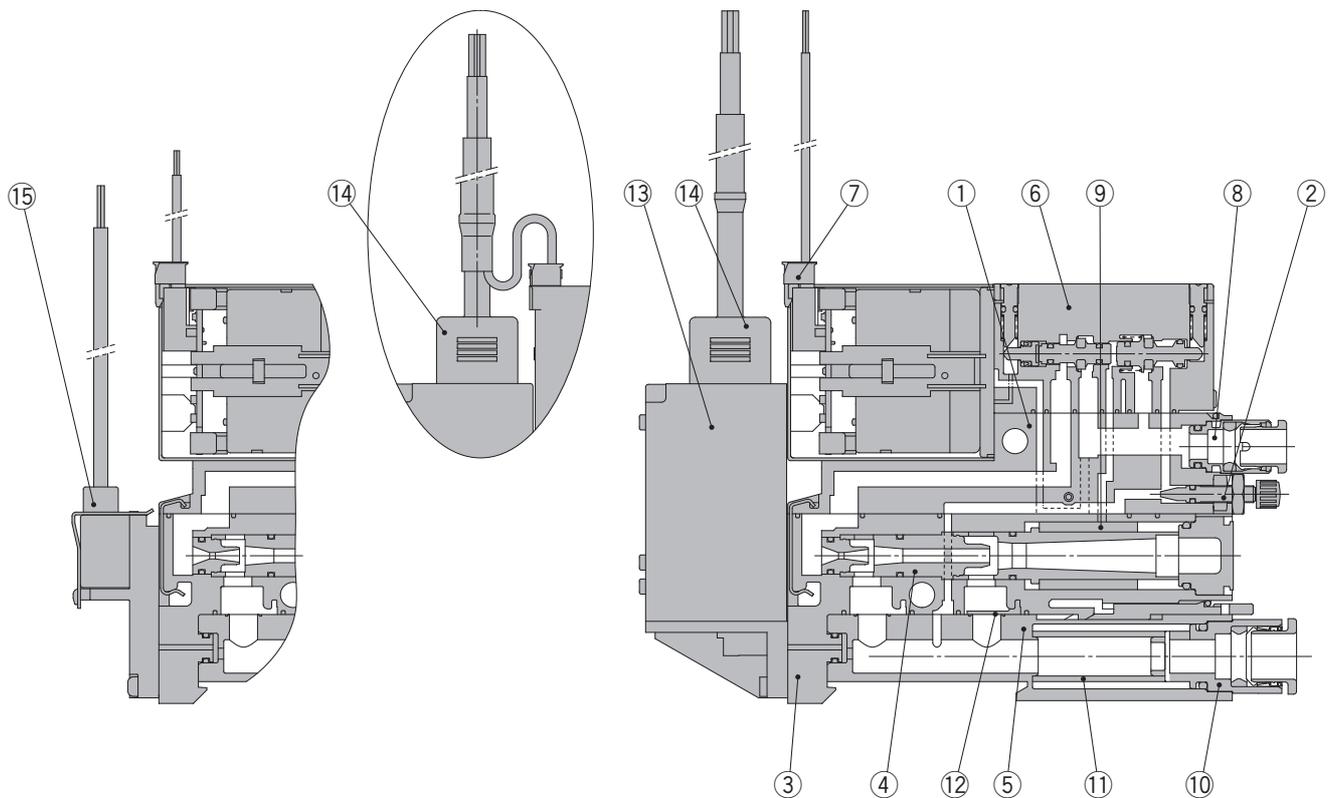

With Pressure Sensor

With Pressure Switch for Vacuum

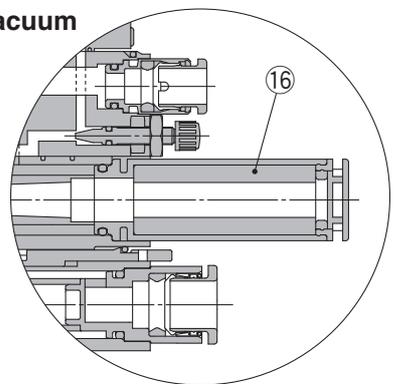

With High-noise Reduction Silencer

### Component Parts

No.	Description	Material	Note
1	Valve body assembly	Resin	HNBR, NBR and steel are also used.
2	Needle assembly	Brass	Electroless nickel plated brass, resin, steel and NBR are used.
3	Ejector body assembly	Resin	HNBR, NBR and steel are also used.
4	Ejector assembly	Resin	NBR is also used.
5	Filter case assembly	Resin	Case body: Polycarbonate (Refer to Specific Product Precautions on page 40.)

### Replacement Parts

No.	Description	Note
6	Valve assembly	
7	Connector assembly	Connector for solenoid valve 3 wire (For double), 2 wire (For single)
8	One-touch fitting assembly	Standard supply (PV) port: Ø 6, Ø 1/4"
9	Sound absorbing material	10 pcs. per set
10	Vacuum port adapter assembly	With One-touch fitting and filter element (Case material: Polycarbonate)
11	Filter element	Nominal filtration rating: 30 µm, 10 pcs. per set
12	Check valve	For replacement or addition for manifold exhaust interference prevention (10 pcs. per set)
13	Vacuum pressure switch assembly	With 2 screws and 1 gasket
14	Lead wire with connector	
15	Pressure sensor assembly	With 2 screws and 1 gasket
16	High-noise reduction silencer case assembly	With sound absorbing material (Part number: ZK2-SE3-6-A, 5 pcs. per set)

## Replacement Parts/How to Order

### ⑥ Valve assembly

ZK2 - VA **A** **K** **5** **L** - A

1 2 3 4

#### ① Applicable system

<b>A</b>	For ejector system
<b>P</b>	For vacuum pump system

#### ② Valve type

<b>K</b>	Supply valve N.C., Release valve N.C.
<b>R</b>	Supply valve, self-holding type (Linked to release valve)
<b>J</b>	Supply valve only (Single)

#### ③ Rated voltage

<b>5</b>	24 VDC
<b>6</b>	12 VDC

#### ④ Lead wire entry direction

<b>C</b>	For plug-in (Manifold common wiring)
<b>L</b>	L-type plug connector with lead wire (Individual wiring)
<b>LO</b>	L-type plug connector, without connector

Select the ZK2-VAAK□□□-A for a switch with energy saving function.  
This assembly does not include special cable assembly for a switch with energy saving function.

### ⑦ Connector assembly

ZK2 - LV **W** □ - A


#### Applicable valve type

<b>W</b>	Valve type K/R (With supply valve and release valve)
<b>S</b>	Valve type J (Supply valve only)


#### Lead wire length

—	300 mm
<b>6</b>	600 mm
<b>10</b>	1000 mm
<b>20</b>	2000 mm
<b>30</b>	3000 mm

#### For single

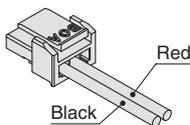

#### For double

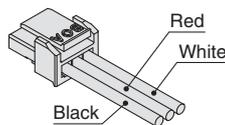

### ⑧ One-touch fitting assembly

(Purchasing order is available in units of 10 pieces.)

KJH **04** - C2

#### Port size

<b>04</b>	Ø 4 One-touch fitting (Straight)	Metric size
<b>06</b>	Ø 6 One-touch fitting (Straight)	Metric size
<b>03</b>	Ø 5/32" One-touch fitting (Straight)	Inch size
<b>07</b>	Ø 1/4" One-touch fitting (Straight)	Inch size

### ⑨ Sound absorbing material (10 pcs. per set)

ZK2 - SE1 - **1** - A

#### Sound absorbing material holes diameter

<b>1</b>	300 µm
----------	--------

### ⑩ Vacuum port adapter assembly

ZK2 - VA1S **8** - A

#### One-touch fitting size

<b>6</b>	Ø 6 One-touch fitting	Metric size
<b>8</b>	Ø 8 One-touch fitting	Metric size
<b>7</b>	Ø 1/4" One-touch fitting	Inch size
<b>9</b>	Ø 5/16" One-touch fitting	Inch size

### ⑪ Filter element (10 pcs. per set)

ZK2 - FE1 - **3** - A

#### Nominal filtration rating

<b>3</b>	30 µm
----------	-------

### ⑫ Check valve <sup>Note)</sup> (10 pcs. per set)

ZK2 - CV - A

Note) When mounting a check valve additionally, the workpiece may not be removed unless vacuum release pressure is applied.

### ⑬ Pressure switch for vacuum assembly

ZK2 - ZS **E** **A** **M** **G** □ - A

1 2 3 4 5

#### ① Rated pressure range and function

<b>E</b>	0 to -101 kPa	Pressure switch for vacuum	Open collector 2 outputs
<b>F</b>	-100 to 100 kPa		
<b>V</b>	-100 to 100 kPa	Pressure switch with energy saving function	Open collector 1 output


#### ② Output specifications

<b>A</b>	NPN
<b>B</b>	PNP

#### ③ Unit specifications

—	Unit selection function
<b>M</b>	SI unit only <sup>Note 1)</sup>

Note 1) Fixed unit: kPa

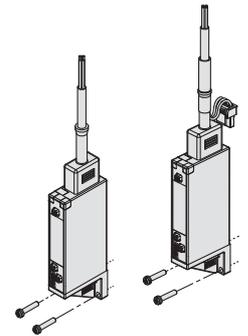

#### ④ Lead wire with connector

—	None	
<b>G</b>	With lead wire	When ① is E or F... For pressure switch for vacuum, Lead wire with connector (Length 2 m)
		When ① is V... For switch with energy saving function, Lead wire with connector (Length 2 m)

#### ⑤ Mounting <sup>Note)</sup>

—	Mounted to the single unit
<b>L</b>	Mounted to the manifold

The screw length mounted to the ejector is different.  
Note) When ordering an ejector without valve, select "—" for mounting.

### ⑭ Lead wire with connector for pressure switch for vacuum

(When individual lead wire is necessary, order with the port number below.)

#### • Lead wire with connector for pressure switch for vacuum

ZS - 39 - 5G

#### • Lead wire with connector for switch with energy saving function

ZK2 - LW **A** 20 - A

#### Output specifications

<b>A</b>	NPN open collector
<b>B</b>	PNP open collector

### ⑮ Pressure sensor assembly

ZK2 - PS **1** □ - A

#### Rated pressure range and specifications


<b>1</b>	0 to -101 kPa, Output: 1 to 5 V, Accuracy: ±2 % F.S. or less
<b>3</b>	-100 to 100 kPa, Output: 1 to 5 V, Accuracy: ±2 % F.S. or less

#### Mounting <sup>Note)</sup>

—	Mounted to the single unit
<b>L</b>	Mounted to the manifold

The screw length mounted to the ejector is different.

Note) When ordering an ejector without valve, select "—" for mounting.



### ⑯ High-noise reduction silencer case assembly

ZK2 - SC3 - **4** - A

#### Exhaust port size

<b>4</b>	Ø 4	For nozzle size 07, 10
<b>6</b>	Ø 6	For nozzle size 12, 15

How to Order

Specifications/  
Flow Rate Characteristics

Port Layout


Construction

Exploded View of Manifold

Dimensions

Specific Product Precautions



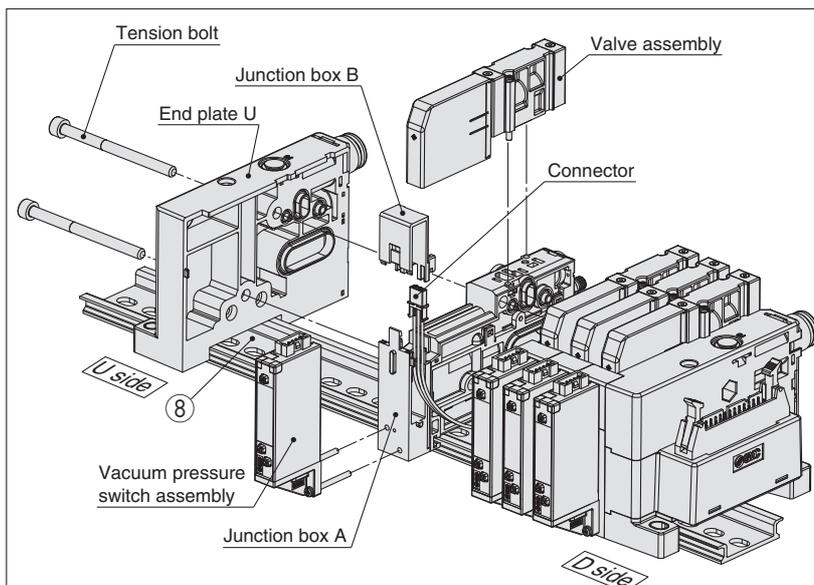

## ■ How to increase manifold stations

[To increase the number of stations from odd number (1, 3, 5, 7, 9) in common wiring type to even number (2, 4, 6, 8, 10)]


(Common wiring of odd number station has a vacant connector for one station. Easy to add a station.)

- 1) Remove the tension bolt.
- 2) Remove the end plate U.
- 3) Remove the valve assembly of a single unit for extra station(s) for manifold.
- 4) Remove the switch assembly if it is present. (Be careful not to drop the O-ring. Refer to **Fig.1**)
- 5) Remove the junction box B (top) using a precision screwdriver. (Refer to **Fig.2**)
- 6) Mount the extra connector to the junction box B. (Refer to **Fig.3**) (Engage the recess of the connector and the protrusion of the junction box B. (Refer to **Fig.3-A**))
- 7) Mount a single unit for extra station(s) for manifold to the end surface of U side. (Do not let the gasket or lead wire get caught.)
- 8) Mount the end plate U with the appropriate length of tension bolts for the number of stations required. (Tightening torque: 0.75 N·m.)
- 9) Mount the junction box B to the junction box A.
- 10) Assemble the valve assembly. (Tightening torque: 0.15 N·m)
- 11) For products with a switch, mount the switch assembly. (Be careful not to drop the O-ring. Tightening torque: 0.08 to 0.10 N·m)

[To increase the number of stations from even number to odd number, or increase two stations or more]

- 1) Remove the valve assembly for all stations. (Single unit for extra station is also removed.)
- 2) Remove the switch assembly if it is present. (Be careful not to drop the O-ring. Refer to **Fig.1**)
- 3) Remove the junction box B (top) for all stations using a precision screwdriver. (Refer to **Fig.2**) (Remove the junction box B from D side.)
- 4) Remove all connectors mounted to the junction box B. (Be careful not to break the connector clip.)
- 5) Remove the tension bolt.
- 6) Remove the end plate D assembly.
- 7) Remove the connector housing assembly from the end plate D assembly. (Refer to **Fig.4**)
- 8) Mount the connector housing assembly for extra station(s) to the end plate D assembly. (Refer to **Fig.4**) (Insert two clips of the housing mounting surface to the square holes of the end plate, and slide the connector housing assembly.)
- 9) Remove the end plate U. (Be careful not to drop the gasket.)
- 10) Mount a single unit for extra station(s) for manifold to the end surface of U side. Do not let the gasket get caught.
- 11) Mount the end plate U and D with the appropriate length of tension bolts for the number of stations required. (Tightening torque: 0.75 N·m.)
- 12) Mount the connector for all stations to the junction box B. (Refer to **Fig.3**) (Engage the recess of the connector and the protrusion of the junction box B. (Refer to **Fig.3-A**))
- 13) Mount the junction box A to the junction box B. Push the wires down the side and mount the junction box A to the junction box B following a decreasing mark tube numbers from U side. (Do not let the lead wire get caught.)
- 14) Assemble the valve assembly. (Tightening torque: 0.15 N·m)
- 15) For products with a switch, mount the switch assembly. (Be careful not to drop the O-ring. Tightening torque: 0.08 to 0.10 N·m)

\*When adding a pump system, the pump spacer is required separately.

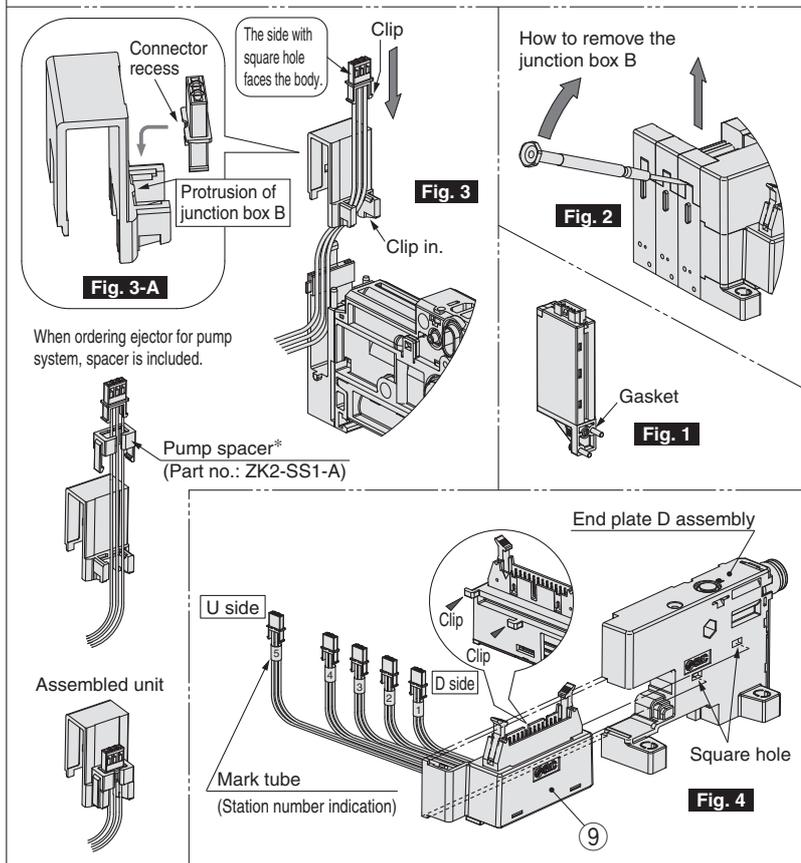

## ⑨ Connector housing assembly

**ZK2-CH 2 04 - A**

### ● Applicable stations

02	For 2 stations manifold
04	For 4 stations manifold
06	For 6 stations manifold
08	For 8 stations manifold
10	For 10 stations manifold


### ● Connector type

1	D sub-connector (25 pins)
2	Flat ribbon cable (26 pins)

## ■ Plug (For One-touch fitting) (Purchasing order is available in units of 10 pieces.)

Mounted onto ports which are not used (PV, PS, PD, etc.)

**KQ2P-06**

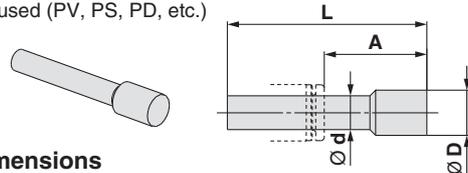

### ● Model and dimensions

Symbol	Applicable size Ø d	A	L	Ø D	Weight [g]	Note
06	Ø 6	18	35	8	1	White
08	Ø 8	20.5	39	10	2	White
07	Ø 1/4"	18	35	8.5	1	Orange
09	Ø 5/16"	20.5	39	10	2	Orange






# ZK2 Series

## Dimensions: Single Unit

ZK2<sup>A</sup><sub>B</sub>□<sup>K</sup><sub>R</sub>□NL2-□

Ejector system, Single unit, With supply valve/release valve, Without pressure sensor/switch

- \*1 For silencer exhaust type, air is exhausted from the slit on both sides. (Do not cover both sides. Release at least one side.)
- \*2 For port exhaust type, air is exhausted from the One-touch fitting.
- \*3 Pilot pressure exhaust is common with ejector exhaust.
- \*5 Nozzle size 12 and 15 have exhaust port.
- \*6 Refer to page 41 for the part number and maintenance of the high-noise reduction silencer case assembly.

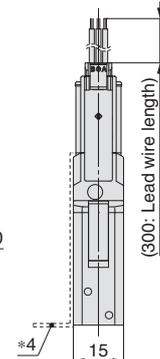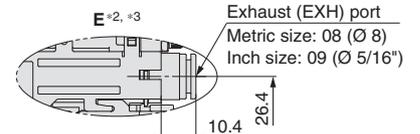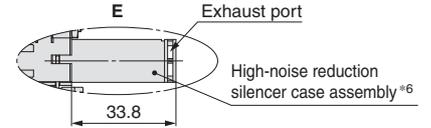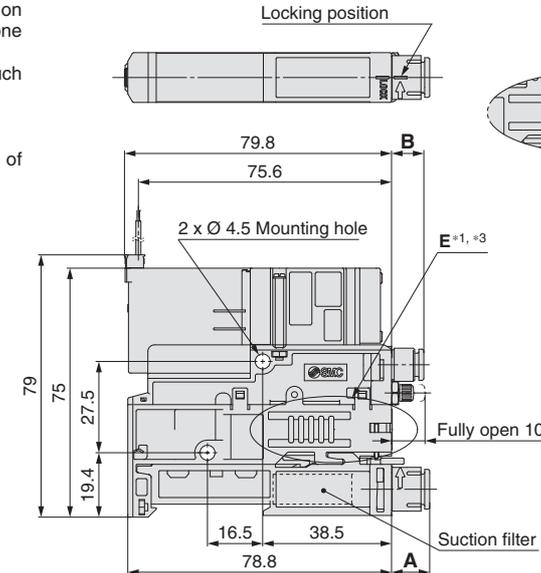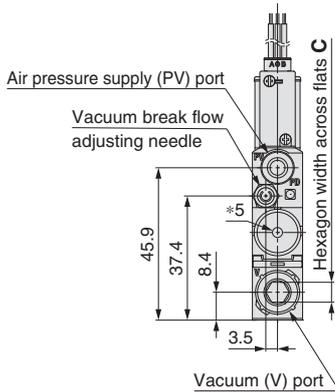

\*4 Refer to page 32 for dimensions with a mounting bracket.




PV port type			B
Metric size	06	Ø 6	9.7
Inch size	07	Ø 1/4"	12.3

V port type		A	C
Metric size	06	Ø 6	8.25
	08	Ø 8	11.4
Inch size	07	Ø 1/4"	10.8
	09	Ø 5/16"	11.4

ZK2P00<sup>K</sup><sub>R</sub>□NL2-□

Vacuum pump system, Single unit, With supply valve/release valve, Without pressure sensor/switch

PE port female thread specification

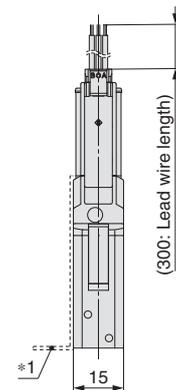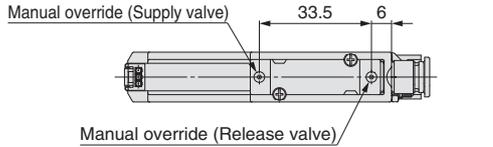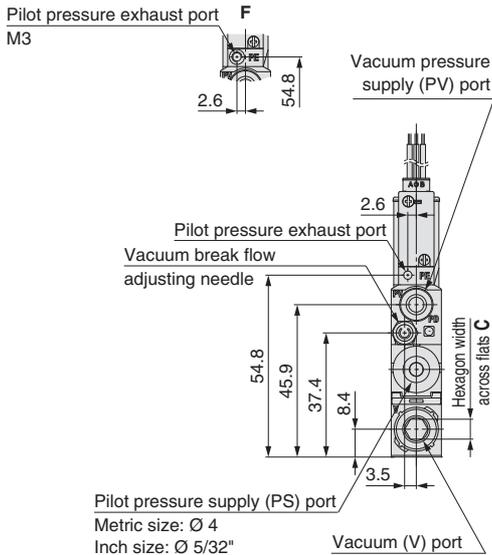

\*1 Refer to page 32 for dimensions with a mounting bracket.


PV port type			B
Metric size	06	Ø 6	9.7
Inch size	07	Ø 1/4"	12.3

V port type		A	C
Metric size	06	Ø 6	8.25
	08	Ø 8	11.4
Inch size	07	Ø 1/4"	10.8
	09	Ø 5/16"	11.4


## Dimensions: Single Unit

ZK2<sup>A</sup><sub>B</sub>□J□NL2-□



Ejector system, Single unit, With supply valve, Without pressure sensor/switch

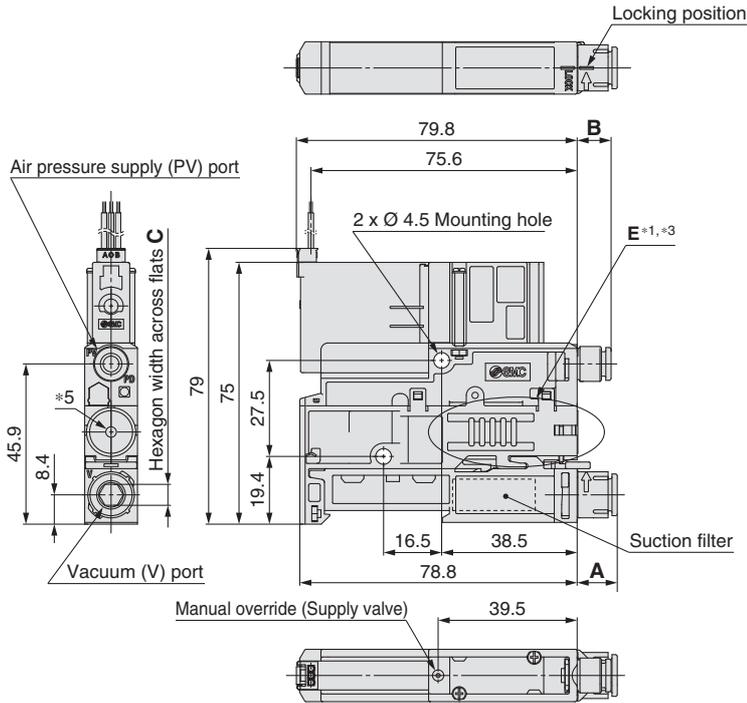

For high-noise reduction silencer exhaust

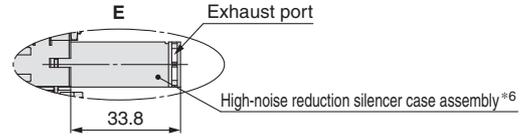

For port exhaust

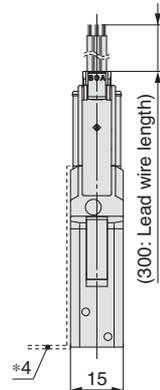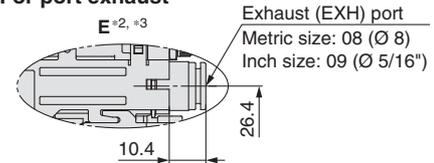

- \*1 For silencer exhaust type, air is exhausted from the slit on both sides. (Do not cover both sides. Release at least one side.)
- \*2 For port exhaust type, air is exhausted from the One-touch fitting.
- \*3 Pilot pressure exhaust is common with ejector exhaust.
- \*5 Nozzle size 12 and 15 have exhaust port.
- \*6 Refer to page 41 for the part number and maintenance of the high-noise reduction silencer case assembly.

PV port type			B
Metric size	06	Ø 6	9.7
Inch size	07	Ø 1/4"	12.3


  

V port type		A	C
Metric size	06	Ø 6	8.25
	08	Ø 8	11.4
Inch size	07	Ø 1/4"	10.8
	09	Ø 5/16"	11.4


\*4 Refer to page 32 for dimensions with a mounting bracket.

ZK2<sup>A</sup><sub>B</sub>□N0NN-□



Ejector system, Single unit, Without valve, Without pressure sensor/switch

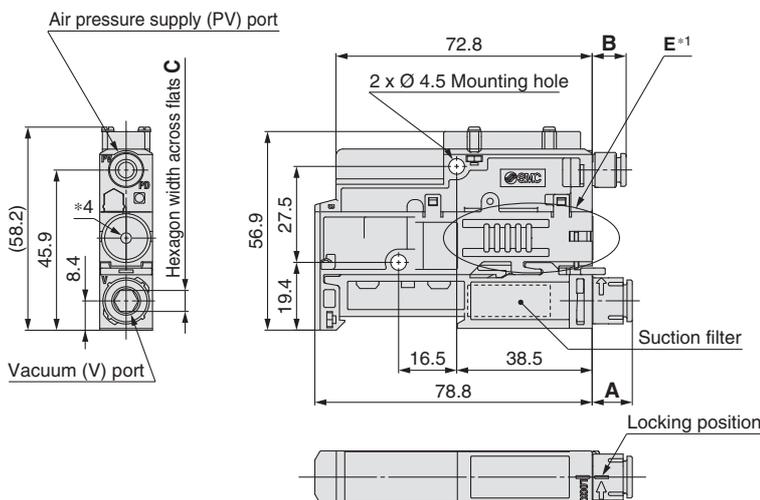

For high-noise reduction silencer exhaust

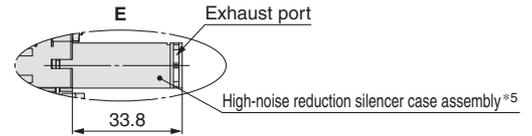

For port exhaust

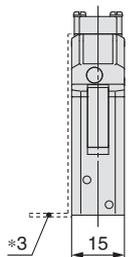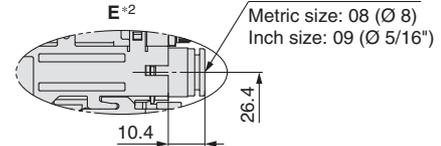

- \*1 For silencer exhaust type, air is exhausted from the slit on both sides. (Do not cover both sides. Release at least one side.)
- \*2 For port exhaust type, air is exhausted from the One-touch fitting.
- \*4 Nozzle size 12 and 15 have exhaust port.
- \*5 Refer to page 41 for the part number and maintenance of the high-noise reduction silencer case assembly.

PV port type			B
Metric size	06	Ø 6	9.7
Inch size	07	Ø 1/4"	12.3

V port type		A	C
Metric size	06	Ø 6	8.25
	08	Ø 8	11.4
Inch size	07	Ø 1/4"	10.8
	09	Ø 5/16"	11.4


\*3 Refer to page 32 for dimensions with a mounting bracket.

# ZK2 Series

## Dimensions: Single Unit


ZK2<sub>B</sub><sup>A</sup>□<sub>R</sub>□<sub>T</sub><sup>P</sup>L-□

Ejector system, Single unit, With supply valve/release valve, With pressure sensor

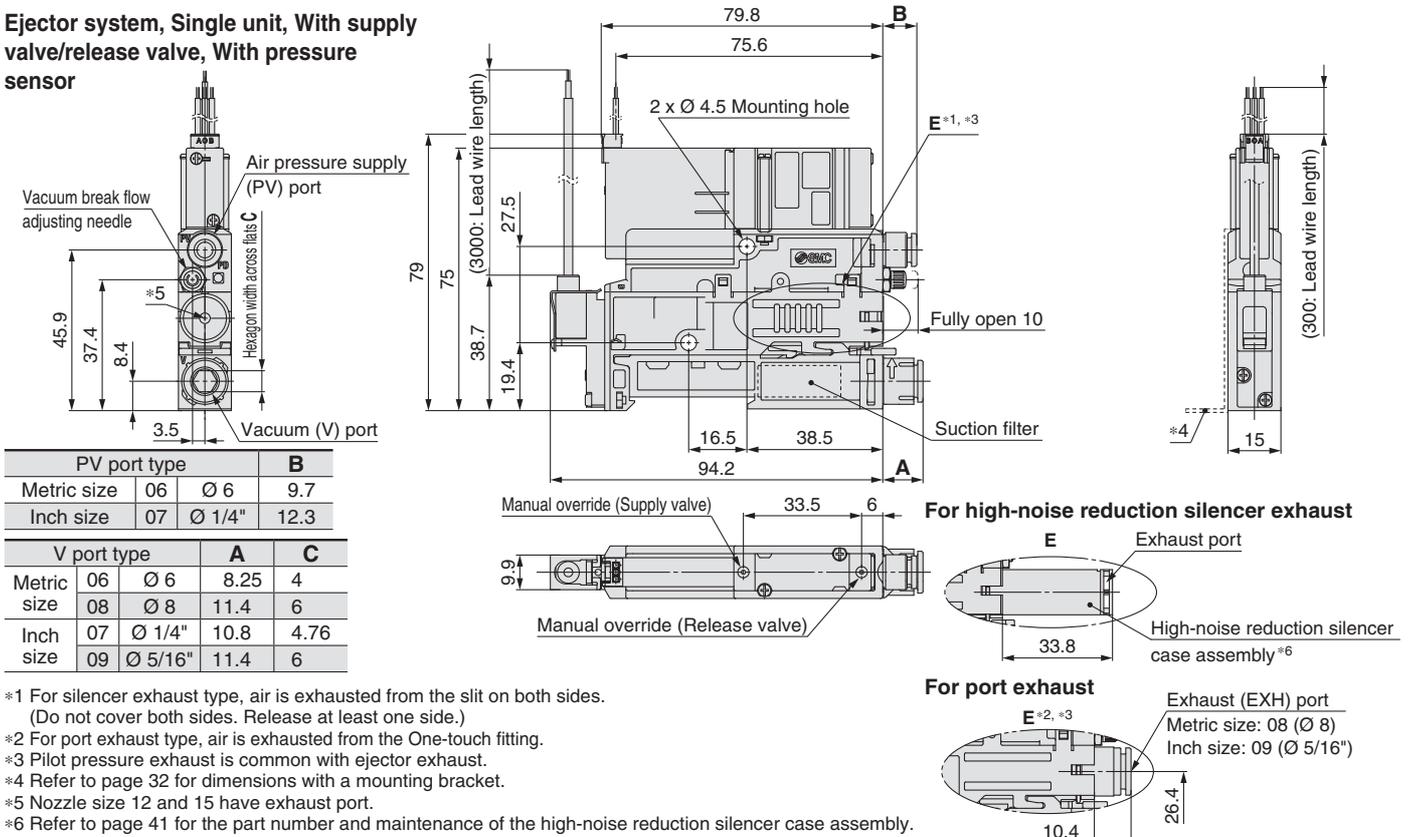



ZK2<sub>B</sub><sup>A</sup>□<sub>R</sub>□□L-□  
A to J

Ejector system, Single unit, With supply valve/release valve, With pressure switch

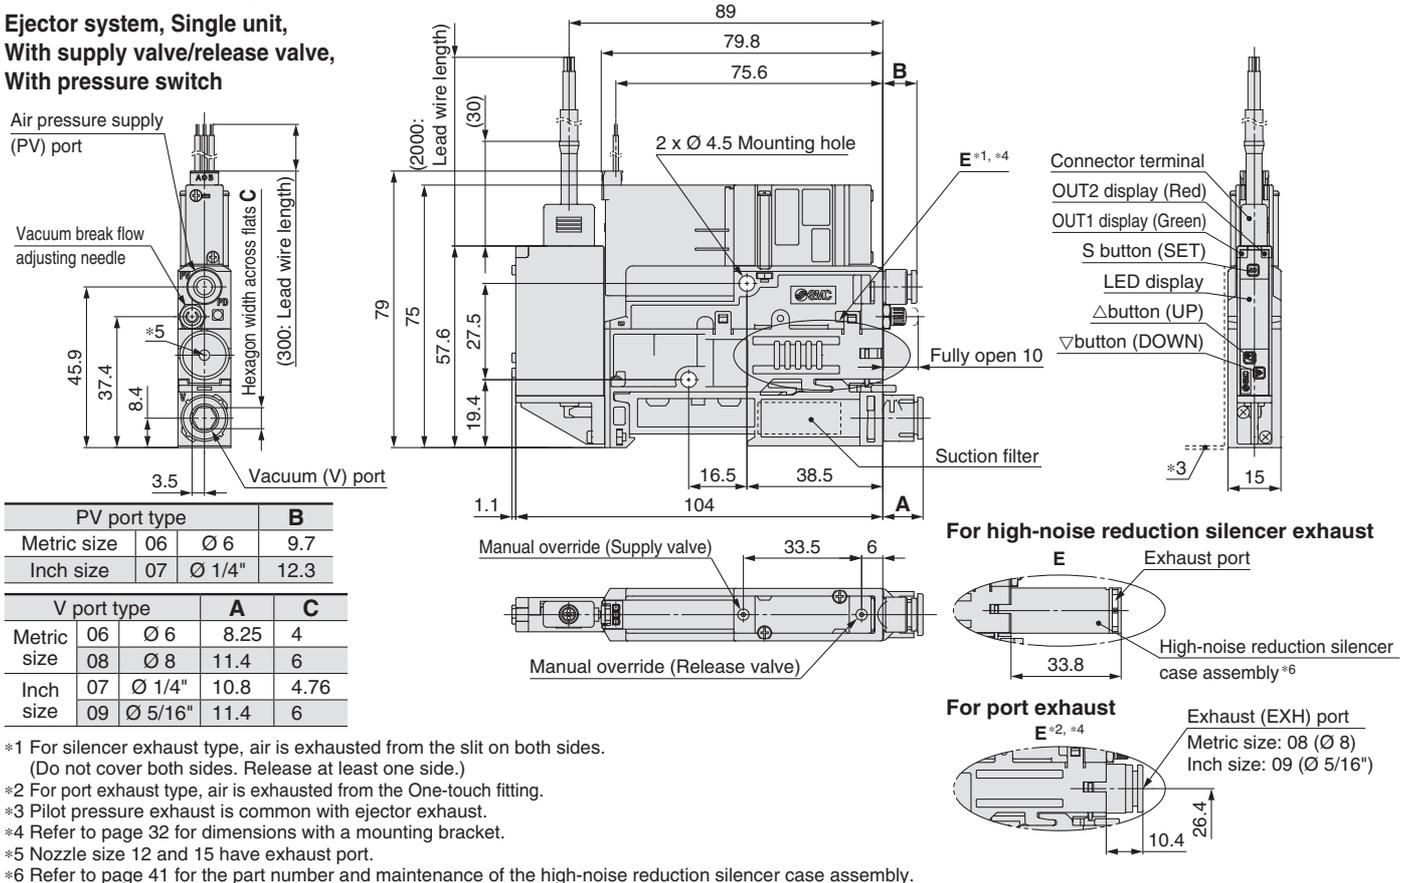

**Dimensions: Single Unit**

With bracket

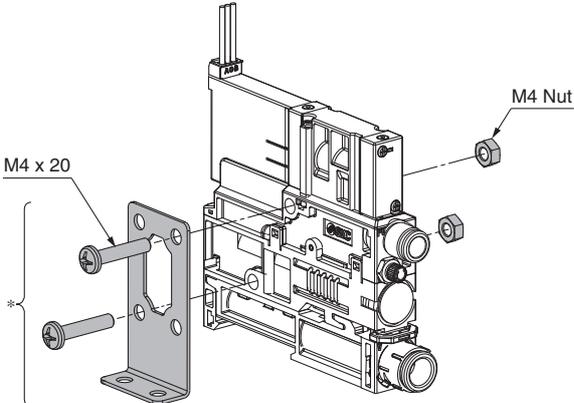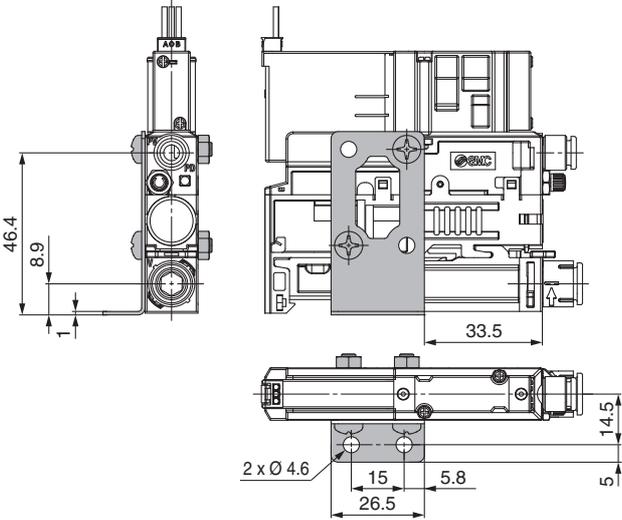

\*Mounting bracket for single unit (Option), [Nuts and bolts are included.]  
Part number: ZK2-BK1-A


How to Order
Specifications/ Flow Rate Characteristics
Port Layout
Construction
Exploded View of Manifold
Dimensions
Specific Product Precautions

# ZK2 Series

## Dimensions: Manifold Individual Wiring

ZK2□-P<sub>A</sub>□L

Ejector system, Vacuum pump system, Individual wiring manifold, With supply valve/release valve, Without pressure sensor/switch

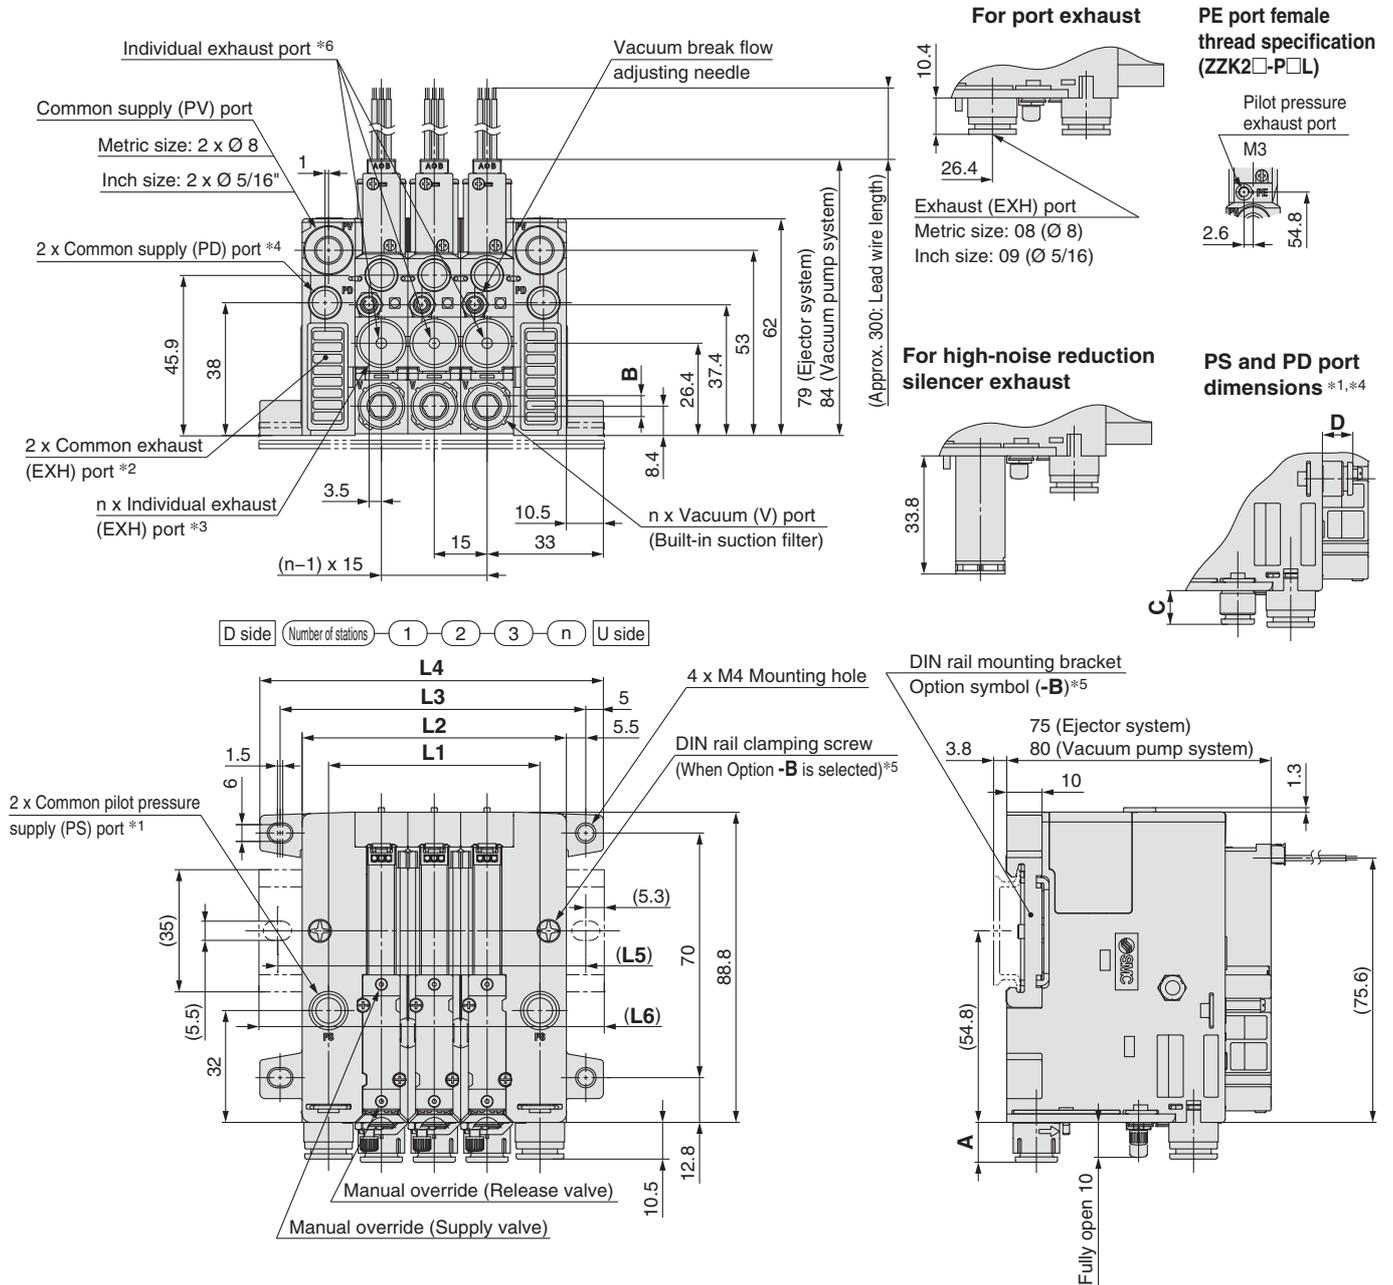

Port type	A	Hexagon width across flats B	C	D
Metric size	06	8.3	4	9.7
	08	11.4	6	—
Inch size	07	10.8	4.76	12.3
	09	11.4	6	—

Number of stations	[mm]									
	1	2	3	4	5	6	7	8	9	10
L1	30	45	60	75	90	105	120	135	150	165
L2	45	60	75	90	105	120	135	150	165	180
L3	56.8	71.8	86.8	101.8	116.8	131.8	146.8	161.8	176.8	191.8
L4	67.5	82.5	97.5	112.5	127.5	142.5	157.5	172.5	187.5	202.5
L5	62.5	75	87.5	112.5	125	137.5	150	162.5	187.5	200
L6	73	85.5	98	123	135.5	148	160.5	173	198	210.5

\*1 Common pilot pressure supply port is available for vacuum pump system or option L (Manifold individual supply specification). (mm: Ø 6 inch: Ø 1/4")

\*2 Pump system with individual exhaust port type does not have exhaust port.

\*3 When individual exhaust port type is selected (Body type: F)

\*4 Only when common PD port type option (Symbol: -D) is selected (mm: Ø 6 inch: Ø 1/4")


\*5 To fix the manifold to DIN rail, select an option for the manifold model number.

\*6 For complex exhaust type, air is also exhausted from the individual exhaust port of each station in addition to the common exhaust. (Ejector system)

## Dimensions: Manifold D-sub Connector

**ZZK2□-P<sub>A</sub>□F**

Ejector system, Vacuum pump system, Common wiring manifold, With supply valve/release valve, With pressure sensor

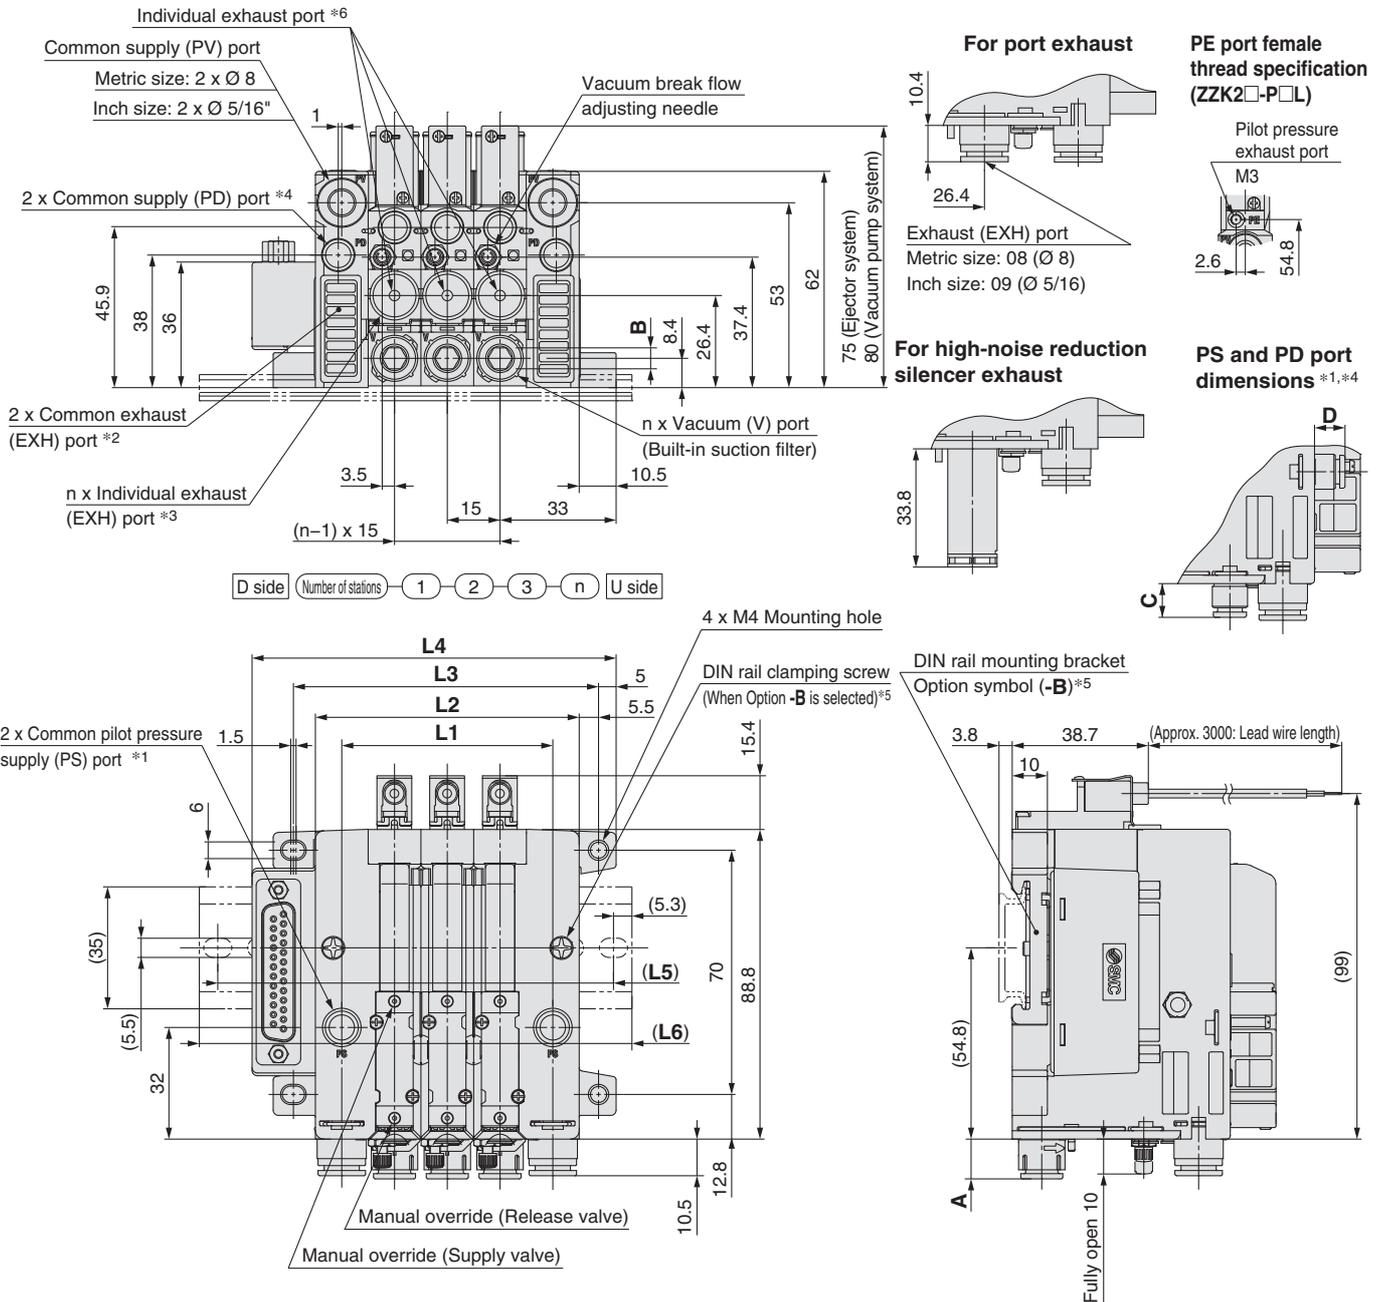

Port type	A	Hexagon width across flats B	C	D
Metric size 06	8.3	4	9.7	8.7
Metric size 08	11.4	6	—	—
Inch size 07	10.8	4.76	12.3	11.3
Inch size 09	11.4	6	—	—

Number of stations	[mm]									
	1	2	3	4	5	6	7	8	9	10
<b>L1</b>	30	45	60	75	90	105	120	135	150	165
<b>L2</b>	45	60	75	90	105	120	135	150	165	180
<b>L3</b>	56.8	71.8	86.8	101.8	116.8	131.8	146.8	161.8	176.8	191.8
<b>L4</b>	73.5	88.5	103.5	118.5	133.5	148.5	163.5	178.5	193.5	208.5
<b>L5</b>	75	100	112.5	125	137.5	150	175	187.5	200	212.5
<b>L6</b>	85.5	110.5	123	135.5	148	160.5	185.5	198	210.5	223

\*1 Common pilot pressure supply port is available for vacuum pump system or option L (Manifold individual supply specification). (mm: Ø 6 inch: Ø 1/4")  
 \*2 Pump system with individual exhaust port type does not have exhaust port.  
 \*3 When individual exhaust port type is selected (Body type: F)  
 \*4 Only when common PD port type option (Symbol: -D) is selected (mm: Ø 6 inch: Ø 1/4")  
 \*5 To fix the manifold to DIN rail, select an option for the manifold model number.  
 \*6 For complex exhaust type, air is also exhausted from the individual exhaust port of each station in addition to the common exhaust. (Ejector system)

How to Order

Specifications/  
Flow Rate Characteristics

Port Layout

Construction

Exploded View of Manifold

Dimensions


Specific Product Precautions

# ZK2 Series

## Dimensions: Manifold Flat Ribbon Cable

ZZK2□-P<sub>A</sub>□P

Ejector system, Common wiring manifold, With supply valve/release valve, With pressure switch

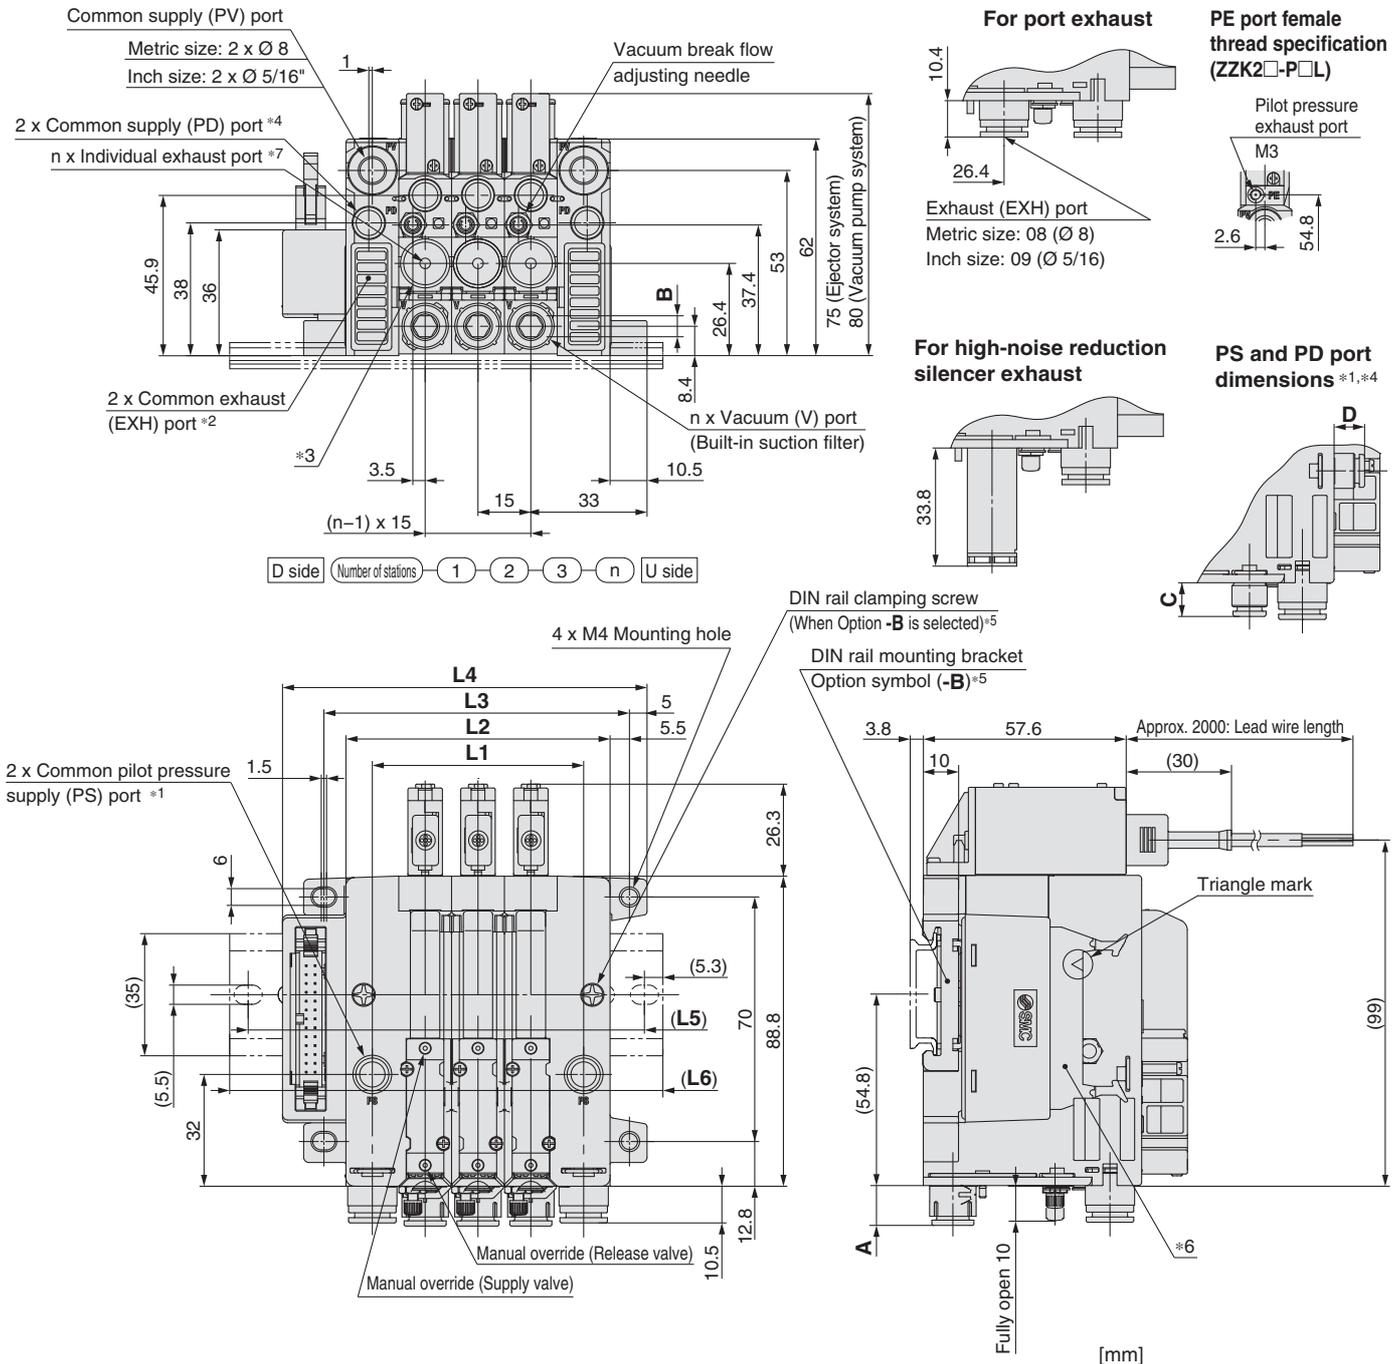


Port type	A	Hexagon width across flats B	C	D
Metric size 06	8.3	4	9.7	8.7
Metric size 08	11.4	6	—	—
Inch size 07	10.8	4.76	12.3	11.3
Inch size 09	11.4	6	—	—

Number of stations	Number of stations									
	1	2	3	4	5	6	7	8	9	10
L1	30	45	60	75	90	105	120	135	150	165
L2	45	60	75	90	105	120	135	150	165	180
L3	56.8	71.8	86.8	101.8	116.8	131.8	146.8	161.8	176.8	191.8
L4	73.5	88.5	103.5	118.5	133.5	148.5	163.5	178.5	193.5	208.5
L5	75	100	112.5	125	137.5	150	175	187.5	200	212.5
L6	85.5	110.5	123	135.5	148	160.5	185.5	198	210.5	223

- \*1 Common pilot pressure supply port is available for vacuum pump system or option L (Manifold individual supply specification). (mm: Ø 6 inch: Ø 1/4")
- \*2 Pump system with individual exhaust port type does not have exhaust port.
- \*3 When individual exhaust port type is selected (Body type: F)
- \*4 Only when common PD port type option (Symbol: -D) is selected (mm: Ø 6 inch: Ø 1/4")
- \*5 To fix the manifold to DIN rail, select an option for the manifold model number.
- \*6 Applicable connector: Connector for flat ribbon cable (26P)(MIL-C-83503 compliant)
- \*7 For complex exhaust type, air is also exhausted from the individual exhaust port of each station in addition to the common exhaust. (Ejector system)


## Electrical Wiring Specifications

### D-sub Connector

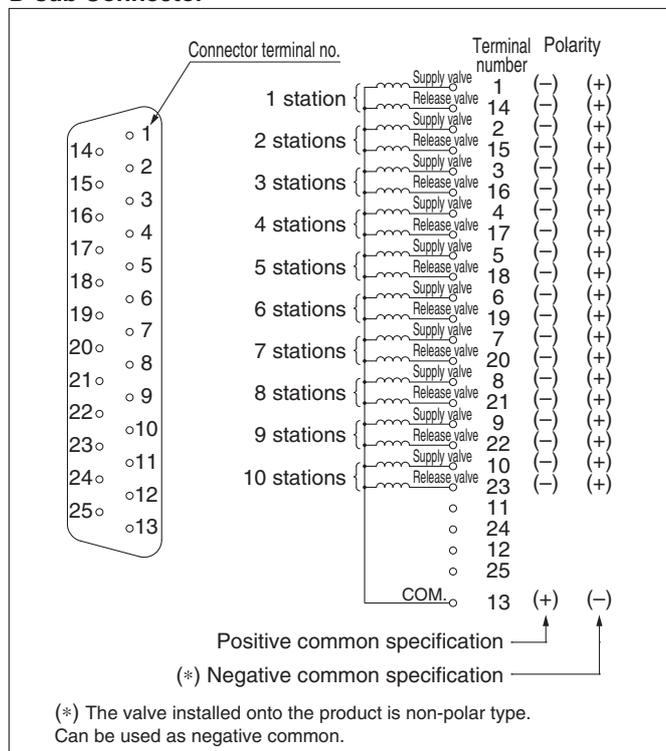







A D-sub connector (25P) conforming to MIL standards is used.

### Flat Ribbon Cable Connector

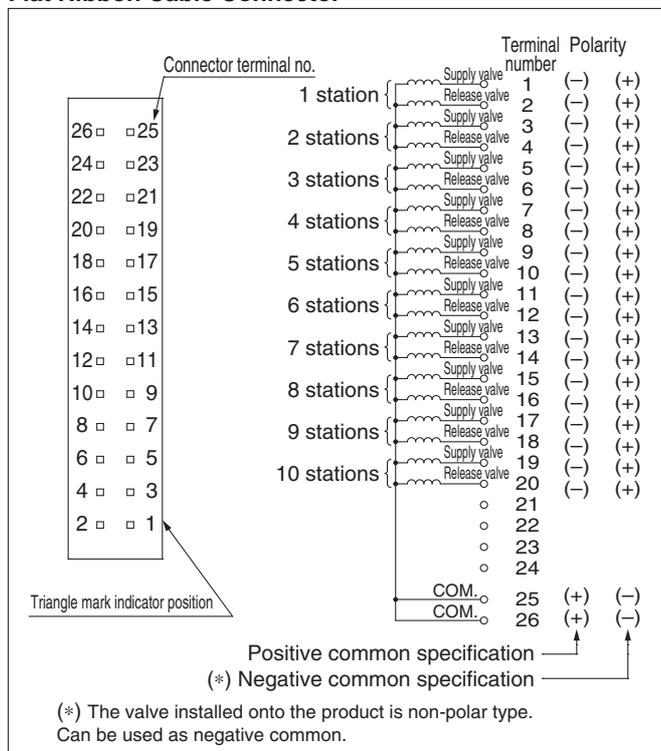

A flat ribbon cable connector (26P) conforming to MIL standards is used.

## Optional Specifications/Functions/Applications

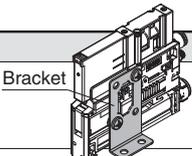Symbol	Type	Function/Application
B	With one bracket for mounting a single unit (Mounting screw is attached.) 	• Use when a single unit is mounted to the floor in an upright position is requested. (When ordering only bracket, refer to page 32.)
C	Pump system PE port female thread specification 	• Use for pilot pressure exhaust piping (Standard pump system is released to the atmosphere.)
D	With individual release pressure supply (PD) port 	• Use when supply pressure for vacuum release which pressure is different from the ejector supply pressure is requested.
J	Vacuum break flow adjusting needle Round lock nut type 	• Thicker than standard hexagon type. More suitable for hand tightening. • Round lock nut improves operability when manifold, pump system, or exhaust port type is used.
K	Vacuum break flow adjusting needle Screwdriver operation type 	• Slotted type improves fine adjustment performance when manifold, pump system, or exhaust port type is used.
L	Manifold individual supply specification 	• Adjust the supply pressure individually for manifold in order to adjust the vacuum pressure reached by each ejector.
P	Manifold common release pressure supply specification 	• When selecting "D" (with common release pressure supply (PD) port) for manifold option, supplying a pressure which is different from for common PV to common PD is requested.
W	With exhaust interference prevention valve 	• When ejectors are operated individually, exhausted air may flow backward from the V port of ejectors that are turned off. Exhaust interference prevention valve prevents backflow.

How to Order

Specifications/  
Flow Rate Characteristics

Port Layout

Construction

Exploded View of Manifold


Dimensions

Specific Product Precautions

## Cable Assembly

### D-sub Connector

015  
AXT100-DS25-030  
050

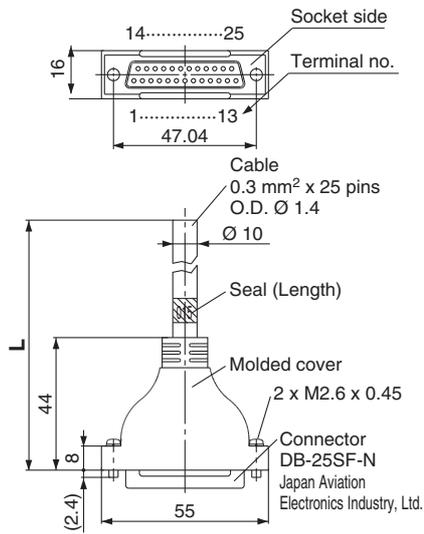

#### D-sub connector cable assembly Wire Color by Terminal Number

Terminal number	Lead wire colour	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Grey	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Grey	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Grey	Red
24	Black	White
25	White	None

#### D-sub Connector Cable Assembly (Option)

Cable length (L)	Assembly part number	Note
1.5 m	AXT100-DS25-015	Cable 0.3 mm² x 25 cores
3 m	AXT100-DS25-030	
5 m	AXT100-DS25-050	

\*For other commercial connectors, use a 25-pin type with female connector conforming to MIL-C-24308.  
\*Cannot be used for movable wiring.

#### Electrical Characteristics

Item	Property
Conductor resistance Ω/km, 20 °C	65 or less
Voltage limit V, 1 min, AC	1000
Insulation resistance MΩ/km, 20 °C	5 or more


Note) The minimum bending inner radius of D-sub connector cable is 20 mm.

#### Connector manufacturers' example

- Fujitsu Limited
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Hirose Electric Co., Ltd.

### Flat Ribbon Cable Connector

1  
AXT100-FC26-2  
3

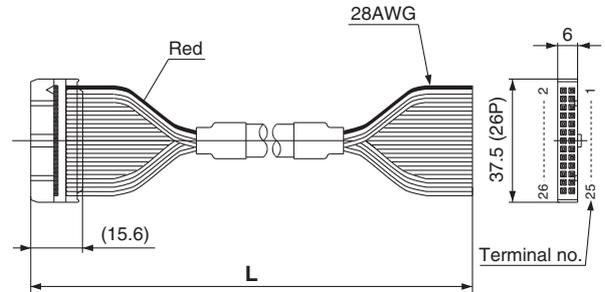

#### Flat Ribbon Cable Connector Assembly (Option)

Cable length (L)	Assembly part number
	26P
1.5 m	AXT100-FC26-1
3 m	AXT100-FC26-2
5 m	AXT100-FC26-3

\*For other commercial connectors, use a 26-pin type with strain relief conforming to MIL-C-83503.  
\*Cannot be used for movable wiring.

#### Connector manufacturers' example

- Hirose Electric Co., Ltd.
- Sumitomo 3M Limited
- Fujitsu Limited
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.



# ZK2 Series

## Specific Product Precautions 1


Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Vacuum Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, <http://www.smc.eu>

### Supply Valve / Release Valve

#### Warning

##### 1. Manual override operation

- Manual override is non-locking push type. Push the manual override with a screwdriver of a diameter smaller than indicated in the diagram until it reaches the end.

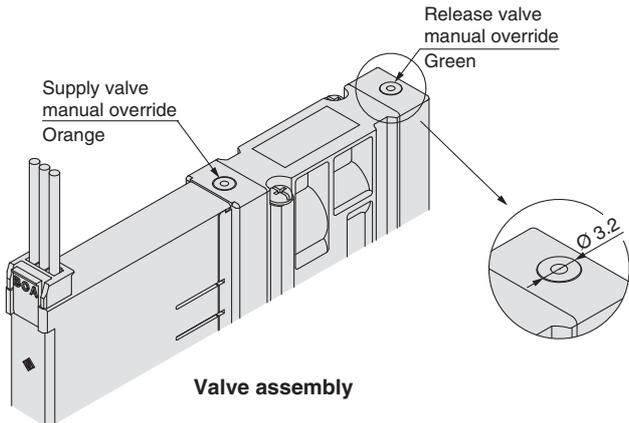

- Confirm that the product operates safely before the manual override is operated.

Note) When operation of the linked type supply and release valves is selected, the supply valve can hold the position and will not switch off even if the supply valve manual override operation is finished unless the release valve manual override is pressed.

##### 2. Self-holding function of supply valve

For valve assemblies where the supply and release valves are linked the supply valve is a self-holding type. Instantaneous energisation (20 ms or more) of the supply valve allows the supply valve to hold. Continuous energisation is not necessary. Energise the release valve to turn the supply valve off.

Note 1) Main valve in the valve assembly is made of elastic seal. Self-holding is performed by friction resistance of the seal. Do not apply impact resistance in the direction of the main valve shaft during the installation to moving parts. When the self-holding valve is applied with impact, energise it continuously, or use K type. (Refer to Combination of Supply Valve and Release Valve on pages 5 and 7.) (Vibration and impact should be 50 m/s<sup>2</sup> or less.)

Note 2) Self-holding type valve cannot use a digital switch for vacuum with energy saving function.

##### 3. Default setting

When the valve assembly is delivered, the supply valve is on the OFF position, but it may be on the ON position due to the vibration or impact during transportation or device installation. Turn to the OFF position manually or by energising before use.


### Supply Valve / Release Valve

#### Warning


##### 4. Wiring specifications and light/surge voltage suppressor

Wiring should be connected as shown below. Connect with the power supply respectively. (Solenoid valve is non-polar type.)



###### Single solenoid (Without release valve)

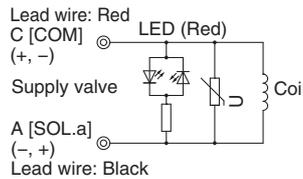

###### Double solenoid (With release valve)

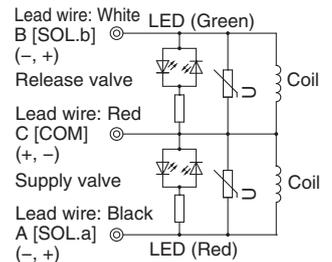

Light/surge voltage suppressor circuit is equipped for both single and double solenoid. Red LED turns on when supply valve (SOL.a) is energised. Green LED turns on when release valve (SOL.b) is energised.

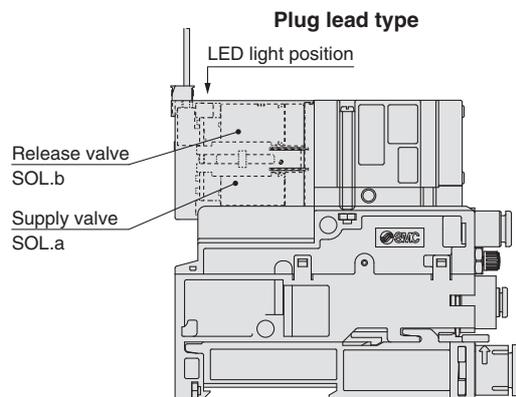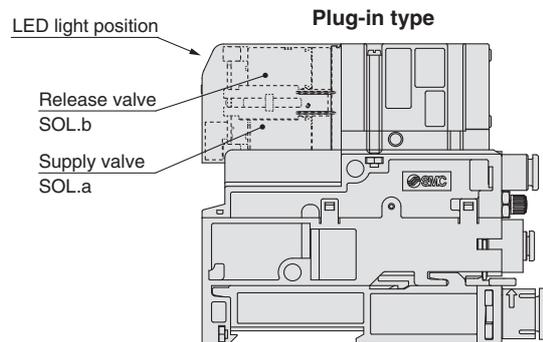

##### 5. Continuous duty

If a supply valve/release valve is energised continuously for a long time, the rise in temperature due to heat-up of the coil may cause a decline in solenoid valve performance, reduce service life, or have adverse effects on peripheral equipment. When the energising time per day is longer than non-energising time, use self-holding linked type valve using instantaneous energising.

How to Order

Specifications/  
Flow Rate Characteristics

Port Layout

Construction

Exploded View of Manifold

Dimensions

Specific Product Precautions

## Specific Product Precautions 2

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Vacuum Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, <http://www.smc.eu>



### Surge Voltage Intrusion

#### ⚠ Caution


The surge voltage created when the power supply is cut off could apply to the de-energised load equipment through the output circuit. In cases where the energised load equipment has a larger capacity (power consumption) and is connected to the same power supply as the product, the surge voltage could malfunction and/or damage the internal circuit element of the product and the internal device of the output equipment. To avoid this situation, place a diode which can suppress the surge voltage between the COM lines of the load equipment and output equipment.

### Plug Connector

#### ⚠ Caution

##### 1. Installation/Removal of connector

- To install the connector, hold the cover and insert the connector straight pushing the connector lever with your finger. Ensure that the connector lever clip is properly inserted onto mating part.
- To remove the connector, hold the cover and pull out the connector straight pushing the connector lever clip.

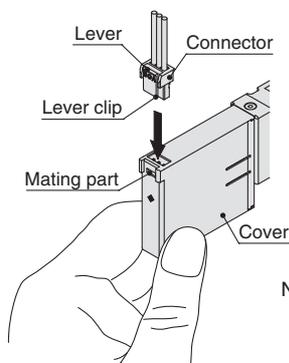

Note) Do not pull the lead wire with a force of 25 N or more, as this may damage the connector or cover.


##### 2. Part number of connector assembly and lead wire length

The standard lead wire length for the connector assembly is 300 mm. For other lengths, refer to the table below.


**ZK2-LVS□-A** Connector assembly for single  
(For with supply valve, no release valve)

**ZK2-LVW□-A** Connector assembly for double  
(For with both supply valve and release valve)

For single

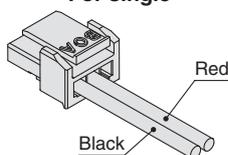

For double

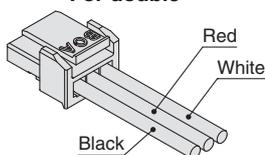

—	300 mm
6	600 mm
10	1000 mm
20	2000 mm
30	3000 mm


Note) When ordering, put the connector assembly part number to the product part number without connector.

### Suction Filter


#### ⚠ Caution

##### 1. Replacement procedure for filter element


- To pull out the vacuum port adapter, rotate the adapter by about 90 degrees in direction A and pull in direction B. The adapter can be removed with the suction filter from the filter case.
- Remove the suction filter from the vacuum port adapter and replace it with a new suction filter.

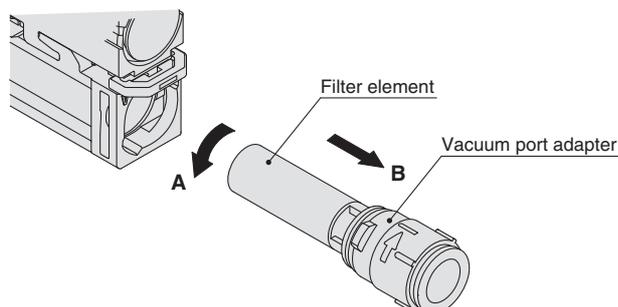


- When installing the filter, insert the filter to the end so that there is no gap or bending between the filter and the vacuum port adapter. The gap or bending will cause the element to deform inside the case.



- Put the filter back into the filter case following this procedure in reverse.
- To mount the vacuum port adapter into the filter case, turn the adapter so that the mating mark of the adapter and the case are aligned. (Rotation stops there.)

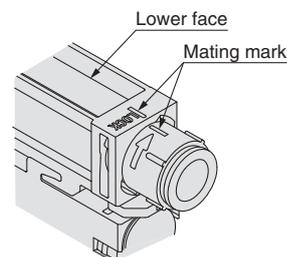

- If it is difficult to remove the vacuum port adapter, you can remove the adapter with a hexagon wrench using the hexagonal hole in V port. The table shows the port size and the width across flats.

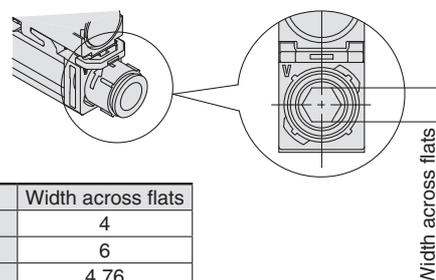

V port size	Width across flats
Ø 6	4
Ø 8, Ø 5/16"	6
Ø 1/4"	4.76



# ZK2 Series

## Specific Product Precautions 3

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Vacuum Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, <http://www.smc.eu>


### Suction Filter

#### Caution


##### 2. Filter case maintenance

- When the filter case is dirty, it can be removed and cleaned.

To remove the filter case, insert a precision screwdriver into the groove of the release lever and push in direction (1), and slide the filter case in direction (2).

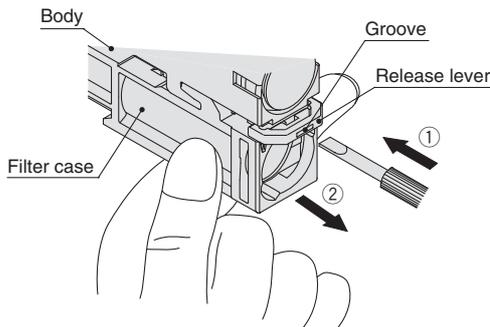

Note) Surface A of the filter case is the sealing surface when vacuum is generated. Handle with care so that the surface is not scratched or damaged.

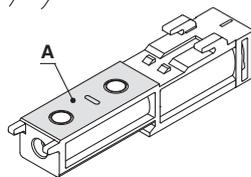


Note) Filter case is made of polycarbonate. Avoid chemicals such as thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, water base cutting fluid (alkaline).


Note) Do not expose the filter case to direct sunlight for a long period of time.

- Put the filter case back into the ejector by the following procedure.

- 1) Make sure that body gasket (B) and the check valve are installed correctly onto the ejector. If they are out of the place, vacuum leakage may occur. In addition, pressure switches with the energy-saving function come equipped with 2 check valves.

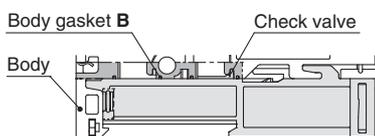

- 2) Push the filter case in direction (1). Be careful the filter case hook (A) and hook (B) do not touch the body of the ejector.
- 3) Slide the filter case in direction (2) while pushing the filter case gently in contact with the ejector. Make sure that the clip (C) is locked and there is no gap in part (D).

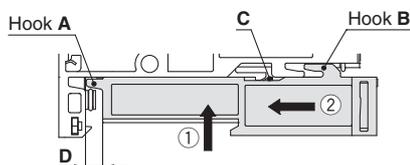


Note) If excess force is applied to the filter case, hook A and B may break. Handle with care.

### Ejector Exhaust

#### Caution

- The exhaust resistance should be as small as possible to obtain the full ejector performance. There should be no shield around the exhaust slit for silencer exhaust type. When the product is installed, one of the ports should be open to atmosphere.

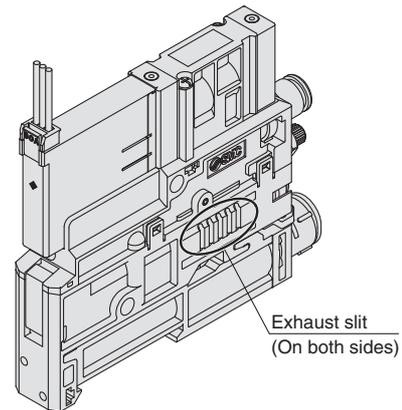


For port exhaust type, back pressure may increase depending on the piping size and length. Ensure that the back pressure does not exceed 0.005 MPa (5 kPa).

In addition, the exhaust port should not be blocked or pressurised.

- If the sound absorbing material is clogged, it will cause a reduction in the ejector performance. Sometimes, if the operating environment contains a lot of particles or mist, the replacement of the filter element only is not enough to recover vacuum performance - as the sound absorbing material may be clogged. Replace the sound absorbing material. (Regular replacement of the filter element and sound absorbing material is recommended.)

#### Replacement Procedure for Sound Absorbing Material (for Silencer Exhaust)

- 1) Remove the filter case following the procedure of filter case maintenance.
- 2) Flip the ejector, push the release lever again with a finger or precision screwdriver until the release lever stops.

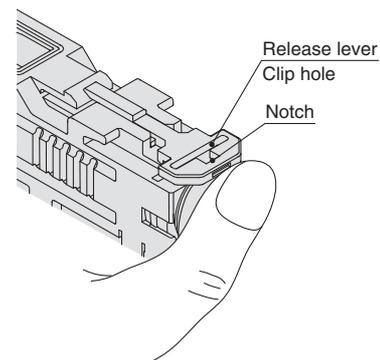

How to Order

Specifications/  
Flow Rate Characteristics

Port Layout

Construction

Exploded View of Manifold

Dimensions

Specific Product Precautions



# ZK2 Series


## Specific Product Precautions 4

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Vacuum Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, <http://www.smc.eu>


### Ejector Exhaust

#### Caution

- 3) To remove the clip that holds the port plug, insert a precision screwdriver from the release lever notch. Move the screwdriver in direction (1) to pull out the clip in direction (2).

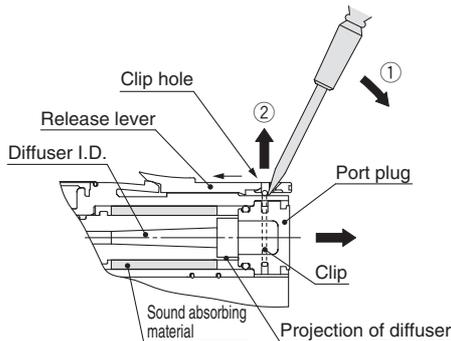

- 4) Remove the port plug. Slide back the release lever.
- 5) Remove the sound absorbing material from the slit (hole) at the side of the body by using a precision screwdriver.
- 6) Insert the new sound absorbing material. Be careful not to scratch the material with the projection of the diffuser assembly.

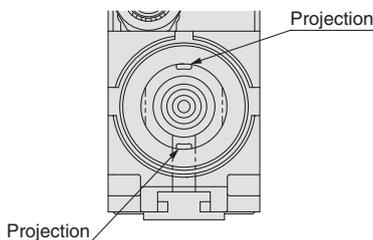

Diffuser hole viewed from the port plug

#### (Procedure to put parts back together)

- 7) Insert the port plug.
  - 8) Push the release lever until it stops. Insert the clip into the groove using the lever hole. (Push completely to the end.)
- Note) Do not pull or bend the two projections at the end surface of the diffuser. These are spacers to prevent the displacement of the diffuser and they may break if force is applied.

### Replacement Procedure for High-noise Reduction Silencer Case Assembly



#### Caution

Refer to the replacement procedure of the sound absorbing material (silencer exhaust) to replace the assembly.

Note) When a high-noise reduction silencer case assembly is attached to body type "A" (silencer exhaust), the silencing effect cannot be acquired.

#### When only replacing the sound absorbing material (for high-noise reduction silencer exhaust)

- 1) Use the notch to remove the cap.
- 2) Use a precision screwdriver to remove the sound absorbing material.
- 3) Insert the new sound absorbing material, and return the cap.

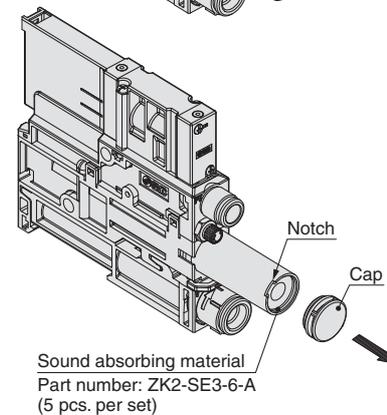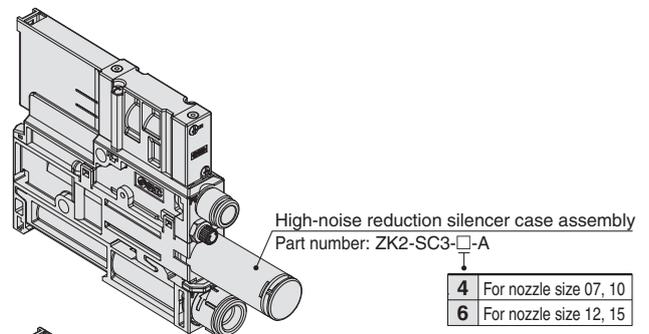

### Operating Supply Pressure

#### Caution

- Use the product within the specified supply pressure range. Operation over the maximum operating pressure can cause damage to the product. The parts around the vacuum port of this product are designed to be used with vacuum pressure. With the vacuum pump system, since air is not released to the atmosphere from a silencer, the applied air for vacuum release increases the internal pressure of the vacuum port. Select the vacuum pad which shape allows smooth exhaust of release air to the atmosphere and avoid clogging.
- Supply air containing foreign matter, moisture, oil content, drain, etc. can cause a malfunction. Refer to the Air Preparation Equipment Selection Guide in Best Pneumatics No. 6 (page 2) and use supply air of a quality equal to or higher than compressed air purity class "2:6:3" as stipulated by the ISO 8573-1:2010 (JIS B 8392-1:2012) standard. Flush the piping sufficiently to remove foreign matter before piping the product.



# ZK2 Series


## Specific Product Precautions 5

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Vacuum Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, <http://www.smc.eu>

### Exhaust Noise

#### Caution

- When vacuum ejector generates vacuum, noise can be heard from the exhaust port when the standard supply pressure is close to the pressure that generates peak vacuum pressure making vacuum pressure unstable. If the vacuum pressure range is adequate for adsorption, there should not be a problem. If the noise causes a problem or affects the setting of the pressure switch, change the supply pressure slightly to avoid the pressure range of the noise.

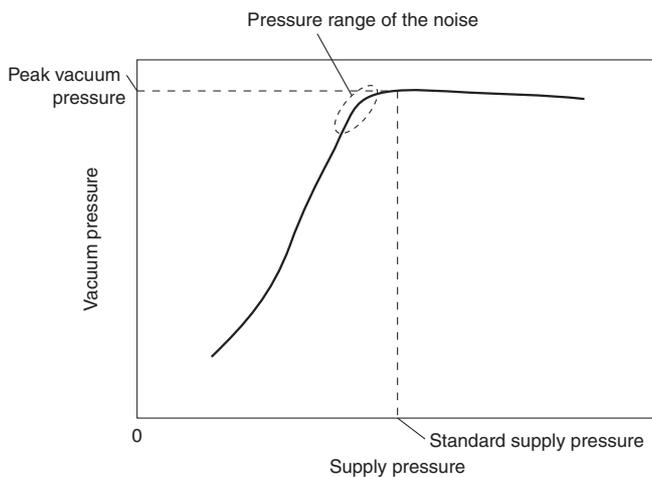

### Port Size of Single Unit

#### Caution

- Port size

Port	Size			
	Ejector System		Vacuum Pump System	
	Metric	Inch	Metric	Inch
PV	Ø 6	Ø 1/4"	Ø 6	Ø 1/4"
V	Ø 6, Ø 8	Ø 1/4", Ø 5/16"	Ø 6, Ø 8	Ø 1/4", Ø 5/16"
EXH (Port exhaust)	Ø 8	Ø 5/16"	—	—
PE	EXH Common		Port open to atmosphere *1)	
PS	—	—	Ø 4	Ø 5/32"
PD *2)	M3	—	M3	—

— : Not applicable

\*1) Piping for PE port is available as an option (M3). (Refer to page 8.)


\*2) A model with PD port is available as an option. (Refer to pages 6 and 8.)

### How to Mount a Single Unit


#### Caution

#### 1. Single unit can be mounted to DIN rail or wall using the holes in the body (2 x Ø 4.5).


- When mounting the ejector to DIN rail, unlock the filter case assembly beforehand. (Refer to the maintenance procedure on page 40.)
- Hook the ejector onto the DIN rail from direction (①).
- Mount the ejector onto the DIN rail by pushing it down in direction (②).
- Push the filter case assembly in direction (③) until it is locked.

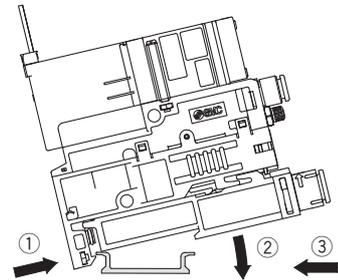

- To hold the ejector onto the DIN rail, hold it from both sides using the stopper brackets.

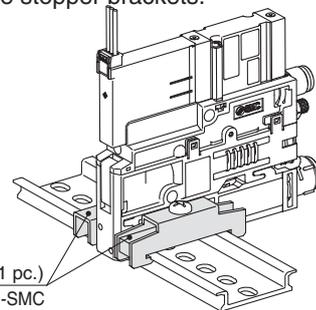

#### 2. To mount a single unit onto the floor, use the optional bracket.

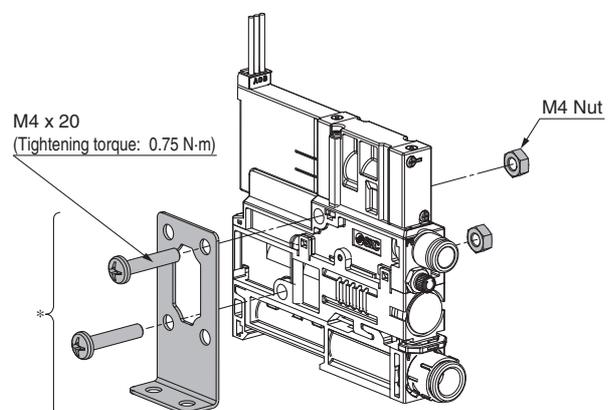

\*Mounting bracket for single unit (Option), [Nuts and bolts are included.] Part number: ZK2-BK1-A

How to Order

Specifications/  
Flow Rate Characteristics

Port Layout

Construction

Exploded View of Manifold

Dimensions

Specific Product Precautions



# ZK2 Series


## Specific Product Precautions 6

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Vacuum Equipment Precautions, refer to “Handling Precautions for SMC Products” and the Operation Manual on the SMC website, <http://www.smc.eu>

### How to Mount a Manifold

#### ⚠ Caution

- Manifolds can be mounted onto the floor using M4 holes on the end plate.
- It is possible to mount the manifold onto the DIN rail by manifold option.
  - Hook the mounting bracket of the end plate to DIN rail from direction (1).
  - Mount the ejector onto the DIN rail by pushing it down in direction (2).
  - Use a 50 mm or longer Phillips screwdriver to tighten the mounting bracket (3). (Tightening torque: 0.9 ± 0.1 N·m)
  - Removal should be performed by following the mounting procedure in reverse.

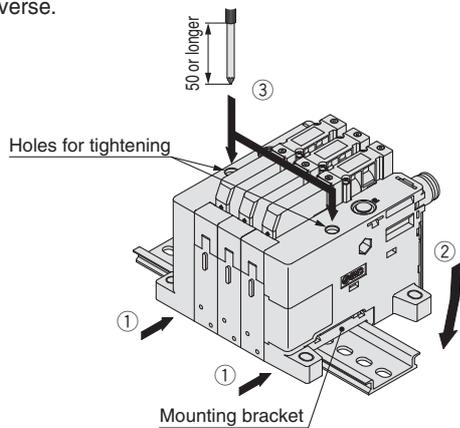


### Manifold Silencer

#### ⚠ Caution

- Ejector system manifold silencer common exhaust type has a sound absorbing material in the end plate. If the sound absorbing material is clogged, ejector performance is deteriorated, leading to suction failure or response delay. Regular replacement of the sound absorbing material is recommended.

#### Replacement Procedure

- Insert a precision screwdriver to notch (A) of the end plate and remove a clip (L) (1).
- Insert a precision screwdriver to notch (B) and remove the silencer cover (2).
- Pull out the sound absorbing material from the silencer cover (3).
- Mounting of a new element should be performed by following the removal procedure in reverse.

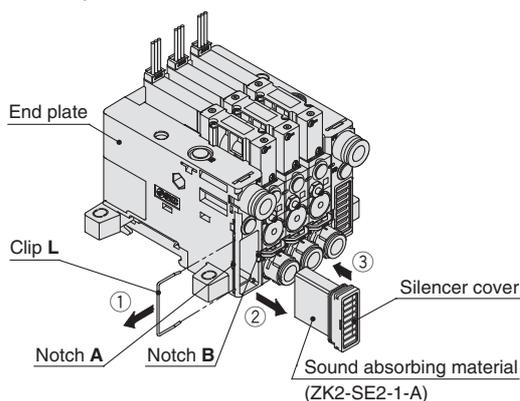

### Manifold Ports

#### ⚠ Caution

- Manifold ports are common at the end plate. Port description and application are the same as the single unit. (Refer to page 24 for application and operating pressure range of each port.)
- Refer to page 12 for the number of stations that can operate simultaneously for each ejector size.
- If one side is not used for air supply, plug the unused port or change to the dedicated port plug as shown below.

	Standard	Plug part number
Common PV port	Ø 8 One-touch	VVQZ2000-CP
Common PS port	Ø 6 One-touch	ZK2-MP1C6-A
Common PD port		

\* There are 4 types depending on the manifold port specification.

	Common EXH port	Common PS/PD ports	Application
ZK2□-A□1□	Yes	PS = PD	Ejector common exhaust + PV = PS = PD specification
ZK2□-A□1□-D	Yes	PS ≠ PD	Ejector common exhaust + PV = PS ≠ PD specification
ZK2□-A□2□ ZK2□-P2□	None	PS = PD	Ejector individual exhaust + PV = PS = PD Pump system + PV ≠ PS = PD
ZK2□-A□2□-D ZK2□-P2□-D	None	PS ≠ PD	Ejector individual exhaust + PV = PS ≠ PD Pump system + PV ≠ PS ≠ PD

- When PS = PD, the common PS/PD ports on the end plate are used, PS port is equipped with One-touch fitting and PD port is plugged at the time of shipment from the factory. Since the PS and PD are connected inside the end plate, common supply location can be changed by exchanging the One-touch fitting and the plug.
- When PS ≠ PD, PS and PD are not connected inside the end plate. (It is necessary to supply each port individually.)

### Vacuum Break Flow Adjusting Needle

#### ⚠ Caution

1. The flow rate characteristics show the representative values of the product itself.

They may change depending on piping, circuit and pressure conditions, etc. The flow rate characteristics and the number of needle rotations vary due to the range of the specifications of the product.

2. The needle has a retaining mechanism, so it will not turn further when it reaches the rotation stop position.

Turning the needle too far may cause damage.

3. Do not tighten the handle with tools such as nippers.

This can result in breakage due to idle turning.

4. Do not over tighten the lock nut.

It is possible to tighten the standard lock nut (hexagon) manually. When tightening further with tools, tighten by approximately 15° to 30°. Over tightening may cause breakage.

5. When screwdriver operation type needle is selected as option (-K), make sure the lock nut is not loose to prevent the nut from coming off due to vibration.



# ZK2 Series

## Specific Product Precautions 7

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Vacuum Equipment Precautions, refer to “Handling Precautions for SMC Products” and the Operation Manual on the SMC website, <http://www.smc.eu>

### ■ Handling of Pressure Sensor Assembly

#### Handling

#### ⚠ Caution

1. Do not drop, bump or apply excessive impact (980 m/s<sup>2</sup>) when handling.

Even if the sensor body is not damaged, the internal parts may get damaged, leading to malfunction.

2. The tensile strength of the power cord is within 50 N, and pulling it with a greater force can cause failure.

Hold the body when handling the product.

3. Refer to the Operation Manual of the pressure sensor PSE540 series for how to connect the connectors for sensor.

#### Environment

#### ⚠ Caution

1. The use of resin piping can cause static electricity to be generated, depending on the fluid.

Therefore, when connecting this sensor, take appropriate measures against static electricity at the equipment side to which this product is mounted, and separate the grounding for the product from the grounding for any equipment which generates a strong electromagnetic noise or high frequency. Otherwise, static electricity can break the sensor.

### ■ Handling of Pressure Switch for Vacuum Assembly

#### Handling

#### ⚠ Caution

1. Do not drop, bump or apply excessive impact (100 m/s<sup>2</sup>) when handling.

Even if the sensor body is not damaged, the internal parts may get damaged, leading to malfunction.

2. The tensile strength of the power cord is within 35 N, and pulling it with a greater force can cause failure.

Hold the body when handling the product.

3. Do not allow repeated bending or stretching forces to be applied to lead wires.

Wiring arrangements in which repeated bending stress or stretching force is applied to the lead wires can cause broken wires.

If the lead wire can move, fix it near the body of the product. The recommended bending radius of the lead wire is 6 times the outside diameter of the sheath, or 33 times the outside diameter of the insulation material, whichever is larger. Replace the damaged lead wire with a new one. For details, please consult with SMC.

### ■ Handling of Pressure Switch for Vacuum Assembly

#### Handling

#### ⚠ Caution

1. Incorrect wiring can cause the switch to be damaged or malfunction. Connections should only be made when the power supply is turned off.

2. Do not attempt to insert or pull out the connector from the switch while the power is on.

Otherwise, it may cause switch output malfunction.

3. Malfunctions stemming from noise may occur if the wire is installed in the same route as that of power or high-voltage cable.

Wire the switch independently.

4. Be sure to ground the frame ground (FG) terminal when using a commercially available switching power supply.

#### Environment

#### ⚠ Warning

1. The structure of pressure switches is not intended to prevent explosion.

Never use in an atmosphere of flammable gas or explosive gas.

#### ⚠ Caution

1. The product is CE marked, but not immune to lightning strikes.

Take measures against lightning strikes in your system.


2. Do not use the switches in locations where static electricity would be problematic.

Otherwise, it may result in the system failure and trouble.

#### Assembling / Removing Connectors

#### ⚠ Caution

- When assembling the connector to the switch housing, push the connector straight onto the pins until the level locks into the housing slot.
- When removing the connector from the switch housing, push the section A (lever) down with your thumb to unlock it from the slot and then withdraw the connector straight off of the pins.

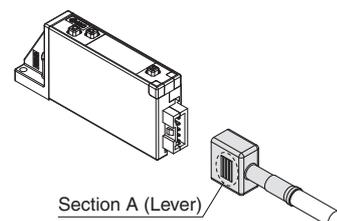

- Do not attempt to insert or pull out the connector from the switch while the power is on. Otherwise, it may cause switch output malfunction.

How to Order

Specifications/  
Flow Rate Characteristics

Port Layout

Construction

Exploded View of Manifold

Dimensions

Specific Product Precautions



## ZK2 Series

# Specific Product Precautions 8

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Vacuum Equipment Precautions, refer to “Handling Precautions for SMC Products” and the Operation Manual on the SMC website, <http://www.smc.eu>

### ■ Handling of Digital Pressure Switch with Energy Saving Function

#### Mounting

#### Caution

##### 1. Tighten to the specified tightening torque.

If the tightening torque is exceeded, the mounting screws and the pressure switch may break. Insufficient torque may cause displacement of the pressure switch and loosening of the mounting screws.

Tightening torque: 0.08 to 0.10 N·m

##### 2. Be sure to ground the frame ground (FG) terminal when using a commercially available switching power supply.

##### 3. Do not drop, hit or apply shock to the product.

Otherwise, the internal parts of the pressure switch may get damaged and cause malfunction.

##### 4. Do not pull the lead wire with force, or lift the product by pulling the lead wire. (Tensile strength within 20 N)

Hold the product body when handling to prevent damage, failure or malfunction. Otherwise, the pressure switch will be damaged, leading to failure and malfunction.

##### 5. Eliminate any dust left in the piping by using a blast of air before connecting the piping to the product.

Otherwise, failure or malfunction may occur.

##### 6. Do not insert metal wires or other foreign matter into the pressure port.

Otherwise, the pressure sensor may get damaged, leading to failure and malfunction.

##### 7. If the fluid contains foreign matter, install and connect a filter or mist separator to the inlet.

Otherwise, failure, malfunction or inaccurate measurements from the pressure switch may occur.

#### Other Tube Brands

#### Caution

##### 1. When tubing of brands other than SMC's are used, verify that the tubing O.D. satisfies the following accuracy;

1) Nylon tubing: Within  $\pm 0.1$  mm

2) Soft nylon tubing: Within  $\pm 0.1$  mm

3) Polyurethane tubing: Within  $+0.15$  mm, within  $-0.2$  mm

Do not use tubing which does not meet these outside diameter tolerances.

It may not be possible to connect them, or they may cause other trouble, such as air leakage or the tube pulling out after connection.



## Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “Caution,” “Warning” or “Danger.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1), and other safety regulations.

-  **Caution:** Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
-  **Warning:** Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
-  **Danger:** Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

- \*1) ISO 4414: Pneumatic fluid power – General rules relating to systems.  
 ISO 4413: Hydraulic fluid power – General rules relating to systems.  
 IEC 60204-1: Safety of machinery – Electrical equipment of machines.  
 (Part 1: General requirements)  
 ISO 10218-1: Manipulating industrial robots - Safety.  
 etc.

### Warning

#### 1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

#### 2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

#### 3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

#### 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

## Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”.  
 Read and accept them before using the product.

### Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.\*2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.

#### \*2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

### Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

### Caution

#### 1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

### Caution

#### SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

## Safety Instructions

Be sure to read “Handling Precautions for SMC Products” (M-E03-3) before using.

### SMC Corporation (Europe)

<b>Austria</b>	☎+43 (0)2262622800	www.smc.at	office@smc.at	<b>Lithuania</b>	☎+370 5 2308118	www.smc.lt	info@smc.lt
<b>Belgium</b>	☎+32 (0)33551464	www.smc-pneumatics.be	info@smc-pneumatics.be	<b>Netherlands</b>	☎+31 (0)205318888	www.smc-pneumatics.nl	info@smc-pneumatics.nl
<b>Bulgaria</b>	☎+359 (0)2807670	www.smc.bg	office@smc.bg	<b>Norway</b>	☎+47 67129020	www.smc-norge.no	post@smc-norge.no
<b>Croatia</b>	☎+385 (0)13707288	www.smc.hr	office@smc.hr	<b>Poland</b>	☎+48 222119600	www.smc.pl	office@smc.pl
<b>Czech Republic</b>	☎+420 541424611	www.smc.cz	office@smc.cz	<b>Portugal</b>	☎+351 226166570	www.smc.eu	postpt@smc.smces.es
<b>Denmark</b>	☎+45 70252900	www.smc-dk.com	smc@smc-dk.com	<b>Romania</b>	☎+40 213205111	www.smcromania.ro	smcromania@smcromania.ro
<b>Estonia</b>	☎+372 6510370	www.smc-pneumatics.ee	smc@smc-pneumatics.ee	<b>Russia</b>	☎+7 8127185445	www.smc-pneumatik.ru	info@smc-pneumatik.ru
<b>Finland</b>	☎+358 207513513	www.smc.fi	smc-fi@smc.fi	<b>Slovakia</b>	☎+421 (0)413213212	www.smc.sk	office@smc.sk
<b>France</b>	☎+33 (0)164761000	www.smc-france.fr	info@smc-france.fr	<b>Slovenia</b>	☎+386 (0)73885412	www.smc.si	office@smc.si
<b>Germany</b>	☎+49 (0)61034020	www.smc.de	info@smc.de	<b>Spain</b>	☎+34 902184100	www.smc.eu	post@smc.smces.es
<b>Greece</b>	☎+30 210 2717265	www.smc-hellas.gr	sales@smc-hellas.gr	<b>Sweden</b>	☎+46 (0)86031200	www.smc.nu	post@smc.nu
<b>Hungary</b>	☎+36 23513000	www.smc.hu	office@smc.hu	<b>Switzerland</b>	☎+41 (0)523963131	www.smc.ch	info@smc.ch
<b>Ireland</b>	☎+353 (0)14039000	www.smc-pneumatics.ie	sales@smc-pneumatics.ie	<b>Turkey</b>	☎+90 212 489 0 440	www.smc-pneumatik.com.tr	info@smc-pneumatik.com.tr
<b>Italy</b>	☎+39 0292711	www.smc-italia.it	mailbox@smc-italia.it	<b>UK</b>	☎+44 (0)845 121 5122	www.smc-pneumatics.co.uk	sales@smc-pneumatics.co.uk
<b>Latvia</b>	☎+371 67817700	www.smc-lv.lv	info@smc-lv.lv				

SMC CORPORATION Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 FAX: 03-5298-5362